

Serial no	Defect	Resolved	Solution	Ref
SHC02901334	Left arrow Game Controller Loose screw battery component	N Y		
	Battery faulty (SN 608C2007024110001280)	Y	Replaced battery (see replace list)	
SHC02901375	Power AC terminal - missing reference	N	Motherboard replacement or query	
SHC02901333E SHF80755-87	Keyboard keys LShift + V N-Key Roland Touchpad	N N N	Keyboard replacement USB mouse	
SHC02901383	Battery faulty Keyboard damage	N N	Replace battery Keyboard cover replace	
CEN70002168	Monitor screen - banding	Y	Screen replaced (see replace list)	
CEN70000208A SHF80600087	Battery (drinking orange) Pn-left key missing	N N	Tickle charging? Troubleshooting required.	http://wiki.laptop.org/go/XO_Trouble
CEN70000208B	O-key missing	N	Keyboard cover replace	
SHC02901344F	Keyboard cover cut/dice	N	Keyboard cover replace	
SHC02901365	Monitor screen - scratch	N	Monitor replace or leave as is	
SHC02901344	Keyboard time/divide key missing	N	Keyboard cover replace	
SHC02901330	Monitor screen - scratches	N	Monitor replace or leave as is	
SHC02901333A	Keyboard cover (space bar area) damage	N	Keyboard cover replace	
SHC0270130D	Keyboard cover cut/dice	N	Keyboard cover replace	
SHC02901357	Keyboard e-corner loose	N	Manual repair	
SHC02901339	Keyboard E-key missing	N	Keyboard repair replace	

Serial no	Replacement part used	Part serial no (if known)	Target serial no (if known)
SHC02901375	Battery	S/N 00802100705110002967	SHC02901334
SHC02901375	Monitor screen	4JC150204D21925	CSN750021B6