


SMART Board™ Interactive Whiteboard Setup with USB Cable

NOTE: The instructions below are for the SMART Board interactive whiteboard 500 series and apply to both a desktop and a laptop computer.

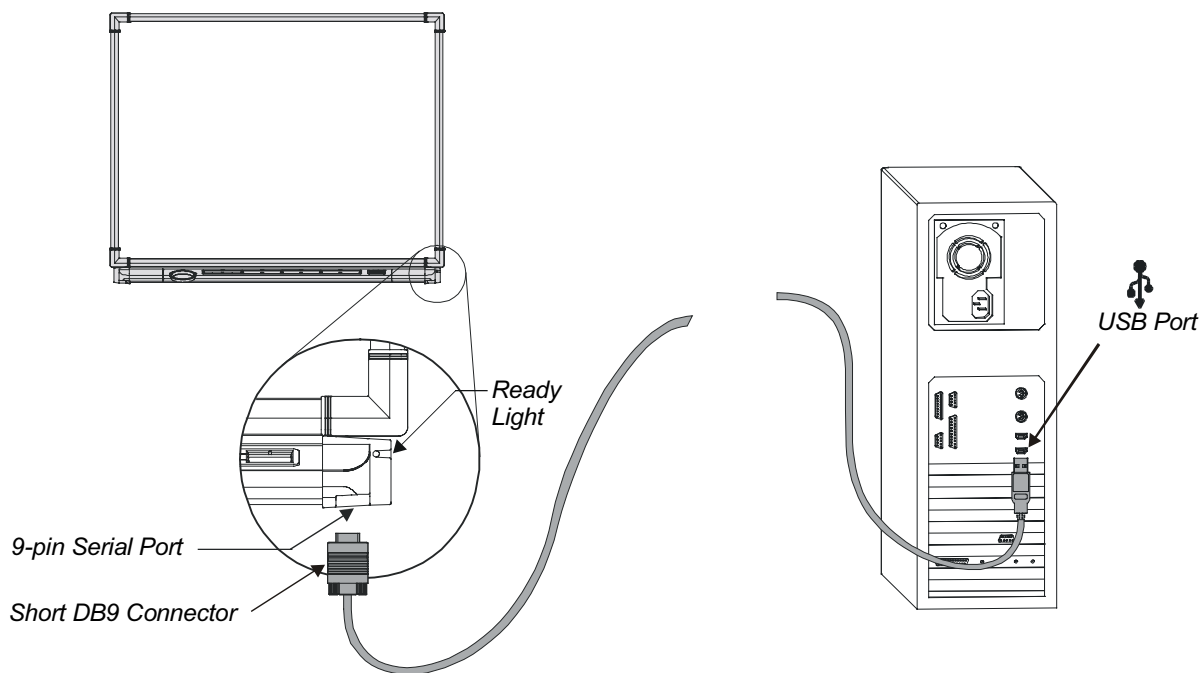

Connecting the SMART Board Interactive Whiteboard to Your Computer

- 1 Insert the USB cable's short DB9 connector into the 9-pin serial port under the lower-right side of the SMART Board interactive whiteboard and tighten the screws.
- 2 Insert the USB connector (at the other end of the cable) into the USB port on your computer.

If you already have the appropriate USB driver installed, the Ready Light on the right side of the SMART Pen Tray turns red, indicating that the pen tray is on.


If you don't have the appropriate USB driver installed on your system, a *Found New Hardware* wizard will assist you in locating the driver for the newly connected USB Human Interface Device (the interactive whiteboard).

- Direct the Microsoft® Windows® operating system to search for an appropriate driver by clicking the **Next** button.
- Click the **Next** button again to search the driver database on your hard drive.

NOTE: If the operating system fails to find the driver, you'll have to install it using your Windows 98/2000/ME/XP CD-ROM.


- Click the **Finish** button after the driver search or driver installation is complete.

If the Ready Light still has not turned red, verify that all connections are made as indicated above.

- 3 To install SMART Board software, insert the CD-ROM that came with your interactive whiteboard and follow the on-screen instructions. If you don't have a CD-ROM, or if you're not sure whether your CD-ROM is for the latest version of SMART Board software, you can download the latest version of the software from <http://www.smarttech.com/support/software/index.asp>.
- 4 If the SMART Board icon  does not appear in the Windows System Tray, select **Start, Programs, SMART Board Software**, and select **SMART Board Tools**.

Orienting the SMART Board Interactive Whiteboard

You must orient the interactive whiteboard upon initial installation or if your whiteboard or projector has been moved or jostled. Ensure the projector, computer and SMART Board software are running.

- 1 Double-click the SMART Board icon  in the System Tray and press the **Orient** button.



- 2 Begin orientation at the upper-left corner. Press your finger or stylus squarely on the yellow center of each red cross in the order indicated by the white, diamond-shaped background.

