



Link Status Indicator

Green: A wireless link is established between the unit and the PC.

Amber: There is no wireless link between the mimio Xi device and the PC. Refer to the Troubleshooting Section.

Flashing green: Unit is in Learning Process*.

Data Transmission Indicator

Slow flashing green: System is idle.

Fast flashing green: mimio stylus pen is in use.

Off: No data is being communicated between the mimio Xi device and the PC. Refer to Troubleshooting Section.

* Refer to the Learning Section for more information.