

ZS-M1

SONY®

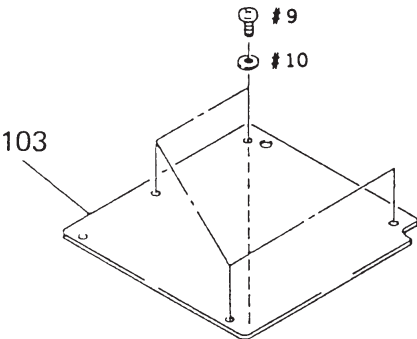 
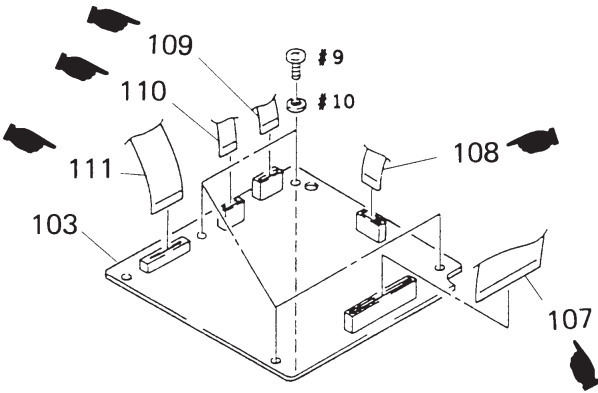 
SERVICE MANUAL

US Model
Canadian Model
AEP Model
UK Model

CORRECTION-1

Correct your service manual as shown below.

•  : indicates corrected portion.

| Page | INCORRECT | CORRECT | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|----------|---|---|--------------|--------------------------|---|--------------|--------------------------|---|--------------|-------------------------|---|--------------|-------------------------|---|--------------|-------------------------|---|--|--|--|----------|----------|-------------|-----|--------------|--------------------------|-----|--------------|-------------------------|-----|--------------|-------------------------|-----|--------------|-------------------------|-----|--------------|--------------------------|
| 97 |  |  | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | <table><tr><th>Ref. No.</th><th>Part No.</th><th>Description</th></tr><tr><td> </td><td> </td><td> </td></tr><tr><td> </td><td> </td><td> </td></tr><tr><td> </td><td> </td><td> </td></tr><tr><td> </td><td> </td><td> </td></tr><tr><td> </td><td> </td><td> </td></tr></table> | Ref. No. | Part No. | Description | | | | | | | | | | | | | | | | <table><tr><th>Ref. No.</th><th>Part No.</th><th>Description</th></tr><tr><td>107</td><td>1-751-134-11</td><td>WIRE, PARALLEL (26 CORE)</td></tr><tr><td>108</td><td>1-751-133-11</td><td>WIRE, PARALLEL (7 CORE)</td></tr><tr><td>109</td><td>1-751-132-11</td><td>WIRE, PARALLEL (7 CORE)</td></tr><tr><td>110</td><td>1-751-131-11</td><td>WIRE, PARALLEL (6 CORE)</td></tr><tr><td>111</td><td>1-751-128-11</td><td>WIRE, PARALLEL (16 CORE)</td></tr></table> | Ref. No. | Part No. | Description | 107 | 1-751-134-11 | WIRE, PARALLEL (26 CORE) | 108 | 1-751-133-11 | WIRE, PARALLEL (7 CORE) | 109 | 1-751-132-11 | WIRE, PARALLEL (7 CORE) | 110 | 1-751-131-11 | WIRE, PARALLEL (6 CORE) | 111 | 1-751-128-11 | WIRE, PARALLEL (16 CORE) |
| Ref. No. | Part No. | Description | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Ref. No. | Part No. | Description | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 107 | 1-751-134-11 | WIRE, PARALLEL (26 CORE) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 108 | 1-751-133-11 | WIRE, PARALLEL (7 CORE) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 109 | 1-751-132-11 | WIRE, PARALLEL (7 CORE) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 110 | 1-751-131-11 | WIRE, PARALLEL (6 CORE) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 111 | 1-751-128-11 | WIRE, PARALLEL (16 CORE) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 104 | <table><tr><td>*</td><td>1-751-002-11</td><td>WIRE, PARALLEL (16 CORE)</td></tr><tr><td>*</td><td>1-751-003-11</td><td>WIRE, PARALLEL (28 CORE)</td></tr><tr><td>*</td><td>1-751-004-11</td><td>WIRE, PARALLEL (6 CORE)</td></tr><tr><td>*</td><td>1-751-005-11</td><td>WIRE, PARALLEL (6 CORE)</td></tr><tr><td>*</td><td>1-751-006-11</td><td>WIRE, PARALLEL (7 CORE)</td></tr></table> | * | 1-751-002-11 | WIRE, PARALLEL (16 CORE) | * | 1-751-003-11 | WIRE, PARALLEL (28 CORE) | * | 1-751-004-11 | WIRE, PARALLEL (6 CORE) | * | 1-751-005-11 | WIRE, PARALLEL (6 CORE) | * | 1-751-006-11 | WIRE, PARALLEL (7 CORE) | <table><tr><td> </td><td> </td><td> </td></tr><tr><td> </td><td> </td><td> </td></tr><tr><td> </td><td> </td><td> </td></tr><tr><td> </td><td> </td><td> </td></tr><tr><td> </td><td> </td><td> </td></tr><tr><td> </td><td> </td><td> </td></tr></table> | | | | | | | | | | | | | | | | | | | | | |
| * | 1-751-002-11 | WIRE, PARALLEL (16 CORE) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| * | 1-751-003-11 | WIRE, PARALLEL (28 CORE) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| * | 1-751-004-11 | WIRE, PARALLEL (6 CORE) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| * | 1-751-005-11 | WIRE, PARALLEL (6 CORE) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| * | 1-751-006-11 | WIRE, PARALLEL (7 CORE) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

(SPM-98003)