


INSTALL LASER TUBE

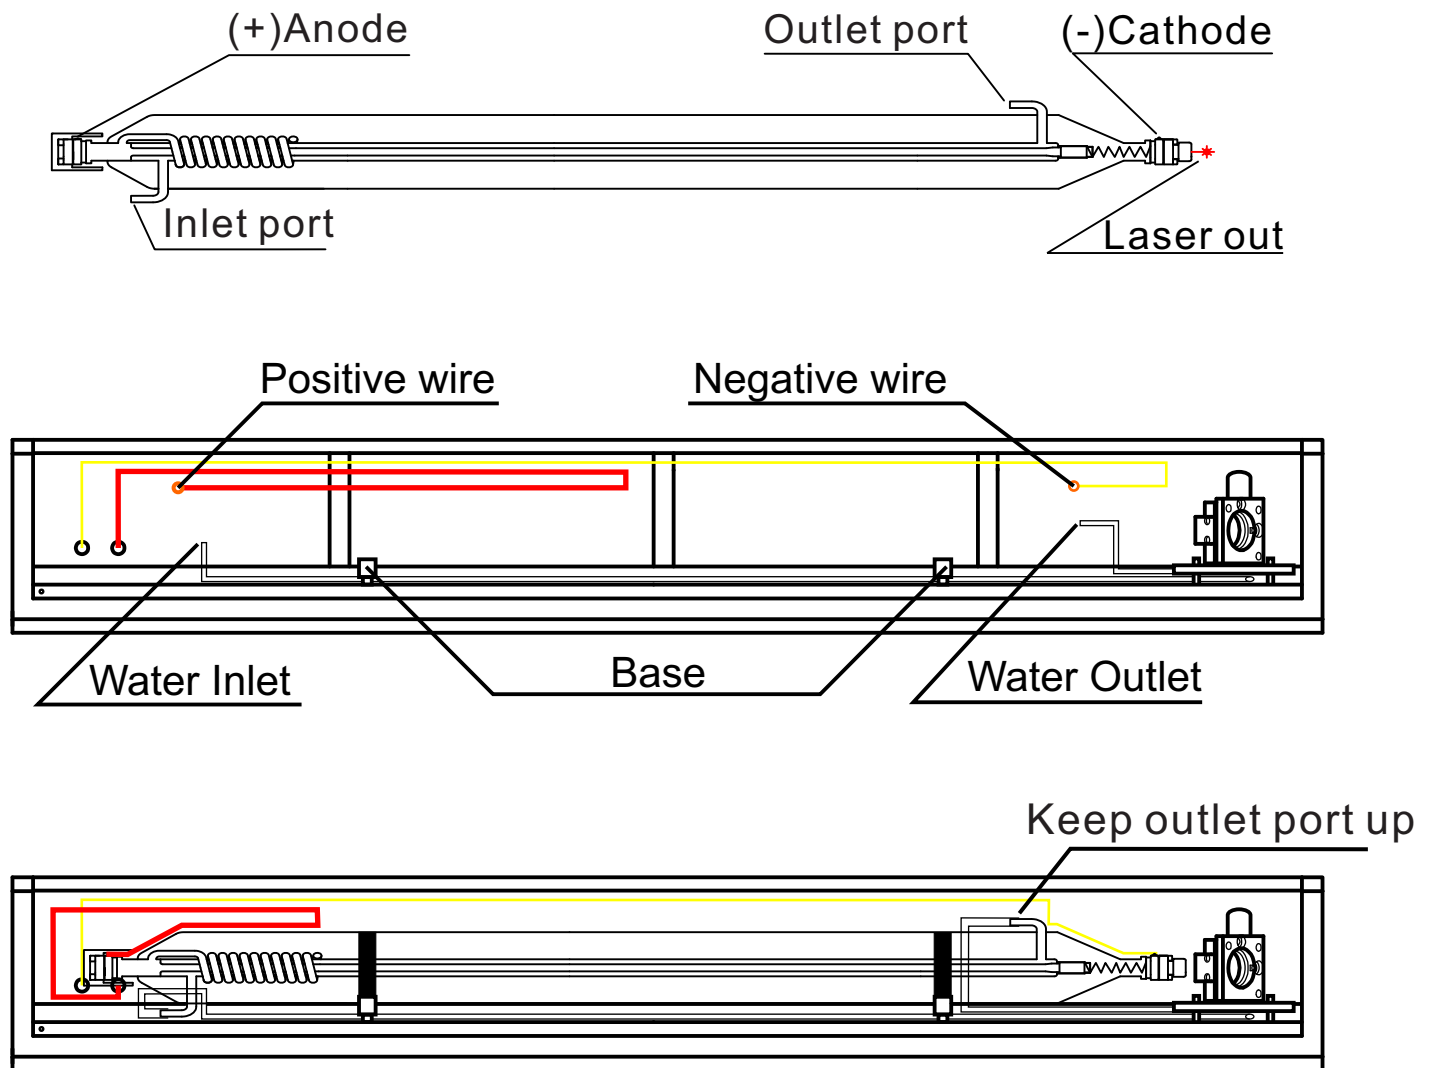

1. Put the laser tube on the base
2. Connect the Positive wire to the Anode;
Connect the Negative wire to the Cathode.
3. Connect the water inlet to the inlet port;
Connect the water outlet to the outlet port.
4. Fix the laser tube tightly