

Mobile Watch Quick Manual

I . Software installation - phone software download:



Search "360Eye" in Iphone App Store .
And install, or scan right code, more details



Search "360Eye" in android market or Scan
QR code to download and install it

please visit : 360eye.cc



Scan QR code
to install

 
II .Add, view [camera connection Internet (Note voice prompts)]

One way: WIFI Smart link (support for Apple and Android phones)

① Default is
"WIFI Smart link"
mode.

② Long press
"RESET button"
We will restore
the factory settings
And enter "WIFI
Smart link "mode

③ Short press (Click)
"RESET button"
to enter " AP "mode



WIFI Smart link

Search Device

Phone connected
to the router WIFI,
Then click "WIFI
smart link" on the APP



1. Enter WIFI router name and password in configuration page (with voice prompts), and then click "Next" (Figure 1)

V. More features


- ① receive push pictures prompt settings
- ② view and save the captured images
- ③ can be set to open the software gesture password
- ④ online automatic upgrade to the latest version of the phone software
- ⑤ exit the software (Figure 13)

VI. Modify and Delete Device


Long press device name to bring up the Device Manager device interface :(Figure14)

- ① modifying device: You can modify the device ID number, user name and password (if user name and password input error can be modified directly in this, do not have to re-add the device)
- ② Delete Device: You can delete a single device
- ③ Batch Remove: You can delete multiple devices:

(Figure17)

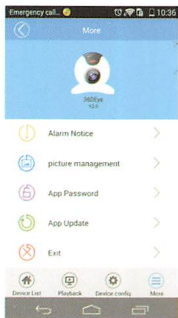

(Figure18)

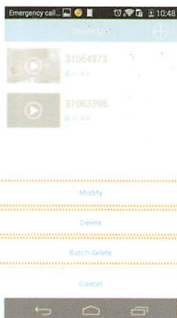


modifying device

Delete Device

Batch Remove

2. In the software search process, device will automatically connect to the router, after configuration is complete, it will automatically appear in the device list of the device (Figure 1/2)

(Figure1)

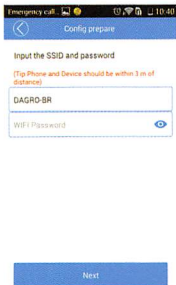


(Figure2)



3. Click the device to view the image (Figure 3/4)

(Figure3)

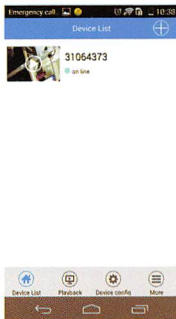


(Figure4)




①Network setting



②Record Setting

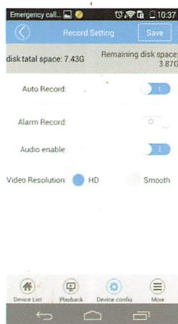

③Alarm Settings

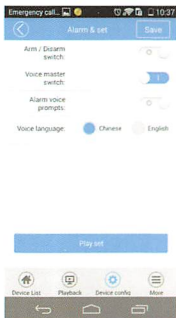


④Account



- ① PTZ control ② image capture ③ image inversion ④ voice intercom
⑤ voice switch ⑥ clarity


Second way: Quick AP Configuration (Iphone does not support this feature) (Figure 5/6)

1. Long Press " reset button (the reset button in the bottom of camera with a small hole, put a toothpick to press)" There will be a voice prompt "restore factory settings successfully" and then enter "WIFI smart link "mode (voice prompts), enter router password, the device in


the case of LAN device configuration  → Settings→

Network → AP mode(hotspot mode without connecting a router) to save the tick, the voiceprompts will build a successful hot spot) → return my device (the device will display Internet Online), long press device name "Delete Device" ,Click AP Quick Configuration → Click Searched the device name can be connected (if the device did not come out , pls refresh):

(Figure5)

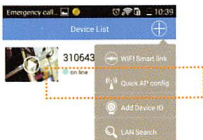

(Figure6)

 

① **Network Configuration:** A P mode and s t a t i o n mode can be switched with each other;

A P mode: The device hotspots (it means the device can send WIFI signal named "MV..." , it can be found in the mobile phone WLAN setting)

S t a t i o n modes: the device connected with router, throughout router to connect the Internet ;

② **Record settings:** automatic recording 24 hours all day;

Alarm recording: take video after image will change;

Audio recording: recording sound;

Video Resolution: SD (V G A), HD (7 2 0 P)

(Select HD video recording, video file size will be larger, memory card storage time is short)

③ **Alarm and tips:** Arming and disarming switch: Push picture switch;

Voice master switch: All voice prompts device master switch;

Device alarm audio: mobile audio alarm switch;

Voice prompt language: choose English or Chinese;

④ **Time and date:** adjust device time;

⑤ **Account:** You can modify the camera user name and password;

⑥ **Version&Upgrades:** Remotely upgrade equipment systems, equipment and query system and hardware information.

2. Select the router, enter the router password, click "Save", and after devices connected to the router, the device will appear in the device list. (Figure 7/8)

(Figure7)



(Figure8)




Three ways: hot configuration (support for Apple and Android phones)
Short press (Reset key in a small hole in the bottom of camera, put a toothpick to click) "reset button" to enter "AP hot spots" mode

1. open the phone WIFI settings, connected devices hot spot(MV * beginning hotspots):(Figure9)
- 2.in the APP, click on the "Search Device" (Figure 10)

IV. Device settings

introduction (Figure 16)

(Figure16)

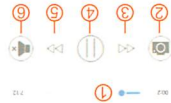

(Figure15)

Select the device and configure the device, below for the device functions

(Figure9)




(Figure10)



3. After search out the device, click "Settings" - "Network" - "Station", select the router WIFI, and enter WIFI password, and saved, after hearing the voice prompt "complete routing connections" That Ends (Figure11/12)

(Figure11)

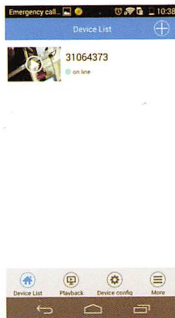


(Figure12)



III .Playback


1. ① video search (Figure 13)

(Figure13)

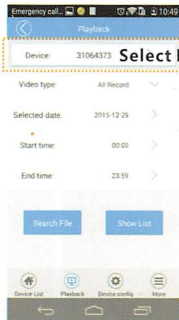

② video files (Figure 14)

(Figure14)

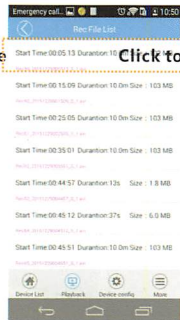

2. ① Play ② Photo ③ last file ④ stop / playback ⑤ next file
⑥ sound (Figure 15)