

# American DJ® WLED CURTAIN™ Owners Manual

Thank you for purchasing this American DJ® product. Please read the manual before installing or using your new unit.

## SYSTEM INCLUDES:

1 x LED Curtain  
2 x Tripod Stands  
1 x Crossbar  
1 x Chase Controller  
1 x Carrying Bag  
1 x Controller



## SPECIFICATIONS:

Voltage:	120V ~ 60Hz
Weight:	40 lbs /18 kgs.
Dimensions:	
Assembled:	123" (W) x 82" (H)
Nylon LED Curtain:	118" (W) x 78" (H)
Stand Max. Height:	7.5 ft
Folded in Bag:	54" (L) x 11" (W) x 8.5" (H)
Colors:	Clear

 


**Caution! No user serviceable parts inside do not attempt repairs. In the event your unit should fail, contact American DJ®.** For service parts visit <http://parts.americandj.com>

**Customer Support:** American DJ® provides a toll free customer support line, to provide set up help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at [www.americandj.com](http://www.americandj.com) for any comments or suggestions. Service Hours are Monday through Friday 9:00 a.m. to 5:00 p.m. Pacific Standard Time. Please see other side at the bottom for more information.

Voice: (800) 322-6337 Fax: (323) 582-2610 E-mail: [support@americandj.com](mailto:support@americandj.com)

**WARNING! To prevent fire or shock hazard, do not expose this product to a high temperature or high humidity area.**

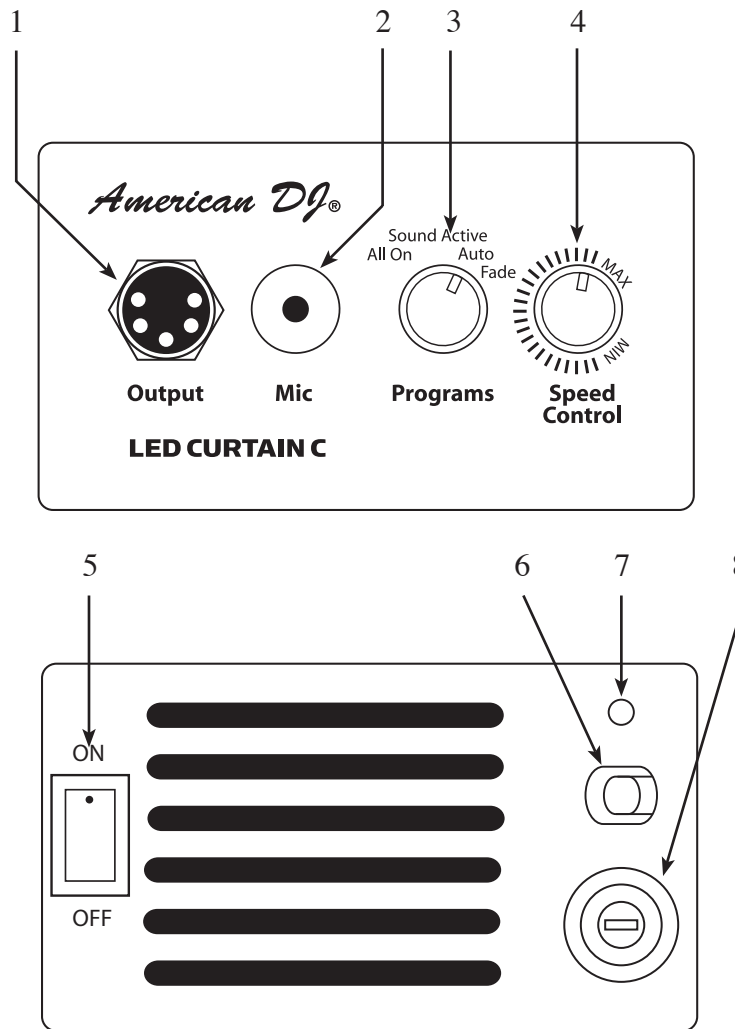

## LED Curtain C:

## Controls and Functions

1. **Output Connection** - Use this 5-pin output jack to connect the controller to the WLED Curtain™.
2. **Microphone** - This microphone receives external low frequencies to trigger the unit in Sound-Active Mode.
3. **Program Selector Knob** - Use this knob to select the different programs for the WLED Curtain™. Programs include All On, Sound Active, and Chase (Auto Fade).
4. **Program Speed Control** - This knob controls the speed of the chase programs.
5. **Power Switch** - “Flip” this switch to the “On” position to activate the controller and curtain.
6. **Power Cord** - Connect only to a matching power outlet. Never use this fixture if the ground prong has been removed or broken off.
7. **Power LED** - When this LED is lit, the controller is receiving power.
8. **Fuse Holder** - This housing stores the protective 3 amp fuse. Always replace with the same exact fuse.

## Product Description:

The WLED Curtain™ by American DJ® is a revolution in party and decoration effects! This portable, take anywhere LED Curtain has three modes of operation: All On, Sound Active Mode, & Chase. The LED Curtain is great for mobile DJ's, karaoke bars, bands, and small clubs. 100% mobile!

---

## Operating Instructions:

### FUNCTIONS:

All On: All LED's will be on.

Sound Active: The LED's will light up in different patterns, when the microphone receives external low frequencies

Auto Fade (Chase Mode): In this mode the Curtain LED's will follow a preset program. The chase speed can be controlled by the Program Speed Control (4)

### SET UP:

1. Set up the two tripod stands. Then slide the T-Connectors onto the top of each tripod, and secure the T-Connector by tightening the hand screw.
2. Connect the 3 crossbars (figure 1 & 2) and slide the connected crossbar through the opening at the top of the curtain, until the end of the crossbar appears at the other end.
3. Take the exposed ends of the crossbar and slide them into the T-Connectors at the top of each Tripod (figure 3). This is easier done with two people.
4. Now crank the Tripods up to your desired height.

Figure 1

 
 


Figure 2



Figure 3

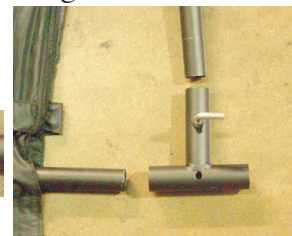

### OPERATION:

1. Before plugging your unit in, be sure the source voltage in your area matches the required voltage for your American DJ® WLED Curtain.™
2. Connect the remote control to the input jack on the WLED Curtain.™
3. Programs are selected by the Program selector (3).
4. Program speed is controlled by the Program Speed selector (4).
5. For safety, please turn off power switch after using and unplug power supply from power outlet.

**Additional Safety Notes:** Please unplug unit when not in use. Do not expose this product to high temperature or humidity .

The WLED Curtain™ carries a one year (365 days) limited warranty. Please fill out the enclosed warranty card to validate your purchase. All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper included in the shipping carton. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. You may obtain a R.A. number by contacting our customer support team on our toll free customer support number. All packages returned to the service department not displaying a R.A. number on the outside of the package will be returned to the shipper.

#### **1 YEAR LIMITED WARRANTY**

A. American DJ® hereby warrants, to the original purchaser, American DJ® products to be free of manufacturing defects in material and workmanship for a period of 1 year (365 days) from the date of purchase. This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.

B. For warranty service, send the product only to the American DJ® factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, American DJ® will pay return shipping charges only to a designated point within the United States. If the entire instrument is sent, it must be shipped in its original package. No accessories should be shipped with the product. If any accessories are shipped with the product, American DJ® shall have no liability whatsoever for loss of or damage to any such accessories, nor for the safe return thereof.

C. This warranty is void if the serial number has been altered or removed; if the product is modified in any manner which American DJ® concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the American DJ® factory unless prior written authorization was issued to purchaser by American DJ®; if the product is damaged because not properly maintained as set forth in the instruction manual.

D. This is not a service contract, and this warranty does not include maintenance, cleaning or periodic check-up. During the period specified above, American DJ® will replace defective parts at its expense, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of American DJ® under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of American DJ®. All products covered by this warranty were manufactured after January 1, 1990, and bear identifying marks to that effect.

E. American DJ® reserves the right to make changes in design and/or improvements upon its products without any obligation to include these changes in any products theretofore manufactured.

F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with products described above. Except to the extent prohibited by applicable law, all implied warranties made by American DJ® in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said period has expired. The consumer's and or Dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall American DJ® be liable for any loss or damage, direct or consequential, arising out of the use of, or inability to use, this product.

G. This warranty is the only written warranty applicable to American DJ® Products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

H. All lamps and fuses are not covered under this warranty.

©American DJ®  
American DJ World Headquarters:  
4295 Charter Street Los Angeles, CA 90058 USA  
Tel: 323-582-2650 / Fax: 323-582-2610  
Web: [www.americandj.com](http://www.americandj.com) / E-mail: [info@americandj.com](mailto:info@americandj.com)