

### **Caution**

Do not touch unit or lamps while hot.  
Never put any objects through the front of the unit.  
No user serviceable parts inside, please refer to CHAUVET for service.

### **Power Connections**

The unit is supplied with a power plug appropriate to its voltage and destination. Should any other connections be required they must be carried out with the following configuration.

Earth = Green/Yellow cable

Neutral = Blue cable

Live = Brown cable

In the USA & Europe, it is required that all plugs are 3-pin type i.e. with Earth/Ground connection.

In the UK, it is required that all mains plugs are fitted with 5A fuses.

### **Technical Specifications**

#### **User Informtion (Please complete for your records)**

Date Purchased:     /     /

Serial No: \_\_\_\_\_

Dealer Stamp:

**Model: CH-155 Party Lite**

Power	120V~60Hz AC	230V~50Hz AC
Fuse	20mm Glass 2A Fast Blow	20mm Glass 1A Fast Blow
Lamps	4 x 120V 60w Part No R30	4 x 240V 60w Part No R80ES
Dimensions	200 x 410 x 115mm / 8 x 16 x 4.5in	200 x 410 x 115mm / 8 x 16 x 4.5in
Weight	4.5kg / 10lbs	4.5kg / 10lbs



# Party Lite

**CH-155**

## User Guide

*Please read these instructions carefully before use*

#### **World-wide Headquarters:**

**3000 North 29th Ct., Hollywood, Florida, USA, FL 33020  
Tel: +1-954-929-1115 Fax: +1-954-929-5560**

#### **European Office:**

**Unit 18, Hunslet Trading Estate, Leeds, UK  
LS10 1BL  
Tel: (0113) 276-0755 Fax: (0113) 277-6675**

**[www.ChauvetLighting.com](http://www.ChauvetLighting.com)**

#### At Rear

- Fuseholder and Power Soucket
- Speed Adjustment
- Sound Sensitivity



- Mounting Bracket

- Lamps

## **Introduction**

Congratulations on the purchase of your new CHAUVET lighting effect. We are confident you will enjoy many trouble free hours with this unit. To assist with the care and use of the product we have prepared this short guide.

## **Operation**

This lighting effect has been designed to function on a mains power supply of either 120V~60Hz or 230V~50Hz and has been fitted with a suitable power plug for use with your local voltage. Check the label and voltage selector switch (if fitted) and the power plug for the correct voltage before switching on.

The Party Light is a sound activated chase unit(1,2,3,4,1,2,3,4....). The audio sensitivity control adjusts the sensitivity of the internal microphone for sound pick-up. The speed control adjusts the chase speed. The Party Lite uses the dominant beat of the music as its 'pulse' for the chase. By adjusting the speed control and the sound sensitivity, the unit will also chase without any music.

## **Installation / Mounting**

These units can be used in an upright position. Should you choose to mount the unit, it is recommended that, for safety purposes, your lighting effects be properly mounted using a suitable hanging clamp and safety cable. CHAUVET offers a range of items, which are ideal for safe mounting.

## **Replacing Lamps**

1. Disconnect from main power supply before attempting to replace lamp.
2. Ensure that the unit is sufficiently cool, before removing blown lamp.

In order to replace the lamps, disconnect from main power supply first, and simply unscrew the blown lamp. Only use the appropriately rated lamps as use of any other lamp type may cause the unit to be non-operational.

## **Replacing the Fuse**

If the unit does not function at all when connected to the main power supply i.e. the lamps do not light, then it is highly likely that the fuse has blown.

Disconnect from main power supply before attempting to replace either lamps or fuse.

The fuse holder is located at the bottom of the IEC power connector. Simply remove the cover using a screw driver and replace the fuse. The unit has a label attached which indicates the correct fuse rating and you will also find this listed as part of the specifications for the unit later in this guide. It is most important that replacement fuses are of the correct rating. Failure to use the correct fuse could damage the lighting effect beyond economic repair.

The fuse should simply be placed inside the holder and holder replaced. When this is done, re-connect to the main power supply to check. If the unit is still not working then please contact your dealer or CHAUVET for servicing.

## **Cleaning**

The most important part of your lighting effects to keep clean are the lamps as they allow the light output to transmit. These should be cleaned with a soft damp cloth. The body of the unit may also be cleaned in the same way. We recommend internal cleaning be carried out by a fully qualified technician.

## **Maintenance & Servicing**

Work on internal parts should be carried out by a qualified technician. Removal of any covers other than the fuse replacement access is considered a breach of warranty and will not be covered under any such agreement unless authorized first by the company.

## **Troubleshooting**

- If the unit is not functional – check main power supply is 'on' and check fuse.
- If the unit is functional but lamps do not light - lamps may require replacing.
- If the unit is not chasing to the music check the sound sensitivity adjustment.
- If after trying this solution you still have a problem contact your dealer or CHAUVET.

## **Contact Chauvet**

### **USA**

Technical Assistance: 1-800-762-1084 (954) 929-1115  
E-Mail [tech@chauvetlighting.com](mailto:tech@chauvetlighting.com)

### **Europe**

Technical Assistance: (0113) 276-0755  
E-Mail [eurosales@chauvetlighting.com](mailto:eurosales@chauvetlighting.com)

## **Package Contains:**

1	x	Party Lite	1	x	R80ES Bulb - Yellow
1	x	R80ES Bulb - Red	1	x	R80ES Bulb - Green
1	x	R80ES Bulb - Blue	1	x	Power Cord