

ENVISION™

Air Handler

Design Features

Factory Options

Accessories

Dimensional Data

Physical Data

Performance Data


Engineering Guide Specifications



Table of Contents

Model Nomenclature	2
General Installation Information	3-9
Physical Data	3
Sizing Selection	4
Hydronic Models	10-11
Electrical Data	11-12
Wiring Schematics	13-14
ECM Blower Controls	15
Blower Performance Data	16
Dimensional Data	17-18
Replacement Procedures	20

Nomenclature

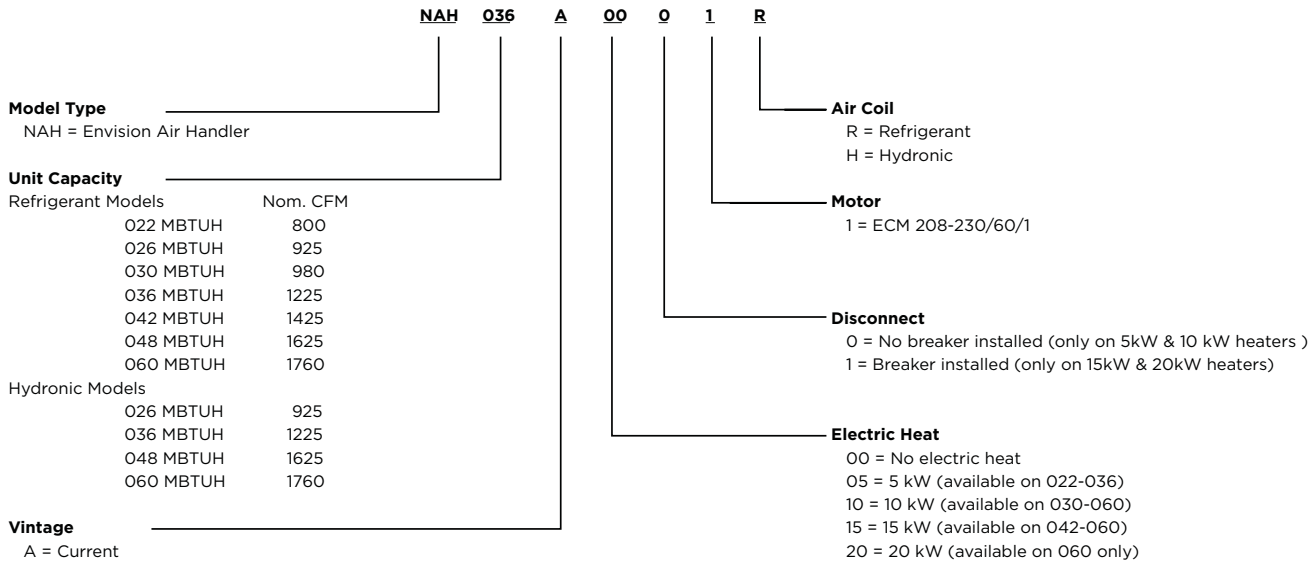

Note: Kit NAHBC must be ordered to field convert the NAH042-060 to bottomflow air discharge

Initial Inspection

When the equipment is received, all items should be carefully checked against the bill of lading to be sure all crates and cartons have been received. Examine units for shipping damage, removing the units from the packaging if necessary.

Units in question should also be internally inspected. If any damage is noted, the carrier should make the proper notation on the delivery receipt, acknowledging the damage.

General Installation Information

Safety Considerations

Warning: Before performing service or maintenance operations on a system, turn off main power switches to the equipment. Electrical shock could cause personal injury.

Installing and servicing heating and air conditioning equipment can be hazardous due to system pressure and electrical components. Only trained and qualified service personnel should install, repair or service heating and air conditioning equipment. Untrained personnel can perform the basic maintenance functions of cleaning coils and cleaning and replacing filters. All other operations should be performed by trained service personnel. When working on heating and air conditioning equipment, observe precau-

tions in the literature, tags and labels attached to the unit and other safety precautions that may apply.

Follow all safety codes. Wear safety glasses and work gloves. Use a quenching cloth for brazing operations and have a fire extinguisher available.

Note: Local codes and regulations take precedent over any recommendations by the manufacturer. In addition to conforming to manufacturer's and local municipal building codes, the equipment should also be installed in accordance with the National Electric Code and National Fire Protection Agency recommendations.

Physical Data

Air Handler Model Number (Refrigerant)		NAH022	NAH026	NAH030	NAH036	NAH042	NAH048	NAH060	
Evaporator Coil	Air Coil Total Face Area, ft ² [m ²]	5.83 [0.54]							
	Tube outside diameter - in. [mm]	3/8 [9.52]							
	Number of rows	2			3				
	Fins per inch	12							
	Suction line connection - in. [mm] sweat	5/8 [15.87]				7/8 [22.22]			
	Liquid line connection - in. [mm] sweat	3/8 [9.52]							
Refrigerant		R-410a							
Nominal cooling capacity - tons [kW]		1.8 [6.44]	2.1 [7.59]	2.5 [8.79]	3 [10.55]	3.5 [12.30]	4 [14.06]	5 [17.58]	
Condensate drain connection - (FPT) in. [mm]		3/4 [19.05]							
Blower Wheel Size (Dia x W), in. [mm]		11 x 10 [279 x 254]							
Blower motor type/speeds		ECM variable speed							
Blower motor output - hp [W]		1/2 [373]			1 [746]				
Filter Standard - 1" [51mm] MERV3 disposable, in. [mm]		20 x 24 [508 x 635]							
Electrical characteristics (60hz)		208/230 - 1ph							
Shipping weight - lbs. [kg]		215 [97.52]			220 [99.79]				
Operating weight - lbs. [kg]		195 [88.45]			200 [90.71]				

1/11/08

Air Handler Model Number (Hydronic)		NAH026	NAH036	NAH048	NAH060
Hydronic Coil	Air Coil Total Face Area, ft ² [m ²]	6.94 [0.64]			
	Tube outside diameter - in. [mm]	3/8 [9.52]			
	Number of rows	3			
	Fins per inch	13			
	Water In connection - in. [mm] sweat	7/8 [22.22]			
	Water Out connection - in. [mm] sweat	7/8 [22.22]			
Nominal cooling capacity - tons [kW]		2.1 [7.59]	3 [10.55]	4 [14.06]	5 [17.58]
Condensate drain connection - (FPT) in. [mm]		3/4 [19.05]			
Blower Wheel Size (Dia x W), in. [mm]		11 x 10 [279 x 254]			
Blower motor type/speeds		ECM variable speed			
Blower motor output - hp [W]		1/2 [373]	1 [746]		
Filter Standard - 1" [51mm] MERV3 disposable, in. [mm]		20 x 24 [508 x 635]			
Electrical characteristics (60hz)		208/230 - 1ph			
Shipping weight - lbs. [kg]		220 [99.79]			
Operating weight - lbs. [kg]		200 [90.71]			

3/11/08

General Installation Information

Air Handler Sizing Selection

The Envision Air Handlers are designed for R410a refrigerant and should be matched with Envision Split series compressor section according to the table below.

Air Handler	Indoor Split Model (Single)	Indoor Split Model (Dual Capacity)	Outdoor Split Model (Dual Capacity)	Airflow(CFM)	Electric Heat (kW)
NAH022A***1R	NSZ022	-	-	800	5
NAH026A***1R	-	NDZ026	NDS026	925	5
NAH030A***1R	NSZ030	-	-	980	5, 10
NAH036A***1R	NSZ036	-	-	1225	5, 10
NAH036A***1R	-	NDZ038	NDS038	1225	5, 10
NAH042A***1R	NSZ042	-	-	1425	10, 15
NAH048A***1R	NSZ048	-	-	1625	10, 15
NAH048A***1R	-	NDZ049	NDS049	1625	10, 15
NAH060A***1R	NSZ060	-	-	1760	10, 15, 20
NAH060A***1R	-	NDZ064	NDS064	1760	10, 15, 20
NAH060A***1R	NSZ070	-	-	1760	10, 15, 20
NAH060A***1R	-	NDZ072	NDS072	1760	10, 15, 20

6/9/08

Moving and Storage

If the equipment is not needed for immediate installation it should be left in its shipping carton and stored in a clean, dry area. Units must only be stored or moved in the normal "up" orientation.

Unit Location

Locate the unit in an indoor area that allows for easy removal of the filter and access panels (the air handler units are not approved for outdoor installation). Location should have enough space for service personnel to perform maintenance or repair. Provide sufficient room to make refrigerant, electrical and duct connections. If the unit is located in a confined space, such as a closet, provisions must be made for return air to freely enter the space by means of a louvered door, etc. The air handler section may be installed on any level surface strong enough to support its weight. When installed in a closet or on a stand, it should be mounted on vibration absorbing material slightly larger than the base to minimize vibration transmission to the building structure.

When installed in an attic or above a drop ceiling, the installation must conform to all local codes. If the unit is suspended and installed in the horizontal position, the entire length of the unit should be supported. If the application requires the air handler to be installed on the attic floor then the unit should be set in a full size secondary drain pan. In this case the secondary drain pan should be set on top of a vibration absorbing mesh. The secondary drain pan is usually placed on a plywood base. A secondary drain pan should be used when equipment is installed over a

finished living area to provide protection from water damage in case of plugging of the air handler primary drain line. The secondary drain line should terminate somewhere that is easily visible by the homeowner. Be certain to show the homeowner the termination location of the secondary drain line and to explain its purpose.

Duct System


The duct system should be sized to handle the design airflow quietly and efficiently. To maximize sound attenuation of the unit blower, the supply and return plenums should include an internal duct liner of fiberglass or constructed of ductboard for the first few feet. On systems employing a metal duct system, canvas connectors should be used between the unit and the ductwork. If air noise or excessive airflow is a problem, the blower speed can be changed. Application of the unit to un-insulated metal ductwork in an unconditioned space will cause poor unit performance and allow condensation to form on the duct and possibly cause damage to the structure.

If the unit is connected to existing ductwork, check the duct system to ensure that it has the capacity to accommodate the air required for the unit application. If the duct is too small, as in the replacement of heating only systems, larger ductwork should be installed. All existing ductwork should be checked for leaks and repaired as necessary.

General Installation Information

Condensate Drain

To facilitate condensate removal, the air handler should be pitched 1/4" towards the drain in both directions. The drain line contains cold water and should be insulated in unconditioned spaces to avoid drain line condensation from dripping on ceiling, etc. The drain pan has a primary and auxiliary drain connection. The air handler drain connections must be connected to a drain line and pitched away from the unit a minimum of 1/8" per foot to allow the condensate to flow away from the air handler. A trap must be installed in the drain line below the bottom of the drain pan to ensure free condensate flow (units are not internally trapped). The primary condensate drain must be terminated to an open drain or sump. Do not connect the condensate drain to a closed waste system. An open vertical air vent should be installed to overcome line length, friction and static pressure. It is recommended that the auxiliary drain be connected to a drain line for all units. The auxiliary drain should be run to an area where the homeowner will notice it draining. The drain line should not be smaller than the drain connection at the condensate pan. If the air handler is located in an unconditioned space, water in the trap may freeze. It is recommended that the trap material be of a type that will allow for expansion of water when it freezes. Drain lines must be in conformance with local codes.

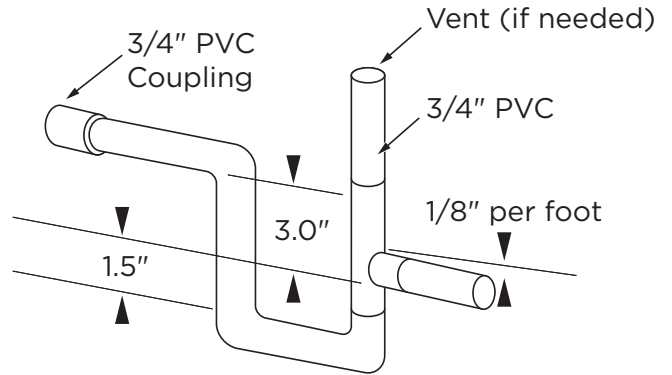


Air Handler Configuration

The Envision Air Handler is factory configured for upflow and horizontal left hand air discharge installation (Figure 1). For bottomflow or horizontal right hand discharge, certain field modifications are required.

Warning: Do not lift or reposition the 'A' coil by grasping the copper tube header or distributor. This could cause a tubing fracture resulting in a refrigerant leak.

Figure 1 - Factory configuration is top discharge and horizontal left hand air discharge.

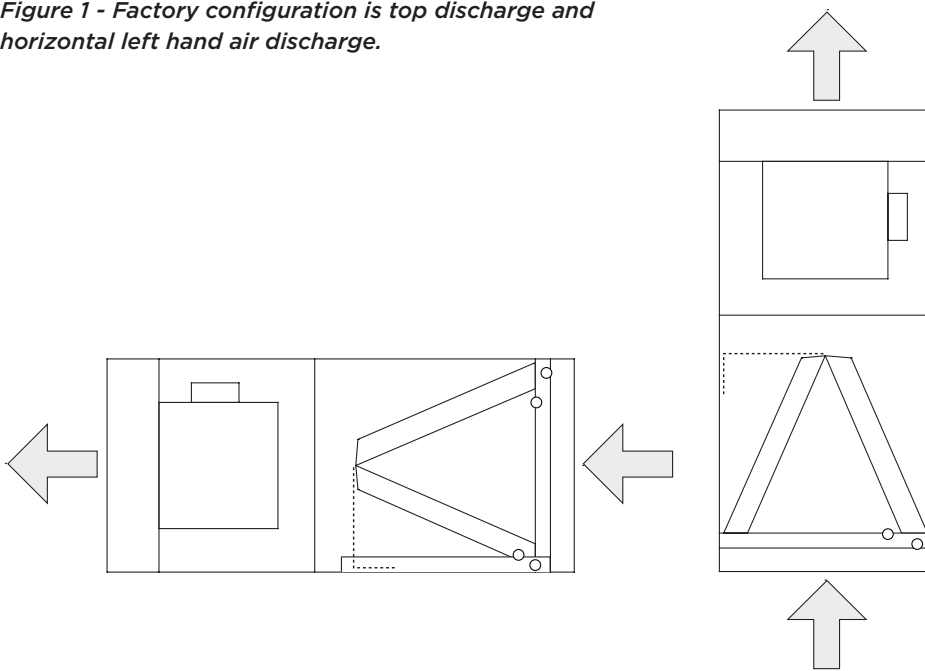


General Installation Information

Bottomflow Application

To convert the NAH series air handlers for bottomflow applications follow the steps shown below:

1. Remove all access panels. Disconnect the blower harnesses from the motor and loosen ground wire from blower. Remove the blower by removing 2 screws from the blower mounting bracket, and slide the blower assembly out the front. Remove the stiffener bracket in front of coil, 'A' coil/pan assembly and the horizontal drain pan. This will lighten the cabinet and make it easier to maneuver.
2. Rotate the cabinet 180° from the upright position so that the discharge air opening is located at the bottom and the return air opening is at the top.
3. Install the blower assembly into the blower discharge opening at the bottom of the cabinet by sliding the blower mounting bracket under the discharge support bracket and secure in place with 2 screws. The blower harness and motor ground wire should be reattached before sliding the blower into place.
4. **On the NAH042-060 install the NAHBC bottomflow conversion kit per instructions in the kit. Failure to install this kit will result in condensate blow-off from the 'A' coil into the cabinet and ductwork.**
5. Install the 'A' coil into the upper section of the cabinet as pictured in Figure 2. Attach the stiffener bracket into the two holes provided in the cabinet so that the bracket is in front of the coil. The horizontal drain pan is not needed and must be discarded. Plug the 2 drain hole openings in the access panel with the plugs provided.
6. Replace the access panels.
7. Bottom air discharge units require the supply air opening to be cut at least a 1/2" larger than the unit's air outlet.
8. When installed on combustible flooring, protect the edges of the floor opening with sheet metal over wrap or other non-combustible material.
9. Bottom air discharge units should be sealed well to the floor to prevent air leakage.

Figure 2 - Bottomflow NAH.

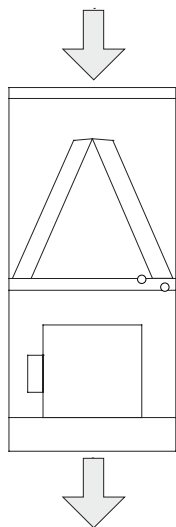


Horizontal Right Air Discharge Application

To convert the NAH series air handlers for horizontal right air discharge applications follow the steps shown below

1. Remove all access panels. Remove the stiffener bracket in front of the coil, 'A' coil assembly and the horizontal drain pan.
2. From the vertical upflow position, rotate the top of the cabinet 90° to the right and set in place.
3. Remove the support bracket mounted to the top plate of the 'A' coil. Rotate the 'A' coil support bracket 180° from its original position and re-attach into existing holes in the top plate of the coil. This must be done to prevent the 'A' coil from falling into the drain pan (Figure 3).
4. Move the horizontal drain pan from the left side of the 'A' coil to the right hand side of the 'A' coil. Place the 'A' coil and horizontal drain pan assembly into the cabinet so that the support bracket is resting in the horizontal drain pan as shown in Figure 3. Attach the stiffener bracket into the two holes provided in the cabinet so that the bracket is in front of the coil.
5. Remove the 2 drain plugs from the upper right of the access panel and install them on the lower left of the access panel. Replace the access panels.
6. If the unit is suspended, the entire length of the cabinet should be supported.

Figure 3 - Horizontal Right Hand Air Discharge

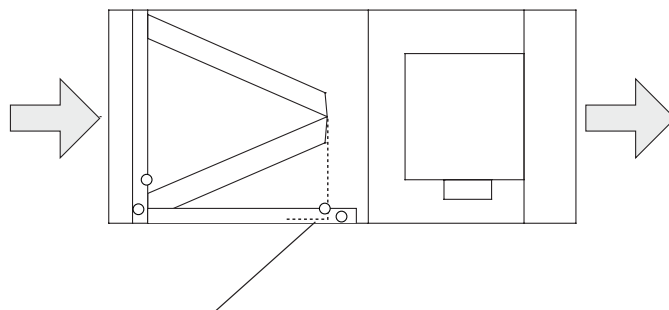

Rotate the coil support bracket to this position

Important: When removing the coil, there is possible danger of equipment damage and personal injury. Be careful when removing the coil assembly from the unit.

General Installation Information

Air Handler Installation

The air handler is attached to the shipping pallet with screws. Prior to setting the unit in place remove the shipping screws located in the front base right behind the air filter access panel. Also remove the external shipping brackets at the rear of the cabinet.

An air filter must always be installed upstream of the air coil on the return air side of the air handler. An air filter is provided with the air handler. If there is limited access to the filter rack for normal maintenance, it is suggested that a return air filter grille be installed. In this instance the filter supplied with the air handler should be removed. Be sure that the return duct is properly installed and free of leaks to prevent dirt and debris from bypassing the filter and plugging the air coil.

The cabinet should be sealed so that unconditioned warm air can not enter the cabinet. Warm air will introduce moisture into the cabinet which could result in water blow-off problems, especially when installed in an unconditioned space. Make sure that the liquid line, suction line and drain line entry points into the cabinet are well sealed. Use the butyl tape supplied with the air handler to seal around the copper lines entering the cabinet.


All wall penetrations should be sealed properly. The line set should not come into direct contact with water pipes, floor joists, wall studs, duct work, floors, walls and brick. The line set should not be suspended from joists or studs with a rigid wire or strap which comes into direct contact with the tubing. Wide hanger straps which conform to the shape of the tubing are recommended. All line sets should be insulated with a minimum of 3/8" closed cell insulation. The line set insulation should be pliable, and should completely surround the refrigerant line. As in all R-410a equipment, a reversible liquid line filter drier is required to insure all moisture is removed from the system. This drier is factory installed in the Envision Split series compressor section. This drier should be replaced whenever "breaking into" the system for service. All exterior insulation should be painted with UV resistant paint or covering to insure long insulation life.

Connection to the Coil

Connect the refrigerant line set to the 'A' coil tubes. Nitrogen should be bled through the system at 2 to 3 PSI to prevent oxidation inside the refrigerant tubing. Use a low silver phospho-copper braze alloy on all brazed connections. The air handler txv bulb is secured to the 'A' coil for shipping. The Envision Split series compressor section is shipped with a factory charge and the service valves are not to be opened until the line set and air handler have been leak tested, purged and evacuated. A damp towel or heat sink should be used on the service valves to prevent damage caused by excessive heat.

Refer to the Refrigerant Line Sizing table to determine the proper line set configuration for the system being installed. Line sets over 60 feet in length are not recommended. If the line set is kinked or deformed and cannot be reformed,

TXV ("IN" toward condensing unit)

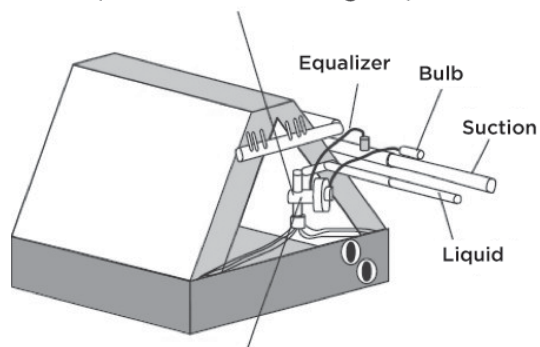

TXV has internal check valve

the bad section of pipe should be replaced. A restricted line set will affect unit performance. Line sets should be routed as directly as possible, avoiding any unnecessary bends and turns.

Important Note:

The bulb will need to be attached to the suction line on the outside of the cabinet once the refrigerant line connections have been made.

Leak Testing

The refrigeration line set must be pressurized and checked for leaks before purging and charging the unit. To pressurize the line set, attach refrigerant gauges to the service ports and add an inert gas (nitrogen or dry carbon dioxide) until pressure reaches 60 to 90 PSIG. Never use oxygen or acetylene to pressure test the system. Use an electronic leak detector or a good quality bubble solution to detect leaks on all connections made in the field. Be sure to check the service valve ports and stems for leaks. If a leak is found, repair it and repeat the above steps. For safety reasons do not pressurize the system above 150 PSIG. Purge pressure from the line set slowly when the pressure test is complete. The system is now ready for evacuation.

System Evacuation

Ensure that the line set and air coil are evacuated before opening service valves. The line set and air coil must be evacuated to 250 microns with a good quality vacuum pump and use a vacuum gauge to ensure that air and moisture are removed. With the system shut off from the vacuum pump a sufficient system vacuum is achieved when a 500 micron vacuum can be held for 30 minutes. A fast rise to atmospheric pressure indicates a leak, while a slower rise to around 1500 microns indicates moisture is still present in the system and further evacuation is required.

General Installation Information

Refrigeration

The Envision NAH series air handlers are supplied with an expansion device. **Once the line set has been brazed into the air handler the txv bulb must be attached to the suction line outside of the cabinet and insulated with foam tape.** Be careful not to crush the txv bulb by over-tightening the clamp. The txv supplied has an internal check valve so no external check valve is necessary. The air handler txv should be adjusted initially per TXV Superheat Adjustments table. Check sub-cooling and superheat, refrigerant charge and txv may require further adjustment.

TXV Superheat Adjustment Procedure (see figure 4)

Txv's may require adjustment for a specific application.

1. Remove the seal cap from the bottom of the valve.
2. Turn the adjustment screw counterclockwise to increase superheat and clockwise to decrease superheat. One complete 360° turn changes the superheat approximately 3-4°F. You may need to allow as much as

30 minutes after the adjustment is made for the system to stabilize.

3. Once the proper superheat setting has been achieved replace and tighten the seal cap.

Warning – There are 8 total (360°) turns on the superheat adjustment stem from wide open to fully closed. When adjusting the superheat stem counterclockwise (superheat increase) and the stop is reached, any further counterclockwise turning adjustment will damage the valve.

NOTE: The air handler is factory supplied with a holding charge of dry nitrogen.

Charging the System

Refer to IM1592 for charging the system, checking sub-cooling/superheat and unit operating parameters. Refer to the Refrigerant Line Sizing table for initial refrigerant charge amounts used with the Envision Split.

TXV Superheat Adjustments

WFI Part Number	NAH022, NAH026, NAH030	NAH036	NAH042	NAH048	NAH060
33P609-01	factory set				
33P609-03		factory set			
33P609-05			factory set	open 2 turns	
33P609-06					open 2 turns

Note: When installing these air handlers, follow the table for initial txv setting.

Check sub-cooling and superheat to verify final setting.

Refrigerant Line Sizing

Unit Size	Air Handler	20 feet		40 feet		60 feet		NZ Factory Charge (oz.)	*Initial System Charge (oz.)
		Suction	Liquid	Suction	Liquid	Suction	Liquid		
NSZ022	NAH022	5/8" OD	3/8" OD	5/8" OD	3/8" OD	3/4" OD	3/8" OD	56	88
NSZ030	NAH030	5/8" OD	3/8" OD	3/4" OD	3/8" OD	3/4" OD	3/8" OD	56	88
NSZ036	NAH036	5/8" OD	3/8" OD	3/4" OD	3/8" OD	3/4" OD	1/2" OD	56	96
NSZ042	NAH042	3/4" OD	3/8" OD	3/4" OD	3/8" OD	7/8" OD	1/2" OD	74	109
NSZ048	NAH048	3/4" OD	3/8" OD	7/8" OD	3/8" OD	7/8" OD	1/2" OD	90	125
NSZ060	NAH060	7/8" OD	1/2" OD	7/8" OD	1/2" OD	1-1/8" OD	1/2" OD	92	132
NSZ070	NAH060	7/8" OD	1/2" OD	7/8" OD	1/2" OD	1-1/8" OD	1/2" OD	108	152
NDZ026	NAH026	5/8" OD	3/8" OD	3/4" OD	3/8" OD	3/4" OD	1/2" OD	52	84
NDZ038	NAH036	5/8" OD	3/8" OD	3/4" OD	3/8" OD	3/4" OD	1/2" OD	56	96
NDZ049	NAH048	3/4" OD	3/8" OD	7/8" OD	3/8" OD	7/8" OD	1/2" OD	90	125
NDZ064	NAH060	7/8" OD	1/2" OD	7/8" OD	1/2" OD	1-1/8" OD	1/2" OD	92	132
NDZ072	NAH060	7/8" OD	1/2" OD	7/8" OD	1/2" OD	1-1/8" OD	1/2" OD	104	152

Notes: *Initial System Charge includes Factory Split charge + 20' lineset charge + required additional charge, then adjust charge by subcooling and superheat measurements.

Rev.: 6/13/07

If lineset is longer than 20' then additional charge for R410A is 0.50 oz. per ft. for 3/8" and 1.0 oz. per ft. for 1/2" tube.

General Installation Information


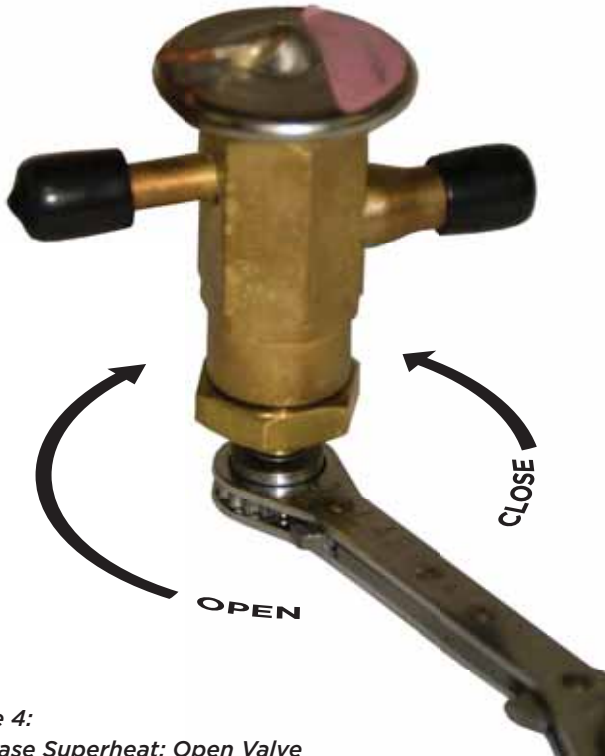



Figure 4:
Decrease Superheat: Open Valve
Increase Superheat: Close Valve

Hydronic Models

The water heater and hydronic air handler must be located indoors and not subject to freezing temperatures. The water heater must be installed in accordance to local codes and its own installation instructions. The piping between the water heater and air handler should be kept to a minimum. Piping should be sized to allow for water velocities of 2'-4' per second. At average water velocities, air bubbles should be carried along the piping to an air separator where they can be discharged from the system. Water velocities greater than 4' per second could cause flow noise and should be avoided. If water lines pass through an unconditioned space they should be protected to prevent them from freezing. Valves should be installed to allow system isolation. All closed loop hydronic systems must be equipped with an expansion tank to allow room for the heated liquid to expand. A system is considered closed when a check valve or backflow prevention valve is installed in the cold water pipe upstream of the water heater. Once piping is complete all air must be purged from the water lines. There is a dole valve at the top of the hydronic coil header that can be opened to purge air from the coil. There is also a plug at the bottom of the hydronic coil header for draining the coil.

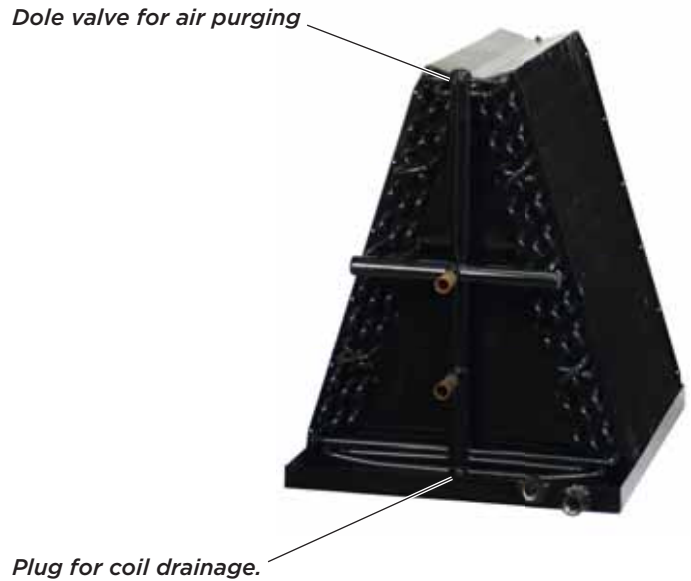

Typical Installation. See the *Hydronic Application Guide* for other applications

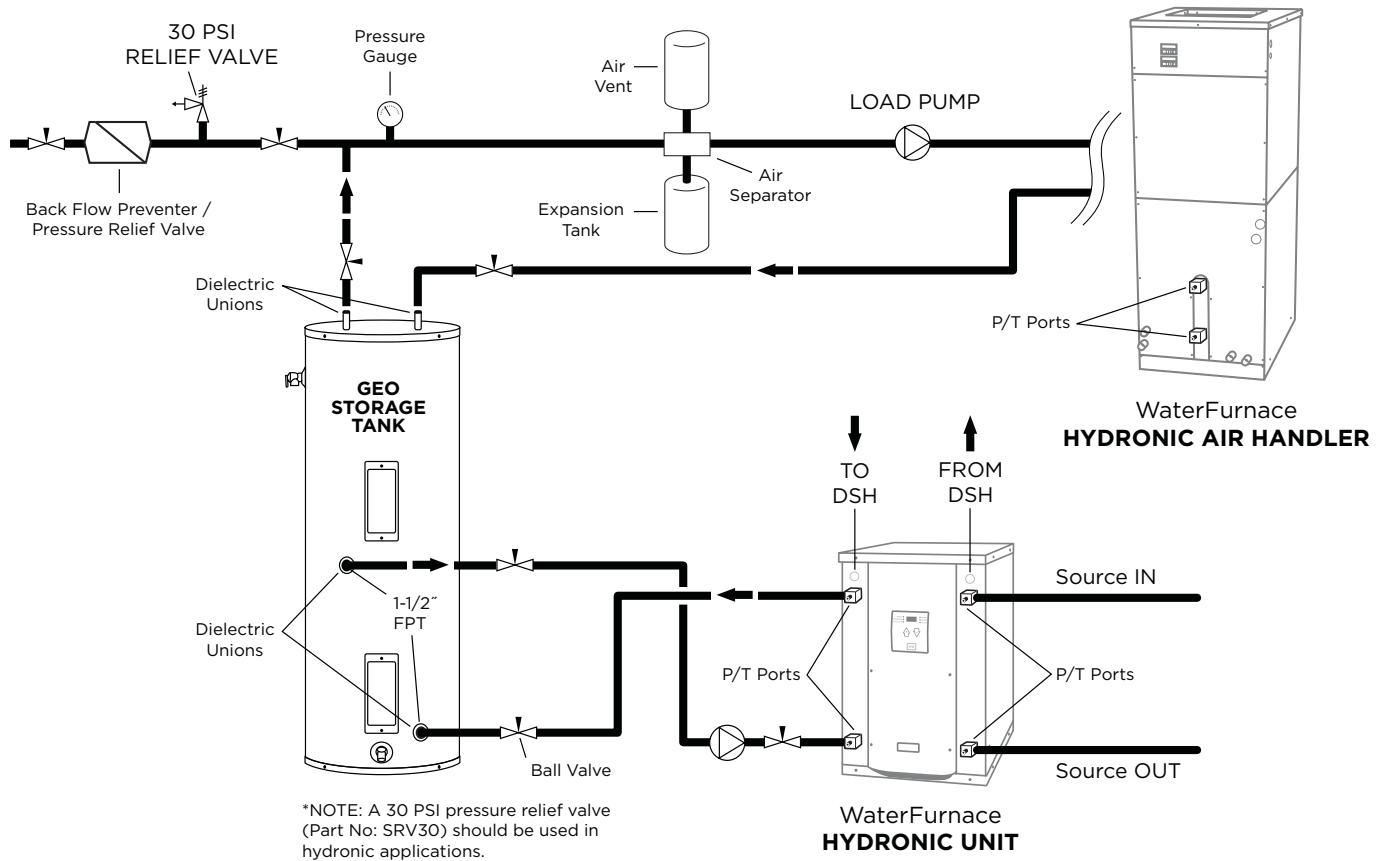

Hydronic Models

Water Pressure Drop - Hydronic Coil

Flow gpm	Pressure Drop (PSI)						
	40°F	50°F	60°F	100°F	110°F	120°F	130°F
3.0	0.5	0.5	0.5	0.4	0.4	0.4	0.4
4.5	0.9	0.9	0.9	0.8	0.8	0.8	0.8
6.0	1.4	1.4	1.4	1.2	1.2	1.2	1.2
9.0	2.8	2.6	2.5	2.4	2.4	2.4	2.3
12.0	4.6	4.4	4.2	4.0	4.0	4.0	3.9
15.0	7.0	6.8	6.6	6.0	6.0	5.9	5.8


Coil Capacity vs. Entering Water Temperature

EAT °F	Entering Water Temperature °F					
	100	110	120	130	140	150
65	44%	56%	69%	81%	94%	106%
70	37%	50%	63%	75%	87%	100%


Electrical Data

All field wiring must comply with local and national fire, safety and electrical codes. Be sure the available power is the same voltage and phase as that shown on the unit serial plate. Refer to the unit Electrical Data table for fuse and circuit breaker sizing. The thermostat should be connected to the air handler and to the compressor section. Line voltage

power should be supplied to the breakers on air handlers with 15kW and 20kW heater kits (see the electric heat control section picture). On air handlers with no electric heat installed, or with 5kW and 10kW heater kits the power should be supplied to L1 and L2 lugs on PB (see air handler control section picture).

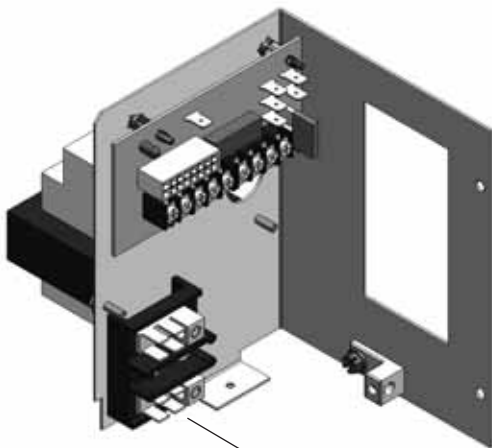

Air Handler Control Section:
Power should be supplied to PB on air handlers with no electric heat and 5kW or 10kW heaters.

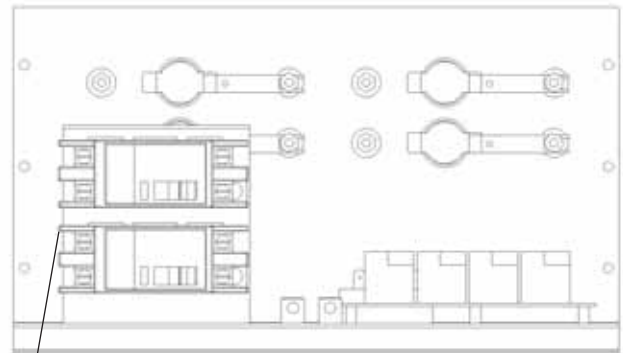

Electric Heat Control Section:
Power should be supplied to the breakers on air handlers with 15kW and 20kW heaters.


Electrical Data

Model	Electric Heat Capacity		Supply Circuit	Aux. Heat Minimum CFM	Rated Voltage	Voltage Min/Max	Fan Motor FLA	Heater Ampacity		Total Unit FLA		Minimum Circuit Ampacity		Maximum Fuse/HACR			
	KW	BTUH						208v	240v	208v	240v	208v	240v	208v	240v	208v	240v
	240v	240v															
NAH 022	0	0	-	-	208-230/60/1	197/253	4.0	-	-	4.0	4.0	5.0	5.0	10	10		
	4.8	16,382	single	740			4.0	17.3	20.0	21.3	24.0	26.6	30.0	30.0	30	30	
NAH 026	0	0	-	-			4.0	-	-	4.0	4.0	5.0	5.0	10	10		
	4.8	16,382	single	740			4.0	17.3	20.0	21.3	24.0	26.6	30.0	30.0	30	30	
NAH 030	0	0	-	-			4.0	-	-	4.0	4.0	5.0	5.0	10	10		
	4.8	16,382	single	740			4.0	17.3	20.0	21.3	24.0	26.6	30.0	30.0	30	30	
	9.6	32,765	single	900			4.0	34.7	40.0	38.7	44.0	48.4	55.0	50	60		
NAH 036	0	0	-	-			4.0	-	-	4.0	4.0	5.0	5.0	10	10		
	4.8	16,382	single	740			4.0	17.3	20.0	21.3	24.0	26.6	30.0	30.0	30	30	
	9.6	32,765	single	900			4.0	34.7	40.0	38.7	44.0	48.4	55.0	50	60		
NAH 042	0	0	-	-			7.0	-	-	7.0	7.0	8.8	8.8	15	15		
	9.6	32,765	single	900			7.0	34.7	40.0	41.7	47.0	52.1	58.8	60	60		
	14.4	49,147	single	-			7.0	52.0	60.0	59.0	67.0	73.8	83.8	80	90		
	14.4	49,147	L1/L2	1,275			7.0	34.7	40.0	41.7	47.0	52.1	58.8	60	60		
NAH 048	0	0	-	-			-	17.3	20.0	17.3	20.0	21.6	25.0	25	25		
	9.6	32,765	single	900			7.0	-	-	7.0	7.0	8.8	8.8	15	15		
	14.4	49,147	single	-			7.0	34.7	40.0	41.7	47.0	52.1	58.8	60	60		
	14.4	49,147	L1/L2	1,275			7.0	52.0	60.0	59.0	67.0	73.8	83.8	80	90		
NAH 060	0	0	-	-			7.0	34.7	40.0	41.7	47.0	52.1	58.8	60	60		
	9.6	32,765	single	900			7.0	-	-	7.0	7.0	8.8	8.8	15	15		
	14.4	49,147	single	-			7.0	34.7	40.0	41.7	47.0	52.1	58.8	60	60		
	14.4	49,147	L1/L2	1,275			7.0	52.0	60.0	59.0	67.0	73.8	83.8	80	90		
			L3/L4	-			7.0	34.7	40.0	41.7	47.0	52.1	58.8	60	60		
	19.2	65,530	single	-			-	17.3	20.0	17.3	20.0	21.6	25.0	25	25		
	19.2	65,530	L1/L2	1,700	7.0	69.3	80.0	76.3	87.0	95.4	108.8	100	110				
		L3/L4	-	7.0	34.7	40.0	41.7	47.0	52.1	58.8	60	60					
			-	-	-	34.7	40.0	34.7	40.0	43.4	50.0	50	50				

7/11/08

Rated Voltage of 208/230/60/1
HACR circuit breaker in USA only

Low Voltage Point to Point Wiring


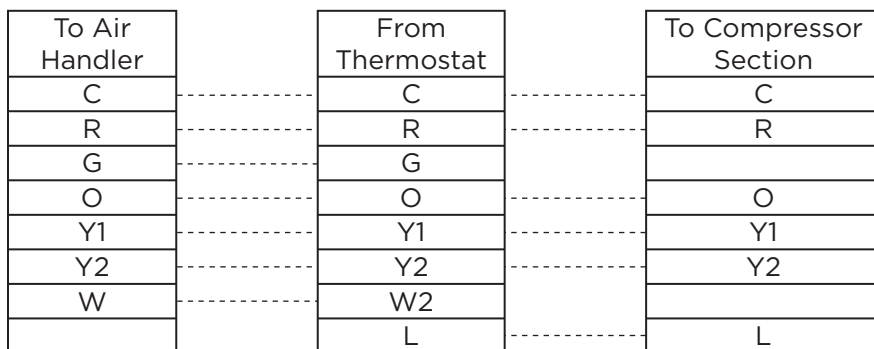


Air Handler transformer must be 75VA.


5/29/08

Electrical Data

Wiring Schematic

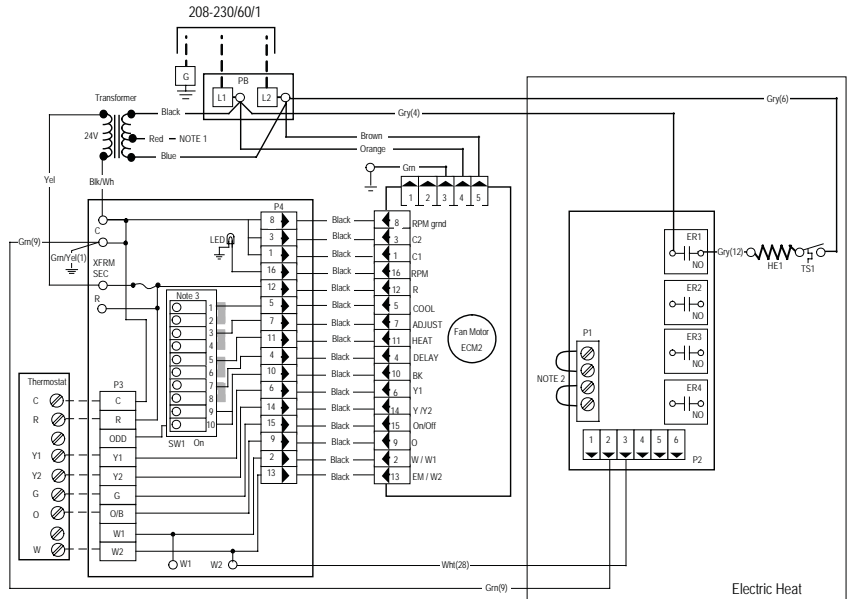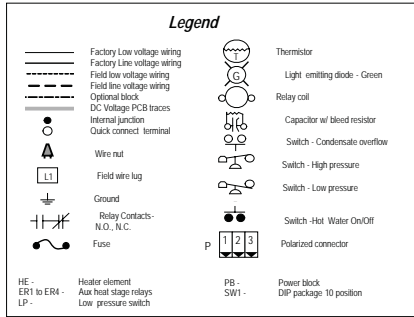


Air Handler w/ 5kW Electric Heat

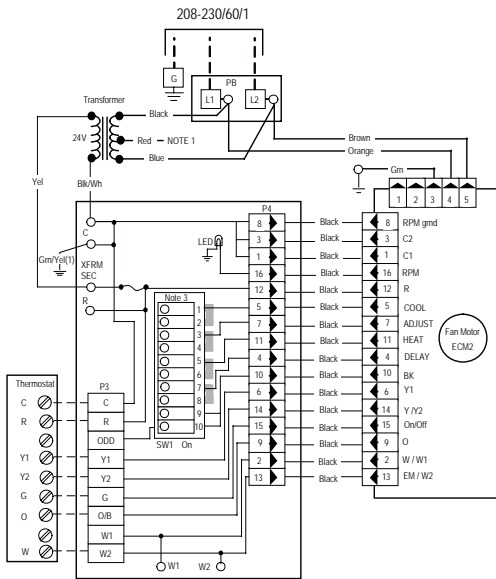

Air Handler No Electric Heat



Notes:
 1 - To operate in 208V mode replace the blue transformer wire connected to PB-L2 with red transformer wire.
 2 - Jumper wires tie stages (1) with (2) and (3) with (4).
 3 - Dip switches are used to select the air flow.

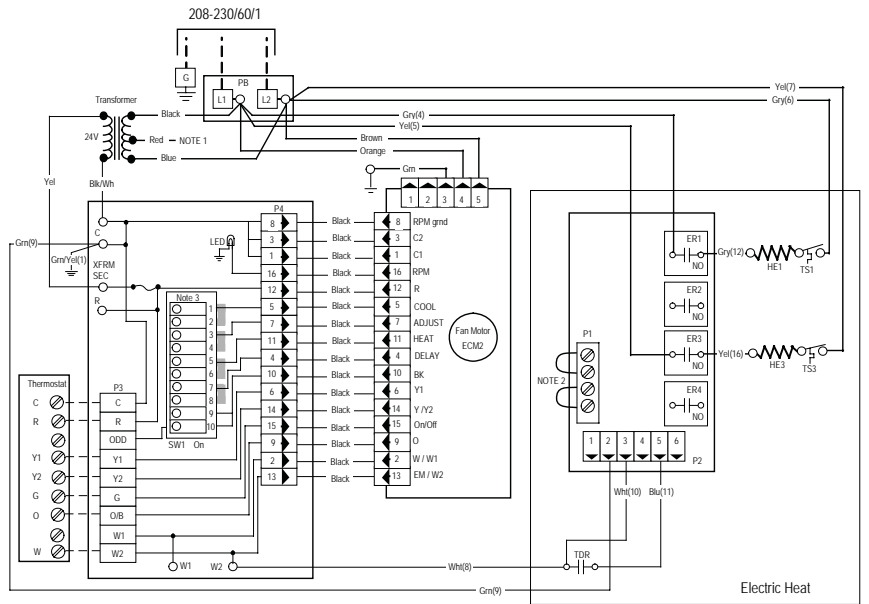


Air Handler w/ 10kW Electric Heat

Electrical Data

Wiring Schematic

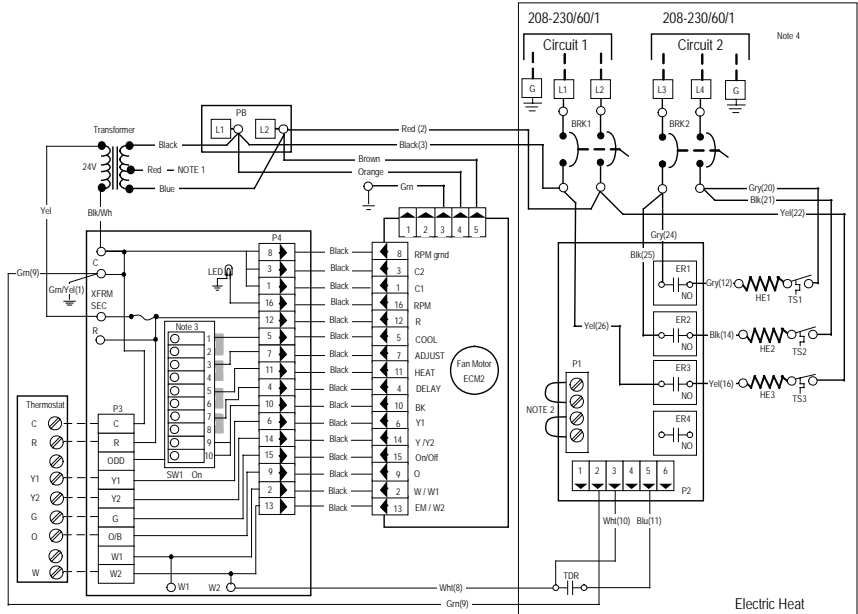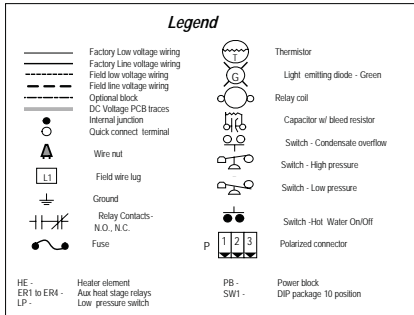


Air Handler w/ 15kW Electric Heat

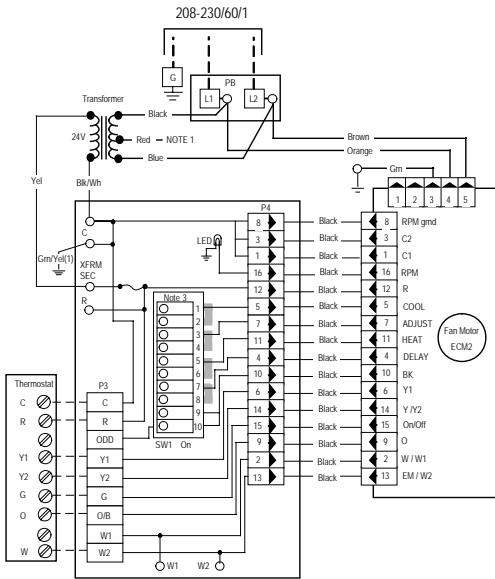

Air Handler No Electric Heat

- Notes:**
- 1 - To operate in 208V mode replace the blue transformer wire connected to PB-L2 with red transformer wire.
 - 2 - Jumper wires tie stages (1) with (2) and (3) with (4).
 - 3 - Dip switches are used to select the air flow.
 - 4 - For single circuit operation field supplied jumper wires should be applied between L1 & L3 and L2 & L4. Jumper wires must be sized to carry the single circuit ampacity of the equipment.

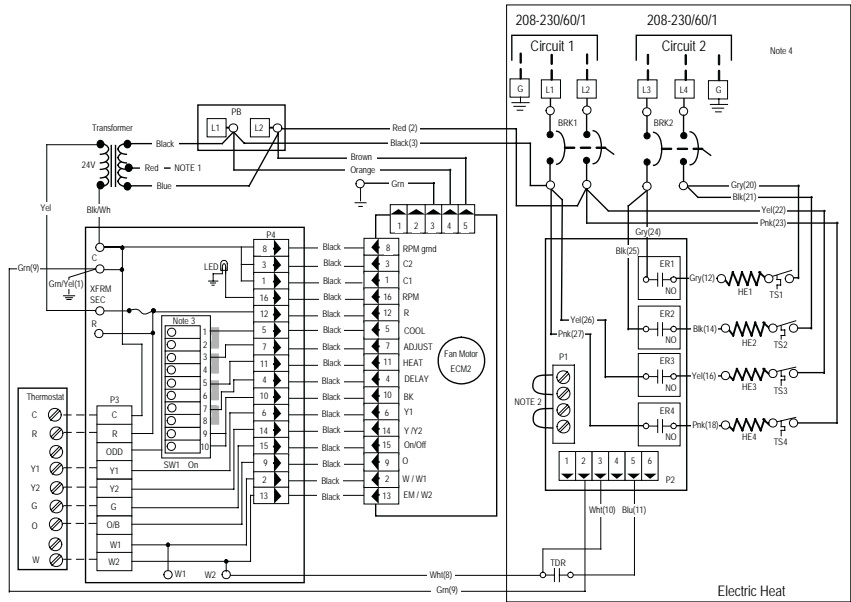

Air Handler w/ 20kW Electric Heat

ECM Blower Control

The ECM blower motor is controlled by an interface board installed in the air handler and allows field selectable CFM settings. The interface board receives inputs from the thermostat and converts them to signals used by the ECM motor. There are four different airflow settings that are field selectable via DIP switches (see Blower Performance table).

Cooling/Heating settings

The cooling/heating CFM settings determine the normal cooling/heating CFM when the unit is not in dehumidification mode or auxiliary heat mode. DIP switches 1 and 2 'off' is the lowest CFM setting while with DIP switches 1 and 2 'on' is the highest CFM setting. To prevent air coil freeze up, the lowest CFM setting can not be used when dehumidification mode is selected. DIP 9 must be 'on' to enable normal airflow settings.

Dehumidification Mode settings

This setting provides for field selection of humidity control (via setting DIP 9 'off'). The cooling airflow settings are determined by the Cooling/Heating DIP switch settings above. Dehumidification mode reduces the selected normal cooling CFM by 15%-20% which increases the moisture removing capability of the heat pump. To prevent air coil freeze up, the lowest CFM setting can not be used when dehumidification mode is selected.

Dehumidification Mode (Continuous) - This mode is selected via setting DIP 9 'off' on the ECM interface board and will be engaged whenever an 'O' input is present. In this mode any time the unit is operating in cooling mode, it will run at a CFM level 15%-20% lower than the selected normal cooling CFM.

NOTE: Do not select dehumidification mode if the lowest Cooling/Heating airflow level is selected (DIPS 1 & 2 off).

Auxiliary Heat settings - DIP 5 & 6 on the ECM interface board are used to select the desired CFM in auxiliary/emergency heat mode. Whenever auxiliary or emergency electric heat is energized this air flow setting will be used.

Blower Performance

Dip Switch Settings

Model	Max ESP (wg)	Blower Motor (hp)	HP CFM Setting		Normal Mode Htg & Clg			Dehumidification Mode Clg				Aux CFM Setting		Aux Emerg Mode
			S1	S2	Stg 2	Stg 1	Fan	S9	Stg 2	Stg 1	Fan	S5	S6	
022	0.50	1/2	On	On	900	700	450	Off	775	600	383	On	On	1000
	0.50	1/2	Off	On	800	625	400	Off	680	530	340	Off	On	800
	0.50	1/2	On	Off	700	540	375	Off	600	450	319	On	Off	775
	0.50	1/2	Off	Off	640	480	350					Off	Off	740
026	0.50	1/2	On	On	1050	800	525	Off	850	700	425	On	On	1150
	0.50	1/2	Off	On	925	725	475	Off	760	620	400	Off	On	950
	0.50	1/2	On	Off	800	625	425	Off	670	540	350	On	Off	925
	0.50	1/2	Off	Off	740	575	400					Off	Off	825
030	0.50	1/2	On	On	1150	950	600	Off	975	775	500	On	On	1250
	0.50	1/2	Off	On	980	780	500	Off	825	640	400	Off	On	1000
	0.50	1/2	On	Off	900	700	440	Off	750	580	350	On	Off	975
	0.50	1/2	Off	Off	800	630	425					Off	Off	900
036	0.50	1/2	On	On	1300	1025	760	Off	1105	871	760	On	On	1300
	0.50	1/2	Off	On	1225	950	685	Off	1041	808	685	Off	On	1250
	0.50	1/2	On	Off	1150	850	620	Off	940	690	620	On	Off	1225
	0.50	1/2	Off	Off	1075	800	550					Off	Off	1200
042	0.75	1	On	On	1500	1100	750	Off	1250	900	625	On	On	1550
	0.75	1	Off	On	1425	1010	650	Off	1180	840	540	Off	On	1450
	0.75	1	On	Off	1300	975	635	Off	1080	800	525	On	Off	1400
	0.75	1	Off	Off	1150	850	625					Off	Off	1275
048	0.75	1	On	On	1700	1300	975	Off	1400	1080	800	On	On	1700
	0.75	1	Off	On	1625	1240	875	Off	1350	1025	725	Off	On	1550
	0.75	1	On	Off	1450	1100	750	Off	1200	900	625	On	Off	1525
	0.75	1	Off	Off	1300	1000	675					Off	Off	1400
060	0.75	1	On	On	1850	1750	1175	Off	1540	1450	975	On	On	1850
	0.75	1	Off	On	1760	1625	1050	Off	1460	1350	875	Off	On	1760
	0.75	1	On	Off	1720	1575	1015	Off	1425	1300	840	On	Off	1725
	0.75	1	Off	Off	1680	1525	975					Off	Off	1700

Factory CFM settings are in boldface

2/12/08

CFM is controlled within 5% up to the maximum ESP

Maximum ESP includes allowance for wet coil and standard filter

"O" on the ECM interface board must be energized in cooling mode.

DIP switch 9 must be 'OFF' to select dehumidification mode.

Unit Start Up

- Check that supply voltage matches nameplate data.
- Fuses, breakers and wire size are correct.
- Low voltage wiring is complete.
- Piping is complete and water system is cleaned and flushed.
- Air is purged from the closed loop system.
- Isolation valves are open, water control valves or pumps are wired.
- Condensate line is open and correctly pitched.
- Transformer switched to 208v if applicable.
- DIP switches are set correctly.
- Blower rotates freely.
- Blower speed is correct.
- Air filter/cleaner is clean and in position.
- Service/access panels are in place.
- Return air temperature is between 50-80°F heating and 60-95° cooling.
- Check air coil cleanliness to insure optimum performance. Clean as needed according to maintenance guidelines. To obtain maximum performance the air coil should be cleaned before startup. A 10 percent solution of dishwasher detergent and water is recommended for both sides of coil. A thorough water rinse should follow.

Maintenance Filters

Filters must be clean to obtain maximum performance. They should be inspected monthly under normal operating conditions and be replaced when necessary. Units should never be operated without a filter. Always replace the filter with the same type as originally furnished.

Condensate Drain

In areas where airborne bacteria produce slime in the drain pan, it may be necessary to treat chemically to minimize the problem. The condensate drain can pick up lint and dirt, especially with dirty filters.

Blower Motors

The ECM motor is equipped with sealed ball bearings and requires no periodic lubrication.


Air Coil

The air coil must be cleaned to obtain maximum performance. Check once a year under normal operating conditions and, if dirty, brush or vacuum clean. Care must be taken not to damage the aluminum fins while cleaning.

Caution: Fin edges are sharp.

Dimensional Data

Top Flow/Horizontal Unit Configuration

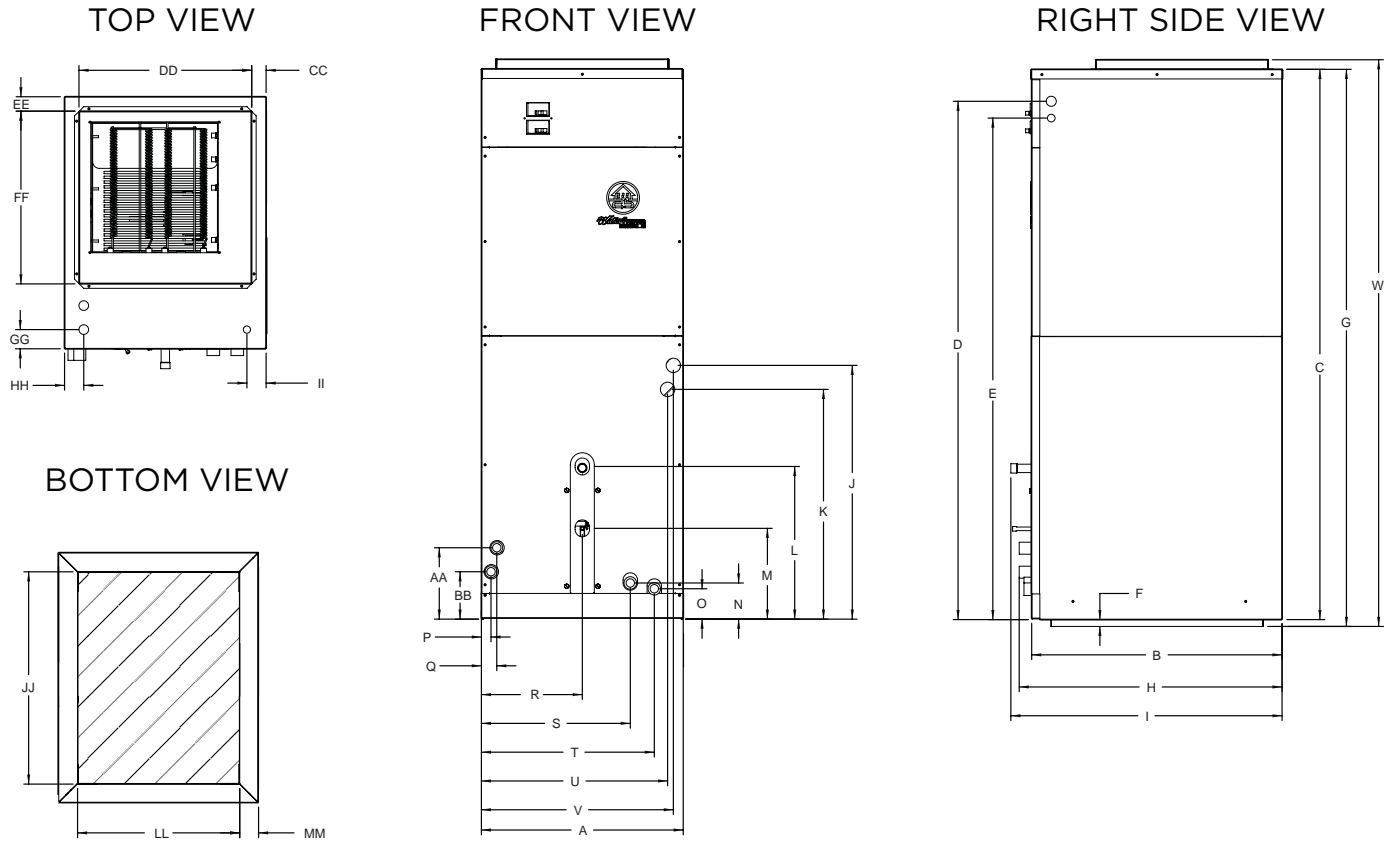

Topflow/ Horizontal Configuration	Overall Cabinet			Refrigerant/Water Connections																
	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	
	Width	Depth	Height	3/4" cond Power Supply	1/2" cond Low Voltage	Return Air Duct Flange						Suction / Water Out	Liquid / Water In							
022-060	in. cm.	21.0 53.4	26.1 66.3	57.3 145.6	54.0 137.2	52.3 132.7	0.7 1.8	58.1 147.4	27.4 69.6	28.3 71.8	26.4 67.2	23.9 60.8	15.9 40.4	9.5 24.0	3.8 9.6	3.2 8.1	0.9 2.4	1.5 3.9	10.5 26.7	15.5 39.4


S	T	U	V	W	X	Y	Z	AA	BB	CC	DD	EE	FF	GG	HH	II	JJ	KK	LL	MM
15.5	18.0	19.5	20.1	59.5	15.1	53.1	51.3	7.4	4.9	1.5	18.0	1.5	18.0	2.0	2.0	2.0	22.1	2.0	16.9	1.96
39.4	45.8	49.5	51.0	151.1	38.4	134.9	130.2	18.9	12.5	3.8	45.7	3.8	45.7	5.1	5.1	5.1	56.2	5.0	42.9	5.0

Condensate is stainless steel 3/4" FPT
Discharge flange is field installed and extends 1" (25.4 mm) from cabinet

Rev:A 3/12/08

Dimensional Data

Bottom Flow Unit Configuration

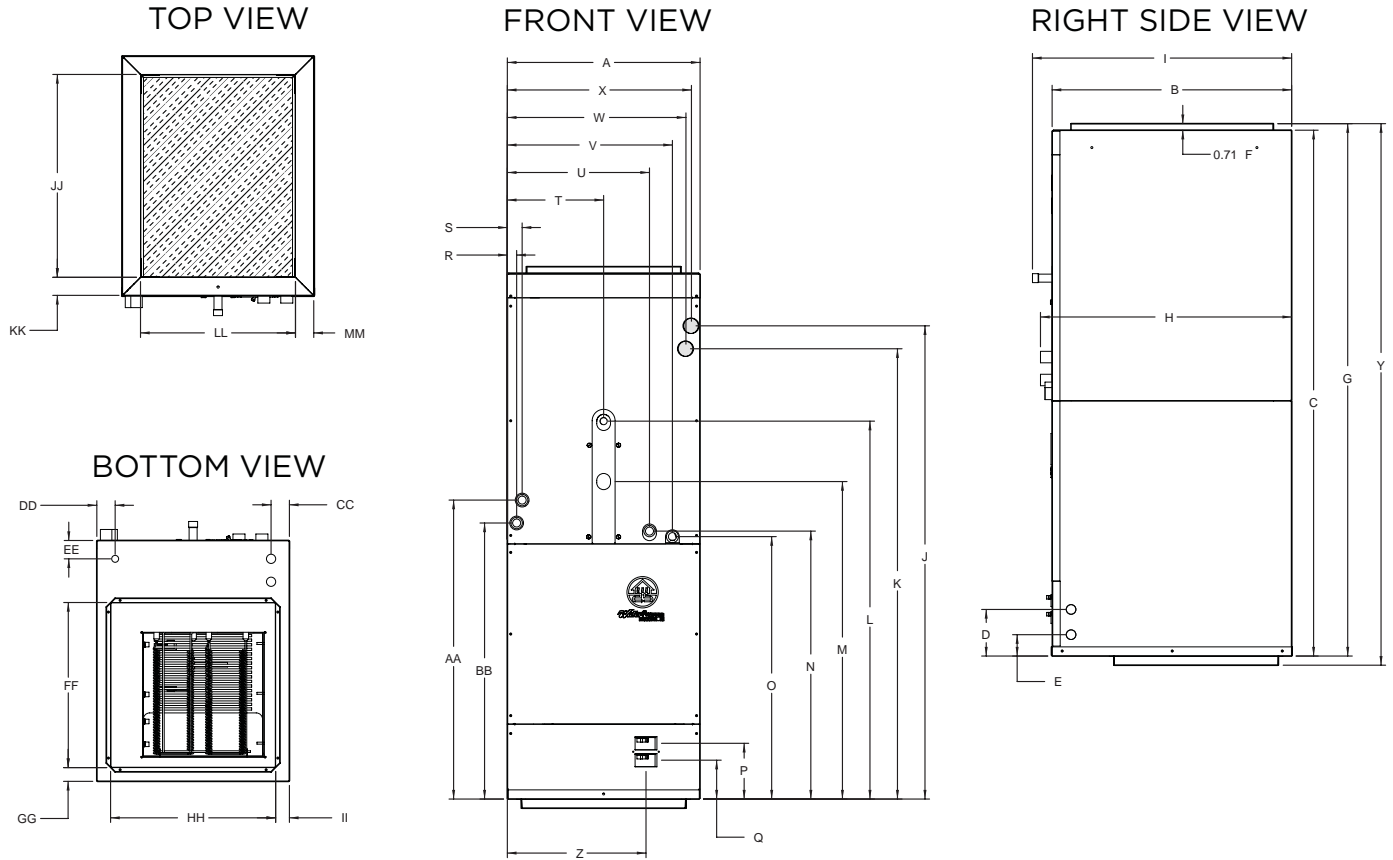

Bottomflow Configuration	Overall Cabinet												Refrigerant/Water Connections						
	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	
	Width	Depth	Height	3/4" cond Low Voltage	1" cond Power Supply	Return Air Duct Flange						Suction / Water Out	Liquid / Water In						
022-060	in. cm.	21.0 53.4	26.1 66.3	57.3 145.6	5.1 12.9	3.3 8.5	0.7 1.8	58.1 147.4	27.4 69.6	28.3 71.8	51.6 131.1	49.1 124.7	41.2 104.7	34.6 87.9	29.2 74.2	28.6 72.7	6.1 15.4	4.2 10.8	0.9 2.4

											CC	DD	EE									
S	T	U	V	W	X	Y	Z	AA	BB		1" cond Power Supply	1/2" cond Low Voltage	FF	GG	HH	II	JJ	KK	LL	MM		
1.5	10.5	15.5	18.0	19.5	20.1	59.1	15.1	32.6	30.1	2.0	2.0	2.0	18.0	1.5	18.0	1.5	22.1	2.0	16.9	1.96		
3.9	26.7	39.4	45.8	49.5	51.0	150.0	38.4	82.8	76.5	5.1	5.1	5.1	45.7	3.8	45.7	3.8	56.2	5.0	42.9	5.0		

Condensate is stainless steel 3/4" FPT
 Discharge flange is field installed and extends 1" (25.4 mm) from cabinet

Rev:A 3/12/08

Replacement Procedures

Obtaining Parts

When ordering service or replacement parts, refer to the model number and serial number of the unit as stamped on the serial plate attached to the unit. If replacement parts are required, mention the date of installation of the unit and the date of failure, along with an explanation of the malfunctions and a description of the replacement parts required.

In Warranty Material Return

Material may not be returned except by permission of authorized warranty personnel. Contact your local distributor for warranty return authorization and assistance.



Manufactured by
WaterFurnace International, Inc.
9000 Conservation Way
Fort Wayne, IN 46809
www.waterfurnace.com

Product: **Envision Series - Air Handler**
Type: Hydronic or R-410A
Size: 2-6 Tons
Document: Installation Manual



WaterFurnace Renewable Energy has a policy of continuous product research and development and reserves the right to change design and specifications without notice. ©2008 WRE.