



POCKET DV

5300

Users Manual English



Welcome

*Dear user, thanks for purchasing this product.
Much investment in time and effort has gone into its development,
and it is our hope that it will give you many years of trouble-free service.*

Safety Notice

1. Do not drop, puncture or disassemble the camera; otherwise the warranty will be voided.
2. Avoid all contact with water, and dry hands before using.
3. Do not expose the camera to high temperature or leave it in direct sunlight. Doing so may damage the camera.
4. Use the camera with care. Avoid pressing hard on the camera body.
5. For your own safety, avoid using the camera when there is a storm or lightning.
6. Avoid using batteries of different brands or types at the same time. This may lead to the potential for serious damage.
7. Remove batteries during long periods between usage, as deteriorated batteries may affect the functionality of the camera.
8. Remove batteries if they show signs of leaking or distortion.
9. Use only the accessories supplied by the manufacturer.
10. Keep the camera out of the reach of infants.



Table of Contents



Welcome	1
Safety Notice	1
Table of Contents	2
Getting Started	4
Knowing your camera parts	4
Loading batteries	5
Inserting a SD/MMC card (optional)	6
Attaching the wrist strap (optional)	7
Basic Operations	8
Turning on your camera.....	8
Turning off your camera.....	8
Using the LCD monitor	9
Reading the LCD indicators.....	10
Setting language.....	11
Recording a video clip	12
Taking a still picture	14
Recording a voice clip	17
Playing back your recordings	18
Connecting the camera to a TV	20
Advanced Operations	21
Menu operation.....	21
Menu illustration	21
Setting video resolution	22
Setting picture resolution.....	23
Setting white balance	24
Setting exposure compensation	25
Setting image effect.....	26
Setting date stamp.....	27
Deleting files	28
Viewing file information.....	29
System Settings	30
System menu items	30
Setting date and time.....	31
Setting LCD brightness.....	31
Toggling OSD on or off	32
Toggling beep sound on or off	32

Table of Contents

Setting flicker	33
Setting language.....	33
Setting auto-off option.....	34
Restoring factory defaults.....	34
Formatting storage medium.....	35
Copying Files to Your PC.....	36
Installing the driver to your PC	36
Connecting the camera to your PC	38
Copying files to the PC	39
Viewing/Playing files on your PC	41
File location	42
Using PC Camera	43
Installing the software.....	43
Starting the application	43
Using DV 5300 PC Camera.....	46
Addenda	49
Troubleshooting	49
Flicker Settings	52
Battery Life Indicator.....	52
Storage Capacity	53
System Message	54
Specifications	55

Getting Started


● Knowing your camera parts

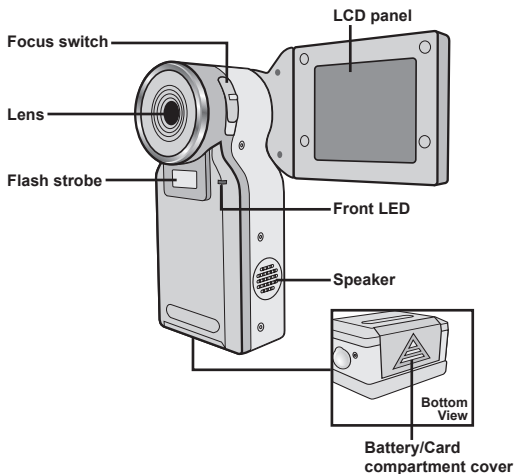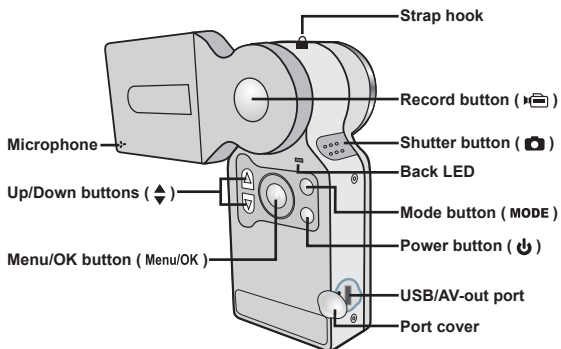

● Loading batteries


1 Open the battery compartment cover.

Slide the battery compartment cover open in the direction of indication.

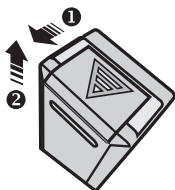


2 Install batteries.

Place two AAA batteries into the compartment. Note that the positive(+) and negative(-) ends cannot be reversed.

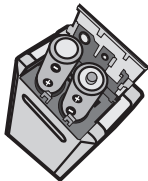

3 Replace the cover.


After the batteries are properly installed, replace the battery compartment cover.

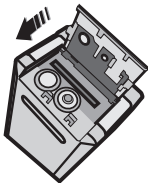


- ⚠ Do not use different types or brands of batteries at the same time.
- ⚠ Alkaline batteries or rechargeable NiMH batteries are recommended for high performance.


● Inserting a SD/MMC card (optional)

In addition to the built-in flash memory, your camera can store data on a Secure Digital (SD) card or a MultiMedia card (MMC).

To insert a memory card, gently push the card as indicated until the card reaches the bottom of the slot. When the card is successfully inserted, a  icon will appear on the LCD. To remove the memory card, gently push the card and it will pop up. Then pull the card out of the slot.

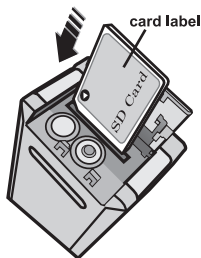

The SD card comes with a write-protect switch. When the write-protect switch is set to the Lock position, the card will become non-writable. To ensure that the camera can operate normally, you should set the write-protect switch to the Unlock position before inserting the SD card.

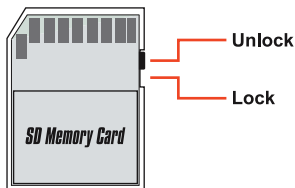


- ❗ Do not remove the SD/MMC card while the camera is processing data (when the LED indicates red light).
- ❗ When a SD/MMC card is inserted, the camera will use the card as the main storage medium. Files stored in the camera's built-in memory will become inaccessible until the SD/MMC card is removed.

● Attaching the wrist strap (optional)

The wrist strap provides a convenient way for you to carry your camera around.


1 Stretch out the strap hook.

Hold your camera upside down, and the strap hook will stretch out.

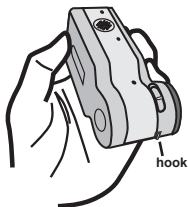


2 Thread the strap through the hook.

Thread the thinner part of the strap through the strap hook as illustrated. Threading in the indicated direction will save you much time as the hook will remain stretched in this way.

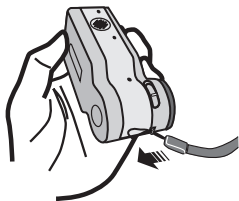


3 Thread the strap through the loop.


Thread the other end of the strap through the loop, and you are ready to carry your camera with ease.

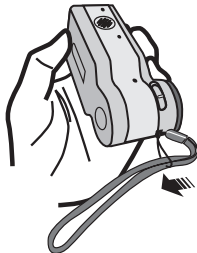

Basic Operations


● Turning on your camera

Rotate the LCD panel as indicated. Then press and hold down the power () button for 2~3 seconds to turn on the camera.

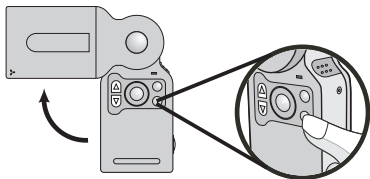

- ❗ If the camera is not turned on after pressing the power button, please check:
1. There are two AAA batteries installed in the camera.
 2. The batteries have enough power left.
 3. The polar(+ -) directions of the installed batteries are correct.

● Turning off your camera

Press and hold down the power () button for 2~3 seconds to turn off the camera.

OR

If the camera stays inactive for a long period of time, it may automatically shut down due to the Auto-Off setting. See page 34 for more information.


● Using the LCD monitor

The LCD monitor can be used to compose image settings for shooting, to review recorded files, or to change menu options.

The LCD panel can be rotated to the following positions:


1 Initial position.

In this position, the camera is suitable for taking self-portraits.

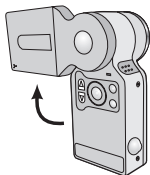


2 Rotate the LCD panel.

The LCD panel can be rotated up to 270 degrees as indicated. You can position the panel at any angle to serve your filming purpose.

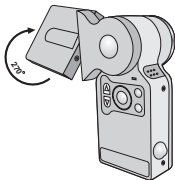

3 Normal position.

Normally, the LCD panel is rotated 180 degrees to face the user, so that the user can get a clear preview on the LCD.

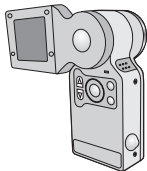

! When the LCD panel is flipped over, the previewed image on the LCD will be automatically adjusted.

● Reading the LCD indicators

Normal display:

The diagram shows a camera's LCD display in normal mode. The indicators are as follows:

- Mode icon:** A camera icon with a lens.
- Zoom ratio:** 1.0X
- Number of recordings:** 88
- Storage medium ^{*1}:** An icon representing the storage medium.
- White balance ^{*2}:** A sun icon.
- Self timer ^{*3}:** A clock icon.
- Battery life:** A battery icon.
- Video resolution:** A resolution icon.
- Flash mode:** A flash icon.
- Focus mode:** A focus icon.
- Picture resolution:** A resolution icon.

^{*1} This icon changes according to the storage medium you use:
 : internal flash memory.
 : memory card.

^{*2} This icon will appear when the White Balance option (p.24) is enabled.

^{*3} This icon will appear when the Self Timer option (p.16) is enabled.

Playback mode:

The diagram shows a camera's LCD display in playback mode. The indicators are as follows:


- Mode icon:** A play button icon.
- Current / Total recordings:** 1/88
- Storage medium:** An icon representing the storage medium.
- File type:** IMG-0001.ASF
- File info ^{*1}:** 320X240, 2004/01/01, 888KB 00:05:30
- File type:** 888KB 00:05:30
- Play mode:** A play button icon.
- Playing time:** 00:00:00


^{*1} This item will appear when the Info option (p. 29) is enabled.

● Setting language


When you power on the camera for the first time, the LCD display may not show messages in your local language. You can set the LCD interface language using the method below.


- 1 Bring up the menu.**
Press the **Menu/OK** (Menu/OK) button.

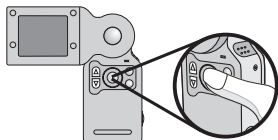


- 2 Enter the System menu.**
Press the **Up** or **Down** () button to select the System item, and then press the **Menu/OK** (Menu/OK) button.



- 3 Enter the Language menu.**
Press the **Up** or **Down** () button to select the Language item, and then press the **Menu/OK** (Menu/OK) button.

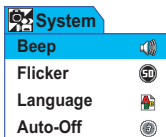


- 4 Select a language.**
Press the **Up** or **Down** () button to select a suitable language, and then press the **Menu/OK** (Menu/OK) button to apply.



● Recording a video clip


1 Adjust the focus.

Set the **Focus Switch** to an appropriate setting. Normally, you should set the focus to () for most filming conditions. Select () only for close-ups. The focus is adjustable during recording.

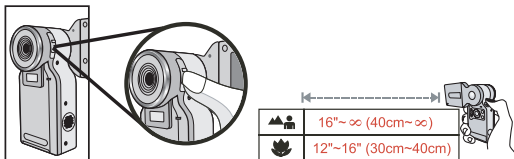


2 Adjust other settings (optional).

Adjust other advanced settings if necessary. See the section "**Advanced Operations**" for more information.

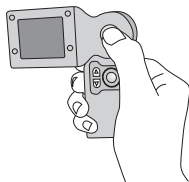

3 Start recording.


Press the **Record** () button to start recording. The LCD will display as the following.

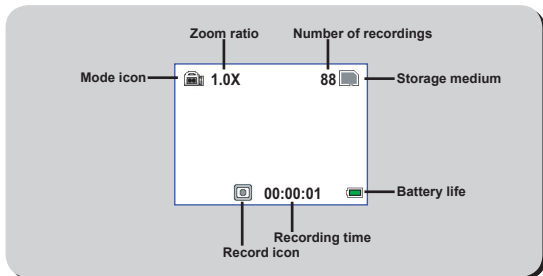

● Recording a video clip (continued)

4 Zoom in or zoom out.

During recording, you can press the **Up** or **Down** (▲) button to zoom in or zoom out the screen, thus retaining the best image.

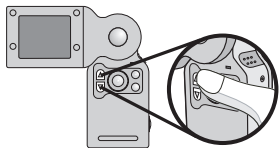



5 Stop recording.


Press the **Record** (📹) button again to stop recording. The video clip will be saved in ASF format.

● Taking a still picture

❖ How to take a still picture

1 Adjust the focus.


Set the **Focus Switch** to an appropriate setting. Normally, you should set the focus to () for most shooting conditions. Select () only for close-ups.

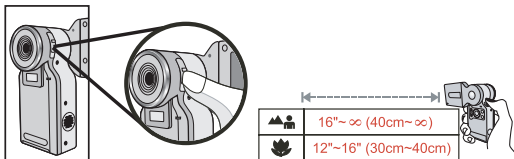


2 Adjust other settings (optional).


Adjust other advanced settings if necessary. See the section "**Advanced Operations**" for more information.


3 Zoom in or zoom out.

Before taking a picture, you can press the **Up** or **Down** () button to zoom in or zoom out the screen, thus retaining the best image.

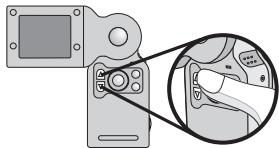

4 Take a still picture.

Press the **Shutter** () button to take a still picture. The picture will be saved in JPEG format.

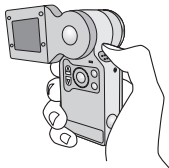


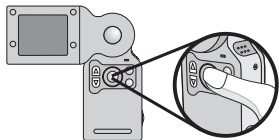
● Taking a still picture (continued)

❖ How to use flash strobe

1

Bring up the menu.


Press the **Menu/OK** () button.



2



Enter the Strobe menu.

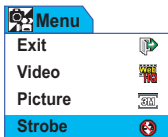
Press the **Up** or **Down** () button to select the **Strobe** item, and then press the **Menu/OK** () button.



3


Select the Auto item.

Press the **Up** or **Down** () button to select the **Auto** item, and then press the **Menu/OK** () button.

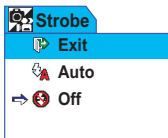

4

Exit the menu.

Press the **Shutter** () button to quick-exit the menu, and the icon on the LCD will change, indicating the setting has taken effect.

From now on, the flash strobe will automatically fire when the environment is too dim for shooting.



strobe icon


● Taking a still picture (continued)

❖ How to use self timer

1

Bring up the menu.

Press the **Menu/OK** (Menu/OK) button.

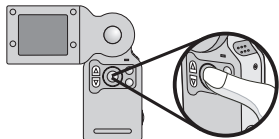

2

Enter the Self Timer menu.


Press the **Up** or **Down** (\blacktriangle) button to select the Self Timer item, and then press the **Menu/OK** (Menu/OK) button.



3

Select On.

Press the **Up** or **Down** (\blacktriangle) button to select the On item, and then press the **Menu/OK** (Menu/OK) button.

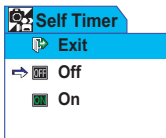

4

Exit the menu.

Press the **Shutter** (📷) button to quick-exit the menu, and the self timer icon will appear on the LCD, indicating the setting has taken effect.


When the **Shutter** (📷) button is pressed, the camera will have ten seconds delay before taking a picture. After the shutter fires, the self timer will be automatically disabled.




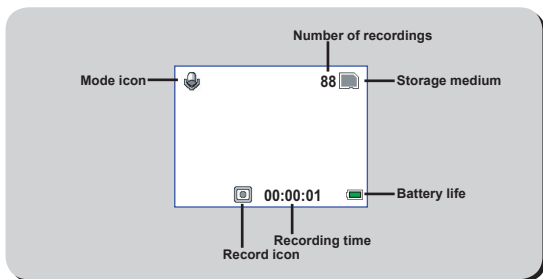
self timer icon

● Recording a voice clip

- 1 Bring up the menu.**
Press the **Menu/OK** (Menu/OK) button.

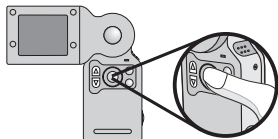

- 2 Start recording.**
Press the **Up** or **Down** () button to select the **Record Audio** item, and then press the **Menu/OK** (Menu/OK) button to start recording a voice clip. The LCD will display as the following.



- 3 Stop recording.**
Press the **Menu/OK** (Menu/OK) button again to stop recording. The voice clip will be saved in WAV format.

● Playing back your recordings




❖ Full-screen view

1 Switch to Playback mode.








Press the **Mode** (**MODE**) button to switch to Playback mode. For LCD display and OSD indicators, please see page 10.

2 Review your recordings.

You can tell the format of your recordings by the “file type” icon:

- (): ASF format video clip
- (): JPEG format still picture
- (): WAV format voice clip

The following table gives details on playing back your recordings.

File type	How to...	Action
X	Shift between files.	Press the Up or Down () button.
Picture ()	Review a picture.	Still pictures are directly displayed on the LCD screen.
Video () & Audio ()	Start playing.	Press the Record () button.
	Pause/Resume playing.	During playing/While paused, press the Record () button.
	Adjust sound volume.	During playing, press the Up or Down () button.
	Stop playing.	During playing, press the Menu/OK (Menu/OK) button.

3 Exit Playback mode.


Press the **Mode** (**MODE**) button to exit Playback mode.


❗ In Playback mode, you can press the **Menu/OK** (**Menu/OK**) button to access the playback menu and perform other actions. Please see the section “**Advanced Operations**” for more information.

● Playing back your recordings (continued)

❖ Thumbnail view



1 Switch to thumbnail view.

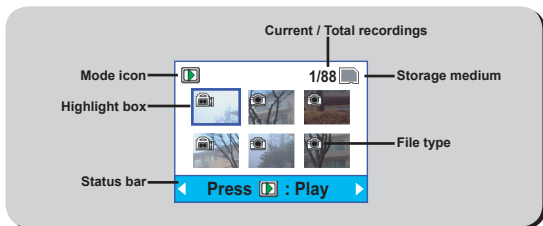While in full-screen view, you can press the **Shutter** () button to switch to thumbnail view.




2 Review your recordings.

The following table gives details on operations in thumbnail view.

How to...	Action
Move the highlight box.	Press the Up or Down () button.
Review the selected file.	Press the Record () button. Then the screen will switch back to full-screen view, and the operations are the same as in full-screen view.

3 Exit thumbnail view.

If you do not select a file to play, you can press the **Shutter** () button to switch back to full-screen view.

Exit Playback mode.

Press the **Mode** (**MODE**) button to exit Playback mode.

Advanced Operations

● Menu operation


The menu items provide several options for you to fine-tune your camera functions. The following table gives details on menu operations.

How to...	Action
Bring up the menu.	Press the Menu/OK (Menu/OK) button.
Move the highlight bar up or down.	Press the Up or Down (\blacktriangle / \blacktriangledown) button.
Confirm a selection.	Press the Menu/OK (Menu/OK) button.
Quick-exit the menu.	Press the Record (\blacktriangleright) button or the Shutter (\blacksquare) button.

To bring up the camera menu:
Power-on \rightarrow **Menu/OK** (Menu/OK) button.
For details on camera menu items, see page 22 ~ 27.

To bring up the playback menu:
Power-on \rightarrow **Mode** (MODE) button \rightarrow **Menu/OK** (Menu/OK) button.
For details on playback menu items, see page 28 ~ 29.

● Menu illustration

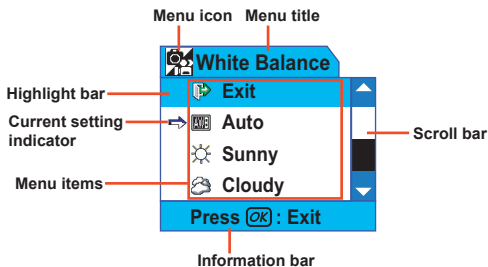


● Setting video resolution


Change the video resolution setting according to your viewing preference.


1 Bring up the menu.

Press the **Menu/OK** (Menu/OK) button.

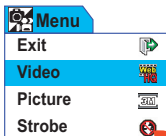



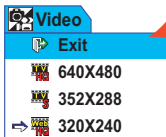


2 Enter the Video menu.

Press the **Up** or **Down** () button to select the Video item, and then press the **Menu/OK** (Menu/OK) button.



3 Select a resolution item.

Press the **Up** or **Down** () button to select a resolution setting, and then press the **Menu/OK** (Menu/OK) button to apply. The following table gives details on the applicable options:


Icon	Resolution	Description
	640x480	best resolution, suitable for filming stable subjects.
	352x288	suitable for viewing on TV. The video quality is similar to VCD.
	320x240*	suitable for transmitting over high-speed Internet.
	160x128	low resolution with the smoothest flow.
* the default setting		

● Setting picture resolution

Select the picture resolution according to your viewing preference or the size of photo you want to develop.


1 Bring up the menu.

Press the **Menu/OK** (Menu/OK) button.

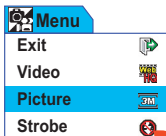



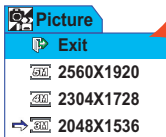


2 Enter the Picture menu.

Press the **Up** or **Down** (\blacktriangle) button to select the **Picture** item, and then press the **Menu/OK** (Menu/OK) button.



3 Select a resolution item.

Press the **Up** or **Down** (\blacktriangle) button to select a resolution setting, and then press the **Menu/OK** (Menu/OK) button to apply. The following table gives details on the applicable options:

Icon	Resolution	Description
	2560x1920	the most memory-demanding option, suitable for developing 6x9 photos.
	2304x1728	suitable for developing 5x7 or 6x8 photos.
	2048x1536*	suitable for developing 4x6 or 5x7 photos.
	1600x1200	suitable for developing 3x5 or 4x6 photos.
	640x480	suitable for viewing on the screen.
* the default setting		

● Setting white balance

1 Bring up the menu.

Press the **Menu/OK** (Menu/OK) button.

2 Enter the Advanced menu.




Press the **Up** or **Down** (\blacktriangle / \blacktriangledown) button to select the **Advanced** item, and then press the **Menu/OK** (Menu/OK) button.

3 Enter the White Balance menu.

Press the **Up** or **Down** (\blacktriangle / \blacktriangledown) button to select the **White Balance** item, and then press the **Menu/OK** (Menu/OK) button.

4 Select an item to apply.

Press the **Up** or **Down** (\blacktriangle / \blacktriangledown) button to select a preferred setting, and then press the **Menu/OK** (Menu/OK) button to apply. The following table gives details on the applicable options:

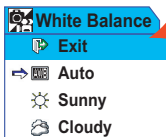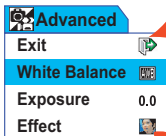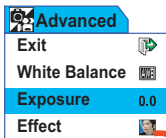

Icon	Text	Description
	Auto*	suitable for most recording conditions.
	Sunny	suitable for outdoor recording in sunny weather.
	Cloudy	suitable for recording in cloudy weather or shady environments.
	Tungsten	suitable for indoor recording with incandescent lamp lighting, or environments with low color temperature.
	Fluorescent	suitable for indoor recording with fluorescent lamp lighting, or environments with high color temperature.
* the default setting		

● Setting exposure compensation

You can manually adjust the exposure to gain better effects when the previewed image appears too bright or too dark.


1

Bring up the menu.

Press the **Menu/OK** (Menu/OK) button.

2

Enter the Advanced menu.

Press the **Up** or **Down** () button to select the Advanced item, and then press the **Menu/OK** (Menu/OK) button.


3



Enter the Exposure menu.

Press the **Up** or **Down** () button to select the Exposure item, and then press the **Menu/OK** (Menu/OK) button.

4

Select an item to apply.

Press the **Up** or **Down** () button to select a preferred setting, and then press the **Menu/OK** (Menu/OK) button to apply.

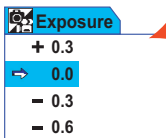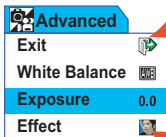

The applicable value ranges from -1.5 to +1.5. A positive value indicates the recorded image will be brighter than usual; while a negative value makes the image dimmer. The default setting is 0.0.


● Setting image effect


You can apply special effects to your recordings to add a personal touch.

1 Bring up the menu.


Press the **Menu/OK** (Menu/OK) button.


2 Enter the Advanced menu.

Press the **Up** or **Down** () button to select the **Advanced** item, and then press the **Menu/OK** (Menu/OK) button.

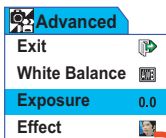


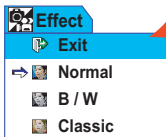
3 Enter the Effect menu.

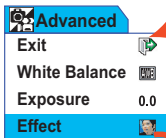


Press the **Up** or **Down** () button to select the **Effect** item, and then press the **Menu/OK** (Menu/OK) button.



4 Select an item to apply.

Press the **Up** or **Down** () button to select a preferred setting, and then press the **Menu/OK** (Menu/OK) button to apply. The following table gives details on the applicable options:



Icon	Text	Description
	Normal*	allows you to take pictures in natural color.
	B / W	allows you to take pictures in black and white.
	Classic	allows you to take sepia-toned pictures, resembling old photos.
* the default setting		


● Setting date stamp

Enabling the date stamp will print the date of recording on the picture.

1 Bring up the menu.

Press the **Menu/OK** (Menu/OK) button.

2 Enter the Advanced menu.

Press the **Up** or **Down** () button to select the Advanced item, and then press the **Menu/OK** (Menu/OK) button.




3 Enter the Date Stamp menu.

Press the **Up** or **Down** () button to select the Date Stamp item, and then press the **Menu/OK** (Menu/OK) button.

4 Select On or Off.

Press the **Up** or **Down** () button to select On or Off, and then press the **Menu/OK** (Menu/OK) button to apply.

After the date stamp is enabled, a date mark will be printed on every picture you take.

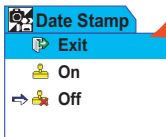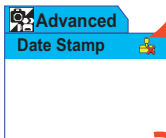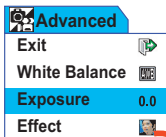

● Deleting files

While reviewing your recordings, you can perform file deletion to remove unwanted files and free some memory space.

1 Bring up the Playback menu.


While in Playback mode, press the **Menu/OK** (Menu/OK) button.

2 Select Delete or Delete All.


If you want to delete the current file, select the Delete item. If you want to delete all files stored in the memory, select the Delete All item. Press the **Up** or **Down** (◄) button to an item, and then press the **Menu/OK** (Menu/OK) button.

3 Confirm the deletion.

Depending on the item you select, the corresponding sub-menu will appear. To confirm the deletion, press the **Up** or **Down** (◄) button to select the check mark, and then press the **Menu/OK** (Menu/OK) button.

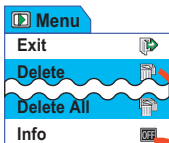

Delete all files?

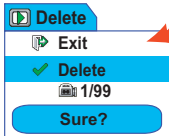

Delete current file?

ⓘ The deleted files are gone forever and cannot be restored. Use this function with caution.

● Viewing file information

Enabling the Info option allows you to view file data, such as date of recording, file format, and file size... etc.


1 Bring up the Playback menu.

While in Playback mode, press the **Menu/OK** (Menu/OK) button.



2 Enter the Info menu.


Press the **Up** or **Down** (\blacktriangle / \blacktriangledown) button to select the Info item, and then press the **Menu/OK** (Menu/OK) button.

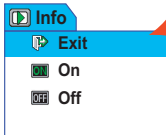

3 Select On or Off.

Press the **Up** or **Down** (\blacktriangle / \blacktriangledown) button to select On or Off, and then press the **Menu/OK** (Menu/OK) button to apply.

If you enable the Info option, you will be able to see file information while reviewing your recordings:

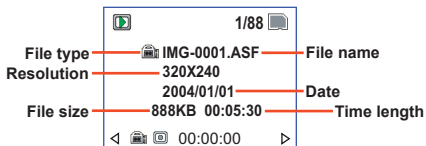


System Settings

● System menu items




For menu illustration and operations, see page 21.

To access the system menu:

Power-on → Menu/OK (Menu/OK) button → Select the System item → Menu/OK (Menu/OK) button.

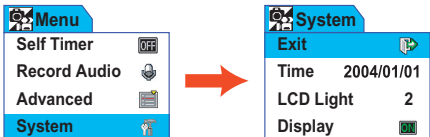

Menu items and page references:

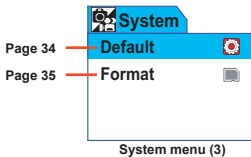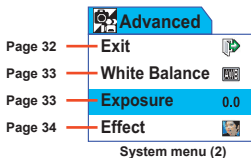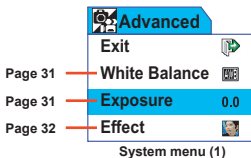


● Setting date and time

1 Enter the Time menu.

Enter System menu → Select the Time item → **Menu/OK** (**Menu/OK**) button.

2 Adjust date and time.

Press the **Up** or **Down** (**◆**) button to adjust item value. Once you are done with one item, press the **Menu/OK** (**Menu/OK**) button to move to the next item. After all items are set, the changes will be made and recorded.

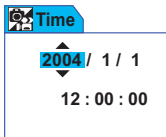

● Setting LCD brightness

1 Enter the LCD Light menu.

Enter System menu → Select the LCD Light item → **Menu/OK** (**Menu/OK**) button.

2 Select a brightness value.

The greater the value is, the brighter the LCD will be. Press the **Up** or **Down** (**◆**) button to select a value, and the LCD brightness will change accordingly. When the outcome is acceptable to you, press the **Menu/OK** (**Menu/OK**) button to confirm.




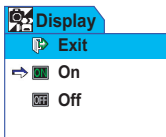
● Toggling OSD on or off

1 Enter the Display menu.

Enter System menu → Select the Display item → **Menu/OK** (**Menu/OK**) button.

2 Select On or Off.

Press the **Up** or **Down** () button to select On or Off, and then press the **Menu/OK** (**Menu/OK**) button. If the Display option is disabled, no OSD icons will be displayed on the LCD.




● Toggling beep sound on or off

1 Enter the Beep menu.

Enter System menu → Select the Beep item → **Menu/OK** (**Menu/OK**) button.

2 Select On or Off.

Press the **Up** or **Down** () button to select On or Off, and then press the **Menu/OK** (**Menu/OK**) button. If the Beep option is disabled, no sound will be played during operation.




● Setting flicker

1 Enter the Flicker menu.

Enter System menu → Select the Flicker item → **Menu/OK** (**Menu/OK**) button.

2 Select 50Hz or 60Hz.

Press the **Up** or **Down** (**↕**) button to select the desired flicker option, and then press the **Menu/OK** (**Menu/OK**) button to confirm.

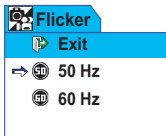

! If you travel to another country, the flicker setting may not suit the country you are staying in. For more details on flicker settings, please see page 52.

● Setting language

1 Enter the Language menu.

Enter System menu → Select the Language item → **Menu/OK** (**Menu/OK**) button.

2 Select a language.

Press the **Up** or **Down** (**↕**) button to select a suitable language, and then press the **Menu/OK** (**Menu/OK**) button to confirm.




● Setting auto-off option

1 Enter the Auto-Off menu.

Enter System menu → Select the Auto-Off item → **Menu/OK** (**Menu/OK**) button.

2 Select an item.

Press the **Up** or **Down** (**↕**) button to select a desired item, and then press the **Menu/OK** (**Menu/OK**) button to confirm.

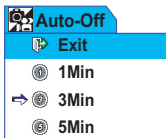


● Restoring factory defaults

1 Enter the Default menu.

Enter System menu → Select the Default item → **Menu/OK** (**Menu/OK**) button.

2 Select Yes to restore.

Press the **Up** or **Down** (**↕**) button to select Yes, and then press the **Menu/OK** (**Menu/OK**) button.

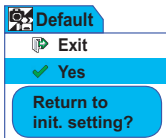

! Restoring the factory defaults will override all of your non-default settings.


● Formatting storage medium


1 Enter the Format menu.

Enter System menu → Select the Format item → **Menu/OK** (Menu/OK) button.

2 Select Yes to format.

Press the **Up** or **Down** () button to select **Yes**, and then press the **Menu/OK** (Menu/OK) button.

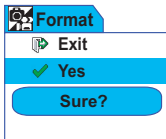

 Depending on the medium you are using, all files stored in the memory card or internal memory will be permanently erased. Use this function with caution.


Copying Files to Your PC

● Installing the driver to your PC

You need to install the camera driver to ensure that video clips can be played back on your PC. To install the software:


1 Insert the driver CD.

Turn on your computer. Then place the accessory CD into the CD-ROM drive.

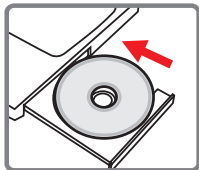

- ❗ Do not connect the USB cable to your computer now.
- ❗ Shut down all other applications running on your computer.
- ❗ If the autorun screen does not appear automatically, double-click on **My Computer** and then the CD-ROM drive. Then browse to the folder "DV 5300 Driver" and start the **Setup.exe** program manually.

2 Start the installation.


Click on the  icon to launch the installation of DV 5300 Driver.

- ❗ **Notice for Windows 2000 users:**
During the installation process, a warning message regarding digital signature may appear twice or more. Please click on **Yes** to continue the process. The software is fully compatible with Windows 2000 operation system.

● Installing the driver to your PC (continued)


3 Install the driver.

The **Install Shield Wizard** will then appear and automatically install the program. Click on **Next** and follow the on-screen instructions to complete the installation.

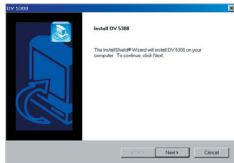


4 Install codecs.

After the driver installation is completed, the program will prompt you to install **Windows Media Player Codecs**. If you are not sure whether the codecs have been installed in your computer, please click on **Yes** and follow the on-screen instructions to complete the installation.



5 Install Direct X 8.0 or above.

After the codecs installation is completed, you will be prompted to install **Direct X 8.0** or above if the program is not yet installed in your computer. Please click on **Yes** to continue.



! *Windows Media Player Codecs and Direct X 8.0 or above are necessary for viewing the video clips recorded by the camera.*


6 Restart the computer.

After the installation is completed, you may need to restart your computer for the driver to take effect.

● Connecting the camera to your PC


1 Connect the USB cable to your computer.

Turn on your computer, and then connect the accessory USB cable to the USB port of your computer. Make sure the cable and the port are correctly aligned.

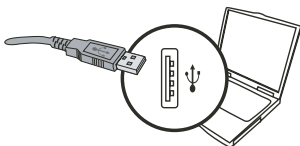




2 Connect the USB cable to your camera.

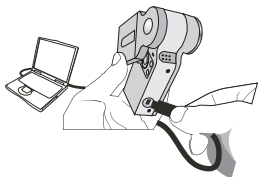Connect the other end of the USB cable to your camera.





3 Turn on the camera and switch to Disk mode.

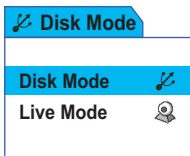Turn on your camera, and the LCD will display as illustrated. Press the **Up** or **Down** () button to select the Disk Mode item, and then press the **Menu/OK** () button to confirm.



! Notice for Windows 2000/XP/ME users:

If you want to disconnect the camera from your computer, please follow these steps:

1. Double-click  in the system tray.
2. Click  (USB Disk), and then click **Stop**.
3. Select the camera when the confirmation screen appears and click **OK**.
4. Follow the on-screen instructions to safely disconnect the camera from your computer.

● Copying files to the PC



1 This step varies depending on your operation system:

For Windows XP users:

After the camera is connected to your computer, a dialogue window will appear automatically. Please select the item **Open folder to view files using Windows Explorer** and click **OK**.

For Windows 2000/ME/98SE users:


Double-click on **My Computer**. Then double-click on the icon of the removable disk that has just appeared.

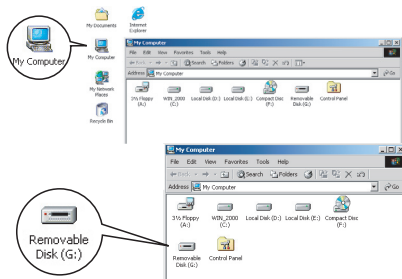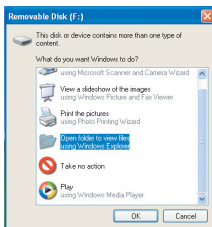

! Some users may find two removable disks appear in **My Computer**. That is because the OS detects two storage media in the camera (the internal memory and the SD/MMC card). If you have two removable disks and cannot find your files in one of the disks, try to find them in the other disk.

● Copying files to the PC (continued)

2 Double-click on the **DCIM** file folder.




Windows XP



Windows 2000/ME/98 SE

3 Double-click on the **100MEDIA** file folder.




Windows XP




Windows 2000/ME/98 SE

4 Drag the target file into **My Documents** or the destination folder.

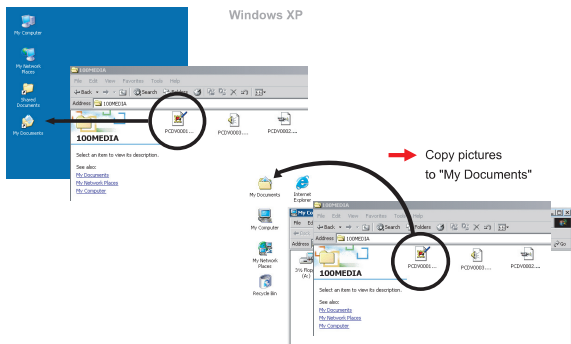

● Viewing/Playing files on your PC

- 1 Double-click on **My Documents** or any other folder that stores your files.



Windows XP




Windows 2000/ME/98 SE

- 2 Double-click on the desired file, and the file will be opened by the program matching the file's type.




Windows XP

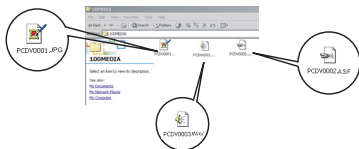

Windows 2000/ME/98 SE

● File location

After connecting the camera to your computer, a removable disk will appear in your computer. The removable disk actually represents the storage medium of your camera. In the disk you can find all of your recordings. Refer to the figure on the right to see where the files are stored.

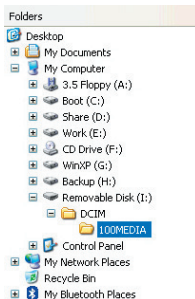

Using PC Camera


● Installing the software

The PC camera software is included in the camera driver, and therefore you should install the driver before using the PC camera function. If you have not yet installed the driver, please see page 36 for details on the installation.



● Starting the application


1 Connect the camera to your computer.

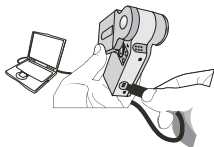Connect the camera to your computer using the accessory USB cable.



2 Turn on the camera and switch to Live mode.

Turn on your camera, and the LCD will display as illustrated. Press the **Up** or **Down** () button to select the Live Mode item, and then press the **Menu/OK** () button to confirm.

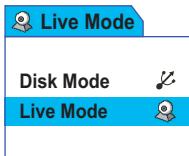

! If you want to use the Video Conferencing function, please install programs such as **Netmeeting** to serve the purpose.


- ☛ **Notice for Windows ME users:**
When the indicated screen appears, please select **Automatic search for a better driver** and click **Next** to continue.




● Starting the application (continued)

☛ Notice for Windows 98SE users:

1. Click **Next** when the following screen appears.

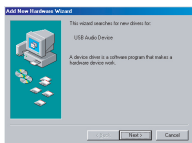


2. When the following screen appears, select **Search for the best driver for your device** and click **Next** to continue.

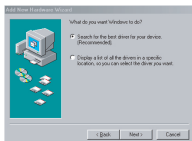

3. During installation, some users may need to insert a licensed 98SE CD into the CD-ROM drive for copying the needed files.
4. Follow the on-screen instructions to complete the installation.

☛ Notice for Windows 2000 users:



When using the PC camera function for the first time, the following warning message may appear twice or more. Please click **Yes** to continue the installation. The camera is fully compatible with Windows 2000 operation system.

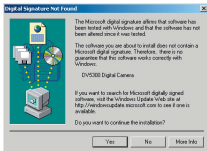

● Starting the application (continued)


3 Launch DV 5300 program.

Double-click the **DV 5300** icon on the Desktop to start the program. After the program starts, you can begin to use the PC camera function.

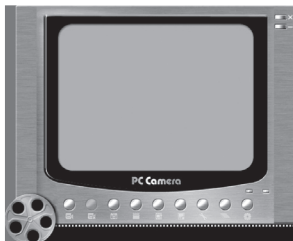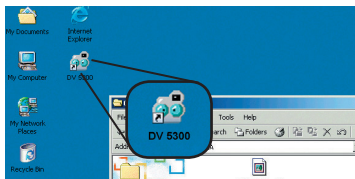


❗ If you cannot find the program shortcut on the desktop, you can start the program from the **Programs** menu.

● Using DV 5300 PC Camera

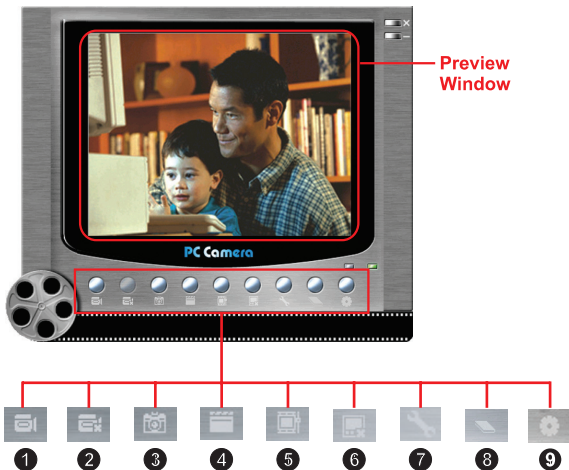




- | | |
|---------------------------------------|------------------------------------|
| 1 Start recording a video clip | 6 Start/Stop preview window |
| 2 Stop recording | 7 Setting * |
| 3 Snapshot | 8 Open album |
| 4 Format * | 9 Select video source |
| 5 Properties * | * Sub-menu available. |


! To view pictures taken by DV 5300 PC Camera, please click on  to open the photo album. Or, as an alternate option, go to the "Work Temp" folder to find the files. The full path is as following:

C:\Program Files\DV 5300\Work Temp

● Using DV 5300 PC Camera (continued)

❖ Recording an AVI movie

1. Click on the  icon.
2. Press  to specify the path and name of the AVI file.
3. Set the frame rate and recording time according to your needs.
4. Press the **Start to Record** button to begin recording.
5. To stop recording, click on the  icon.

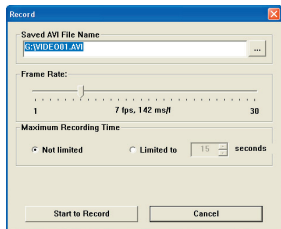

❖ Taking a snapshot

Click on the  icon to take a snapshot.

❖ Configuring Format options


■ Color Space:

Select one of the following functions according to your needs.

- RGB 24: This item is for retaining better quality.
- I420: This item indicates the AVI movie will be more compressed to gain the advantage of faster processing speed.

■ Output Size:

Set output size to change the size of the preview window. The default size is 320x240. Select larger pixels when you need a larger preview window.

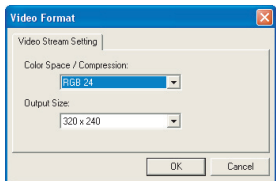


● Using DV 5300 PC Camera (continued)

❖ Configuring Properties options


■ Video setting:

- Banding Filter: If the screen of your computer flickers when using PC Camera function, change this setting to avoid noise.
- Bandwidth: If the network bandwidth is congested when using PC Camera, select a smaller value in the "Bandwidth" item to avoid this problem.

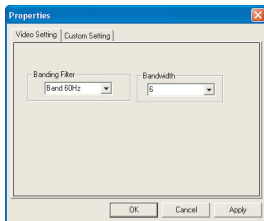


■ Custom setting:

You can use the default settings, or change the settings (such as brightness, contrast, saturation, and sharpness) on your own.

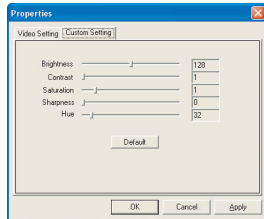

❖ Configuring Flicker options

If you take your camera abroad, and find the screen of your computer flickers when using PC Camera function, please check the Cancel Flicker item to prevent noises from appearing on the screen. Or, you can refer to the Flicker Settings table (p. 52) for proper flicker value that suits the country you are staying.

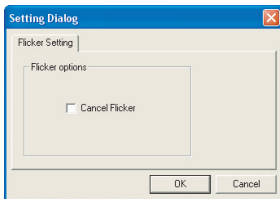


Addenda

➔ Troubleshooting

When using the camera:		
Problem	Cause	Solution
The camera can not be powered on normally.	The batteries are out of power.	Replace the batteries.
	The batteries are incorrectly installed.	Re-install the batteries.
The camera is still powered on, but the LCD screen does not display.	If the camera stays idle for over one minute, the LCD screen will automatically shut down to save power.	Press any button except the power button to reactivate the display.
Can not take pictures or video clips when pressing the Shutter or Record button.	Out of memory.	Free some space from the SD/MMC card or the internal memory.
	The camera is recharging the flash strobe.	Wait until the flash strobe is fully charged.
	Using a "protected" SD card.	Set the SD card to be writable.
The LCD screen displays "MEMORY ERROR" or "CARD ERROR" message.	The format of the memory card is not compatible with the camera.	Use the camera "Format" function to format the card.
	The memory card is corrupted.	Replace the memory card with a new one.

Addenda

When using the camera:		
Problem	Cause	Solution
I did not delete the pictures and video clips, but can not find them in the memory card.	The lost recordings are saved in the internal memory.	It happens when you insert a memory card after taking a few pictures or video clips. You can access those files after removing the memory card.
Cannot use the flash strobe.	If the battery life icon indicates  , the flash strobe may be disabled due to insufficient voltage.	Replace the batteries.
The recorded pictures appear too blurred.	The focus is not correctly set.	Adjust the focus to an appropriate position.
The recorded pictures or video clips appear too dark.	The environment of shooting or recording does not have adequate light.	Use flash strobe when taking pictures. Add extra light sources when recording video clips.
Noises occur when viewing images on the LCD screen or on the computer.	The flicker setting does not match the standard of the country you are staying.	Adjust the flicker setting. For more information, please refer to the "Flicker Settings" table on page 52.

Addenda

When connecting the camera to the computer or TV:		
Problem	Cause	Solution
I cannot view the video clips on my computer.	Driver or software is not installed on the computer.	Install <i>Direct X 8.0</i> or above and <i>Windows Media 9.0 Codecs</i> to solve this problem. See page 36 for details on installing the software, or go to http://www.microsoft.com to download the required files.
Driver installation failed.	The installation is terminated abnormally.	Remove the driver and other related programs. Follow the installation steps in the manual to re-install the driver.
	The camera has been connected to the PC via the USB cable before installing the driver.	Install the driver before plugging in the USB cable.
The TV screen does not display after connecting the camera to the TV.	The camera is not correctly connected to the TV.	Reconnect the camera to TV correctly.
A conflict with other installed camera or capture device occurred.	The device is not compatible with the camera.	If you have any other camera or capture device installed in your computer, please completely remove the camera and its driver from the computer to avoid the conflict.
Noises occur on my computer screen when using Video Conferencing.	The flicker setting does not match the standard of the country you are staying.	Adjust the flicker setting. For more information, please refer to the "Flicker Settings" table on page 52.





Addenda

➔ Flicker Settings

Country	England	Germany	France	Italy	Spain	Netherlands
Setting	50Hz	50Hz	60Hz	50Hz	50Hz	50Hz
Country	Portugal	America	Taiwan	China	Japan	Korea
Setting	50Hz	60Hz	60Hz	50Hz	50/60Hz	60Hz

Note: The flicker setting is based on the frequency standard of your local power supply.

➔ Battery Life Indicator

Icon	Description
	Full battery life
	Moderate battery life
	Low battery life
	Empty battery life

Note: To avoid sudden outage of power supply, you are recommended to replace batteries when the icon indicates low battery life.

Addenda

➔ Storage Capacity

Memory	Video	Audio
	All resolutions	Maximum
Flash memory (13MB for storage)	2-6 min.	20 min.
SD/MMC card (32MB)	6-14 min.	40 min.
SD/MMC card (64MB)	12-18 min.	80 min.
SD/MMC card (128MB)	24-56 min.	160 min.
SD/MMC card (256MB)	48-112 min.	320 min.
SD/MMC card (512MB)	96-224 min.	640 min.

Memory	Still picture				
	2560x1920	2304x1728	2048x1536	1600x1200	640x480
Flash memory (13MB for storage)	10	12	16	24	56
SD/MMC card (32MB)	20	25	40	60	96
SD/MMC card (64MB)	30	50	80	120	192
SD/MMC card (128MB)	60	100	160	240	384
SD/MMC card (256MB)	120	200	320	480	768
SD/MMC card (512MB)	240	400	640	960	1536

Note: The actual value of capacity may vary (up to $\pm 30\%$) depending on the color saturation and complexity of your subject and surroundings.

Addenda

➔ System Message

Message	Description
Recording	The camera is recording a file.
Please Unlock SD Card	If you insert a SD card and the card is set to "Protected", this message will show up when the camera tries to write data into the card.
No Files To Play	When the camera is set to Playback mode without any existing file to play, this message will show up.
Please Change Batteries	The battery life of the camera is low. You should replace the batteries with new ones immediately.
Memory Full	The storage memory is full and can not store any more files. Please change the SD/MMC card or delete some files to free some memory space.
Card Error	The inserted card is not compatible with the camera. Please change the card or try formatting the card.
Memory Error	The camera can not access data in the internal memory. Please format the medium to solve this problem.
Strobe Is Charging	The flash strobe is charging.
File Format Error	The file being played is not compatible with the camera.
Deleting	The camera is performing file deletion.
Formatting	The camera is formatting the storage medium.
Setting	The camera is performing a setting action.

Addenda

➔ Specifications

Sensor effective resolution	3 Mega (2048x1536) pixels
Interpolated resolution	5 Mega (2560x1920) pixels
Internal memory	13MB flash memory (storage)
External memory	Built-in SD/MMC slot (maximum: 512 MB)
Digital video camcorder	MPEG4 (.ASF) Format VGA (640x480 pixels) / up to 11 fps; 320x240/ up to 30fps CIF (352x288 pixels) / up to 30 fps; 176x144/ up to 30fps
Digital still camera	JPEG (.JPG) Format 5 Mega (2560x1920) pixels; 4 Mega (2304x1728) pixels 3 Mega (2048x1536) pixels; 2 Mega (1600x1200) pixels VGA (640x480) pixels
Digital voice recorder	WAVE (.WAV) Format with 13MB memory Recording time: approximately 45 minutes
PC Camera	VGA (640x480 pixels) / up to 10 fps QVGA (320x240 pixels) / up to 20 fps
LCD display	1.5" Color TFT LCD
Digital zoom	4X (real-time)
A/V output	Yes (NTSC/PAL system)
Built-in flash strobe / microphone / speaker	Yes
Lens	F = 3.0/8.34 mm
Self Timer	Yes (10 seconds)
Interface	8 pin USB
Power saving (auto-off)	1min/3min/5min
Battery	AAAx2 (alkaline batteries recommended)
Dimension	97x45x43 mm

Note: Specifications are subject to change without notification.

POCKET DV

5300

82-401-90010v1.1

