

**Uniden<sup>®</sup>**

**DMX 778**

**SERIES**

**OWNER'S**

**MANUAL**

**OWNER'S MANUAL**

# Contents

Welcome/Features/Terminology	3	From the Handset Speakerphone	33
Controls & Functions	5	Receiving a call/AutoTalk set to OFF	33
Setting up the Phone	7	Hanging Up	34
Choose the best location	7	Switching to the Handset Speakerphone	
Connect the base unit and charge the handset	8	During a Call	34
Expanding Your Phone	9	Moving out of range	34
Four Handset Expandability	9	Call Waiting	35
Backwards/Forwards Compatibility	9	Placing a Call on Hold	36
Connect the expansion handset's charger	10	Conferencing	36
Register the Handset	11	Redialing Calls	37
Register the DCX770 expansion handset to main base	12	Adjusting the Ringer, Earpiece and Speaker	38
Changing the Digital Security Code	13	Using the Handset Volume Setting Menu	39
Installing the Holster	14	Mute the Handset and Base Ringer	41
Optional Headset Installation	14	Mute the Handset Microphone	41
Using the Interface	15	Tone Dialing Switch-over	41
Display Icons	15	Clarity Booster	42
Soft Key Function	16	Find Handset	43
Using the joystick	17	Calendar & Scheduler	44
Entering text	19	Using the Phonebook	46
Main Menu Options	20	Creating and Editing Phonebook Entries	46
Setup Menu	21	Storing Caller ID or Redial Numbers in the Phonebook	51
Handset Setup	21	Managing the Phonebook	51
Global Setup	23	Checking the number of stored entries	53
Customize Handset	26	Changing the sorting order	53
Using Your Phone	32	Naming phonebook groups	54
Making Calls	32	Making Calls with the Phonebook	54
		Caller ID Features	55

Using the Caller ID List	55	Liquid Damage	84
Deleting Caller ID numbers	56	Precautions & Warranty	85
Answering Machine	57	I.C. Notice	87
Features	57	Index	88
Setting Up the Answering Machine	58	Remote Operation Card	92
Setting Your Outgoing Greeting	61		
Using the Answering Machine	62		
Recording a phone conversation	64		
Screening Calls	64		
Remote Operation	65		
Multi-Handset Features	67		
Text Message	67		
Using DirectLink Mode	71		
Room/Baby Monitor	72		
Intercom	73		
Transferring a Call	74		
Note on Power Sources	75		
Power Failure	75		
Battery replacement and handling	75		
Warning	75		
Installing a Replacement Battery	76		
Low battery alert	77		
Cleaning the battery charging contacts	78		
General Information	79		
AC Adapter Information	79		
Battery Information	79		
Troubleshooting	80		
System Reset	83		

# Welcome

Thank you for purchasing a Uniden Multi-Handset phone. This phone offers four-handset expandability, recordable ringer tones, and customizable handset displays.

**Note: Illustrations in this manual are used for explanation purposes. Some illustrations in this manual may differ from the actual unit.**



As an Energy Star<sup>®</sup> Partner, Uniden has determined that this product or product models meets the Energy Star<sup>®</sup> guidelines for energy efficiency. Energy Star<sup>®</sup> is a U.S. registered mark.

# Features


- 2.4GHz Frequency Hopping Spread Spectrum
- Integrated Answering Device
- Caller ID/Call Waiting Deluxe Options
- Backward/Forward Compatibility
- Hands-Free Speakerphone
- 100 Phone Book Locations
- Recordable Ringer Tones
- Distinctive Caller ID Options
- Animations & Wall Paper Themes
- Text Messaging
- Reminder/Calendar
- Access Answering Machine using Handset
- Battery Level Indicator
- Direct Link Mode
- Room Monitoring

Uniden® is a registered trademark of Uniden America Corporation. AutoTalk, AutoStandby, DirectLink, IntegriSound and Random Code are trademarks of Uniden America.

## Terminology


- **Standby Mode** - The handset maybe sitting on or off the cradle, but is NOT in use. ( /flash or 🔊) key has not been pressed. No dial tone is present.
- **Talk Mode** - The handset is not in the cradle, and ( /flash or 🔊) key has been pressed and enabling a dial tone.


# Controls & Functions

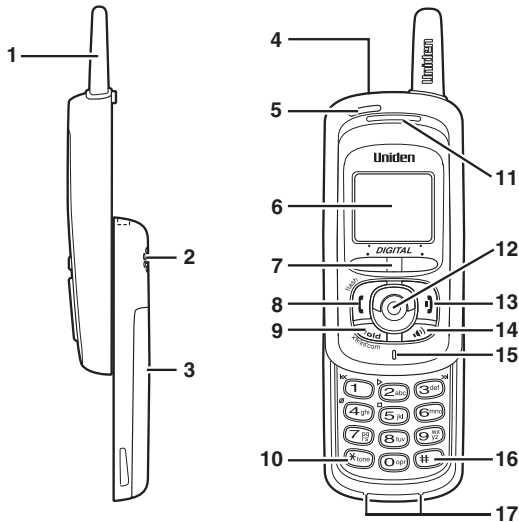

1. Handset Antenna
2. Speakerphone Speaker and Ringer
3. Handset Battery Compartment
4. Headset Jack Cover
5. New Message LED
6. LCD Display
7. Soft Menu Keys (P.16)
8. **[** (talk)/**flash** (P. 32 & 35)
9. **hold/x'fr/int'com** (Hold/Transfer/Intercom) (P. 36 & 73)
10. **\*/tone** (P. 41 & 56)
11. handset Earpiece
12. Joystick (Navigates PhoneBook, Caller ID, Redial, Ringer Volumes and Menu Display Options)(p. 17)
13. **]** (end call)(P. 34)
14. **[** (speaker phone) (P. 34)
15. Handset Microphone
16. **#** (P. 56)
17. Handset Charging Contacts

## Remote Answering Machine Operation



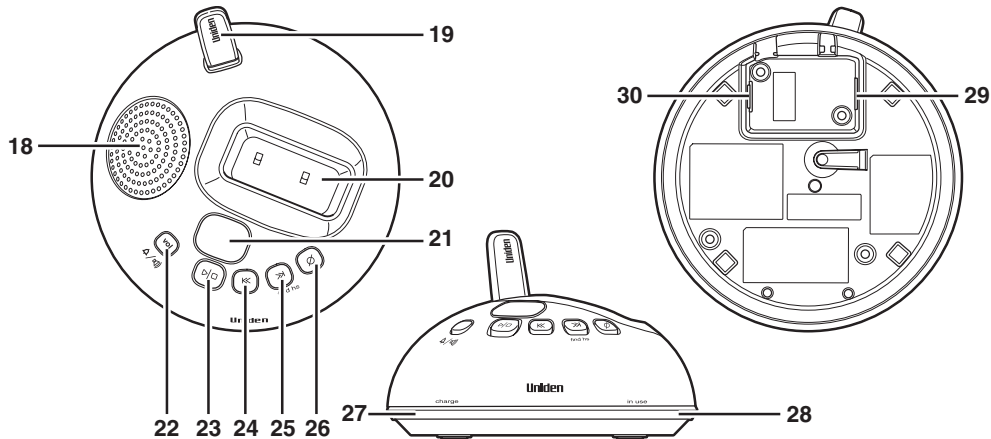

- 18. Base Speaker
- 19. Base antenna
- 20. Base Charge Contacts
- 21. Message Counter
- 22. **vol** (volume)/**▲** (ring)/**🔊** (speaker) (p.38)
- 23. **▷/□** (play/stop) (p.63)
- 24. **◀** (repeat)(p.63)

- 25. **find hs** (Find Lost Handset/ Pager)/**⏩** (skip) (p.43 & 63)
- 26. **∅** (delete)(p.63)
- 27. Handset Charge LED
- 28. Handset In Use LED
- 29. TEL LINE Jack
- 30. DC IN 9V Jack



note


If your home has specially wired alarm equipment connected to phone line, be sure that installing the system does not disable your alarm equipment.

If you have questions about what will disable alarm equipment, contact your telephone company or a qualified installer.

# Setting up the Phone

## Choose the best location

When choosing a location for your new phone, here are some important guidelines you should consider:

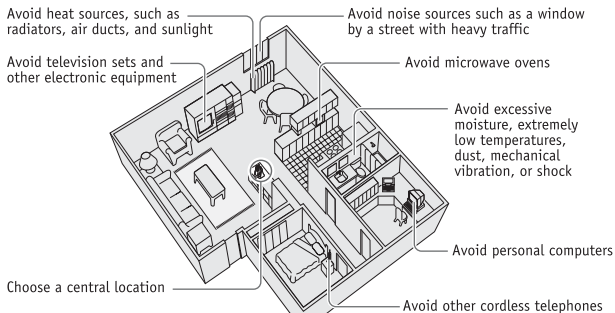

- The location should be close to both a phone jack and a continuous power outlet (one which is not connected to a switch).
- The base and handset should be kept away from sources of electrical noise such as motors, Microwave ovens, and fluorescent lighting.
- For better reception, place the base as high as possible.
- The base should be placed in an open area for optimum range and reception.





## Connect the base unit and charge the handset

- 1) Connect the AC adapter to the **DC IN 9V** jack and to a standard 120V AC wall outlet.
- 2) Place the handset in the base unit with the keypad facing forward.

**NOTE: The rechargeable battery is already installed in your phone.**

- 3) Make sure that the **charge** LED illuminates. If the LED does not illuminate, check to see that the AC adapter is plugged in and the handset makes good contact with the base charging contacts.
- 4) Charge your handset at least **15-20 hours before plugging into the phone line.**
- 5) Once the handset battery pack is fully charged, connect the telephone line cords to the **TEL LINE** jack and to a telephone outlets.

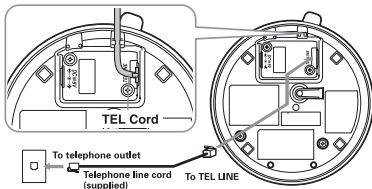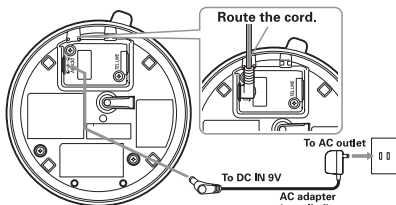

note

- Use only the supplied **AD-830 AC adapter**. Do not use any other AC adapter.
- Do not place the power cord where it creates a trip hazard or where it could become chafed and create a fire or electrical hazard.
- Don't place the base in direct sunlight or subject it to high temperatures. The battery may not charge properly.


tip

If your telephone outlet isn't modular, contact your telephone company for assistance.

# Expanding Your Phone

## Four Handset Expandability

Your phone can support a total of four handsets. Expansion handsets do not need to be connected to a phone jack. Expansion handsets allow you to use additional features such as DirectLink Mode and three-way conference calling. Expansion handsets need to be registered to the base before they will operate.

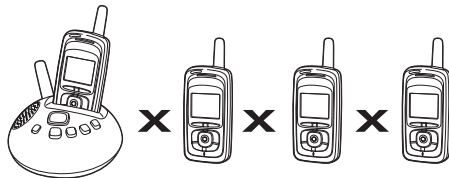

## Backwards/Forwards Compatibility

Your phone is compatible with other Uniden 2.4GHz Digital Expandable Handsets. Compatible models include the DCX640 and DCX700. Visit our website for updated model listings.




## Connect the expansion handset's charger

The handset is powered by a rechargeable battery pack. The battery recharges automatically when the handset is placed in the charger.

- 1) Connect the AC adapter to the DC IN 9V jack and to a standard 120V AC wall outlet.
- 2) Set the charger on a desk or tabletop, and place the handset in the charger with the keypad facing forward.
- 3) Make sure that the **charge LED** illuminates.

If the LED does not illuminate, check to see that the AC adapter is plugged in and the handset makes good contact with the base charging contacts.

- 4) Charge the handset battery pack for at least 15-20 hours before using your new cordless telephone for the first time.

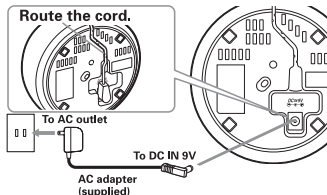

note


**Use only the supplied AD-0005 AC adapter. Do not use any other AC adapter.**

## Register the Handset

Handsets supplied with the phone are registered to the base by the factory. When charged, pre-registered handsets display a handset ID number. Handsets that have not been registered display Models vary! Charge handset on the base for registration or refer to Owner's Manual. When you register an extra handset to the base, the handset ID will be assigned. Only one handset can be registered at a time.

## Register the DCX770 expansion handset to main base

- 1) Before registering the extra handset, the battery pack **MUST** be charged for 15-20 hours.
- 2) Place the extra handset in the main base unit to begin registration.
- 3) While the handset is registering, Handset Registering will appear in the LCD. When Registration Complete is displayed, the handset has been registered to the base. If Registration Failed appears, please try these steps again.

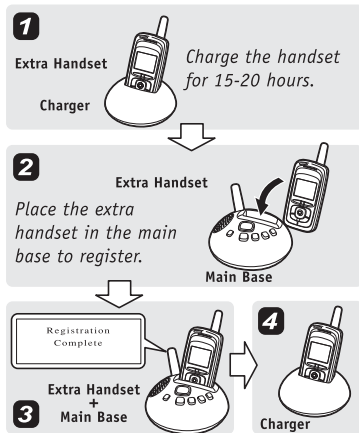

Your phone maybe compatible with other Uniden 2.4Ghz Digital Expandable Systems. Look for the technology icon on our boxes or visit our website for a list of compatible models.

## Register the DCX640 or DCX700 Backward/Forward Compatible Handsets to main base

- 1) Press and hold the **Registration** button on the back of the base.
- 2) Keep pressing the Registration button on the base until all LEDs on main base start to blink.
- 3) On the handset, press and hold # until you hear beep.

# Changing the Digital Security Code

The digital security code is an identification code used to connect the handset and the base unit. Normally, setting the code is not necessary. In the rare situation that you suspect another cordless telephone is using the same security code, you can change the code. To change the digital security code:

1. Perform the "System Reset" options ("De-register the Handset" and "Replacing the Base Setting") for all the handsets you have (see page 83).
2. Re-register each handset by following the steps on page 11.

## Installing the Holster


- Line up the groove on the back of the handset with the groove on the holster. It fits in the holster only one way.
- Slide the phone into the holster.
- Use the spring clip to attach the holster to your belt or pocket.



You must remove the holster to charge the handset.





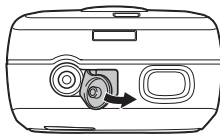




## Optional Headset Installation

Your phone may be used with an optional headset. To use this feature, insert the headset plug into the headset jack. Your phone is ready for hands-free conversations. (Headset may be purchased by calling the Uniden Parts Department or visiting the web site. See page 75.)



# Using the Interface

## Display Icons

ICON	DESCRIPTION
	<b>Battery</b> icons indicate the handset battery status. This icon cycles depending on the battery status (full, medium, low, and empty).
	<b>Ringer off</b> icon indicates that ringer is turned off.
	<b>Keypad lock</b> icon appears when the keypad is locked.
	<b>Text message</b> icon appear when you have new text messages.
	<b>Mute</b> icon appears when you mute the handset.
	<b>Speaker</b> icon appears when the handset speaker phone is used.
	<b>Booster</b> icon appears when the Clarity Booster feature is in use.
	<b>Privacy</b> icon appears when the Privacy Mode is turned on.
	<b>Call record</b> icon appears while recording a conversation.




## Soft Key Function


"Soft" keys are keys that change function during the operation of the phone. There are two soft keys on the handset.

The function of each soft key is determined by the text that appears directly above it. For example, when the handset is in standby mode, pressing soft key 2 access the answering machine remotely. When the handset is in talk mode, pressing soft key 2 will mute the call. Complete information on the features controlled by the soft keys can be found under each feature.

### In standby mode

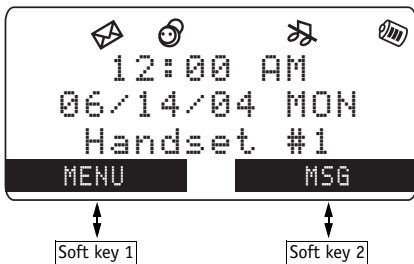


### In talk mode

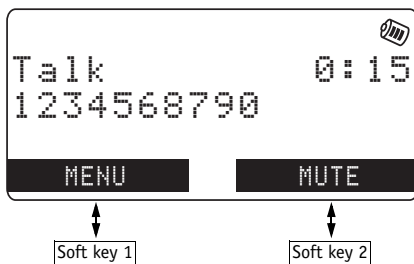


## Using the joystick

The joystick makes it easy to use your phone. The four most commonly used functions are accessible just by moving the joystick:

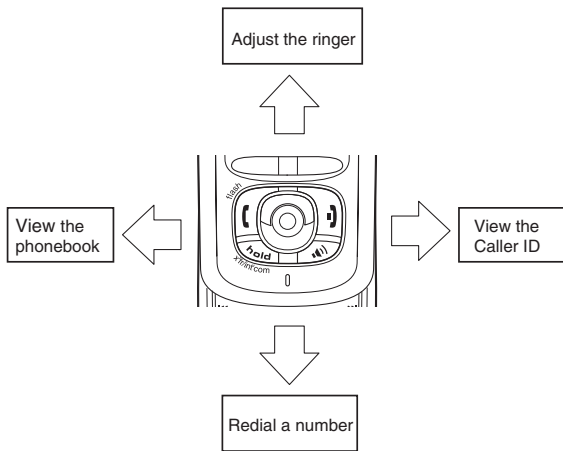


You will also use the joystick to make menu selections.

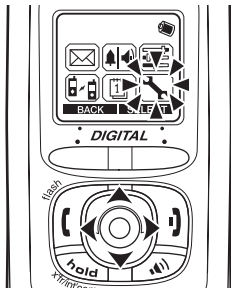

Highlight the option you want by moving the joystick up, down, right, or left. This will move the cursor; the option currently highlighted appears in reversed out text:

- 1) Press the center of the joystick.
- 2) Select the **MENU** soft Keys.

To exit the **MENU** and return to standby, press the **]** key.

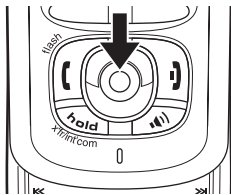

Select the highlighted option by pressing in on the center of the joystick. (You can also press the **OK** soft key.) Anytime the display prompts you to press **OK** or the **ENTER** soft key, you can press the center of the joystick.

You can go back to the previous menu at any time by pressing the **BACK** soft key.

## Entering text

You can use the number keypad on your phone to enter text by referring to the letters printed on each number key.

When you press the number key in a text entry field, the phone displays the first letter printed on the number key. Press the number key twice to display the second letter and three times to display the third. Capital letters are displayed first, then lower case letters, then the number on the key.

If two letters in a row use the same number key, enter the first letter, then use the joystick to move the cursor to the next position to enter the second letter.

For example, to enter Movies:

- 1) Press 6 once to enter M.
- 2) Use the joystick to move the cursor to the right.
- 3) Press 6 six times to enter o.
- 4) Press 8 six times to enter v.
- 5) Press 4 six times to enter i.
- 6) Press 3 five times to enter e.
- 7) Press 7 eight times to enter s.
- 8) Press the center of the joystick to end your text entry.

	Number of times key is pressed								
keys	1	2	3	4	5	6	7	8	9
1	1								
2 abc	A	B	C	a	b	c	2		
3 def	D	E	F	d	e	f	3		
4 ghi	G	H	I	g	h	i	4		
5 jkl	J	K	L	j	k	l	5		
6 mno	M	N	O	m	n	o	6		
7 pqrs	P	Q	R	S	P	q	r	s	7
8 tuv	T	U	V	t	u	v	8		
9 wxyz	W	X	Y	Z	w	x	y	z	9
0 oper	&	(	)	<	>	/	(blank)	-	_
	.	,	:	?	!	@	'	"	*
	#	0							

If you make a mistake while entering a name, use the joystick to move the cursor to the incorrect character. Press the **DELETE** soft key to erase the incorrect character, and then enter the correct character. To delete all characters in the text entry field, press and hold the **DELETE** soft key.

## Main Menu Options

Your phone has six main menu options: **Text Message, Volume Setting, Customize Handset, Link Handsets, Reminder/Calendar, and System Setup.**




Text Message



Link Handsets



Volume Setting




Reminder/Calendar



Customize Handset



System Setup

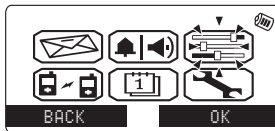

If you do not press a key within 30 seconds, the phone will time out and exit the menu mode. When setting Day and Time, the time-out period is extended to two minutes.



Handset Setup


Distinctive  
ID

AutoTalk

## Setup Menu

### Handset Setup

The following submenu options must be set separately for each handset.

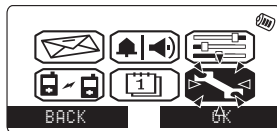

### Distinctive ID

You can assign special ringer tones to anyone in your phonebook. When your phone gets a call, it looks up the Caller ID information in your phonebook; if you've assigned a distinctive ringer to that number, the phone uses it so you know who's calling.

To turn on distinctive ringing, go to `Distinctive ID` and select `On`. A confirmation tone tells you that distinctive ringing is active.

### AutoTalk

AutoTalk, lets you answer the phone just by picking it up from the cradle. To turn on AutoTalk, go to `Auto Talk` and select `On`. A confirmation tone tells you that AutoTalk is active.

## Anykey Answer

AnyKey Answer lets you answer the phone by pressing any key on the number pad. To turn on AnyKey Answer, go to **AnyKey Answer** and select **On**. A confirmation tone tells you that AnyKey Answer is active.

## Language

You can change the language the menu display will use. Choose from English, French, or Spanish. To change the language, go to **Language** and select **English**, **Français** (French), or **Español** (Spanish). You'll hear a confirmation tone, and the display will use the selected language.

## Key Touch Tone

Key Touch Tone is the tone your keypad makes when keys are pressed.

To turn off the tone, go to **Key Touch Tone** and select **Off**. A confirmation tone tells you that the tone has been deactivated.

## Privacy Mode

If you have other registered handsets and you don't want them to interrupt you on a call, you can turn on privacy mode. As long as your handset is in privacy mode, other handsets won't be able to join your call or make calls of their own.



Handset Setup

Anykey Answer

Language

Key Touch  
Tone

Privacy Mode



Handset Setup

LCD Contrast

To turn on privacy mode, go to **Privacy Mode** and select **On**. You can turn on privacy mode when the phone is in standby or when you're already on a call.

## LCD Contrast


You can change the contrast of your handset display to make it easier to read. You might want to adjust the contrast whenever you change the display color. Your phone gives you 10 levels of contrast to choose from. To adjust the contrast, go to **Contrast**. Move the joystick up to increase the contrast and down to decrease the contrast. When you like the level of contrast, press the center of joystick to select it.



Global Setup

## Global Setup


Global settings apply to all registered handsets and the base. If you change something under the global menu, you change it for all handsets. Only one handset can change global settings at a time, and you have to make sure the phone is not currently being used.

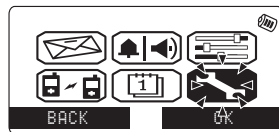



## Day and Time



To change the date and time shown in the display, go to **Date & Time**. Move the joystick right and left to highlight the part you want to change (date, time, AM/PM). Use the number keypad or \* to change each part. Press the center of the joystick when you're finished.

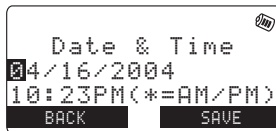

## Call Waiting

Your phone supports Caller ID on Call Waiting, so you can see the name and number of someone who calls when you're already on the line. Your phone also supports Call Waiting Deluxe, which gives you a choice of how you want to handle a waiting call. You'll need to subscribe to these features with your phone company before you can use them.

To let your phone support these features, go to **Call Waiting**. Select **On**, and the phone will display the Call Waiting Deluxe screen. Select **On**. (You have to turn on Call Waiting before you can turn on Call Waiting Deluxe.) A confirmation tone tells you that your phone is ready to use these features.

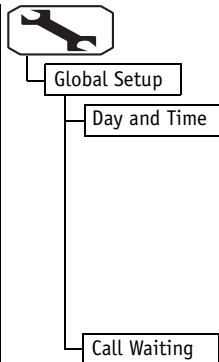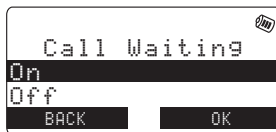

For setting Day and Time, if no key is pressed for two minutes, the phone will exit the menu mode.



Global Setup

Area Code

Dial Mode

## Area Code

If you can make a call by dialing only 7 digits (instead of 10), you can program your local area code in your phone. If you get a call from within your area code, you'll only see the 7-digit phone number. If you get a call from outside your area code, you'll see all 10 digits.

To enter an area code, go to `Area Code`. Use the number keypad to enter your 3-digit area code. Press the center of joystick when you're finished.


## Dial Mode

Your phone can communicate with the telephone network in two different ways: tone dialing and pulse dialing. These days, most phone networks use a method called tone dialing, so your phone comes programmed for tone dialing.

If your phone company uses `Pulse` dialing, you'll need to change your phone's dial mode. There's an easy way to tell: try making a call. If your call connects, your phone's setting is fine. If not, go to `Dial Mode` and select `Pulse`. A confirmation tone tells you you've changed the dial mode, and you can try making a call again.

## Customize Handset

This menu lets you customize your handset. You can set these options separately for each handset.

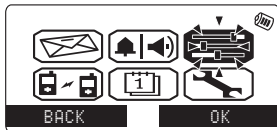



### Ringer Tone

You can set a different ringer for each handset. This phone comes with 10 prerecorded songs and 10 different ringer tones; you can also record your own ringer tones (see page 27).

- Songs: Beethoven's Symphony #9 [Beethoven9], Fur Elise [Elise], We Wish You A Merry Christmas [Merry Christmas], Home Sweet Home [Home Sweet Home], Lorri Song #6 [Lorri Song], When the Irish Eyes Are Smiling [Irish Eyes], Aura Lee, Let Me Call You Sweet Heart [Sweetheart], Star Spangled Banner [Star Spangled], Old MacDonald [Old MacDonald]
- Ringer tones: Flicker, Clatter, Soft Alert, Wake Up, Light Bug, Beep Boop, Tone Board, Chip Chop, Party Clap, Reminder

- 1) Go to Ringer Tones and highlight the ringer you want. (Each ringer will sound as you highlight it.)
- 2) Press the center of the joystick to select the ringer. You'll hear a confirmation tone, and the phone will go back to the menu.

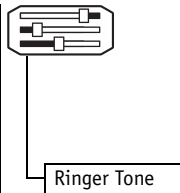




Record Ringer

## Customize Your Own Distinctive Ringer Tones

Your phone can store up to 20 different recordings to use as ringer tones (a total of 3 minutes, 15 seconds). Each recording must be between 5 and 60 seconds long.

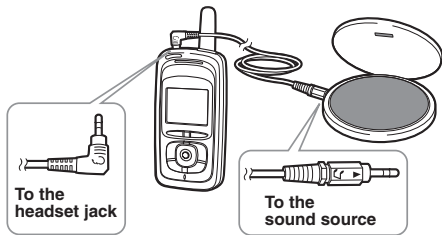

- 1) Connect the audio recording cable to the handset and sound source (e.g. stereo or cd player). Insert one end of the audio recording cable into the handset's headset jack and the other end into the sound source.



You can also simply use the handset's microphone by holding the handset close to the sound source.


- 2) Go to Record Ringer.
- 3) To start recording, press the **RECORD** soft key. The message counter displays 60 and then begins to count down.
- 4) When you are finished recording, press the **STOP** soft key. The phone will play the recorded ringer.
- 5) To store the ringer, press the Joystick or the **SAVE** soft key.
- 6) Enter the title of this ringer.
- 7) Press the center of the joystick key.

## Delete Ringer


To delete a ringer tone, go to **Delete Ringer** and simply select the ringer you want to delete. Select **Yes**. The ringer is deleted from the list, and the phone stays on the ringer list.


## Animations

Your phone has 5 different system animations (Dog, Face, Car, Frog and Abstract) with 9 different animation schemes (example is for Face):

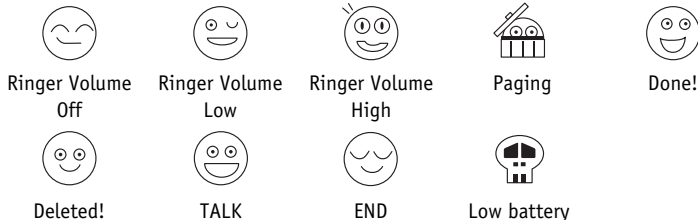

To turn on the animation, go to **Animations** and highlight the animation you want. Press the **VIEW** soft key to see the animation or the **OK** soft key to activate it.

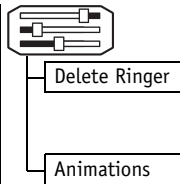



Themes

## Themes (wallpaper)

Your phone has 22 different wall papers themes (including digital and analog clocks). The wall paper will displays on the handset's LCD during standby mode:



Abstract Frame



Cruisin



Cycling



Gone Shopping



Guitar



Happy B\_Day



Jogger



New York



Ollie



Pagoda



Puppy Dog



Roxie



Sail Boat



Smiley Face



Soccer



Stiletto



tunes

Uniden

Uniden Logo



Vacation



Work Related

To turn on the wallpaper, go to **Themes** and highlight the wallpaper you want. Press the **VIEW** soft key to see the wallpaper or the **SELECT** soft key to activate it.

## Banner

You can change the name your phone displays on the screen. If you have more than one handset, you can use the banner name to identify your handset during handset-to-handset functions like text messaging, intercom and DirectLink.




Go to **Banner** and enter the name you want to use. You can use up to 10 characters. Use the **DELETE** soft key to delete an existing handset name. Press the center of your joystick when you're finished.

## Keypad Lock


You can lock your keypad so you don't press any keys accidentally. You can still answer calls.

To lock your keypad, go to **Keypad Lock** and select **Lock**. You'll hear a confirmation tone, and your keypad is locked.

To unlock the keypad temporarily, press any key on the upper part of the handset. **Keypad Locked! To unlock keypad press \* key appears.** Press **tone/\*** in 20 seconds. **Keypad Unlocked! Auto Lock Enable** appears.

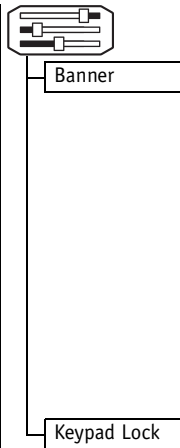

The number keypad will not be locked.



Backlight Color

To release the keypad lock, press any key on the upper part of the handset. While the display appears, press the # key. `Keypad Lock Off` appears.

### **Backlight Color**

You can change the color of your phone's backlighting. There are 7 different colors choose from: Ocean, Kiwi, Sunset, Violet, Sunflower, Sky, and Polar Ice.

To change the color of the display's backlight, go to `Backlight Color` and select the color you want. As you scroll through the options, the phone displays the highlighted color for you.




# Using Your Phone

## Making Calls

- 1) Remove the handset from the charging cradle.
- 2) Slide the keypad open.
- 3) Press **ⓧ/flash**.
- 4) Listen for the dial tone.
- 5) Dial the number.

OR

- 1) Remove the handset from the charging cradle.
- 2) Slide the keypad open.
- 3) Dial the number.  
If you need the phone to pause before dialing more digits (for example, to enter an access code or extension), press the **PAUSE** soft key. P appears in the display, which represents a 2-second pause.
- 4) Press **ⓧ/flash**.

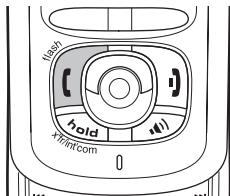


If the line is already in use, all registered handsets that are not currently in use will display "Line In Use."





- For best performance, use the speaker phone in a quiet room and let the caller finish speaking before you speak. If you or the other party has difficulty hearing, adjust the speaker volume.

- To set "Autotalk," see page 21 or to set "Anykey Answer" see page 22.

## From the Handset Speakerphone

- 1) Remove the handset from the charging cradle.
- 2) Slide the keypad open.
- 3) Press  (Speaker Phone).
- 4) Listen for the dial tone.
- 5) Dial the number.
- 6) When the other party answers, talk into the microphone in the middle of the handset.

## Receiving a call/AutoTalk set to OFF

Handset is in the cradle	Handset is off the cradle
<ol style="list-style-type: none"><li>1) Remove the handset from the charging cradle.</li><li>2) Press  /flash. If AutoTalk is ON, the phone will automatically answer the call when you pick the handset up.</li></ol>	Press  /flash. If Any Key Answer is set to On, you can also press any number key on the keypad to answer a call.

## Hanging Up

Press **⏏** or return the handset to the charging cradle.

## Switching to the Handset Speakerphone During a Call

To switch a normal call to the speakerphone, press **📞** (speaker phone) on the handset. To switch from a speakerphone call to a normal call, press **📞** (speaker phone).

## Moving out of range

If you move your handset farther from the base unit during a call, you might start to hear more noise than usual. If you go too far from the base, you'll hear a beep and see **No Signal**. Press **HELP** on the display. The base will stay connected to the caller for another 30 seconds, so you can move back within range and press **⏏/flash** or **📞** (speaker phone) to return to the call.



- You must subscribe through your local telephone company to receive Call Waiting or Caller ID on call waiting service.
- Your phone can't show call waiting caller ID information when a call is on hold.

## Call Waiting

If you hear a call waiting tone while you're on a call, press **⏏/flash** to switch to the new call. After a short pause, you'll hear the new caller. Press **⏏/flash** again to go back to the original caller.

## Call Waiting Deluxe

If you subscribe to Call Waiting Deluxe (CWDX) from your phone company, you have several different options when you get a call waiting call. When you hear the call waiting tone, instead of answering the call, you can press the center of the joystick and then select **CWDX**. Then, use your joystick or press 1-7 to choose from the following options:


- 1. Ask to Hold** - A prerecorded message tells the caller that you'll be available shortly, and the call is placed on hold.
- 2. Tell Busy** - A prerecorded message tells the caller you are busy, and the waiting call is disconnected.
- 3. Forward Call** - The caller is sent to your voice mail box, if available.
- 4. Answer/Drop 1** - Disconnects the first call, and connects to the new caller.

**5.Conference** - Starts a conference call with your first and second callers.

**6.Drop First/7.Drop Last** - During a conference call, allows you to choose to drop the first or last caller.

## Placing a Call on Hold

During a call, press **hold/X'fr/int'com** to put the call on hold. Press **(/flash** or **Ⓜ**) to go back to the call.

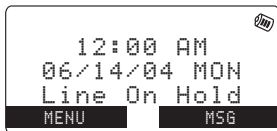

If you leave the call on hold for 10 seconds, the display will change to read Line on Hold. After 5 minutes, the call is disconnected.

## Conferencing

If you have more than one handset, two handsets can talk to the outside caller at the same time in a conference call. Once a call is in progress, press **(/flash** or **Ⓜ**) to join the call. To hang up, press **Ⓜ** or put the handset back in the cradle. The other handset will still be connected after you hang up.



If the other handset is in privacy mode, you won't be able to join the call.




- Each redial record can store up to 32 digits, but your phone only displays the first 15 digits. Digits between 16 and 32 are still there, just not displayed.
- To store redial numbers in the Phonebook, see page 51.


## Redialing Calls

You can quickly redial the last ten phone numbers that were dialed from this handset.

With the phone in standby mode, slide the joystick down. This brings up the redial list. Use the joystick to scroll through the numbers, and select the number you want to dial. Press **⏏/flash** to dial the selected number.

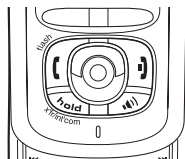

Redial a number

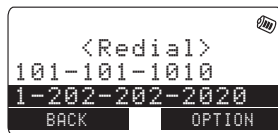

## Deleting Redial Records

If you want to delete a phone number from the redial list, go to the redial list and select the number you want to delete. Press the **OPTION** soft Key, and select `Delete Number`, and then `Yes`. If you want to delete all the redial records, select `Delete All`, and then `Yes`.


## Adjusting the Ringer, Earpiece and Speaker

### Adjusting the base ringer volume

You can choose from four ringer settings on the base: off, low, medium, and high. When the phone is in standby mode, press **vol** to cycle through the ringer volume setting. The base plays each volume for you.

### Adjusting the base speaker volume

You can adjust the volume of the answering machine speaker while a message is playing. Press **vol** during a message to adjust the speaker volume.

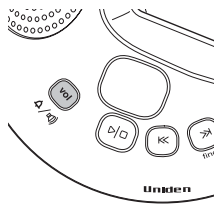

## Using the Handset Volume Setting Menu

You can adjust the handset audio from Volume Setting menu.




**Ringer:** Adjust the handset ringer volume

You can choose from three different ringer volume settings on your handset: off, low, and high. To adjust the ringer volume, go to **Ringer** and select the ringer option you want to use.

**Ear speaker:** Adjust the handset earpiece volume

You can choose from six volume levels for the earpiece speaker. To adjust the earpiece volume, go to **Ear Speaker** and select the volume level you want to use.

You can also adjust the earpiece volume during a call by sliding the joystick up, and then up (to make it louder) or down (to make it softer).

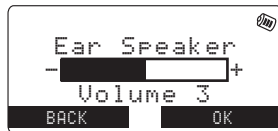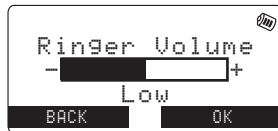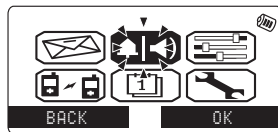



**Speaker:** Adjust the handset speaker volume  
You can choose from six volume levels for the handset speakerphone. To adjust the speaker volume, go to **Speaker** and select the volume level you want to use.



You can also adjust the handset speaker volume during a call by sliding the joystick up, and then (to make it louder) or down (to make it softer).

### Audio Tone

If you aren't satisfied with the audio quality of your phone, you can adjust the Audio Tone of the earpiece. Your phone gives you three audio tone options: low, mid, or high. Go to **Audio Tone** and select the option that sounds best to you.

(Audio tone adjustments only apply to the earpiece, not the speakerphone.)

Adjust the  
speaker volume

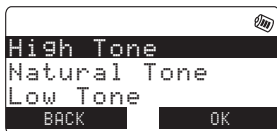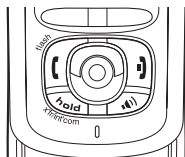




You can only mute the handset ringer if the handset is off the base when the phone starts ringing.

## Mute the Handset and Base Ringer

While the handset is ringing, you can mute the ringer for this call by pressing the **MUTE** soft key. To mute the base ringer press  $\triangleright/\square$  on the base. The phone will ring again on the next call.

## Mute the Handset Microphone

When you're on the phone, you can press the **Mute** soft key to turn off the microphone so the caller can't hear you. The display shows *Mute On* and  while the microphone is muted. To turn off muting, press the **Mute** soft key again.

## Tone Dialing Switch-over

If your telephone company uses pulse dialing, you can switch-over to tone dialing after the call connects. This feature is useful when you need tone dialing to use any automated menu systems, such as telephone bank tellers, telephone prescription refills, customer support menus, etc.



If your phone is set to pulse dialing mode, make your call normally. Once your call connects, press the **\*/tone** key. Any digits you enter from then on will be sent as tone digits. When this particular call ends, the phone automatically returns to pulse dialing mode.

## Clarity Booster

If you have interference while you are on your phone, you can improve the sound quality by turning on the clarity booster.




While you are on a call, press the center of the joystick and then select Clarity Boost. Boost On and ⚡ appear on the display. To turn off the Clarity Booster, repeat above steps again.



If the battery pack is completely drained, the handset will not beep.


## Find Handset

To locate the handset, press ***find hs/»*** on the base when the phone is in standby mode. All registered handsets beep for 60 seconds, and **Paging** appears on the handset display. To cancel paging, press any key on the handset or ***find hs/»*** on the base.

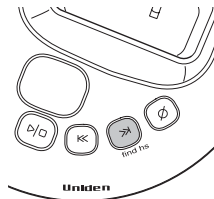

# Calendar & Scheduler

Your phone has a built-in calendar that you can use to schedule reminders and appointments (all the way through December 31, 2023). You can set alarms for up to 30 different events;

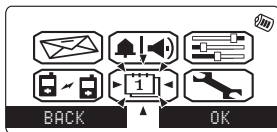


Select the Reminder/Calendar option to view the calendar. Use the joystick to scroll through the calendar.



## Scheduling a reminder

Go to the Calendar. Press the **SKDL** soft key to show all scheduled reminders, and select a reminder. Press the **OPTION** soft key. Select *New Entry*.

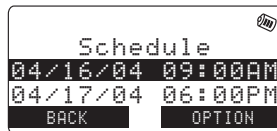

- 1) Press the center of the joystick.
- 2) Use the number keypad or \* to select the date and time of this reminder. Press the center of the joystick when you're finished.

- 3) If you want your phone to ring when this reminder occurs, move to the second line. Select the ringer tone you want the phone to ring.
- 4) Press the center of the joystick.
- 5) Select third line to enter a name or reminder text for this reminder. `Edit Schedule` appears. You can enter up to 32 characters. Press the center of the joystick when you're finished.
- 6) When everything is correct, press the **DONE** soft key.

### **Editing and deleting reminders**

You can edit reminders by pressing the **SKDL** soft key and selecting the reminder by pressing the center of the joystick. Once the reminders is selected, you can edit the date, time, reminder tone, and text the same way you entered them for a new entry.

To delete an reminders, select the reminder and press the **OPTION** soft key. Select `Delete entry`. To delete all reminders, select `Delete All`.

# Using the Phonebook

Your phone lets you store up to 100 entries in each handset. You can store up to 4 phone numbers for each name in your phonebook (for a total of 400 numbers), and you assign names to groups for easy searching. You can also store a special ringer tone, display, and color to each name or group. You can store a distinctive ringer tone, picture display, and backlight color to your name or group.

You can enter your phonebook by sliding the joystick to the left.


View the  
phonebook




## Creating and Editing Phonebook Entries


Go to the phonebook and press the **OPTION** soft key. Select **New Entry**. Enter as much of the following information as you want. Press the center of the joystick to enter each entry and confirm the selection. When you're finished, press the **DONE** soft key to save this phonebook entry.

### Step 1: Name

Select  and use the keypad to enter the name for this entry. You can enter up to 16 characters. If you don't want to enter a name, your phone will store this entry as <No Name>. Press the center of the joystick when you're finished, and your phone will go back to the current phonebook entry.

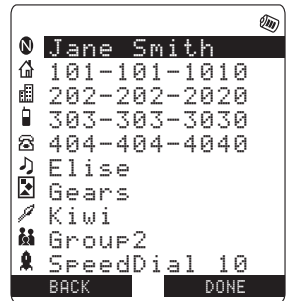

### Step 2: Number

Select  and enter a phone number for this entry. If you need your phone to pause between digits when it's dialing (for example, to enter an extension or an access code), press the **PAUSE** soft key to insert a two-second pause. You'll see a P in the display. You can stack more than one pause together if two seconds isn't long enough. Each pause counts as one digit; you can enter up to 20 digits for the phone number. Press the center of the joystick when you're finished, and your phone will go back to the current phonebook entry.



After you enter the number, press the center of the joystick. You can select an icon to remind you which number this is: home 🏠, work 🏢, mobile 📱, or general phone number 📞. Press the center of the joystick when you're finished.

### Step 3: Unique Ring 🎵

Select 🎵 to attach a special ring to this phone. Select the ringer tone you want the phone to use when this person calls, or select `No Selection` to have the phone use its regular ringer tone. Press the center of the joystick when you're finished, and your phone will go back to the current phonebook entry.




You can save up to 4 numbers for each phonebook entry. If you try to save more than 4 numbers for a phonebook entry, your phone will display `Dial data is full`. You'll have to delete one of the existing numbers before you add a new one.



You can also choose the display from the themes.

#### Step 4: Unique Display

Select  to attach a special screen display to this entry. Select the display you want the phone to use when this person calls, or select No Selection to have the phone use its regular display. You can press the **VIEW** soft key to see the display choices:



Lava lamp



Fireworks



Race Car



Ollie



Roxie



Good Doggy



Sail Boat



Abstract Geo




Gears




Flutter

Press the center of the joystick when you're finished, and your phone will go back to the current phonebook entry.

#### Step 5: Unique Color

Select  to attach a special screen color to this entry. Select the color you want the phone to use when this person calls, or select No Selection to have the phone use its regular color. As you scroll through the list, you will see the color choices. Press the center of the joystick when you're finished, and your phone will go back to the current phonebook entry.

### Step 6: Phonebook Group

Select  to place this entry into a phonebook group. Select the group (0-9) you want this entry to belong to, or select No Selection to leave the entry outside of any group. Press the center of the joystick when you're finished, and your phone will go back to the current phonebook entry. See page 54 for information on creating and editing groups. To select a group, see page 54.

### Step 7: Speed Dial

Select **0-9** to save this number to one of the 10 speed dial numbers or No Selection if you don't want to save it to a speed dial number. If there's already a phone number saved to the speed dial number you select, your phone will ask if you want to overwrite the number. Press the center of the joystick when you're finished, and your phone will go back to the current phonebook entry.

## Storing Caller ID or Redial Numbers in the Phonebook

You can store Caller ID or redial numbers in your phonebook so you can use them later. Go to the Caller ID list or redial list and select the number you want to store. (If the Caller ID information didn't include the number, then you can't store it.) Press the **OPTION** soft key and select `Add to Phonebook`. Your phone will create a phonebook entry so you can enter the additional information shown on page 46.

If the number you want to save is already in the phonebook, your phone will display `This data is already stored!`.

## Managing the Phonebook

With the **OPTION** soft key, you can delete phonebook entries, copy entries to another handset, check how many empty phonebook and speed dial entries you have available, sort your phonebook by groups, and name phonebook groups.

### Deleting phonebook entries

Go to the phonebook and select the entry you want to delete. Press the **OPTION** soft key and select `Delete Entry`. Your phone will ask you to confirm select `Yes`.


To delete all the entries from your phonebook, go to the phonebook and press the **OPTION** soft key without selecting an entry. Select `Delete All`. Your phone will ask you to confirm select `Yes`.

### Copying phonebook entries to another handset

When you copy entries to another handset, the group and speed dial information won't be transferred. Your phone will cancel the copying process if any one of the following things occurs:

- If the handset you are copying to doesn't have enough memory (the phone will show "Not enough memory in receiving unit").
- If the handset you are copying to already has that phone number in its phonebook.
- A call comes in during the copying process.


To copy a single entry, go to the Phonebook and select the entry you want to copy. Press the **OPTION** soft key and select `Copy Entry`. Select the handset you want to copy to the entry to.

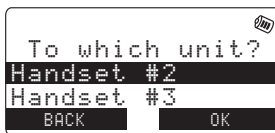

To copy all the phonebook entries, go to the phonebook and press the **OPTION** soft key without selecting an entry. Select **COPY ALL**. Select the handset you want to copy to the entry to.

## Checking the number of stored entries


To see how many phonebook entries you have, go to the phonebook and press the **OPTION** soft key and select **PhoneBk Capacity**. The phone will show you how many stored names (entries) and how many stored phone numbers (total) you have.

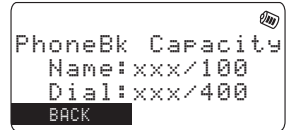

To see your speed dial entries, go to the phonebook and press the **OPTION** key and select **Check Dials**. The phone will show you which speed dial numbers have phone numbers stored in them.

## Changing the sorting order

To change the sorting of your phonebook, go to the phonebook and press the **OPTION** soft key and select **Sort**. Select **Alphabetically** to see the list of names in alphabetical order; select **Group** to see the list of groups

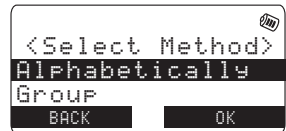

in alphabetical order. Enter a letter from the keypad to jump to the first entry beginning with that letter.

## **Naming phonebook groups**

Your phone comes with 10 groups to organize your phonebook. You can name groups things like "Family" or "Friends" or "Softball team." This will let you find entries in your phonebook more quickly.

To name a group, go to the phonebook and press the **OPTION** soft key and select `Edit Group Name`. Select the group number (**0-9**) you want to edit, and enter the name you want for this group using the number keypad. Press the center of the joystick when you're finished.

## **Making Calls with the Phonebook**


To call someone in your phonebook, go to the phonebook and select that person's phonebook entry. Select the number (one of the four available) that you want to call, and press **⏏/flash**.

## **Using the Speed Dial**

Slide open the keypad. Press and hold the number of the speed dial entry you want to call until the phone number appears on the display. Press **⏏/flash**.

# Caller ID Features


If you subscribe to Caller ID from your phone company, your phone will show you the caller's phone number and name (if available) whenever a call comes in:

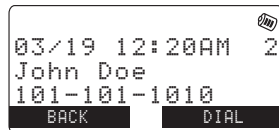

If you subscribe to both Call Waiting and Caller ID the phone also show you the name and number of call waiting calls (that is, calls that come in while you're on the line.)


## Using the Caller ID List

Your phone can store up to 100 Caller ID numbers. To see the Caller ID list, slide the joystick to the right. The phone will show the Caller ID list; only the first 13 characters of the name are displayed. You can use the joystick to scroll through the list, or you enter a letter with the keypad to jump to the first caller ID name that starts with that letter. If anyone in your phonebook has called you, the icon assigned to their number will appear in the Caller ID list. When you're done looking at the list, press the **BACK** soft key to exit.

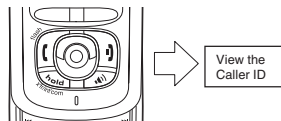



If you want to see how many Caller ID numbers are stored in your phone, go to the Caller ID list and press the **OPTION** soft key. Select CID Capacity.

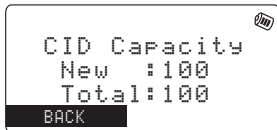

When you delete a Caller ID number, you delete it permanently.

## Calling someone from the Caller ID list

Go to the Caller ID list and select the number you want to call. If you need to add a "1" to the number for a long distance call, press **\*/tone**. If you need to add your saved area code to the number, press **#**. Then press **Ⓛ/flash** to dial the number.

## Deleting Caller ID numbers

To delete only one Caller ID number, go to the Caller ID list and select the number you want to delete. Press the **OPTION** soft key, and select **Delete Entry**. When the phone asks you to confirm, select **Yes**.

To delete all the Caller ID numbers, go to the Caller ID list and press the **OPTION** soft key. Select **Delete All**. When the phone asks you to confirm, select **Yes**.

# Answering Machine

The phone has a built-in answering machine that answers and records incoming calls. You can also use your answering machine to record a conversation, leave a voice memo message, or announce a special outgoing message to callers when you're away from your phone.

## Features


- Digital Tapeless Recording
- Up-to 25-30 minutes of Recording Time
- Call Screening
- Personal or prerecorded Outgoing Messages
- Voice Prompts (English, Spanish, or French)
- Time and Day Announcement
- Remote Message Retrieval
- Toll Saver
- Conversation Recording
- Voice Memo
- Message Alert On/Off
- Retrieve Messages using Handset

## Setting Up the Answering Machine

To access the answering machine settings, go to the Setup Menu and select Answer Machine.

### Security Code

If you want to call in and get your messages when you're away from, you'll have to set a security code. Go to Answer Machine and select Security Code. use the keypad to enter a two-digit number (01-99), and press the **OK** soft key when you're done. A confirmation tone tells you the security code has been saved.

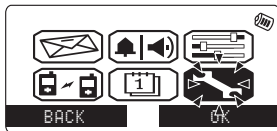

Answering  
Machine

Security Code



Answering  
Machine

Ring Time

Record Time

## Ring Time

You can set the number of times the phone will ring before the machine answers the call. Go to `Answer Machine` and select `Ring Time`. Then select the number of times you want the phone to ring; choose from 2, 4, or 6 times. The Toll Saver feature makes the answering machine answer after two rings if you have new messages and after four rings if you don't. If you call long distance to check your messages, Toll Saver lets you hang up after three rings and not get charged for the call.

## Record Time

You can set how long a caller has to leave a message before the answering machine hangs up. Go to `Answer Machine` and select `Record Time`. Then select the maximum length of messages; choose from 1 minute or 4 minutes. The Announce Only feature makes the answering machine answer call but it won't let callers leave a message. When the Announce Only feature is on, and the message counter will read `R`.

## Message Alert

if you want the answering machine to beep every 15 seconds whenever you have unheard messages, turn on the message alert tone. Go to **Answer Machine** and select **Message Alert**. Select **On**. A confirmation tone tells you the setting has been saved.

The message alert turns off automatically after you listen to all your new messages. You can also turn off the message alert by pressing any key on the base.

## Language

To change the language of your answering machine's voice prompts and pre-recorded greetings, go to **Answer Machine** and select **Language**. Select **English**, **Français (French)**, or **Español (Spanish)**.

## Call Screen

If you want to be able to listen to the caller's message before you answer, turn on the call screen feature. Go to **Answer Machine** and select **Call Screen**. Select **On** to turn on call screening.



Answering  
Machine

Message Alert

Language

Call Screen



- To finish the setting, press *end*.
- You will hear a beeping tone while you set greetings and play message from the handset.

## Setting Your Outgoing Greeting

You answering machine comes with a prerecorded greeting: "Hello. No one is available to take your call. Please leave a message after the tone." You can use this greeting, or you can record your own.

### Recording a greeting

To record your own greeting, make sure the phone is in standby mode. Press the **MSG** soft key on the handset. When the answering machine start its voice prompts, press **8**. After the answering machine says, "Record greeting," you can start recording. When you're finished, press **8** again. The answering machine will play back your greeting so you can hear it.

### Choosing a greeting

To choose between the two greetings, first make sure the phone is in standby mode. Press the **MSG** soft key on the handset. When the answering machine starts its voice prompts, press **5**. Then press **6** to hear which greeting is currently being used. If you want to use the other greeting, press **6** again. (Pressing **6** switches between the two greetings.)

If you want to delete your greeting, press **6** to play your greeting, and then press **0/4**. (You can't delete the prerecorded greeting.)


## Using the Answering Machine

### Turning On the Answering Machine

To turn your answering machine on and off, go to **Answer Machine**, and select **Answer On/Off**. Choose **On** to turn the answering machine on or **Off** to turn it off.

### Reviewing Messages

When you have a new message, the new message LED on both the handset and the base blink. The LEDs stop blinking when you've listened to all your new messages. The answering machine plays your new messages first. After you play all your new messages, you can then play your old messages. Old messages will be played in the order in which they were received.

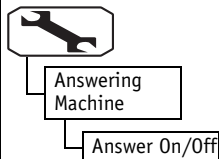



- You can't delete unheard messages. If you try to delete messages before listening to them, the answering machine will beep and say "Please playback all messages."
- If you press  $\ll$  during the first two seconds (or press  $\ll/1$  during the first 4 seconds) of a message, the answering machine goes back to the previous message.

You can review your messages from the base or from the handset:

	From the base	From the handset
Playing your messages	Press $\triangleright/\square$ . The answering machine tells you how many new and old messages you have. It announces the message number, plays the message, then announces the time and date that message was received.	Press the <b>MSG</b> soft key. The display tells you how many new and old messages you have. Press $\triangleright/2$ to play your messages. After playing the message, the answering machine announces the time and date that message was received.
Repeating a message	Press $\ll$ once to repeat to the beginning of the current message. Press $\ll$ repeatedly to go back to a previous message. Press and hold $\ll$ to rewind through the current message.	Press $\ll/1$ once to repeat to the beginning of the current message. Press $\ll/1$ repeatedly to go back to a previous message.
Skipping a message	Press $\gg$ to go to the beginning of the next message. Press and hold $\gg$ to fast forward through the current message.	Press $\gg/3$ to go to the beginning of the next message. Press and hold $\gg/3$ to fast forward through the current message.
Delete a message	While a message is playing, press $\emptyset$ to delete it. The message is permanently deleted.	While a message is playing, press $\emptyset/4$ to delete it. The message is permanently deleted.
Delete all messages	While the phone is in standby, press $\emptyset$ to delete all messages. When the answering machine asks you to confirm, press delete again. All messages are permanently deleted.	-
Stop reviewing messages	Press $\triangleright/\square$ to stop the message playback and return to standby.	Press $\square/5$ to stop the message playback. Press <b>end</b> to exit the message system and return to standby.



## Recording a phone conversation

You can record a phone conversation with your handset. The conversation has to last more than two seconds and less than ten minutes. During a conversation, press the center of the joystick. Select **Call Record** and press the **OK** soft key. The handset sounds a confirmation tone that can be heard by both parties and displays **Call Recording**. When you want to stop recording, press the center of the joystick and select **Call Record** again.

## Screening Calls

You can always screen calls from the base: just let the answering machine answer the call and listen to the caller leave a message. Answer the phone with the handset if you want to talk to the caller.

If you turn on the call screen feature (see page 60), you can also screen calls from the handset. Let the answering machine answer the call, then press the **SCREEN** soft key. If you want to talk to the caller, just press **Ⓛ/flash**, and the answering machine will stop recording.



- Only one handset can screen calls at a time. If another handset is screening the call, you'll just hear a beep when you try to screen the call, too.
- If the recording memory is full, **Unavailable** appears in the display. You can not record a conversation until you clear some messages from the memory.
- Every state has different regulations governing the recording of conversations over the telephone. Make sure to check your local, state and federal laws before using this product to record any telephone conversation in order to determine that your use is in compliance with such laws or guidelines.
- You can not record intercom conversations.



- The system will only playback messages for four minutes and then it returns to the command waiting mode.
- To continue playing your messages, press 0 then 2 again within 15 seconds.
- If you enter an incorrect security code three times, you will hear a beep and the system will return to standby.
- For your convenience, a remote operation card is provided for you to use while away from home (refer to page 92).

## Remote Operation

You can check, play, or delete messages when you are away from home. You can also record, select, or delete your own greeting message. To access your answering machine remotely, you need a touch tone telephone and a two-digit security code (see Setting a Security Code on page 58).

- 1) Call your telephone number and wait for the system to answer. If Toll Saver is enabled, answering machine will answer in 2 rings if you have new messages and 4 messages if you don't. If the answering machine is off, it will answer after about 10 rings and sound a series of beeps.
- 2) During the greeting message (or a series of beeps when the answering machine is off), press **0** and enter your security code within two seconds.
- 3) The answering machine announces the current time and the number of messages stored in memory. You hear "To play incoming messages, press zero-two. For help, press one-zero." Then, you'll hear a beep.

- 4) Enter a command from the following chart within 15 seconds. After the first command, you have two seconds to enter each command.

Command	Function	Command	Function
<b>0</b> then <b>1</b>	Repeat a Message*	<b>0</b> then <b>6</b>	answering machine On
<b>0</b> then <b>2</b>	Play incoming Messages	<b>0</b> then <b>7</b>	Memo Record/Stop**
<b>0</b> then <b>3</b>	Skip a Message	<b>0</b> then <b>8</b>	Greeting Message Record/Stop**
<b>0</b> then <b>4</b>	Delete a Message	<b>0</b> then <b>9</b>	answering machine Off
<b>0</b> then <b>5</b>	Stop Operation	<b>1</b> then <b>0</b>	Help

- \* For the Repeat a Message function, press **0** then **1** within about 2 seconds to repeat the previous message, or press **0** then **1** after about 2 seconds to repeat the current message.
- \*\* The first time you enter the Memo Record or the Greeting Message Record command, the answering machine will start recording. Enter the same command again to stop recording.
- 5) After the command has finished, you hear intermittent beeps indicating that the system is in the command waiting mode. You can enter another command from the chart, or you can hang up to exit the system.
- 6) When you hang up, the answering machine automatically returns to standby.


# Multi-Handset Features

The features in this section require a minimum of two handsets to operate. To add additional handsets to your system, see "Expanding Your Phone" on page 9.

## Text Message

You can chat with another handset using text messages and still be able to receive calls. You can use one of 10 preset messages or write a new message. You can also save 10 custom messages of your own.

To enter text message option, press the **MENU** soft key, and then select Text Message icon.

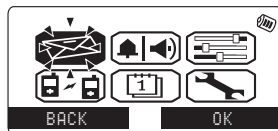

## Sending a New Message

To send a brand new message, go to `New Message`. Enter your message, and press the center of the joystick when you're done. Select the handset you want to send the message to; the display will show `Done` when the message has been sent.

## Sending a Preset Message


To send a preset message, go to **New Message**, and press the **PresetMSG** soft key. Select **Preset Message**. Select the message you want to send from the following list:

- |                       |                               |
|-----------------------|-------------------------------|
| 1. Are you free?      | 6. Are you ready for a break? |
| 2. What's up?         | 7. Happy Birthday!!           |
| 3. I need your help.  | 8. Happy Anniversary!!!       |
| 4. What's for lunch?  | 9. Love You!                  |
| 5. What's for dinner? | 10. See you later alligator!  |

Then, select the handset you want to send the message to; the display will show **Done** when the message has been sent.

## Using Saved Custom Messages

You can save up to 10 custom messages for later use; each message is saved to one of the number keys (**0-9**). To create a custom message, go to **Edit Custom Msg**, and select the number key where you want to store this message. (If you want to edit an existing message, select the number of the existing message.) Enter your message (up to 32 characters, including spaces), and press the center of the joystick when you're done. Once your custom message is saved, you can send it any time you want.

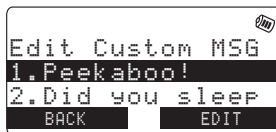

To send your custom message, go **New Message**, and press the **PresetMSG** soft key. Select **Custom Message**. Select the number of the message you want to send. Then, select the handset you want to send the message to; the display will show **Done** when the message has been sent.


### Using the Inbox and Outbox

Your phone stores the last 10 received messages in the **Inbox** and the last 5 sent messages in the **Outbox**. Unread messages have an asterisk (\*) next to them. In both the **Inbox** and the **Outbox**, you can read old messages or delete them. In the **Inbox**, you can also reply to messages or forward them.

### Reading Messages

Go to **Inbox** or **Outbox**. Your phone will list the stored messages by showing the other handset's banner name. (The display will read **No Messages** if the box is empty.) Select the message you want read. You can use the joystick to scroll through long messages.

Once you have the message on the screen, Press the **OPTION** soft key to delete it, forward it, or reply to it:

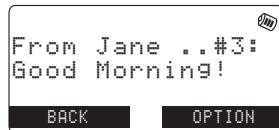

**Delete current message**

Select `Delete Message`. The phone will ask you to confirm; select `Yes`, and the message is deleted.

**Delete all messages**

Select `Delete ALL Msg`. The phone will ask you to confirm; select `Yes`, and the message is deleted.

**Reply to a message**

Select `Reply Message`. Enter the reply message you want to send; press the center of the joystick when you're finished. The display will show `Done` when the message has been sent.

**Forward a message**


Select `Forward Message`. Select the handset you want to forward the message to. The display will show `Done` when the message has been sent.




- If the party is out of range, No Signal appears in the display, and the operation will be canceled.
- While a pair of handsets are in DirectLink Monitor mode, they cannot be used to make or receive calls. Other handsets can still make and receive calls.

## Using DirectLink Mode

In DirectLink Mode, a pair of handsets can function as two-way radios. You can have up to two pairs of handsets in DirectLink Mode at a time. DirectLink Mode does not interfere with the main base's ability to make or receive telephone calls. You must set both handsets to DirectLink Mode to make a directlink call.

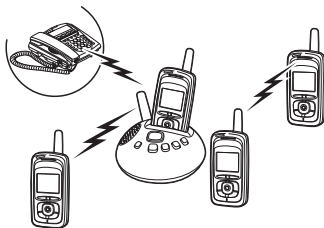

Press the **MENU** soft key, and select the Link Handsets option, then select DirectLink Mode. When the phone displays DirectLink by pressing center/select knob, press the center of the joystick. The phone displays In DirectLink Mode.

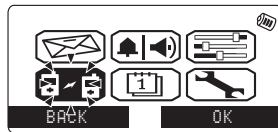


To make a DirectLink call, press the **DirectLink** soft key and select the handset you want to call. To cancel the call, press the **CANCEL** soft key. To answer a DirectLink call, press **(/flash** or **ANSWER** soft key. Press **)** when you want to hang up.

To exit DirectLink mode and be able to receive normal phone calls again, press the **cancel** soft key, and then press **OK** soft key.




## Room/Baby Monitor

This feature allows you to monitor sounds in another room. Place a handset in the room you wish to monitor; it will function as a microphone. A second handset can be used as a remote speaker, allowing you to monitor sounds in the room.

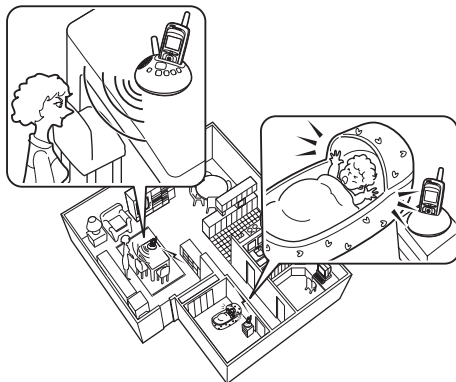

### Using Room/Baby Monitor

Press the **MENU** soft key, and select the Link Handsets option, then select Room Monitor. When the phone displays Listen to, select the handset you want to monitor. Press **↵** when you want to stop monitoring.

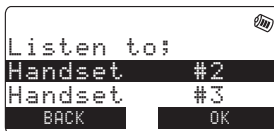

## note

- This feature only works when both handsets are within the range of the base.
- If the party is out of range, No Signal appears in the display, and the operation will be canceled.
- While a pair of handsets are in Room/Baby Monitor mode, they cannot be used to make or receive calls. Other handsets can still make and receive calls.



- If you receive an outside/intercom call or page while selecting the other handset, the operation is canceled.
- If the party does not answer within one minute, the operation is canceled.
- During an intercom call, if you receive a call, you will hear a ringer tone from the ear speaker.

## Intercom

You can use the intercom to talk to another handset without using the phone line. While the phone is in standby mode, press **hold/x'fr/int'com**. Select the handset you want to page. If you select ALL, all other handsets will be paged.

If the handset you're trying to page is busy, the phone displays System busy. If the handset you're trying to page is out of range, the phone displays No Signal. The page is canceled.




## Answering an intercom page

When the handset receives an intercom page, it sounds a tone and shows the ID of the handset that is paging. Pick up the handset and press **flash** or the **ANSWER** soft key to answer the page.

To hang up an intercom page, press **end call** on either handset or return the handset to the cradle.

## Transferring a Call

You can transfer a call from one handset to another. During a call, press **hold/x'fr/int'com**; this will put the call on hold. Select the handset you want to page. If you select All, all other handsets will be paged. To cancel the page and go back to the caller, press **⌘/flash**.

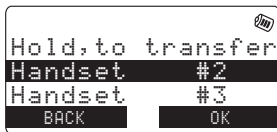

## Answering a transfer page

When the handset receives a transfer page, it sounds a tone and shows the ID of the handset that is paging. Pick up the handset and press **⌘/flash** to answer the page. If you want to accept the transfer and talk to the outside caller, press **⌘/flash**.



- If all handsets are paged, only the first party to answer the page will connect.
- If you do not select a handset within ten seconds, the operation will be canceled.



A replacement Uniden adapter or battery may be purchased by contacting the Uniden Parts Department (800) 554-3988. Hours are from 8:00 a.m. to 5:00 p.m. Central Time, Monday through Friday, or [www.uniden.com](http://www.uniden.com).

## Note on Power Sources

### **Power Failure**

During the period that the power is off you will not be able to make or receive calls with the telephone.

### **Battery replacement and handling**

When the operating time becomes short, even after the battery is recharged, please replace the battery. With normal usage, your battery should last about one year.

### **Warning**

To avoid the risk of personal injury or property damage from fire or electrical shock, use only Uniden AD-830 AC adapters and Uniden BT-0001 battery back with your phone.


#### Caution

- Use only the specified Uniden battery pack (BT-0001).
- Do not remove the batteries from the handset to charge them.
- Never throw the battery into a fire, disassemble them, or heat them.
- Do not remove or damage the battery casing.

## Installing a Replacement Battery

Follow the steps below if you need to replace a battery.

- 1) Press down on the handset battery case cover (use the finger indentation for a better grip) and slide the cover downward to remove.
- 2) Remove the existing battery and unplug the connector from the jack.
- 3) Plug the battery connector (red, white & black wires) into the jack inside the battery compartment. (The connector notches fit into the grooves of the jack only one way). Match the wire colors to the polarity label in the battery compartment, connect the battery and listen for a click to insure connection.

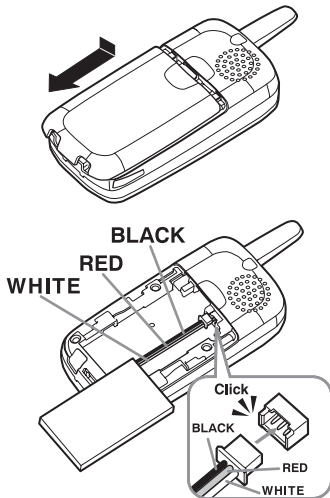


note

- Use only the Uniden (BT-0001) rechargeable battery pack supplied with your cordless telephone.
- If you try to use the phone when the battery case cover is open, you will hear beep and see Please close the battery cover on the display. Close the battery cover tightly.



- Even when the battery pack is not being used, it will gradually discharge over a long period of time.
- For optimum performance, be sure to return the handset to the cradle after each telephone call.
- If the handset is left off of the base, the actual Talk mode duration will be reduced respective to the amount of time the handset is off the cradle.

- 4) Make sure you have a good connection by gently pulling on the battery wires. If the connection is secure, the battery jack will remain in place.
- 5) Place the battery case cover back on the handset and slide it upwards until it clicks into place.

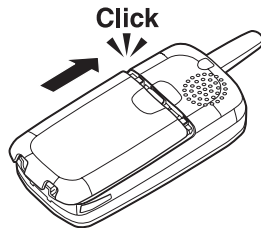


### Low battery alert

When the battery pack is very low, the phone is programmed to eliminate functions in order to save power.

The battery pack needs to be charged when:

- The empty battery icon appears.
- Low Battery appears in the display.


If the phone is in standby mode, none of keys will operate. If you are on a call, complete your conversation as quickly as possible, and return the handset to the cradle.

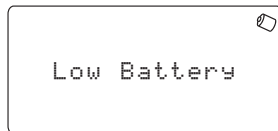

## Cleaning the battery charging contacts

To maintain a good charge, clean the charging contacts on the handset once a month. Dampen a cloth with plain water. Gently rub the damp cloth over the charging contacts until all visible dirt is removed. Dry the contacts thoroughly before returning the handset to the cradle.

**Caution:** Do not use paint thinner, benzene, alcohol, or other chemical products. Doing so may discolor the surface of the telephone and damage the finish.

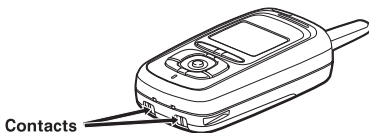

# General Information

The phone complies with FCC Parts 15 and 68. Operating temperature:

0 °C to +50 °C (+32 °F to +122 °F)

## **AC Adapter Information**

AC Adapter part number: AD-830

Input Voltage: 120V AC 60Hz

Output Voltage: 9V DC 400mA

## **Battery Information**

Battery part number: BT-0001

Capacity: 650mAh, 3.7V

Specifications, features, and availability of optional accessories are all subject to change without prior notice.



# Troubleshooting

If your phone is not performing to your expectations, please try these simple steps first. If these steps do not solve your problem, please call our Customer Hotline at 1-800-297-1023 (Mon - Fri 7 am to 7 pm, Sat/Sun/holidays 9 am to 5 pm, CST).

Symptom	Suggestion
The <b>charge</b> LED won't illuminate when the handset is placed in the cradle.	<ul style="list-style-type: none"> <li>• Make sure the AC adapter is plugged into the base or the charger (if you have more than one handset) and wall outlet.</li> <li>• Make sure the handset is properly seated in the cradle.</li> <li>• Make sure the charging contacts on the handset are clean.</li> </ul>
The audio sounds weak.	<ul style="list-style-type: none"> <li>• Move the handset and/or base away from metal objects or appliances and try again.</li> <li>• Make sure that you are not too far from the base.</li> </ul>
Can't make or receive calls.	<ul style="list-style-type: none"> <li>• Make sure that you are not too far from the base.</li> <li>• Make sure the line is not in use. If an out call is already using a line, you cannot use that line to make another outside call.</li> <li>• Check both ends of the base telephone line cord.</li> <li>• Make sure the AC adapter is plugged into the base and wall outlet.</li> <li>• Disconnect the AC adapter for a few minutes, and then reconnect it.</li> <li>• Change the Digital Security Code (see page 13).</li> </ul>

Symptom	Suggestion
The handset doesn't ring or receive a page.	<ul style="list-style-type: none"> <li>• Make sure that you are not too far from the base.</li> <li>• Charge the batteries in the handset for 15-20 hours by placing the handset on the base or charging cradle.</li> <li>• Change the Digital Security Code (see page 13).</li> </ul>
Severe noise interference.	<ul style="list-style-type: none"> <li>• Keep the handset away from microwave ovens, computers, remote control toys, wireless microphones, alarm systems, intercoms, room monitors, fluorescent lights, and electrical appliances.</li> <li>• Move to another location or turn off the source of interference.</li> </ul>
The Caller ID does not display.	<ul style="list-style-type: none"> <li>• The call was placed through a switchboard.</li> <li>• Call your local telephone company to verify your Caller ID service is current. There may be a problem with your Caller ID service.</li> </ul>
You cannot register the handset at the base.	<ul style="list-style-type: none"> <li>• Charge the battery pack for 15-20 hours.</li> <li>• Change the Digital Security Code (see page 13).</li> </ul>
The handset doesn't communicate with other handsets.	<ul style="list-style-type: none"> <li>• Change the Digital Security Code (see page 13).</li> <li>• Make sure that you have registered all handsets.</li> </ul>
An extra handset can't join the conversation.	<ul style="list-style-type: none"> <li>• Make sure there are not 2 handsets already using the conference feature.</li> <li>• Make sure that another handset is not in privacy mode.</li> </ul>
Room Monitor feature does not work.	<ul style="list-style-type: none"> <li>• Make sure to place the handset(s) within the range of the base.</li> </ul>

Symptom	Suggestion
The answering machine does not work.	<ul style="list-style-type: none"> <li>•Make sure the base unit is plugged in.</li> <li>•Make sure that the answering machine is turned on.</li> <li>•Make sure that the message record time is not set to Announce only (see page 59).</li> </ul>
Messages are incomplete.	<ul style="list-style-type: none"> <li>•The incoming messages may be too long. Remind callers to leave a brief message.</li> <li>•The memory maybe full. Delete some or all of the saved message.</li> </ul>
No sound on the base unit or handset speaker during call monitoring or message playback.	<ul style="list-style-type: none"> <li>•Adjust the speaker volume on the base unit or handset.</li> <li>•Make sure the call screen feature is set to on.</li> </ul>
Cannot access remote call-in features from another touchtone phone.	<ul style="list-style-type: none"> <li>•Make sure you are using the correct PIN number.</li> <li>•Make sure that the touch-tone phone you're using can transmit the tone for at least two seconds. If it cannot, you may have to use another phone to access your phone.</li> </ul>
Time stamp cannot be heard.	<ul style="list-style-type: none"> <li>•Make sure you have set the time (see "Setting Day and Time" on page 24).</li> </ul>

## System Reset


### De-register the Handset

- 1) Press and hold **Ⓜ** and **#** for more than 5 seconds. Select Deregister HS.
- 2) Select the handset ID to be de-registered from the list. The phone will ask you to confirm the deregistration. Select **Yes**.



### Replacing the Base Setting

- 1) Press and hold **end** and **#** for more than 5 seconds. Select Replacing Base. Replacing Base appears.
- 2) Select **Yes**.
- 3) You will hear a confirmation tone. The base information will be deleted.

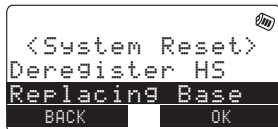

When the base information is deleted, the handset displays Models vary! Charge handset on the base for registration or refer to Owner's Manual.

Re-register the handset to the base (see page 11).



# Liquid Damage

Moisture and liquid can damage your cordless phone. Follow the steps below if your phone gets wet:

Case	Action
If the handset or base is exposed to moisture or liquid, but only the exterior plastic housing is affected.	Wipe off the liquid, and use as normal.
If moisture or liquid has entered the plastic-housing (i.e. liquid can be heard in the phone or liquid has entered the handset battery compartment or vent openings on the base).	<p><b>Handset:</b></p> <ol style="list-style-type: none"><li>1) Remove the battery cover and leave it off for ventilation.</li><li>2) Disconnect the battery pack. Leave the battery cover off and the battery pack disconnected for at least 3 days.</li><li>3) Once the handset is completely dry, reconnect the battery pack and the battery cover.</li><li>4) Recharge the handset's battery pack for 20 hours before using.</li></ol> <p><b>Base:</b></p> <ol style="list-style-type: none"><li>1) Disconnect the AC adapter from the base, cutting off electrical power.</li><li>2) Disconnect the telephone cord from the base.</li><li>3) Let dry for at least 3 days.</li></ol> <p><b>IMPORTANT:</b> You must <b>unplug the telephone line while recharging the battery packs</b> to avoid charge interruption.</p> <p><b>CAUTION:</b> DO NOT use a microwave oven to speed up the drying process. This will cause permanent damage to the handset, base and the microwave oven.</p> <p>After following these steps, if your cordless telephone does not work, please call our Customer Service Hotline at 1-800-297-1023.</p>

## Precautions!

Before you read anything else, please observe the following:

### Warning!

Uniden America Corporation DOES NOT represent this unit to be waterproof. To reduce the risk of fire, electrical shock, or damage to the unit, DO NOT expose this unit to rain or moisture.

## Rechargeable Lithium Ion Battery

### Warning

- This equipment contains a rechargeable Lithium Ion battery.
- The rechargeable Lithium Ion battery contained in this equipment may explode if disposed of in a fire.
- Do not short-circuit the battery.
- Do not charge the rechargeable Lithium Ion battery used in this equipment in any charger other than the one designed to charge this battery as specified in the owner's manual. Using another charger may damage the battery or cause the battery to explode.

## Rechargeable Lithium Ion Batteries Must Be Recycled or Disposed of Properly



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Uniden works to reduce lead content in our PVC coated cords in our products and accessories.

### Warning!

The cords on this product and/or accessories contain lead, a chemical known to the State of California to cause birth defects or other reproductive harm. **Wash hands after handling.**

## Important Safety Instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible battery disposal instructions.
5. Do not disassemble any component of this product.

## SAVE THESE INSTRUCTIONS

### CAUTION

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions. Do not open or mutilate the battery, and disconnect the battery before shipping this product.

## The FCC Wants You To Know

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company. An applicable Universal Service Order Codes (USOC) certification for the jacks used in this equipment is provided (i.e., RJ11C) in the packaging with each piece of approved terminal equipment.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

Please follow instructions for repairing, if any (e.g. battery replacement section); otherwise do not substitute or repair any parts of the device except as specified in this manual.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

This equipment is hearing aid compatible. Should you experience trouble with this equipment, please contact Uniden customer service at 800-297-1023. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

NOTICE: According to telephone company reports, AC electrical surges, typically resulting from lightning strikes, are very destructive to telephone equipment connected to AC power sources. To minimize damage from these types of surges, a surge arrester is recommended.

Changes or modifications to this product not expressly approved by Uniden, or operation of this product in any way other than as detailed by the owner's manual, could void your authority to operate this product.

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Privacy of communications, may not be ensured when using this phone.

To insure the safety of users, the FCC has established criteria for the amount of radio frequency energy various products may produce depending on their intended usage. This product has been tested and found to comply with the FCC's exposure criteria. For body worn operation, the FCC RF exposure guidelines were also met when used with the Uniden accessories supplied or designed for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines and should be avoided.

## Radio Interference

Radio interference may occasionally cause buzzing and humming in your cordless handset, or clicking noises in the base. This interference is caused by external sources such as TV, refrigerator, vacuum cleaner, fluorescent lighting, or electrical storm. Your unit is NOT DEFECTIVE. If these noises continue and are too distracting, please check around your home to see what appliances may be causing the problem. In addition, we recommend that the base not be plugged into a circuit that also powers a major appliance because of the potential for interference. Be certain that the antenna on the unit is fully extended when needed.

In the unlikely event that you consistently hear other voices or distracting transmissions on your phone, you may be receiving radio signals from another cordless telephone or other source of interference. If you cannot eliminate this type of interference, you need to change to a different channel.

Finally, it should be noted that some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

## Cordless Telephone Privacy

Cordless telephones are radio devices. Communications between the handset and base of your cordless telephone are accomplished by means of radio waves which are broadcast over the open airways.

Because of the inherent physical properties of radio waves, your communications can be received by radio receiving devices other than your own cordless telephone unit. Consequently, any communications using your cordless telephone may not be private.

## One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.

WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden")  
ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit. THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so to the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from the Product and separately secure the battery in its own separate packaging within the shipping carton. The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

### Uniden America Corporation

Parts and Service Division  
4700 Amon Carter Blvd.  
Fort Worth, TX 76155

(800) 297-1023, 7:00 a.m. to 7:00 p.m. Monday through Friday; 9:00 a.m. through 5:00 p.m., Saturday, Sunday and Holidays (except Thanksgiving and Christmas); all Central Time,

# I.C. Notice

## TERMINAL EQUIPMENT

**NOTICE:** This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications.

This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

**NOTICE:** The Ringer Equivalence Number (REN) for this terminal equipment is marked on the equipment itself. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

## RADIO EQUIPMENT

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. "Privacy of communications may not be ensured when using this telephone".



# Index

## A

Animations . . . . .	28
Answering Machine	
Answering Mode . . . . .	57
Call screen . . . . .	60
Message alert . . . . .	60
Security code . . . . .	58
Setting up menu . . . . .	58
Anykey Answer . . . . .	22
Area Code . . . . .	25
Audio Tone . . . . .	40
AutoTalk . . . . .	21

## B, C

Backlight Color . . . . .	31
Banner . . . . .	30
Battery	
Replacement . . . . .	76
Calendar . . . . .	44
Call screen . . . . .	60
Call transfer feature . . . . .	74
Caller ID	
Call Waiting . . . . .	35
CIDCW . . . . .	55
CWDX . . . . .	35
Clarity Booster . . . . .	42
Conference . . . . .	36

Custom Message . . . . .	68
Customize Handset . . . . .	26

## D

Date & time . . . . .	24
Delete ringer . . . . .	28
De-register the Handset . . . . .	83
Dial mode . . . . .	25
Digital security code . . . . .	13
DirectLink . . . . .	71
Distinctive ID . . . . .	21

## E, F, G

Earpiece volume . . . . .	38
Expanding your phone . . . . .	9
Find handset . . . . .	43
General information . . . . .	79
Global set . . . . .	23

## H

Handset setup . . . . .	21
Hands-free conversation . . . . .	33
Hanging up . . . . .	34
Headset installation . . . . .	14
Hold . . . . .	36
Holster . . . . .	14

## I, J, K

I.C. notice . . . . .	87
Important safety instructions . . . . .	85

In box/Out box . . . . .	69
Intercom . . . . .	73
Key touch tone . . . . .	22
Keypad lock . . . . .	30

## L

Language . . . . .	22, 60
LCD contrast . . . . .	23
Link handsets . . . . .	71, 72
Liquid damage . . . . .	84
Low battery . . . . .	77

## M, N, O

Making a call . . . . .	32
Message Alert . . . . .	60
Mute	
Handset ringer . . . . .	41
Microphone . . . . .	41
Out going greeting . . . . .	61
Choosing . . . . .	61
Recording . . . . .	61
Out of range . . . . .	34

## P, Q

Phonebook	
Capacity . . . . .	53
Copying entries . . . . .	52
Group . . . . .	50
Making calls . . . . .	54
Name . . . . .	47
Number . . . . .	47

Sort order . . . . .	53
Speed dial . . . . .	50
Unique color . . . . .	49
Unique display . . . . .	49
Unique ring . . . . .	48
Power failure . . . . .	75
Precautions . . . . .	85
Preset message . . . . .	68
Privacy mode . . . . .	22

## **R**

Receiving a call . . . . .	33
Record ringer . . . . .	27
Record Time . . . . .	59
Recording conversation . . . . .	64
Redialing a call . . . . .	37
Register the handset . . . . .	11
Reminder . . . . .	44
Remote operation . . . . .	65
Replacement battery . . . . .	76
Reviewing message . . . . .	62
Ring options . . . . .	26
Ring time . . . . .	59
Ringer tone . . . . .	26
Ringer volume	
Base . . . . .	38
Handset . . . . .	39
Room/baby monitor . . . . .	72

## **S**

Setting up	
Answering Machine . . . . .	58
base unit . . . . .	8
Telephone Line . . . . .	8
Soft Key . . . . .	16
Speaker phone . . . . .	33
Speaker volume	
Base . . . . .	38
Handset . . . . .	40
Storing a caller ID or redial number . . . . .	51
System Setup . . . . .	21

## **T, U, V**

Text message . . . . .	67
In box/Out box . . . . .	69
Themes . . . . .	29
Tone dial . . . . .	41
Transferring a call . . . . .	74
Troubleshooting . . . . .	80

## **W, X, Y, Z**

Wall paper . . . . .	29
Warranty . . . . .	86

# Memo

# Memo

# Remote Operation Card

CUT

## REMOTE OPERATION CARD

### Uniden®

#### Remote access away from home

1. Call your phone number from a touch-tone phone.
2. During the outgoing message, press 0 and enter your PIN code. The answering system announces the number of messages stored in memory and the voice prompts.
3. To quit, hang up the phone.

#### Turn on the answering system remotely

1. Call your phone and let it ring 10 times until you hear a beep.
2. Press 0 and then enter your PIN code.
3. Press 0 then 5 to stop the announcement.
4. Press 0 then 6 to turn the answering system on.

CUT

## REMOTE OPERATION CARD

### Uniden®

#### Remote access away from home

1. Call your phone number from a touch-tone phone.
2. During the outgoing message, press 0 and enter your PIN code. The answering system announces the number of messages stored in memory and the voice prompts.
3. To quit, hang up the phone.

#### Turn on the answering system remotely

1. Call your phone and let it ring 10 times until you hear a beep.
2. Press 0 and then enter your PIN code.
3. Press 0 then 5 to stop the announcement.
4. Press 0 then 6 to turn the answering system on.

CUT

## REMOTE OPERATION CARD

### Uniden®

#### Remote access away from home

1. Call your phone number from a touch-tone phone.
2. During the outgoing message, press 0 and enter your PIN code. The answering system announces the number of messages stored in memory and the voice prompts.
3. To quit, hang up the phone.

#### Turn on the answering system remotely

1. Call your phone and let it ring 10 times until you hear a beep.
2. Press 0 and then enter your PIN code.
3. Press 0 then 5 to stop the announcement.
4. Press 0 then 6 to turn the answering system on.

CUT

## REMOTE OPERATION CARD

### Uniden®

#### Remote access away from home

1. Call your phone number from a touch-tone phone.
2. During the outgoing message, press 0 and enter your PIN code. The answering system announces the number of messages stored in memory and the voice prompts.
3. To quit, hang up the phone.

#### Turn on the answering system remotely

1. Call your phone and let it ring 10 times until you hear a beep.
2. Press 0 and then enter your PIN code.
3. Press 0 then 5 to stop the announcement.
4. Press 0 then 6 to turn the answering system on.

CUT

Task	Key
Repeat a Message	0 1
Playing incoming Messages	0 2 abc
Skipping a Message	0 3 def
Deleting a Message	0 4 ghi
Stop Operation	0 5 jkl
Answering System On	0 6 mno
Memo Record/Stop	0 7 pqrs
Greeting Message Record/Stop	0 8 tuvw
Answer System Off	0 9 wxyz
Help Guidance	1 0 open

CUT

Task	Key
Repeat a Message	0 1
Playing incoming Messages	0 2 abc
Skipping a Message	0 3 def
Deleting a Message	0 4 ghi
Stop Operation	0 5 jkl
Answering System On	0 6 mno
Memo Record/Stop	0 7 pqrs
Greeting Message Record/Stop	0 8 tuvw
Answer System Off	0 9 wxyz
Help Guidance	1 0 open

CUT

Task	Key
Repeat a Message	0 1
Playing incoming Messages	0 2 abc
Skipping a Message	0 3 def
Deleting a Message	0 4 ghi
Stop Operation	0 5 jkl
Answering System On	0 6 mno
Memo Record/Stop	0 7 pqrs
Greeting Message Record/Stop	0 8 tuvw
Answer System Off	0 9 wxyz
Help Guidance	1 0 open

CUT

Task	Key
Repeat a Message	0 1
Playing incoming Messages	0 2 abc
Skipping a Message	0 3 def
Deleting a Message	0 4 ghi
Stop Operation	0 5 jkl
Answering System On	0 6 mno
Memo Record/Stop	0 7 pqrs
Greeting Message Record/Stop	0 8 tuvw
Answer System Off	0 9 wxyz
Help Guidance	1 0 open

## At Uniden, we'll take care of you!

Thank you for purchasing a Uniden product. If you have any questions or problems, **please do not return this product to the place of purchase.**



### Having Trouble?

Our customer care specialists are here to help you! Call our Customer Hotline at **1-800-297-1023** Mon - Fri 7 am to 7 pm, Sat/Sun/holidays 9 am to 5 pm, CST, or visit our website at [www.uniden.com](http://www.uniden.com).



### Need a part?

To order headsets, additional handsets, replacement batteries or other accessories, call our **Parts Department at 1-800-554-3988**, Mon - Fri 8 am to 5pm, CST or visit our website at [www.uniden.com](http://www.uniden.com).



### Help for our Hearing Impaired Customers

If you need special assistance or have questions on the accessibility features of this product, please call **1-800-297-9314 (voice) or 1-800-874-9314 (TTY)**

# Uniden®

May be covered under one or more of the following U.S. patents:

4,523,058	4,595,795	4,797,916	5,381,460	5,426,690	5,434,905
5,491,745	5,493,605	5,533,010	5,574,727	5,581,598	5,650,790
5,660,269	5,661,780	5,663,981	5,671,248	5,696,471	5,717,312
5,732,355	5,754,407	5,758,289	5,768,345	5,787,356	5,794,152
5,801,466	5,825,161	5,864,619	5,893,034	5,912,968	5,915,227
5,929,598	5,930,720	5,960,358	5,987,330	6,044,281	6,070,082
6,125,277	6,253,088	6,314,278	6,418,209	6,618,015	6,671,315
6,714,630					

FOR  
ACCESSORIES,  
GO ONLINE @  
[WWW.UNIDEN.COM](http://WWW.UNIDEN.COM)

**REGISTER ONLINE TODAY!**  
**THANK YOU FOR BUYING A UNIDEN PRODUCT.**

A World Without Wires | **Uniden**<sup>®</sup>

©2004 Uniden America Corporation, Fort Worth, Texas. Contains additional foreign articles. Custom manufactured in China.

UPZZ01357BZ