



AX565 USER GUIDE



## AX565 USER GUIDE

Please read this manual carefully before operating your mobile phone. Retain it for future reference.

P/N : MMBB0265701 (1.0) 

LG Electronics Inc.



## AX565 MANUAL DEL USUARIO

Lea este manual cuidadosamente antes de utilizar su teléfono. Guárdelo para consultarlo en el futuro.



*Copyright ©2008 LG Electronics, Inc. All rights reserved.  
LG and the LG logo are registered trademarks of LG  
Group and its related entities. All other trademarks are the  
property of their respective owners.*

# Important Safety Precautions

Read these instructions. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

**WARNING!** *Violation of the instructions may cause serious injury or death.*



1. Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.



2. Never place your phone in a microwave oven as it will cause the battery to explode.
3. Never store your phone in temperatures less than  $-4^{\circ}\text{F}$  or greater than  $122^{\circ}\text{F}$ .
4. Do not dispose of your battery by fire or with hazardous or flammable materials.



5. When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is deployed, you may be seriously injured.



6. Do not use a hand-held phone while driving.
7. Do not use the phone in areas where its use is prohibited. (For example: aircraft)

# Important Safety Precautions



1. Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.



2. Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. This could cause a fire.



3. Do not drop, strike, or shake your phone severely. It may harm the internal circuit boards of the phone.

4. Do not use your phone in high explosive areas as the phone may generate sparks.



5. Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.



6. Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause electric shock or fire.

7. Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.



8. Do not disassemble the phone.



1. Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
2. Do not hold or let the antenna come in contact with your body during a call.



3. Make sure that no sharp-edged items such as animal's teeth or nails, come into contact with the battery. This could cause a fire.
4. Store the battery out of reach of children.



5. Be careful that children do not swallow any parts (such as rubber plugs, earphone, connection parts of the phone, etc.) This could cause asphyxiation or suffocation resulting in serious injury or death.



6. Unplug the power cord and charger during lightning storms to avoid electric shock or fire.



7. Only use the batteries and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
8. Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.



9. Your service provider programs one or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

# Table of Contents

<b>Important Safety Precautions</b>	<b>1</b>	Turning the Phone Off	19
<b>Table of Contents</b>	<b>4</b>	Signal Strength	19
<b>Welcome</b>	<b>9</b>	Screen Icons	20
<b>Technical Details</b>	<b>10</b>	Making Calls	20
FCC RF Exposure Information	12	Correcting Dialing Mistakes	20
<b>Phone Overview</b>	<b>14</b>	Redialing Calls	21
<b>Menus Overview</b>	<b>16</b>	Receiving Calls	21
<b>Getting Started with Your Phone</b>	<b>18</b>	<b>Quick Access to Convenient Features</b>	<b>22</b>
The Battery	18	Lock Mode	22
Installing the Battery	18	Mute Function	22
Removing the Battery	18	Volume Quick Adjustment	22
Charging the Battery	18	Call Waiting	22
Battery Charge Level	19	Caller ID	23
Turning the Phone On and Off	19	Speed Dialing	23
Turning the Phone On	19	<b>Entering and Editing Information</b>	<b>24</b>
		Text Input	24
		Key Functions	24

---

<b>Contacts in Your Phone's Memory</b>	<b>25</b>
The Basics of Storing Contacts Entries	25
Phone Numbers With Pauses	25
Storing a Number with Pauses	26
Adding a Pause to an Existing Number	26
Searching Your Phone's Memory	27
Scrolling Through Your Contacts	27
Making a Call From Your Phone's Memory	28
<b>Using Phone Menus</b>	<b>30</b>
<b>Messaging</b>	<b>30</b>
1. New Text Message	30
2. New Picture Message	32
3. Inbox	34
4. Sent	35
5. Drafts	37
6. Voicemail	37
7. Templates	38
8. Settings	38
9. Delete All	40
<b>Access Shop</b>	<b>41</b>
1. Access Apps	41
2. Access Info	42
<b>Access Web</b>	<b>43</b>
1. Start Browser	43
2. Web Messages	46
3. Web Settings	46
<b>Multimedia</b>	<b>46</b>
1. Take Photo	46
2. Record Video	47
3. Record Voice	48
4. Images	49
5. Videos	49
6. Audios	50
7. Shuffle	51

---

# Table of Contents

<b>Contacts</b>	<b>52</b>	<b>3. Alarm Clock</b>	<b>62</b>
1. New Contact	52	<b>4. Calendar</b>	<b>62</b>
2. Contact List	52	<b>5. Ez Tip Calc</b>	<b>63</b>
3. My Circle	53	<b>6. Notepad</b>	<b>63</b>
4. Groups	54	<b>7. Calculator</b>	<b>64</b>
5. Speed Dials	54	<b>8. World Clock</b>	<b>64</b>
6. My Name Card	55	<b>9. Stopwatch</b>	<b>65</b>
		<b>0. Unit Converter</b>	<b>65</b>
<b>Recent Calls</b>	<b>55</b>	<b>Settings</b>	<b>65</b>
1. Missed Calls	55	<b>1. Sound</b>	<b>65</b>
2. Received Calls	56	1.1 Ringer	65
3. Dialed Calls	56	1.2 Volume	66
4. Data	56	1.3 Message Alerts	66
5. All Calls	56	1.4 Alert Type	66
6. Call Timer	56	1.5 Service Alerts	67
7. Data Counter	57	1.6 Power On/Off Tone	67
		1.7 Flip Tone	67
<b>Music</b>	<b>57</b>	<b>2. Display</b>	<b>68</b>
		2.1 Wallpaper	68
<b>Tools</b>	<b>61</b>	2.2 Banner	69
1. Voice Command	61	2.3 Backlight	69
2. My Menu	61		



2.4 Menu Style	69	5.2 Power	78
2.5 Languages	70	5.3 My Visibility	78
2.6 Clocks & Calendar	70	5.4 My Bluetooth Name	78
2.7 Font Settings	70	5.5 My Bluetooth Info	78
2.8 Color Schemes	71	<b>6. USB Setting</b>	<b>79</b>
<b>3. Security</b>	<b>71</b>	<b>7. System</b>	<b>81</b>
3.1 Lock Phone	71	7.1 Network	81
3.2 Restrict Calls	72	7.2 Location	82
3.3 Emergency #s	72	<b>8. Memory</b>	<b>83</b>
3.4 Change Lock Code	73	<b>9. Touch Key Vibrate</b>	<b>83</b>
3.5 Reset Default	73	<b>0. Software Update</b>	<b>83</b>
<b>4. Call Settings</b>	<b>74</b>	<b>*. Phone Info</b>	<b>83</b>
4.1 Answer Options	74	<hr/>	
4.2 Auto Retry	74	<b>Safety</b>	<b>84</b>
4.3 One-Touch Dial	74	<b>TIA Safety Information</b>	<b>84</b>
4.4 Voice Privacy	75	Exposure to Radio Frequency Signal	84
4.5 Auto Volume	75	Antenna Care	84
4.6 Airplane Mode	75	Phone Operation	85
4.7 TTY Mode	76	Tips on Efficient Operation	85
<b>5. Bluetooth®</b>	<b>76</b>	Driving	85
5.1 Paired Devices	77	Electronic Devices	85

# Table of Contents

Pacemakers	85	Avoiding hearing damage	93
Persons with pacemakers:	86	Using headsets safely	93
Hearing Aids	86	<b>FDA Consumer Update</b>	<b>94</b>
Other Medical Devices	86	<b>10 Driver Safety Tips</b>	<b>104</b>
Health Care Facilities	86	<b>Consumer Information on SAR 108</b>	
Vehicles	87	<b>FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices</b>	<b>111</b>
Posted Facilities	87		
Aircraft	87		
Blasting Areas	87		
Potentially Explosive Atmosphere	87	<b>Accessories</b>	<b>114</b>
For Vehicles Equipped with an Air Bag	88		
<b>Safety Information</b>	<b>88</b>	<b>Limited Warranty Statement</b>	<b>115</b>
Charger and Adapter Safety	88		
Battery Information and Care	89	<b>Index</b>	<b>119</b>
Explosion, Shock, and Fire Hazards	89		
General Notice	90		
<b>Warning! Important safety information</b>	<b>92</b>		
Avoiding hearing damage	92		
Using your phone safely	92		

Some content in this user guide may differ from your phone depending on the phone software. Features and specifications are subject to change without prior notice.

# Welcome

Thank you for choosing the AX565 cellular phone designed to operate with the latest digital mobile communication technology, Code Division Multiple Access (CDMA). Along with the many advanced features of the CDMA system, such as greatly enhanced voice clarity, this compact phone offers:

- Celltop capability.
- Music capability and microSD™ card slot.
- Significantly enhanced voice clarity.
- Slim and sleek design with internal antenna (Internal antenna described as antenna throughout this user guide).
- Large, easy-to-read, 9-line backlit LCD with status icons.
- Paging, messaging, voice mail, and caller ID.
- 24-key keypad.
- Speakerphone feature.
- Menu-driven interface with prompts for easy operation and configuration.
- Any key answer, auto answer, auto retry, one-touch and speed dialing with 99 memory locations.
- Bilingual (English and Spanish) capabilities.
- Bluetooth® wireless technology.

## Note

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.

# Technical Details

## Important Information

This user's guide provides important information on the use and operation of your phone. Please read all the information carefully prior to using the phone for the best performance and to prevent any damage to or misuse of the phone. Any unapproved changes or modifications will void your warranty.

## FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

## Technical Details

The AX565 is an all digital phone that operates on both Code Division Multiple Access (CDMA) frequencies: Cellular services at 800 MHz and Personal Communication Services (PCS) at 1.9 GHz.

CDMA technology uses a feature called DSSS (Direct Sequence Spread Spectrum) that enables the phone to keep communication from being crossed and to use one frequency channel by multiple users in the same specific area. This results in a 10-fold capacity increase when compared with analog mode. In addition, features such as soft / softer handoff, hard handoff, and dynamic RF power control technologies combine to reduce call interruptions.

The Cellular and PCS CDMA networks consist of MSO (Mobile Switching Office), BSC (Base Station Controller), BTS (Base Station Transmission System), and MS (Mobile Station).

\* TSB-74: Protocol between an IS-95A system and ANSI J-STD-008

Its battery life is twice as long as IS-95. High-speed data

transmission is also possible.

The following tab lists some major CDMA standards.

CDMA Standard	Designator	Description
<b>Basic Air Interface</b>	TIA/EIA-95A TSB-74 ANSI J-STD-008 TIA/EIA-IS2000	CDMA Dual-Mode Air Interface 14.4kbps radio link protocol and inter-band operations IS-95 adapted for PCS frequency band CDMA2000 1xRTT Air Interface
<b>Network</b>	TIA/EIA/IS-634 TIA/EIA/IS/651 TIA/EIA/IS-41 -C TIA/EIA/IS-124	MAS-BS PCSC-RS Intersystem operations Non-signaling data comm.
<b>Service</b>	TIA/EIA/IS-96-B TIA/EIA/IS-637 TIA/EIA/IS-657 IS-801 TIA/EIA/IS-707-A	Speech CODEC Short Message Service Packet Data Position Determination Service (gpsOne) High Speed Packet Data
<b>1x EV-DO Related interface</b>	TIA/EIA/IS-856 TIA/EIA/IS-878  TIA/EIA/IS-866  TIA/EIA/IS-890	CDMA2000 High Rate Packet Data Air Interface  1xEV-DO Inter-Operability Specification for CDMA2000 Access Network Interfaces  Recommended Minimum Performance Standards for CDMA2000 High Rate Packet Data Access Terminal Test Application Specification (TAS) for High Rate Packet Data Air Interface

# Technical Details

## FCC RF Exposure Information

**WARNING!** Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to Radio Frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

## Bodily Contact During Operation

This device was tested for typical use with the back of the phone kept 0.79 inches (2.0 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Avoid the use of accessories that cannot maintain 0.79 inches (2.0 cm) distance between the user's body and the back of the phone and have not been tested for compliance with FCC RF exposure limits.

## Vehicle-Mounted the External Antenna

### (Optional, if available.)

To satisfy FCC RF exposure requirements, keep 8 inches (20 cm) between the user / bystander and vehicle-mounted the external antenna. For more information about RF exposure, visit the FCC website at [www.fcc.gov](http://www.fcc.gov).

## FCC Notice and Cautions

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1)

This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that causes undesired operation.

Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment. Use only the supplied antenna. Use of unauthorized antennas (or modifications to the antenna) could impair call quality, damage the phone, void your warranty and/or violate FCC regulations.

Don't use the phone with a damaged antenna. A damaged antenna could cause a minor skin burn. Contact your local dealer for a replacement antenna.

# Phone Overview



1. **Earpiece** Lets you hear the caller.
2. **Flip** Open to answer an incoming call and close to end the call.
3. **LCD Screen** Displays messages and indicator icons. When the phone is turned on, Power Save mode automatically dims the screen and then darkens it if no keys are pressed.
4. **Left Soft Key** Use to display the function setting menu.
5. **Speakerphone Key** Use to turn Speaker On or Off.
6. **SEND Key** Use to place or answer calls.
7. **Alphanumeric Keypad** Use to enter numbers and characters and select menu items.
8. **Lock Mode Key** Use to lock the phone (from standby mode press and hold for about 3 seconds).
9. **Navigation Key** Use for quick access to Contact List, Music Player/ Ringers, Browser and Access Shop.
10. **Right Soft Key** Use to access Messaging.
11. **Menu/OK Key** Selects the function displayed at the bottom of the LCD between the Left and Right Soft Key functions.
12. **Voice Command Key** Use to activate Voice Command in standby mode.
13. **PWR/END Key** Use to turn the power on/off and to end a call. Also returns to the main menu display screen.
14. **BACK Key** Deletes single spaces or characters with a quick press, but press and hold to delete entire words. Will also back you out of menus, one level at a time.
15. **Access Search Key** Use to access Access Search (from Standby Mode press and hold for about 3 seconds).





1. **Side Keys** Use to adjust the ringer volume in standby mode and the earpiece volume during a call.
2. **Charger Port** Connects the phone to the battery charger or other available accessories.
3. **Side Camera Key** Use for quick access to Camera function.
4. **Music Shortcut Key** Activates Music Player.
5. **microSD™ card slot** Insert microSD card for external memory. Use LG approved microSD card.
6. **Earphone Jack** Allows the use of a headset to hear caller's voice.
7. **Camera Lens** Use to take photos or record video. Keep it clean for optimal photo quality.
8. **Music Touch Keys** Use to control music while playing it after activating the Music shortcut key on the right side of your phone.

# Menus Overview

## Messaging

1. New Text Message
2. New Picture Message
3. Inbox
4. Sent
5. Drafts
6. Voicemail
7. Templates
8. Settings
  1. All Messages
  2. Text Message
  3. Picture Message
  4. Edit Voicemail#
9. Delete All
  1. Delete Inbox
  2. Delete Sent
  3. Delete Drafts
  4. Delete All Messages

## Access Shop

1. Access Apps
2. Access Info

## Access Web

1. Start Browser
2. Web Messages
3. Web Settings

## Multimedia

1. Take Photo
2. Record Video
3. Record Voice
4. Images
5. Videos
6. Audios
7. Shuffle

## Contacts

1. New Contact
2. Contact List
3. My Circle
4. Groups
5. Speed Dials
6. My Name Card

## Recent Calls

1. Missed Calls
2. Received Calls

## 3. Dialed Calls

4. Data
5. All Calls
6. Call Timer
  1. Last Call
  2. Home Calls
  3. Roam Calls
  4. All Calls
7. Data Counter
  1. Received Data
  2. Sent Data
  3. All Data

## Music

1. All Songs
2. Playlists
3. Recently Played
4. Artists
5. Genres
6. Albums
7. Music Transmitter

## Tools

1. Voice Command
2. My Menu

3. Alarm Clock
4. Calendar
5. Ez Tip Calc
6. Notepad
7. Calculator
8. World Clock
9. Stopwatch
0. Unit Converter


## Settings

1. Sound
  1. Ringer
  2. Volume
  3. Message Alerts
  4. Alert Type
  5. Service Alerts
  6. Power On/Off Tone
  7. Flip Tone
2. Display
  1. Wallpaper
  2. Banner
  3. Backlight
  4. Menu Style
  5. Languages

6. Clocks & Calendar
  7. Font Settings
  8. Color Schemes
3. Security
  1. Lock Phone
  2. Restrict Calls
  3. Emergency #s
  4. Change Lock Code
  5. Reset Default
4. Call Settings
  1. Answer Options
  2. Auto Retry
  3. One-Touch Dial
  4. Voice Privacy
  5. Auto Volume
  6. Airplane Mode
  7. TTY Mode
5. Bluetooth
  1. Paired Devices
  2. Power
  3. My Visibility
  4. Bluetooth Name
  5. Bluetooth Info

6. USB Setting
7. System
8. Memory
  1. Save Options
  2. Phone Memory
  3. Card Memory
9. Touch Key Vibrate
0. Software Update
  - \*. Phone Info

## Menu Access

Press  **Menu** to access nine phone menus. There are two methods of accessing menus and submenus:

- Use the navigation key to highlight and select, or
- Press the number key that corresponds with the menu (or submenu).

# Getting Started with Your Phone

## The Battery

### Note

It is important to fully charge the battery before initial use of the phone.

The phone comes with a rechargeable battery. Keep the battery charged while not in use in order to maximize talk and standby time. The battery charge level is shown at the top of the LCD screen.

### Installing the Battery

Insert the bottom of the battery into the opening on the back of the phone, then push the battery down until the latch clicks.

### Removing the Battery

Move the battery latch to the left side and lift the battery from the battery compartment.

## Charging the Battery

To use the charger provided with your phone:

*Warning! Use only the charger provided with the phone. Using any charger other than the one included with the AX565 may damage your phone or battery.*

1. Plug the end of the adapter into the phone's charger port and the other end into an electrical outlet.
2. The charge time varies depending upon the battery level.



**NOTICE** Triangle symbol should face up.




## Battery Charge Level


The battery charge level is shown at the top right of the LCD screen. When the battery charge level becomes low, the low battery sensor alerts you in three ways: sounding an audible tone, blinking the battery icon, and displaying a warning message. If the battery charge level becomes exceedingly low, the phone automatically switches off and any function in progress is not saved.

## Turning the Phone On and Off


### Turning the Phone On

1. Install a charged battery or connect the phone to an external power source.
2. Press  for about 3 seconds until the LCD screen lights up.

### Turning the Phone Off

1. Press and hold  until the display turns off.

## Signal Strength

Call quality depends on the signal strength in your area. The signal strength is indicated on the screen as the number of bars next to the signal strength icon  -- the more bars, the better the signal strength. If the signal quality is poor, move to an open area. If you are in a building, the reception may be better near a window.

### Note



The call quality is also affected by the places where you are and weather conditions with RF emission changes.

# Getting Started with Your Phone

## Screen Icons




To see the icon glossary, go to **Menu** -> **Settings** -> **Phone Info** -> **Icon Glossary** on your phone.

## Making Calls

1. Make sure the phone is turned on. If not, press  for about 3 seconds.
2. Enter the phone number (include the area code if needed).
3. Press .



If the phone is locked, enter the lock code (the last 4 digits of your phone number by default and it's changeable in Settings menu).

## Note


If the phone is restricted, you can only dial phone numbers saved in the Emergency Numbers or your Contact List. To turn off this function: **Menu** ->  **Settings** ->  **Security** -> **Lock Code** -> **OK** ->  **Restrict Calls** -> **None** -> **OK**

4. Press  to end the call.


## Correcting Dialing Mistakes

If you make a mistake while dialing a number, press  once to erase the last digit entered, or hold down  for at least 2 seconds to go to the standby mode.

## Redialing Calls



1. Press  twice to redial the last number you dialed. The last 40 numbers (missed, received, dialed) are stored in the call history list and you can also select any of these to redial.


## Receiving Calls

1. When the phone rings or vibrates, press  to answer.

### Tip

To choose answer options: **Menu** ->

 **Settings** ->  **Call**



**Settings** ->  **Answer Options.**

Choose from the following options:

**Flip Open/ Any Key/ Send Key**

**Only/ Auto Answer**

### Note

If you press  or  (the side keys), while the phone is ringing, the ringing or vibration is muted for that call.

2. Press  twice to end the call.

# Quick Access to Convenient Features

## Lock Mode

Sets your phone to require a 4-digit password in order to use the phone.

### Note

Until you change it, the default lock code/password is the last 4 digits of your phone number.

To quickly lock your phone press



for three seconds. To

cancel, press Left Soft Key

Unlock, enter the password and

press .

## Mute Function

The Mute Function is used during a phone call. To quickly activate Mute press Left Soft Key **Mute**, then to cancel press Left Soft Key **Unmute**.

## Volume Quick Adjustment

Use the side keys to adjust the ringer volume while in standby mode, and the earpiece volume during a phone call. The upper key increases the volume and the lower key decreases the volume.

### Note

Keypad Volume is adjusted through the Sound Volume menu:

**Menu** -> **Settings** ->



**Sounds** -> **Volume** ->

**Keypad**

## Call Waiting

Your cellular service may offer call waiting. While a call is in progress, two beeps indicate another incoming call. When call waiting is enabled, you may put the active call on hold while you answer the other incoming call. Check with your cellular service provider for information about this function.



1. Press  to receive a waiting call.
2. Press  again to switch between calls.

## Caller ID

Caller ID displays the phone number or name of the incoming call. If the caller's identity is stored in Contacts, the name will appear along with the phone number. Check with your service provider to ensure they offer this feature.

## Speed Dialing

Speed dialing is a convenient feature that allows you to make phone calls quickly. A number key can be assigned to a specific phone number. By pressing and holding down a number key, your phone will recall the phone number associated from the Contact List and display it briefly

while simultaneously dialing that phone number for you. Speed Dial Number 1 is set to Voice Mailbox by default and is unchangeable.

### Dialing Single Digit Speed Dials (from 2 to 9)

Press and hold the Speed Dial number.


OR

Enter the Speed Dial number and press .

### Dialing Double Digit Speed Dials (from 10 to 99)

Press the first digit and then press and hold the key of the second digit.

OR

Enter the first and second digits and press .

# Entering and Editing Information

## Text Input

You can input and edit your Banner, Calendar, Contacts, Alarm Clock, Notepad, and Messages.

## Key Functions



### Left Soft Key:

Press to scroll through the following text input modes: T9Word (T9WORD/T9Word/T9word) -> Abc (ABC/Abc/abc) -> 123 -> Symbols



**Shift:** Press to change case.

T9 text : T9Word -> T9WORD -> T9word  
Abc text : Abc -> ABC -> abc



**Next:** In T9 mode, press to display other matching words.



**Space:** Press to complete a word and insert a space.






**Clear:** Press to delete a single space or character. Hold to delete the whole message.



**Punctuation:** In T9 mode, press to insert punctuation in a word and complete a sentence.


# Contacts in Your Phone's Memory

## The Basics of Storing Contacts Entries

1. From standby mode enter the phone number you want to save (up to 48 digits).
2. Press Left Soft Key  **Save**.
3. Select either **Save New** or **Update Existing**.
4. Use  to highlight a Label and press .  
**Mobile 1/ Home/ Work/  
Mobile 2/ Fax**

### Note


Use **Update Existing** to add another phone number to a contact already stored in memory.

5. Enter a name for the phone number (up to 22 characters) and press . A confirmation message is displayed briefly.

## Phone Numbers With Pauses

When you call automated systems, such as voice mail or credit billing numbers, you often have to enter a series of numbers to navigate through the system. Instead of entering these numbers by hand, you can store the numbers in your Contacts separated by special pause characters (W, P). There are two different types of pauses you can use when storing a number:

### Wait (W)








The phone stops dialing until you press Left Soft Key  **Release** to advance to the next number.

### Pause (P)










The phone waits 2 seconds before sending the next string of digits.

# Contacts in Your Phone's Memory

## Storing a Number with Pauses

1. Press  **Menu**.
2. Press  **Contacts**.
3. Press  **New Contact**.
4. Enter a name (up to 22 characters) and enter a number.
5. Press Right Soft Key  **Options**.
6. Press  **Wait** or  **Pause**.
7. Enter additional number(s) then press .



## Adding a Pause to an Existing Number

1. Press  **Contact List** to display your Contacts alphabetically.
2. Use  to highlight the Contact entry to edit, then press .
3. Press Left Soft Key  **Edit**.
4. Use  to highlight the number.
5. Press Right Soft Key  **Options**.
6. Press  **Wait** or  **Pause**.
7. Enter additional number(s), then press .


## Searching Your Phone's Memory

The AX565 phone is able to perform a dynamic search of the contents in your phone's memory. A dynamic search compares entered letters or numbers against the entries in your Contacts. A matching list is displayed in descending order. You can then select a number from the list to call or edit.






### Scrolling Through Your Contacts

1. Press  **Contact List** to display your Contacts alphabetically.
2. Use  to scroll through the list.

### Searching by Letter

1. Press  **Contact List** to display your Contacts alphabetically.
2. Press (or press repeatedly) the key on the keypad that corresponds with the search letter.

### Searching Options

1. Press  **Contact List**.
2. Press Right Soft Key  **Options**.
3. Select the search criteria (use  then press , or press the corresponding number on the keypad):
  - 1  **Send Message:** Send a text message or picture message to the selected contact.

# Contacts in Your Phone's Memory

**2 abc** **Send via Bluetooth:** Send a contact(vCard) via *Bluetooth*. In case *Bluetooth* power is not on, a notice pops up to turn *Bluetooth* on.

**3 def** **Delete:** Delete the selected entry in your Contacts.

**4 ghi** **Delete Multiple:** Choose from **Selective/ All** to delete multiple entries at one time.


**5 jkl** **Edit:** Edit the selected contact information.

**6 mno** **Set Speed Dial/ Remove Speed Dial:** Set a speed dial or remove the speed dial.






**7 pqrs** **Set As My Circle/ Remove My Circle:** Set the selected number as your Circle or remove it.

## Making a Call From Your Phone's Memory





Once you have stored phone numbers in your Contacts, you can place calls to those numbers quickly and easily.

- By pressing Send Key  after searching for a phone number in Contacts or Recent Calls and highlighting it.
- By using Speed Dialing.



### From Contacts

1. Press  **Contact List** to display your Contacts.
2. Use  to highlight the Contact entry, then press .
3. Use  to highlight the phone number.
4. Press  to place the call.



## From Recent Calls

1. Press  **Menu**.
2. Press  **Recent Calls**.
3. Use  to highlight the type of recent call, then press .

**Missed Calls/ Received Calls/ Dialed Calls/ Data/ All Calls**

4. Use  to highlight the phone number.
5. Press  to place the call.

## Speed Dialing

For a single-digit Speed Dial, press and hold the digit or press the digit, then press . For a double-digit Speed Dial, press the first digit and hold the second digit or press the first and second digits, then press .

# Using Phone Menus




## Messaging



The phone can store up to 385 messages. The AX565 supports up to 1000 characters. The information stored in the message is determined by phone mode and service capability. Other limits such as available characters per message may exist, please check with your service provider for system features and capabilities.

### 1. New Text Message

Allows you to send text messages, pages, and e-mail transmissions. Each message will be formatted and sent according to the destination address.







#### The Basics of Sending a Text Message

1. Press  ,  ,  .
2. Enter the recipient's address.

3. Press  to access the message screen.
4. Type your message (text or e-mail).
5. Press  **Send**.

A confirmation message is displayed.

#### Select Recipient(s) Using Options

1. Press  ,  ,  .
2. Press Right Soft Key  Options.
3. Use  to highlight an option and press  .

**Contacts** To select a recipient from your Contact List.

**Recent Calls** To select a recipient from your Recent Calls.

**Recent Messages** Choose **Inbox/ Sent** to select a recipient from your Recent Messages.



**Groups** Select a recipient from your Groups.






General/ Family/ Friends/  
Colleagues/ Business/ School



**Cancel** Cancels editing your message.

4. Complete your message and send or save it.

### Customize Your Text Message Using Options

While you are composing the text of a message you can insert customized text.

1. Press  ,  ,  .
2. Enter the recipient's address.
3. Use  or press  to highlight the Message window.
4. Press Right Soft Key  Options.

5. Use  to highlight an option and press  .

**Add Graphic/ Animation/  
Sound/ Templates/ Signature**

**Text Format**

Alignment/ Font Size/ Font  
Style/ Text Color/ Background

**Save As** Draft/ Templates

**Priority Level** Normal/ High

**Callback #** On/ Off

**Delivery Notice** Enhanced/  
Normal










**Cancel** Cancels editing your message.

6. Complete your message and send or save it.














# Messaging

## Message Icon Reference



### Inbox

		New/Unread Text/Picture Message
		Opened/Read Text/Picture Message
		New/Unread Notification Message
		Opened/Read Notification Message
		Priority High
		MMS New/Read Priority High

### Sent











		Failed Text/Picture Message
		Failed Multiple Text/Picture Messages
		Sent Message Pending
		Multi Messages Pending
		Sent Text/Picture Message
		Multiple Text/Picture Messages in transfer
		Text/Picture Message delivered
		Multiple Messages delivered



### Drafts

		Draft Text Message
		Draft Picture Message



## 2. New Picture Message

Allows you send messages with Text, Image/ Video and Audio.

1. Press  ,  ,  .
2. Enter the recipient's address, or press Right Soft Key  **Options** to search Contacts, and press  to select the desired contact.
3. Press  to access the message screen.
4. Type your message.
5. With the highlight on Image/ Video, press Left Soft Key  **Add**, highlight an option, and press  to select:  
**Image/ Video/ Take Photo/ Record Video**
6. Use  to highlight a picture, then press Left Soft Key  **Set**.




7. With the highlight on Audio, press Left Soft Key  **Add**, highlight an option, and press  to select:

**My Audios/ Default**

8. Use  to highlight a sound, then press Left Soft Key  **Set**.

#### Note

Video and audio cannot be sent in the same message.

9. Use Right Soft Key  **Options**.
10. Use  to highlight an option and press .

- \* Editing the Receiver

**Contacts/ Recent Calls/  
Recent Messages/ Groups/  
Online Album/ Cancel**

- \* Editing the Text

**Preview** Shows your message before sending.

**Add Templates/ Signature/  
Slide**

**Go to Previous Slide/ Next  
Slide**

**Save As Draft/ Templates**

**Priority Level Normal/ High**

**Delivery Notice** Informs you that the message has been successfully delivered to the recipient.

**Enhanced/ Normal**

**Remove Image/Video/ Audio/  
Slide**

**Cancel** Cancels the contents of message field.

- \* Editing Image/Video

**Preview/ Add Slide/ Go to/  
Save As Draft/ Priority Level/  
Delivery Notice/ Remove/  
Cancel**

# Messaging

## \* Editing Audio

Preview/ Add Slide/ Go to/  
Save As Draft/ Priority Level/  
Delivery Notice/ Remove/  
Cancel


## \* Editing Subject

Preview/ Add/ Go to/ Save  
As/ Priority Level/ Delivery  
Notice/ Remove/ Cancel

11. Press  to send.

## 3. Inbox

The phone alerts you in 2 ways when you receive a new message by:








- Displaying a notification message on the screen.
- Displaying the message icon  (It blinks when the message is urgent).

Received text messages, page messages, picture messages and

e-mail lists may be searched and the contents viewed. Received messages are displayed from newest to oldest.

## Viewing Your Inbox


Up to 250 received messages can be stored in the Inbox.




1. Press , , .
2. Use  to highlight an inbox message.
3. Press Left Soft Key  **Reply** to reply,  **Chat** to start a chat session with the sender, or Right Soft Key  **Options** to view the message and access additional options.

For text messages: **View/**  
**Change View Type/ Delete/**  
**Forward/ Save Contact/**  
**Lock/ Message Info/ Delete**  
**Multiple**

For picture messages:  
**Delete/ Forward/ Save  
 Contact/ Lock/ Message  
 Info/ Delete Multiple**

#### Note

For picture messages, press  **View** to view the message.

4. While viewing the selected message, press Left Soft Key  **Reply** to reply,  **Chat** to start a chat session with the sender (not available with picture messages), or Right Soft Key  **Options** to view additional options.

**Delete** Deletes the selected message.

**Forward** Forwards a received message to other destination address(es).

**Save Contact** Stores the callback number, e-mail address, and numbers in the received message into your Contacts.

**Save as Templates** Stores the message as a template for future messages.

**Call Back** Calls the number in the received message.

**Go to website** Accesses the website by starting Access Web.

**Lock/Unlock** Locks or unlocks the selected message.

**Information** Shows the message type priority and status.

#### Note





For picture messages:  
**Play Again/ Delete/ Forward/  
 Save Contact/ Save Media/ Lock/  
 Go to Website/ Information**

## 4. Sent



Up to 50 sent text messages or picture messages can be stored in the Sent. Access the Sent message list to view contents of sent messages and verify whether the transmission was successful or not.

1. Press , ,  .

# Messaging

2. Use  to highlight a sent message. Press Left Soft Key  **Resend** to resend the message to the recipient,  **View** to view the message, or Right Soft Key  **Options** to access additional options.

**Delete/ Forward/ Save Contact/ Lock/ Message Info/ Delete Multiple**

3. While viewing the selected sent message, press Left Soft Key  **Resend** to resend the message to the recipient, or Right Soft Key  **Options** to access additional options.

**Delete** Deletes the selected message.

**Forward** Forwards a received message to other destination address(es).

**Save Contact** Stores the callback number, e-mail address, and numbers in the received message into your Contacts.

**Save as Templates** Stores the message as a template for future messages.

**Go to website** Accesses the website by starting Web Access.

**Lock/Unlock** Locks or unlocks the selected message.

**Information** Shows the message type priority and status.







## Note

For picture messages:

**Play Again/ Delete/ Forward/ Save Contact/ Save Media/ Lock/ Go to Website/ Information**

## 5. Drafts

Displays saved messages and draft messages.

1. Press , ,  .
2. Use  to highlight a Saved message.
  - Press  **Edit**.
  - Press Right Soft Key  **Options**.

**Delete** Deletes the selected message from the Drafts.

**Save Contact** Select **Save New/Update Existing** to store the callback number, e-mail address, and numbers in the received message into your Contacts or update an existing contact already stored in memory.







**Lock/Unlock** Locks a message so that it is not erased if the Erase Saved or Erase All feature is used.

**Delete Multiple** Select **Selective/ All** to delete multiple messages at one time.

## 6. Voicemail

Allows you to view new voice messages recorded in your voice mail box. Your phone will alert you when you receive a new voice message.

### Checking Your Voicemail Box


1. Press , ,  .
2. Choose from the following options:
  - Press Left Soft Key  **Clear** to clear the voicemail counter.
  - Press  to listen to the message(s).
  - Press Right Soft Key  **Exit** to return to the Messaging menu.




# Messaging

## 7. Templates

Allows you to display, edit, and add text phrases. These text strings allow you to reduce manual text input into messages.

1. Press , , .
2. Press Left Soft Key  **New** to create a new template.








Enter text and press  to save the template.

3. Use  to highlight a template and press Right Soft Key , then highlight an option and press  to select:

Delete/Edit

## 8. Settings

Allows you to configure 9 settings for received messages.

1. Press , , .
2. Use  to highlight **All Messages/ Text Message/ Picture Message/ Edit Voicemail #** then press .
3. Use  to highlight one of the settings and press  to select it.

### Message Settings Sub-Menu Descriptions

#### All Messages

1. **Auto Save (Auto Save/ Prompt/ Do Not Save)**  
With this feature on, messages are automatically saved in Sent when transmitted.



## 2. Auto Delete (On/ Off)

With this feature on, read messages are automatically deleted when you exceed the storage limit.

## 3. Entry Mode

Allows you to select the default input method including T9Word, Abc and 123.

## 4. Signature (On/ Off/ Edit)

Allows you to make/edit a signature to automatically send with your messages.

## 5. Speed Messaging (On/ Off)

This feature allows you to speed dial text and picture messages.

For example:

1. Assign the number 2 as a speed dial for one of your contacts.

2. Compose a new text or picture message. In the destination address window, hold down the number 2 key instead of entering the address, and the message will be automatically sent to that contact.

## Text Message

### 1. Auto View (On/ Off)

When set to On, new messages will automatically display on your screen when they are received.

### 2. Auto Play (On/ Off)

Allows the display to automatically scroll down while viewing messages.

### 3. Callback # (On/ Off/ Edit)

With this feature on, you can input the callback number

# Messaging

that will be automatically included when you send a message.

## Picture Message

### 1. Auto Receive (On/ Off)








With this set to On, attached content will automatically download when a new picture message is received.

### Edit Voicemail #

Allows you to manually enter the access number for Voicemail Service. This feature should only be used when a VMS (Voicemail Service) access number is not provided from the network.

## 9. Delete All

Allows you to erase the messages stored in your Inbox, Sent, or Saved message folders. You can also erase all messages at the same time.

1. Press , , .
2. Use  to highlight an option: **Delete Inbox/ Delete Sent/ Delete Drafts/ Delete All Messages** then press .
3. Use  to highlight **Yes/ No** and press .

## Access Shop

Access<sup>SM</sup> Shop allows you to do more than just talk on your phone. Access Shop is a technology and service that allows you to download and use applications on your phone. With Access Shop, it is quick and easy to personalize your phone to suit your lifestyle and tastes. Just download the applications that appeal to you. With a wide range of software available, from ringtones to games to productivity tools, you can be assured that you will find something useful, practical, or down right entertaining.

### Downloading Applications

You can download applications and use Access Shop anywhere on the network, as long as your handset has a digital signal available. Most applications do

not use a network connection while in use.

### Incoming Calls










While downloading an application, incoming calls will automatically be sent to your voice mail, if available. If you do not have voice mail, downloading will not be interrupted by an incoming call, and the caller will receive a busy signal.

When using applications, an incoming call will automatically pause the application and allow you to answer the call. When you complete your call, you can resume using the application.


## 1. Access Apps

Allows you to download selected applications while displaying the Access Apps application list relayed from the Access Apps server connection.

# Access Shop

1. Press , , .
2. Read the displayed message and press .
3. Use  to highlight **Shop Now** and press .  
- or -  
Press , use  to highlight **Catalog** or **Search**, and press .

## Shortcut

Pressing the right arrow key  from standby mode will start Access Apps.

## Note

If you try to download an application when the file memory is full, the following message will be displayed: "File Memory is full. To make enough storage space to install this app, the following app(s) will be temporarily disabled:...You can restore disabled apps by simply starting them, at no additional purchase cost. Proceed?" If you select Yes, the app(s) will be disabled.

## 2. Access Info

Allows you to set the Airtime Charge Warning message that pops up when Access Apps is started to ON or OFF.






1. Press , , .
2. Press Left Soft Key  Yes, or Right Soft Key  No.

## Managing Your Access Apps Applications

Download new applications and delete old ones at anytime.

## Deleting Applications

Only removing an application deletes it completely from the memory of the phone. To restore an application once it has been deleted, you will be charged to download it again.




1. Navigate to **Access Apps**.
2. Use  to highlight the application you wish to delete and press Left Soft Key  **Options**.
3. Use  to highlight Delete and press .
4. Press Left Soft Key  **Yes**.

## Access Web


The Access Web feature allows you to view Internet content. Access and selections within this feature are dependent upon your service provider. For specific information on Access Web access through your phone, contact your service provider.

### 1. Start Browser

Allows you to initiate an Access Web session.

1. Press , **3 def**, .
2. Read the displayed message and press .
3. After a few seconds, you will see the home page.

### Ending an Access Web Session

End an Access Web session by pressing .

# Access Web

## Navigating Through the Browser

On-screen items may be presented in one of the following ways:

- **Numbered options**

You can use your numeric keypad or you can select the items by moving the cursor and pressing the appropriate Soft Key(s).


- **Links embedded in content**

You can act on the options or the links by using the Soft Keys at the bottom of the display screen.


- **Text or numbers**

You can select the items by moving the cursor and pressing the appropriate Soft Keys.

## Scrolling

Use  to scroll through the content if the current page does not fit on one screen. The currently selected item is indicated by a cursor on the screen.

## Fast Scrolling

Press and hold  to quickly move the cursor up and down on the current screen.


## Scrolling by Page

Press the Side Keys to move up or down one page at a time.


## Soft Keys

To navigate to different screens or select special functions, use the Soft Keys. The function associated with the Soft Keys can change for each page and depends on each highlighted item.





## Left Soft Key

Left Soft Key  is used primarily for first options or selecting an item, but its function may change depending on the content displayed.



## Right Soft Key

Right Soft Key  is used primarily for secondary options or a menu of secondary options.

## Entering Text, Numbers, or Symbols

When prompted to enter text, the current text entry mode appears above the Right Soft Key  as ABC, abc, Sym, 123, WORD, word. To change the input mode, press Right Soft Key , use  to highlight an option, then press .

## Clearing Out Text/Number Entered

When entering text or numbers, press  to clear the last number, letter, or symbol. Press and hold  to clear the input field completely.

## Initiating a Phone Call From Mobile Web

You can make a phone call from Mobile Web if the site you are using supports the feature. The browser connection is terminated when you initiate the call. After you end the call, your phone returns to the screen from which you initiated the call.

# Multimedia

## 2. Web Messages

Allows you to view Web messages. If there are any browser messages, the list is displayed from newest to oldest.

1. Press , **3 def**, **2 abc**.



Your list of Web messages is displayed.

## 3. Web Settings

Allows you to select a browser alert sound.



1. Press , **3 def**, **3 def**.

- **Prompt**

Use  to highlight an option and press .

**At Start/ At End/ Both/ None**

- **Alert Beep**

Use  to highlight an option and press .




**Mute/ 2 Beeps/ 4 Beeps**



## Multimedia

View, take, and trade your digital pictures and video right from your wireless phone.

### 1. Take Photo

1. Press , **4 ghi**, **1** .

2. Set the brightness , zoom  and press Right Soft Key  **Options** to change other settings.

- Use  to highlight an option and press .

#### Switch to Camcorder

Changes from camera mode to video mode.

**View Mode** Fit to Screen/  
Landscape

**Resolution** 1280X960/  
640X480/ 320X240/  
176X144/ 160X120

**Quality** Fine/ Normal/  
Economy



## Zoom

## Brightness

## Night Mode

 On/ Off

## Self Timer

 Off/ 3 Seconds/  
5 Seconds/ 10 Seconds

## White Balance

 Auto/ Sunny/  
Cloudy/ Tungsten/  
Fluorescent

## Color Effects

 Color, Sepia,  
Mono, Negative, Aqua, Vivid

## Template

 On/ Off

## Shutter Sound

 None/ Sound  
1/ Sound 2/ Sound 3/ Say  
Cheese

## Multishot


 Off/ 3 shots/  
6 shots

## Memory Storage


 Phone  
Memory/ Card Memory

## AccessMyPics Reminder

  
Enable/ Disable

3. Take a picture by pressing .









4. Press Right Soft Key   
Delete,  Send,

or Left Soft Key  Save.  
Choose from the following  
save options:

- Save to Phone Memory
- Save to Card Memory
- Set As
  1. Main Screen
  2. Front Screen
  3. Picture ID
- Save to AccessMyPics.com  
Only

The picture is stored in Gallery.

## 2. Record Video

1. Press , , .
2. Set the brightness , zoom  and press Right Soft Key  Options to change other settings.
  - Use  to highlight an option and press .

# Multimedia

**Switch to Camera** Changes from video mode to camera mode.

**Resolution** 176X144/  
128X96

**Zoom**






**Brightness**

**White Balance** Auto/ Sunny/  
Cloudy/ Tungsten/  
Fluorescent

**Record Time** 15 sec/ 1 hour

**Memory Storage** Phone  
Memory/ Card Memory








**AccessMyPics Reminder**  
Enable/ Disable

3. Press  **Rec** to begin recording.
4. Press  **Stop** to stop recording.
5. Press Right Soft Key  **Delete**,  **Send**, or Left Soft Key  **Save**. Choose from the following save options:

- **Save**
- **Set As**
  1. Main Screen
  2. Front Screen
- **Save to AccessMyPics.com Only.**

## 3. Record Voice








Allows you to add, listen to, and erase short verbal reminders.

1. Press  ,  ,  .
2. Press  **Record** to record a new voice memo.
3. Talk into the microphone, then press  **Stop**.
4. Press Left Soft Key  to save. The default memo title is the date and time of recording.
5. While the highlight is still on the recording, press Right Soft Key  **Options** to access



the following:  
Rename/ Delete

## 4. Images

Allows you to select images to customize your phone's Main Screen, Front Screen, or Picture ID.





1. Press , **4 ghi**, **4 ghi**.
  2. Use  to highlight **My Images/ Default** then press .
  3. Use  to highlight the image you want to display.
    - Press Right Soft Key  **Options** to access additional options. Use  to highlight an option and press .
- Set as/ File Filter/ Take Photo/ Delete/ Rename/ Move/ Copy/ Lock/ List View/ Information/ Delete**

**Multiple/ Send via Bluetooth/ Send to AccessMyPics.com**




- Press  **View** to view the selected image.
- Press Left Soft Key  **Send** to send the selected image to somebody else. (This option is only available in My Images).

## 5. Videos

Allows you to choose video clips.

1. Press , **4 ghi**, **5 jkl**.
2. Use  to highlight the video you want to display.
  - Press Left Soft Key  **Send** to send the selected video clip to somebody else.
  - Press  **Play** to play the selected video clip.






# Multimedia












- Press Right Soft Key  Options to access additional options. Use  to highlight an option and press .







Set as/ File Filter/ Record Video/ Delete/ Rename/ Move/ Copy/ Lock/ List View/ Information/ Delete Multiple/ Send via Bluetooth/ Send to AccessMyPics.com

## 6. Audios

Allows you to choose audio clips.

1. Press , , .
2. Press Left Soft Key  **Voice** to record an audio clip.
- Press Left Soft Key  **Audio** to access My Audios list.

- Press  **Record** to begin recording.
- While recording, press Left Soft Key  **Pause** to pause, or  **Stop** to stop recording.
- When you are finished recording, press Left Soft Key  **Save** to save the audio clip,  **Send** to send the audio clip to somebody else, or Right Soft Key  Options to access additional options. Use  to highlight **Rename/ Delete** and press .
- 3. Use  to highlight **My Audios/ Default** and press .
- 4. Use  to highlight the audio clip.









- Press Left Soft Key  **Send** to send the selected audio clip to somebody else.
- Press  **Play** to play the selected audio clip.
- Press Right Soft Key  **Options** to access additional options. Use   to highlight an option and press .

For My Audios: File Filter/  
Record Voice/ Delete/  
Rename/ Move/ Copy/  
Lock/ Information/ Delete  
Multiple/ Send via  
Bluetooth

For Default: Set as/  
Information

## 7. Shuffle

Allows you to set your wallpaper and ringtone to change randomly. If you turn off the phone, the setting is deactivated.

1. Press , , .
2. Use  to highlight **Ringtone List/ Wallpaper List** then press .
3. Use  to highlight the desired ringtones or wallpapers and press  to select them.
4. Press Left Soft Key  **Done** when you are finished selecting the ringtones or wallpapers you wish to add.

# Contacts

## Contacts





The Contacts Menu allows you to store names, phone numbers and other information in your phone's memory. When you access your Contacts, the number in parentheses represents the number of entries you have stored (up to 500).


### 1. New Contact

Allows you to add a new contact to your Contact List.

#### Note





Using this submenu, the number is saved as a new Contact. To save the number into an existing Contact, edit the Contact entry.




1. Press , , .
2. Enter the name, then press .

3. Highlight the field you wish to store the contact information in.
4. Enter the phone number or e-mail address.
5. Continue adding the desired contact information to the entry.
6. When you are finished entering the desired contact information, press  Save to save the entry into your Contact List.

### 2. Contact List










Allows you to view your Contact List.

1. Press , , .
2. Choose from the following options:
  - Press  to scroll through your Contacts alphabetically.

- Press Right Soft Key  **Options** to select one of the following:  
Send Message/ Send via Bluetooth/ Delete/ Delete Multiple/ Edit/ Set(Remove) Speed Dial/ Set As(Remove) My Circle
- Press  **View** to view the contact's information.
- Press Left Soft Key  **New** to store new contact information.

### 3. My Circle









Allows you to assign some of your contacts as your favorites, and quickly send messages to them.

1. Press  ,  ,  .
  2. Use  to highlight the location you wish to store the contact in.
  3. Press Right Soft Key  **Options** to access an additional option. Press  to select **Alert Reminder**. Use  to highlight **Enable/Disable** and press  .
  4. Press  **Assign** to assign a contact as one of your favorites.
  5. On an existing My Circle entry: Press Left Soft Key  **Message** to quickly send a text message or a picture message. Press Right Soft Key  **Options** to access additional options. Use  to select an option and press  .
- Change/ Remove/ Remove All/ Alert Reminder**

# Contacts

## 4. Groups










Allows you to view your grouped Contacts, add a new group, change the name of a group, or delete a whole group.

1. Press , , .
2. Choose from the following options:
  - Use  to highlight a group, then press  **View** to view the contacts in the selected group.
  - Press Left Soft Key  **New** to add a new member to the group.
  - Use  to highlight a group, then press Right Soft Key  **Options** to choose from the following options:

Delete/ Send Message/  
Rename Group/ Set  
Ringtone/ Delete All

## 5. Speed Dials

Allows you to view your Speed Dials list, designate new Speed Dials, or remove Speed Dial designations entered in your Contacts.





1. Press , , .
2. Use  to highlight the desired Speed Dial location (or enter the Speed Dial digit), and press  **Assign**.
3. Use  to highlight the Contact then press .
4. Use  to highlight the number, then press .

A confirmation message is displayed.



## 6. My Name Card

Allows you to view all of your personal Contact information including name and phone numbers.

1. Press , **5** jkl , **6** mno .
2. Use  to highlight the feature you wish to edit, and press Left Soft Key  **Edit**.
3. Edit the information as desired and press .


### Note

You cannot edit phone number, but you can add an additional phone number.

## Recent Calls

The Recent Calls Menu is a list of the last phone numbers or Contacts entries for calls you placed, accepted, or missed. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

### Note

To view a quick list of all your recent calls, press Send Key  from standby mode.

## 1. Missed Calls

Allows you to view the list of missed calls; up to 40 entries.

1. Press , **6** mno , **1** .
2. Use  to highlight an entry.

# Recent Calls





## 2. Received Calls

Allows you to view the list of incoming calls; up to 40 entries.

1. Press , , .
2. Use  to highlight an entry.

## 3. Dialed Calls

Allows you to view the list of outgoing calls; up to 40 entries.

1. Press , , .
2. Use  to highlight an entry.




## 4. Data

Allows you to view the list of data calls; up to 40 entries.

1. Press , , .
2. Use  to highlight an entry.





## 5. All Calls

Allows you to erase selected call list(s).

1. Press , , .
2. The history of all calls are displayed.

## 6. Call Timer

Allows you to view the duration of selected calls.

1. Press , , .
2. Use  to highlight a call list, then press .

Last Call/ Home Calls/ Roam Calls/ All Calls

## 7. Data Counter

Allows you to view the list of received and transmitted data calls.

1. Press , **6 mmo**, .
2. Use  to highlight a data call list, then press .

**Received Data/ Sent Data/  
All Data**

## Music

Allows you to transfer songs stored in your memory card. To access this feature, there should be stored music in your memory card.

### Notes

Be sure to use only recommended microSD™ cards. Using non-recommended microSD™ cards could cause data loss and damage your phone.

The microSD™ card and its adapter can be easily damaged by improper operation. Please be careful when inserting, removing, or handling it.

Do not remove a microSD™ card while files are being accessed or transferred. It will result in loss or damage of data.

# Music

## Accessing Music

### With the Flip Open

1. Press  and  **Music**.

### With the Flip Closed

1. Hold the MUSIC Key on the side of your phone.
2. Unlock Touch Keypad and hold PLAY key.

#### Tip

Accessing music from folder closed state will take you to Last Played Playlist.

## Playing Music

From Music main menu, you can choose:

1. All Songs
2. Playlists
3. Recently Played

## 4. Artists

## 5. Genres


## 6. Albums

## 7. Music Transmitter

#### Tip

**Artists/ Genres/ Albums** will display a list of all Artists/ Genres/ Albums present on the memory card according to the files' ID3 tags.

## Creating Playlist

1. Select  **Playlists** from the main Music menu.
2. Press **Options** -> **Create Playlist**.
3. Enter name of Playlist.

## Adding Songs to Playlist

From the main Playlists screen




1. Highlight the Playlist you wish to add songs to.
2. Press **Options** and **Edit Playlist**.
3. Check songs you wish to add to the playlist by using the center check key.
4. When all songs have been added, press **Done** to save the playlist.

From All Songs/ Artists/  
Genres/ Albums

1. Highlight the song you wish to add to a playlist.
2. Press **Options** and **Add to Playlist**.
3. Select the playlist you wish to add the song to.

## Using the Music Transmitter

From main Music menu:

1. Select  **Music Transmitter** to go to the Channel Edit screen.
  - Use the Navigation Keys  to move the frequency slider to the desired frequency.
  - Or press **Set** to manually enter a numeric frequency and press .
2. Press **Save** to save the frequency.

# Music

From music player:

1. Press **Options** and **Music Transmitter**.

- Select **On** to turn the music transmitter on.
- Select **Off** to turn the music transmitter off.
- Select **Change Channel** to go to the Channel Edit screen and change the output frequency.

Using Background Music

From music player:

1. Press **Options** and **Background Music**.

- Select **Prompt** if you wish to be prompted for BGM each time you try to exit the player.

- Select **Always On** if you wish to always keep music playing in the background when you exit the player.
- Select **Always Off** if you wish to always stop music playback when you exit the player.

## Note





Once you have exited the music player with background music enabled, press the side music key from the idle screen to return to the player.

## Tools

Your phone tools include: Voice Command, My Menu, Alarm Clock, Calendar, Ez Tip Calc, Notepad, Calculator, World Clock, Stopwatch, and Unit Converter.

### 1. Voice Command

Allows you to make phone calls quickly and easily by voice. Your phone recalls the number from your Contacts, displays it briefly, and then dials it. This menu also includes a feature for those who are driving or blind. It delivers time information by voice and allows you to check missed calls, messages and voicemails.








1. Press , , , .
2. When prompted, say "Call".

3. When prompted, say the name or phone number of the Contact you want to call. The phone will ask you to confirm the name or phone number before dialing.

Call <Name> or <Number>/  
Voicemail/ Missed Calls/  
Messages/ Time & Date/  
Help

### 2. My Menu











Allows you quick access to your favorite menus. A maximum of 12 items can be stored in My Menu.

1. Press , , .
2. Select the location of your choice by using , then press .
3. Select the menu you wish to add to My Menu by using , then press .

# Tools

## 3. Alarm Clock












Allows you to set up to five alarms. At the alarm time, any set alarm will sound the tone of your choice, and an alarm message will be displayed on the LCD screen.

1. Press , **8** , **3** .
2. Use  to highlight the alarm you wish to set, then press  to select it.
3. Press Left Soft Key  **Set** to set the alarm time.
4. Use  to highlight **Repeat** (recurrence setting).
5. Press  to select one of the following.  
**Once/ Daily/ Mon - Fri/ Weekends**
6. Use  to highlight **Ringtones**, press Left Soft Key  **Set** and select a ringtone.

7. Press  **Save**.

## 4. Calendar

Allows you to store and access your agenda(s). Simply enter your appointments in the Calendar, and your phone will alert you with a reminder.

1. Press , **8** , **4** .
2. Use  to highlight the scheduled day.
  -  Moves cursor to the left.
  -  Moves cursor to the right.
  -  Moves to the previous week.
  -  Moves to the next week.
3. Press Left Soft Key  **New**.
4. Use  to highlight the field you wish to edit, then press Left Soft Key  **Set** to edit your schedule information:



- Set Time
- Topic
- Reminder
- Repeat
- Set Period
- Ringtone

5. Press  Save.

## 5. Ez Tip Calc


Allows you to quickly and easily estimate the tip and total amount of a bill by inputting the bill amount before tip, the tip percentage, and dividing it by the number of people paying.


1. Press , , .

## 6. Notepad

Allows you to add, read, edit, and erase notes to yourself.


1. Press , , .

2. Press Left Soft Key  **New** to write a new note.





3. Type the note, then press .

A confirmation message displays briefly, then displays your list of notes.

## Viewing a Notepad Entry

1. Access Notepad and highlight the entry.
2. To erase, press Right Soft Key  **Options**.








-  **Delete**
-  **Edit**
-  **Delete All**

To edit a note, highlight the entry, then press  **View** and press Left Soft Key  **Edit**. Or press Right Soft Key  **Options** and  **Edit**.

# Tools








## 7. Calculator

Allows you to perform simple mathematical calculations. You can enter numbers up to the sixth decimal place.

1. Press , , .
2. Enter data.
  - Use keypad to enter numbers.
  - Use  to enter decimals.
  - Press Left Soft Key  **Clear** to the entry.
  - Press Right Soft Key  **Operator** for additional calculating options.
  - Use Navigation Keys to enter functions.
  - Press  to complete equation.






## 8. World Clock

Allows you to determine the current time in another time zone or country.

1. Press , , .
2. Press Right Soft Key  **Cities** to select a specific city and display the date/time in that location.
3. Use  to scroll through all available cities on the map.
4. Press  to select the highlighted city.
5. Press Left Soft Key  **Set DST**.

## 9. Stopwatch

Stopwatch is available just as common stopwatches we see and use in daily life.

1. Press , **8** tuv, **9** wxyz.
2. Press  **Start** to start, and press  **Stop** to stop.
  - You can use the Lap function by pressing Right Soft Key  **Lap** to record up to 20 laps and lap times.
3. Press Left Soft Key  **Reset** to reset.

## 0. Unit Converter

Allows you to measure Length, Area, Mass, Volume and Temperature.

1. Press , **8** tuv, **0** next.







## Settings

### 1. Sound

Options to customize your phone's sounds:

#### 1.1 Ringer





Allows you to assign ringtones for incoming calls.

1. Press , **9** wxyz, **1** , **1** .
2. Select **All Calls/ Caller ID/ No Caller ID/ Restricted Calls/ Shuffle/ Buy Ringtones**.
3. Select **My Audios** or **Default**.
4. Use  to highlight the ringtone.
5. Press  **Play** to preview the ringtone, and Left Soft Key  **Set** to set the ringtone to your phone.

# Settings



## 1.2 Volume



Allows you to set various volume settings.

1. Press , **9** wxyz, **1** , **2** abc .
2. Select **Master Volume/ Keypad/ Earpiece/ Speaker**.
3. Use  to adjust the volume of the ringer, then press  to save the setting.

## 1.3 Message Alerts






Allows you to select the alert tone for a new message, and set the frequency of the Message Reminder.

1. Press , **9** wxyz, **1** , **3** def .
2. Select **Text Message/ Picture Message/ Voicemail/ All Messages/ Message Reminder**.

3. Use  to select a setting, then press  .



## 1.4 Alert Type

Allows you to select the alert types.

1. Press , **9** wxyz, **1** , **4** ghi .
2. Use  to highlight the alert you wish to edit.  
**Call Alert/ Message Alert/ Schedule Alert/ Alarm Alert**
3. Use  to scroll through the alert types.  
**Ring Only/ Vibrate Only/ Ring & Vib**
4. Press  to save.

## 1.5 Service Alerts

Allows you to set any of the 3 Alert options to On or Off.

1. Press , **9** wxyz, **1** , **5** jkl .
2. Select an alert option.

### 1.5.1 Minute Beep

Alerts you 10 seconds before the end of every minute during a call.

### 1.5.2 Call Connect



Alerts you when the call is connected.

### 1.5.3 Back to Top

Alerts you when you scroll through the end of a menu list.





### 1.5.4 Low Battery

Alerts you when the battery charge level is low.

3. Use  to set **On/ Off**, then press  . (for Low Battery option, **Announce/ Tone**)





## 1.6 Power On/Off Tone

Allows you to set the phone to sound a tone when the phone is powered on and off.

1. Press , **9** wxyz, **1** , **6** mno .
2. Use  to set to **On/ Off**, then press  .

## 1.7 Flip Tone

Allows you to set a flip tone that will play when you flip your phone open or closed.

1. Press , **9** wxyz, **1** , **7** pqrs .
2. Use  to set to **On/ Off**, then press  .






# Settings

## 2. Display



Options to customize your phone's display screen.

### 2.1 Wallpaper



Allows you to choose the kind of background to be displayed on the phone.

1. Press , , , .
2. Select **Main Screen/ Front Screen/ Background Music Screen/ Shuffle/ Buy Wallpaper**, then press .

#### 2.1.1 Main Screen/ Front Screen

Highlight an image or video from **My Images** or **My Videos**, and press  **View/ Play** to view the image or watch the video, and **Left Soft Key**  **Set** to set it as the wallpaper.

#### 2.1.2 Background Music Screen

Highlight a background and press  **View** to view the image, or **Left Soft Key**  **Set** to set it as the background music wallpaper.

#### 2.1.3 Shuffle










Set **Shuffle** to **On** or **Off**, set it to **Main Screen** or **Front Screen**, and set the repeat frequency.

#### 2.1.4 Buy Wallpaper

Purchase wallpapers for your phone.








## 2.2 Banner

Allows you to enter a string of characters which display on the LCD screen.

1. Press , , ,  .
2. Select **Main Screen/ Front Screen**.
3. Use  to scroll between **On/ Off**.
4. Use  to highlight the message window.
5. Input text and press Left Soft Key  **Abc** to change text options,  **Save** to save, or Right Soft Key  **Cancel** to cancel editing your banner.






## 2.3 Backlight

Allows you to set the duration for illuminating the backlight.

1. Press , , ,  .
  2. Choose a submenu, then press  .
- Display/ Keypad**
3. Use  to select a setting, then press  .

## 2.4 Menu Style




Allows you to view the Menu as an Icon or List display.

1. Press , , ,  .
2. Select **Icon** or **List** and press  .

# Settings





## 2.5 Languages

Allows you to set the bilingual feature according to your preference. Choose between English and Spanish.

1. Press , **9** wxyz, **2** abc, **5** jkl.
2. Use  to select **English** or **Spanish**, then press .



## 2.6 Clocks & Calendar

Allows you to select the type of clocks displayed on the main LCD or sub LCD.



1. Press , **9** wxyz, **2** abc, **6** mno.
2. Choose a sub-menu and press .  
**Main Screen/ Front Screen**
3. Use  to highlight an option and press .

## 2.7 Font Settings

Allows you to select the type of font displayed on LCD.

1. Press , **9** wxyz, **2** abc, **7** pqrs.
2. Choose a sub-menu and press .

**Font Type/ Dial Font Style/  
Dial Font Size**

3. Use  to highlight an option, then press .

Options for Font Type  
**LG Arial/ LG Script/ LG  
HYSerif**



Options for Dial Font Style  
**Magic/ Digital/ Basic**

Options for Dial Font Size  
**Normal/ Large**



## 2.8 Color Schemes

Allows you to choose the color of the background screen.

1. Press , **9** *wxyz*, **2** *abc*, **8** *tuv*.
2. Highlight **Ocean/ Silver** then press .

## 3. Security

The Security menu allows you to secure the phone electronically.




### 3.1 Lock Phone

Keeps your phone from unauthorized use. Once the phone is locked, it is in restricted mode until the lock code is entered. You can still receive phone calls and make emergency calls. You can modify the lock code by setting a New Lock code within the Security menu.

1. Press , **9** *wxyz*, **3** *def*.

2. Enter the four-digit lock code and press .

The default lock code is commonly the last 4 digits of your phone number.

3. Press **1**  **Lock Phone**.
4. Use  to select an option, then press .

**Unlock** The phone is never locked (Lock mode can be used).

**Lock** The phone is always locked. When locked, you can receive incoming calls and make only emergency calls.

**On Power Up** The phone is locked when it is turned on.








# Settings

## 3.2 Restrict Calls

Allows you to restrict incoming and/or outgoing calls.









### Note

You can receive the incoming calls from saved contacts on your phone, when Incoming Only is on.

1. Press , , .
2. Enter the four-digit lock code and press .
3. Press  **Restrict Calls**.
4. Use  to select **Outgoing Only/ Incoming Only/ All/ None**, then press .




## 3.3 Emergency #s

Allows you to enter 3 emergency numbers. You can call these emergency numbers and 911, even when the phone is locked or restricted.

1. Press , , .
2. Enter the four-digit lock code and press .
3. Press  **Emergency #s**.
4. Press  to edit the emergency numbers.
5. When you are finished editing the number, press  **Save** to save, or Right Soft Key  **Cancel** to cancel editing.







### 3.4 Change Lock Code

Allows you to enter a new four-digit lock code.

1. Press , **9** wxyz, **3** def.
2. Enter the four-digit lock code and press .
3. Press **4** ghi **Change Lock Code**.
4. Enter a new 4-digit lock code and press .
5. For confirmation, it will ask you to enter the new lock code again.

### 3.5 Reset Default

Allows you to reset your phone to the factory default settings.

1. Press , **9** wxyz, **3** def.
2. Enter the four-digit lock code and press .
3. Press **5** jkl **Reset Default**.
4. Read the displayed message and press  to continue.
5. A message will pop up that says "Preference settings will be set to factory defaults. Press <OK> to continue." Press .
6. Use  to highlight an option and press . **Revert/ Cancel**.







# Settings

## 4. Call Settings

The Call Settings menu allows you to designate how the phone handles both incoming and outgoing calls.

### 4.1 Answer Options

Allows you to determine how to handle an incoming call.



1. Press , , , .
2. Use  to select a setting, then press .

Flip Open/ Any Key/ Send Key Only/ Auto Answer

### 4.2 Auto Retry

Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.







1. Press , , , .

2. Use  to select a setting, then press .

Off/ Every 10 Seconds/  
Every 30 Seconds/ Every 60  
Seconds

### 4.3 One-Touch Dial







Allows you to initiate a speed dial call by pressing and holding the speed dial digit. If set to Off, Speed Dial numbers designated in your Contacts will not function.

1. Press , , , .
2. Use  to select a setting, then press .

On/ Off

## 4.4 Voice Privacy

Allows you to set the voice privacy feature for CDMA calls as Enhanced or Standard. CDMA offers inherent voice privacy. Check with your service provider for availability.



1. Press , , , .
2. Use  to select a setting, then press .

Enhanced/ Standard

## 4.5 Auto Volume

When this feature is enabled, it provides a better audio experience by controlling the dynamic range and volume of the sending and receiving voices across different environments and conditions.








1. Press , , , .

2. Use  to select a setting, then press .

On/ Off

## 4.6 Airplane Mode

Only allows you to use features on your phone that do not require wireless communications.





1. Press , , , .
2. Read the displayed message and press  to continue.
3. Use  to select a setting, then press .

On/ Off

# Settings

## 4.7 TTY Mode

Allows you to attach a TTY (Teletype writer) device, enabling you to communicate with parties also using a TTY device. A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

1. Press , **9** *wxyz*, **4** *ghl*, **7** *pqrs*.
2. Read the displayed message and press  to continue.
3. Use  to select a setting, then press .

TTY Full/ TTY + Talk/ TTY + Hear/ TTY Off

## 5. Bluetooth®

The AX565 is compatible with devices that support the *Bluetooth* headset and hands-free profile(s)\*. You may create and store 20 pairings within the AX565 and connect to one device at a time. The approximate communication range for *Bluetooth* wireless technology is up to 30 feet (10 meters).

### Bluetooth QD ID B013111

#### Note

Read user guide of each *Bluetooth* accessory that you are trying to pair with your phone because the instructions may be different.











### Note

The *Bluetooth* features available on this handset may not be compatible with all *Bluetooth* enabled devices. Your service provider or handset manufacturer cannot be held responsible for compatibility issues with devices not sold by the service provider or handset manufacturer.

## 5.1 Paired Devices

Pairing is the process that allows the handset to locate, establish and register 1-to-1 connection with the target device.

### For pairing new Bluetooth® device



1. Press  ,  ,  ,  .
2. Follow the *Bluetooth* accessory instructions to set the device to pairing mode.
3. If *Bluetooth* power is set to off, you will be prompted to turn power on. Highlight Yes  and press  .
4. The device will appear in the Found Devices menu once it has been located. Highlight the device and press  .
5. The handset will prompt you for the passkey. Consult the *Bluetooth* accessory instructions for the appropriate passkey (typically “0000” - 4 zeroes). Enter the passkey and press  .
6. Once pairing is successful, select Yes  and press  to connect with the device.
7. Once connected, you will see the device listed in the Paired Devices menu.

# Settings

## 5.2 Power

Allows you to set the power On/Off.

1. Press , , , .

2. Use  to select a setting, then press .

On/ Off



### Note

By default, your device's *Bluetooth* functionality is turned off.

## 5.3 My Visibility

Allows you to set the visibility of your *Bluetooth* device.

1. Press , , , .

2. Use  to select a setting, then press .


Visible/ Hidden


### Note

If you turn on My Visibility, your device is able to be searched by other in-range *Bluetooth* devices.



## 5.4 My Bluetooth Name

Allows you to edit the name of the *Bluetooth* device.

1. Press , , , .

2. Hold down  to clear the existing name.

3. Use the alphanumeric keypad to enter a new alias.

4. Press  to save and exit, or Right Soft Key  Cancel to cancel editing.

## 5.5 My Bluetooth Info






Allows you to view the information of the *Bluetooth*.

1. Press , , , .



## 6. USB Setting

Allows you to select the data port.

1. Press , , .
2. Use  to select a setting, then press .

### USB Modem/ USB Mass Storage

#### Using AX565 USB Drive Mode

##### Note

- Users who use a memory card reader do not require a USB cable and would not need to follow all those steps.
- The supported files may vary depending on the software version of your phone.

Requirements:

- AX565 Phone
- AX565 USB Cable

- microSD™ card installed on the phone
- Windows XP® Computer

Steps to using USB Mass Storage mode:

1. Install the USB Cable drivers into the computer.
2. After installing the USB cable drivers, connect the cable to the computer and attach the phone. Allow the computer to detect the phone's USB drivers and install them.
3. Make sure the microSD™ card has been formatted on the phone so the required folders will be created for use with your phone. To format the memory card navigate the phone to Menu > 9. Settings > 8. Memory > 3. Card Memory and select the Format option. Select YES to format the

# Settings

microSD™ card.

4. On the phone, go to Menu > 9. Settings > 6. USB Setting > USB Mass Storage.

A prompt will be displayed stating “PC Connection Set”. Press END key to return to idle screen.

CAM\_IMAGE - Image > Camera Gallery

OTHER\_IMAGE - Image >

Downloaded

CAM\_VIDEO - Video > Video Gallery

OTHER\_VIDEO - Video > Downloaded

VOICE\_MEM - Audio > Recorded Audio

OTHER\_SOUNDS - Audio > Downloaded

MUSIC - Music Player folder



5. The music player files will need to be copied into the music folder. Music player only supports MP3 files, AAC files, AAC+ files and WMA files. (Not enhanced AAC files)
6. Once you are done transferring files, disconnect the phone. When you launch Music Player or go into My Media folders, an "Initializing..." folder will pop up on the phone while it refreshes the memory card contents.






## 7. System

The System menu allows you to designate specific system network settings.

### 7.1 Network

#### 7.1.1 System Select








Allows you to set up the phone producer's management environment. Leave this setting as the default unless you want to alter system selection as instructed by your service provider.

1. Press  , **9** WXJY , **7** PQRS , **1**  , **1**  .
2. Use  to highlight **Home Only/ Automatic A/ Automatic B** then press  .

# Settings

## 7.1.2 Set NAM

Allows you to select the phone's NAM (Number Assignment Module) if the phone is registered with multiple service providers.

1. Press , , , , .
2. Use  to highlight **NAM1** or **NAM2**, then press .

## 7.1.3 Auto NAM

Allows the phone to automatically switch between programmed telephone numbers corresponding to the service provider area.

1. Press , , , , .
2. Use  to highlight **On** or **Off**, then press .







## 7.1.4 Serving System

Identifies the channel number of a system that is served as a SID Number. This information should only be used for technical support.

1. Press , , , , .

## 7.2 Location

Menu for GPS (Global Positioning System: Satellite assisted location information system) mode.

1. Press , , , .
2. Use  to highlight a setting, then press .





### Location On/ E911 Only

## Note

GPS satellite signals are not always transmitted, especially under bad atmospheric and environmental conditions, indoors etc.






## 8. Memory

Allows you to check out the memory status of your phone.

1. Press , , .
2. Use  to highlight Save Options/ Phone Memory/ Card Memory, and press .






## 9. Touch Key Vibrate

Allows you to control the sensor level of the touch keys on your phone.

1. Press , , .
2. Use  to highlight a setting, then press .  
Off/ On/ Harder







## 0. Software Update

Allows you to check the current software version and update if needed. Refer to supplied service provider's brochure.

1. Press , , .
2. Select   Check for Update.
3. Select Yes.

## \*. Phone Info

The Phone Info menu provides you with specific information pertaining to your phone model.

1. Press , ,  .
2. Use  to highlight an option and press , or press the corresponding number key.

My Number/ ESN/MEID/  
Icon Glossary/ Version

# Safety

## TIA Safety Information

The following is the complete TIA Safety Information for wireless handheld phones.

### Exposure to Radio Frequency Signal

Your wireless handheld portable phone is a low power radio transmitter and receiver. When ON, it receives and sends out Radio Frequency (RF) signals.

In August, 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) \*

NCRP Report 86 (1986)

ICNIRP (1996)

\* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection.

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of your phone complies with the FCC guidelines (and those standards).

### Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments

could damage the phone and may violate FCC regulations.

## Phone Operation

**NORMAL POSITION:** Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

## Tips on Efficient Operation

For your phone to operate most efficiently:

Don't touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

## Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive and

always obey them. Also, if using your phone while driving, please observe the following:

- Give full attention to driving -- driving safely is your first responsibility;
- Use hands-free operation, if available;
- Pull off the road and park before making or answering a call if driving conditions or the law require it.

## Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

## Pacemakers

The Health Industry Manufacturers Association recommends that a minimum

# Safety

separation of six (6) inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

## **Persons with pacemakers:**

- Should ALWAYS keep the phone more than six (6) inches from their pacemaker when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

## **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

## **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

## **Health Care Facilities**

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use



equipment that could be sensitive to external RF energy.

## **Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

## **Posted Facilities**

Turn your phone OFF in any facility where posted notices so require.

## **Aircraft**

FCC regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

## **Blasting Areas**

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio”. Obey all signs and instructions.

## **Potentially Explosive Atmosphere**

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied

# Safety

petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

## For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

## Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all times after reading it.

**Caution!** *Violation of the instructions may cause minor or serious damage to the product.*

## Charger and Adapter Safety

- The charger and adapter are intended for indoor use only.
- Insert the battery pack charger vertically into the wall power socket.
- Use the correct adapter for your phone when using the battery pack charger abroad.

- Only use the approved battery charger. Otherwise, you may cause serious damage to your phone.

### **Battery Information and Care**

- Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- The battery doesn't need to be empty before recharging.
- Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- Do not disassemble or short-circuit the battery.
- Keep the battery's metal contacts clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.

- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- Use of extended backlighting, Browser, and data connectivity kits affect battery life and talk/standby times.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

### **Explosion, Shock, and Fire Hazards**

- Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.

# Safety

- Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it's dirty.
- When using the power plug, ensure that it's firmly connected. If not, it may cause excessive heat or fire.
- If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Don't short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and - terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.
- Do not disassemble or crush the battery. It may cause a fire.

## General Notice

- Using a damaged battery or placing a battery in your mouth may cause serious injury.
- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.

- Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- When you use the phone in public places, set the ringtone to vibration so you don't disturb others.
- Do not turn your phone on or off when putting it to your ear.
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

# Safety

## Warning! Important safety information

### Avoiding hearing damage

Permanent hearing loss may occur if you use your phone and/or headset at a high volume. Set the volume to a safe level. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:

- Limit the amount of time you use your phone and/or headset at high volume.

- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

For information about how to set a maximum volume limit on your phone, see the features guide for your phone.

### Using your phone safely

Use of your phone while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using your phone if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.

## Avoiding hearing damage

Permanent hearing loss may occur if you use your headset at a high volume. Set the volume to a safe level. You can adapt over time to a higher volume of sound that may sound normal but can be damaging to your hearing. If you experience ringing in your ears or muffled speech, stop listening and have your hearing checked. The louder the volume, the less time is required before your hearing could be affected. Hearing experts suggest that to protect your hearing:

- Limit the amount of time you use headset at high volume.
- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

For information about how to set a maximum volume limit on your handset, please refer to the features guide for your handset.

## Using headsets safely

Use of headsets to listen to music while operating a vehicle is not recommended and is illegal in some areas. Be careful and attentive while driving. Stop using this device if you find it disruptive or distracting while operating any type of vehicle or performing any other activity that requires your full attention.



## FDA Consumer Update

The U.S. Food and Drug Administration's Center for Devices and Radiological Health Consumer Update on Mobile Phones:

### 1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of Radio Frequency (RF) energy in the microwave range while being used. They also emit very low levels of RF when in standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known

adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

### 2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit Radio Frequency (RF)



energy at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the

best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

# Safety

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

### 3. What kinds of phones are the subject of this update?

The term “wireless phone” refers here to handheld wireless phones with built-in antennas, often called “cell”, “mobile”, or “PCS” phones. These types of wireless phones can expose the user to measurable Radio Frequency (RF) energy because of the short distance between the phone and the user’s head.

These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit

connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

#### **4. What are the results of the research done already?**

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of Radio Frequency (RF) energy exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that

had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we do not know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from

wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

## **5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?**

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more

years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop — if they do — may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

## **6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?**

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that

high priority animal studies are conducted to address important questions about the effects of exposure to Radio Frequency (RF) energy.

The FDA has been a leading participant in the World Health Organization International Electro Magnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues.

The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research And Development Agreement (CRADA) to do research on

wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

### **7. How can I find out how much Radio Frequency energy exposure I can get by using my wireless phone?**

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit Radio Frequency (RF) energy exposures.

# Safety

The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless phones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website

(<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

## **8. What has the FDA done to measure the Radio Frequency energy coming from wireless phones?**

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the Radio Frequency (RF) energy exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, "Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental

Techniques”, sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

## 9. What steps can I take to reduce my exposure to Radio Frequency energy from my wireless phone?

If there is a risk from these products — and at this point we do not know that there is — it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to Radio Frequency (RF) energy. Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off

# Safety

dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

## 10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to Radio Frequency (RF) energy, the measures

described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.



## 11. What about wireless phone interference with medical equipment?

Radio Frequency (RF) energy from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure Electro Magnetic Interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI.

The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000.

The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

## 12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones  
(<http://www.fda.gov/cellphones/>)

Federal Communications Commission (FCC) RF Safety Program  
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection  
(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project  
(<http://www.who.int/emf>)

National Radiological Protection Board (UK)  
(<http://www.hpa.org.uk/radiation/>)

## 10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the

speed dial function without taking your attention off the road.

2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
5. Don't take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Do not get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.

# Safety

6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light, or otherwise stationary. But if you need to dial while driving, follow this simple tip -- dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations -- with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard, or medical emergency. Remember, it's a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in

progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.

10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other

special non-emergency wireless number.

The above tips are meant as general guidelines. Before deciding to use your mobile device while operating a vehicle, it is recommended that you consult your applicable jurisdiction's local laws or other regulations regarding such use. Such laws or other regulations may prohibit or otherwise restrict the manner in which a driver may use his or her phone while operating a vehicle.

# Safety

## Consumer Information on SAR

### (Specific Absorption Rate)

**This Model Phone Meets the Government's Requirements for Exposure to Radio Waves.** Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These FCC exposure limits are derived from the recommendations of two expert organizations, the National Council on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE). In both cases, the recommendations were developed by scientific and

engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg). The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

Tests for SAR are conducted using standard operating positions specified by the FCC

with the phone transmitting at its highest certified power level in all tested frequency bands.

Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

This device was tested for typical body-worn operations with the back of the phone kept 0.79 inches (2.0 cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.79 inches (2.0 cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.79 inches (2.0 cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

The FCC has granted an Equipment Authorization for this

# Safety

model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines.

The highest SAR value for this model phone when tested for use at the ear is 1.22 W/kg and when worn on the body, as described in this user's manual, is 0.603 W/kg. While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID.

To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed

somewhere on the case of the phone. Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org/>

\*In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.



## FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are

more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

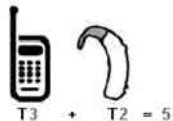
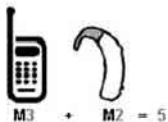
# Safety

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

**T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/higher of the two ratings.

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for

normal use. A sum of 6 is considered for best use.



In the above example, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This is synonymous for T ratings. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that is acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT

marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

## **For information about hearing aids and digital wireless phones**

### **FCC Hearing Aid Compatibility and Volume Control**

<http://www.fcc.gov/cgb/dro/hearing.html>

### **Gallaudet University, RERC**

<http://tap.Gallaudet.edu/DigWireless.KS/DigWireless.htm>

### **Hearing Loss Association of America [HLAA]**

<http://www.hearingloss.org/learn/cellphonetech.asp>

### **The Hearing Aid Compatibility FCC Order**

[http://hraunfoss.fcc.gov/edocs\\_public/attachmatch/FCC-03-168A1.pdf](http://hraunfoss.fcc.gov/edocs_public/attachmatch/FCC-03-168A1.pdf)

# Accessories

There are a variety of accessories available for your mobile phone. Consult your local dealer for availability. Optional items are sold separately.

---

## Battery Charger

The battery charger allows you to charge your phone.



---

## Battery

Standard battery is available.



---

## Vehicle Power Charger

The vehicle power charger allows you to operate the phone and trickle charge the phone's battery from your vehicle.



# Limited Warranty Statement

## 1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

- (1) The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
- (2) The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
- (3) This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S, including Alaska, Hawaii, U.S. Territories and Canada.
- (4) The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
- (6) The customer shall bear the cost of shipping the product to the Customer Service

# Limited Warranty Statement

Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

## ***2. WHAT THIS WARRANTY DOES NOT COVER:***

- (1) Defects or damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise,

including, but not limited to any implied warranty of marketability or fitness for a particular use.

- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).

### **3. WHAT LG WILL DO:**

“LG will, at its sole option, either repair, replace or refund the

purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent re-conditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.”

### **4. STATE LAW RIGHTS:**

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN.

# Limited Warranty Statement

LG SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

## **5. HOW TO GET WARRANTY SERVICE:**

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

**Tel. 1-800-793-8896 or Fax. 1-800-448-4026**

Or visit <http://us.lgservice.com>.  
Correspondence may also be mailed to:

LG Electronics Service- Mobile Handsets

P.O. Box 240007, Huntsville, AL 35824

**DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS.** Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.



## A

---

Accessories 114  
Airplane Mode 75  
Alarm Clock 62  
Alert Type 66  
All Calls 56  
Answer Options 74  
Audios 50  
Auto Retry 74  
Auto Volume 75  
Access Apps 41  
Access Info 42  
Access Shop 41  
Access Web 43

## B

---

Backlight 69  
Banner 69  
Battery 18  
Battery Charge Level 19  
Bluetooth Info 78  
Bluetooth® 76

## C

---

Calculator 64  
Calendar 62  
Call Settings 74  
Call Timer 56  
Call Waiting 22  
Caller ID 23  
Change Lock Code 73  
Charging the Battery 18  
Clocks & Calendar 70  
Color Schemes 71  
Consumer Information on SAR 108  
Contact List 52  
Contacts 52  
Correcting Dialing Mistakes 20

## D

---

Data 56  
Data Counter 57  
Delete All 40

Dialed Calls 56  
Display 68  
Drafts 37  
Driver Safety Tips 104

## E

---

Emergency #s 72  
Ez Tip Calc 63

## F

---

FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices 111  
FDA Consumer Update 94  
Flip Tone 67  
Font Settings 70

## G

---

Getting Started with Your Phone 18  
Groups 54

# Index

## I

Images 49  
Important Safety  
Precautions 1  
Inbox 34

## L

Languages 70  
Limited Warranty  
Statement 115  
Location 82  
Lock Mode 22  
Lock Phone 71

## M

Making Calls 20  
Memory 83  
Menu Style 69  
Menus Overview 16  
Message Alerts 66  
Messaging 30  
Missed Calls 55  
Multimedia 46

Music 57  
Mute Function 22  
My Bluetooth Name  
78  
My Circle 53  
My Menu 61  
My Name Card 55  
My Visibility 78

## N

Network 81  
New Contact 52  
New Picture Message  
32  
New Text Message 30  
Notepad 63

## O

One-Touch Dial 74

## P

Paired Devices 77  
Phone Info 83

Phone Overview 14  
Power 78  
Power On/Off Tone 67

## Q

Quick Access to  
Convenient Features  
22

## R

Received Calls 56  
Receiving Calls 21  
Recent Calls 55  
Record Video 47  
Record Voice 48  
Redialing Calls 21  
Reset Default 73  
Restrict Calls 72  
Ringer 65

## S

Safety 84  
Safety Information 88

Screen Icons 20  
Security 71  
Sent 35  
Service Alerts 67  
Settings 38, 65  
Shuffle 51  
Signal Strength 19  
Software Update 83  
Sound 65  
Speed Dialing 23  
Speed Dials 54  
Start Browser 43  
Stopwatch 65  
System 81

---

## T

---

Table of Contents 4  
Take Photo 46  
Technical Details 10  
Templates 38  
Text Input 24  
TIA Safety Information  
84  
Tools 61

Touch Key Vibrate 83  
TTY Mode 76  
Turning the Phone On  
and Off 19

---

## U

---

Unit Converter 65  
USB Setting 79  
Using Phone Menus  
30

---

## V

---

Videos 49  
Voice Command 61  
Voice Privacy 75  
Voicemail 37  
Volume 66  
Volume Quick  
Adjustment 22

---

## W

---

Wallpaper 68  
Web Messages 46

Web Settings 46  
World Clock 64