

# central systems

Installation, Operation and Maintenance

---



 **Dometic**  
MARINE AIR

Direct Expansion Split System AC  
Revised: 20151106  
L-2272



## PREFACE

Congratulations on the purchase of your Marine Air Systems' CENTRAL SYSTEMS air conditioner. No matter which of the following features was the reason for your purchase of this air conditioner, we are sure it will meet your needs and will give you many years of efficient and trouble free use. The CENTRAL SYSTEMS units are split-system direct expansion air conditioners designed for marine applications incorporating the following features:

- High efficiency compressors provide significant reductions in amperage draw
- Cupronickel condenser coil enclosed in a copper shell resists corrosion
- Two sets of vibration isolators for quieter performance
- Pre-charged and pre-wired systems for easy installation
- Charge Guard® ensures environmental protection and refrigeration system integrity
- Rotatable insulated blower assemblies on air handlers
- Evaporator coils with raised lance fins and rifled tubing for maximum efficiency
- Air handlers have insulated drain pans with multiple condensate drain locations

This manual is intended to provide the information necessary to ensure proper installation, operation, and maintenance of the unit. Improper installation or misunderstood operating procedures can result in unsatisfactory performance and/or premature failure of these units, so before proceeding ***please read this manual completely.***

This unit is covered under the existing Marine Air Systems' warranty policy contained in this manual. In the interest of product improvement, Marine Air Systems' specifications and design are subject to change without prior notice.

### MARINE AIR SYSTEMS

Marine Air Systems (MAS) is a product of Dometic Corporation. Dometic is a recognized leader in the design and manufacture of high-performance comfort control systems, refrigeration products and battery charging products for demanding environments, including commercial and recreational marine craft, vehicles and other applications. We offer an unparalleled scope of products, dealer networks, applications support, engineering resources and production capabilities throughout the world. Our team has many years of experience in the design, manufacture, application and support of our products. Our practical experience and design capability allows our application engineers and sales representatives to offer optimum solutions for your environmental control requirements. Product lines also include well known Cruisair®, Grunert®, and Sentry™.

### IF YOU HAVE A DIGITAL CONTROL

Please refer to either the Elite Control manual or the Passport I/O Control manual for installation and operation of those digital control panels. Mechanical control information and wiring diagrams for both types of controls are in this manual.

# TABLE OF CONTENTS

## INSTALLATION

|   |       |
|---|-------|
| Unpacking and Inspection .....                              | 4     |
| Clean Air Act Amendments of 1990 .....                      | 4     |
| How It Works .....  | 4     |
| Safety Considerations .....                                 | 5     |
| Refrigerant Connection Sizes .....                          | 5     |
| Placement of System (Tools Required) .....                  | 6     |
| Mounting the Condensing Unit .....                          | 7     |
| Mounting the Air Handler .....                              | 7     |
| Condensate Drain Lines .....                                | 7     |
| Copper Line-Sets .....                                      | 7     |
| Single Thickness Flare Procedure .....                      | 8     |
| Leak Checking of the System .....                           | 8     |
| Pressure Test .....   | 8     |
| Leak Check .....  | 9     |
| Evacuating and Charging the System .....                    | 9     |
| Evacuation .....  | 9     |
| Charging .....  | 10    |
| Refrigerant Temperature & Pressure .....                    | 11    |
| Insulating the Line-Set .....                               | 11    |
| The Heating Cycle .....                                     | 11    |
| Central Systems: 6k-16k .....                               | 12    |
| Multi Ton Systems: 24k-60k .....                            | 12    |
| Refrigerant System Schematics .....                         | 13    |
| Supply & Return Air Grilles .....                           | 14    |
| Ducting .....   | 14    |
| Seawater Pump and Plumbing .....                            | 15    |
| Electrical Connections, Grounding and Bonding .....         | 16    |
| 3 Phase Notice .....  | 16    |
| Central Systems Wiring Diagrams .....                       | 17-19 |
| Manual Control Panel (MCP) Installation .....               | 20    |
| Slave Fan Speed Control .....                               | 21    |
| Installation Checklist (review prior to installation) ..... | 22    |

## OPERATION

|  |       |
|--|-------|
| Manual Control Panel (MCP) Operation ..... | 20    |
| Quick Start Operations Checklist .....     | 22    |
| Troubleshooting Guidelines .....           | 23-28 |

## MAINTENANCE

|  |    |
|--|----|
| Seawater System, Return Air Filters, Winterization ..... | 29 |
| Manufacturers Limited Warranty Agreement .....           | 30 |
| Domestic Distributors listing .....                      | 31 |

## REVISION HISTORY:

Original Print: July 1998 - Revised: 4/99, 5/99, 6/99, 11/01, 5/03, 7/03, 2/04

# INSTALLATION

## UNPACKING AND INSPECTION

When the equipment is received, all items should be carefully checked against the packing list to ensure all cartons have been received. Move units in the normal "up" orientation as indicated by the arrows on each carton. Examine cartons for shipping damage, removing the units from the cartons if necessary. If the unit is damaged, the carrier should make the proper notation on the delivery receipt acknowledging the damage.

**CAUTION:** When unpacking and installing the 2 knob control, care must be taken not to kink or break the copper cap tube when uncoiling the sensing bulb. The cap tube is hollow and kinking or sharp bends will inhibit system operation.

## CLEAN AIR ACT AMENDMENTS OF 1990 [TITLE VI - SECTION 608(C-1)]

*"Effective July 1, 1992, it shall be unlawful for any person, in the course of maintaining, servicing, repairing, or disposing of an appliance or industrial process refrigeration, to knowingly vent or otherwise knowingly release or dispose of any Class I\* or Class II\*\* substance used as a refrigerant in such appliance (or industrial process refrigeration) in a manner which permits such substance to enter the environment. De minimis releases associated with good faith attempts to recapture and recycle or safely dispose of any such substances shall not be subject to the prohibition set forth in the proceeding sentence."*

*\*Class I substances include CFC-12*

*\*\*Class II substances include HCFC-22*

## HOW IT WORKS

Your split-system air conditioner consists of four main components divided into two units and a refrigerant gas circulating through the system. The air handler consists of a blower (fan) and an evaporator coil, and the condensing unit consists of a compressor and a condenser coil. A copper line set connects the air handler(s) and the condensing unit to each other. The air handler blower draws warm humid cabin air across the fins on the evaporator where the heat from the air is transferred to the refrigerant in the evaporator coil. (The moisture in the air is captured on the evaporator coil by forming condensation as the air is cooled.) As the refrigerant evaporates from a liquid into a gas it absorbs the heat from the cabin air. The compressor then compresses the refrigerant gas and pumps it through the outer tube in the condenser coil. The seawater pump circulates cool seawater through the inner tube in the condenser coil; this cools the refrigerant and condenses it into a liquid. The heat from the refrigerant is exchanged to the seawater and discharged overboard. The liquid refrigerant is then passed through the evaporator coil and the cycle repeats. Removing heat and moisture from the cabin air lowers its temperature and humidity levels. The conditioned air is blown through the ducting and out the supply air grille(s).

For reverse cycle heating, the refrigerant flows in the opposite direction through the reversing valve. Heat is transferred from the seawater in the condenser coil to the refrigerant and then to the air blowing through the evaporator into the cabin. For a detailed explanation, see The Heating Cycle section of this manual.

Seawater temperature will directly affect the a/c unit's, if revers cycle, efficiency. This a/c unit can effectively cool your boat in water temperatures up to 90°F and heat in water as low as 40°F.

## SAFETY CONSIDERATIONS

***Never install your air conditioner in the bilge or engine room areas. Insure that the selected location is sealed from direct access to bilge and/or engine room vapors. Do not terminate condensate drain line within three (3) feet of any outlet of engine or generator exhaust systems, nor in a compartment housing an engine or generator, nor in a bilge, unless the drain is connected properly to a sealed condensate or shower sump pump.***

Installation and servicing of this system can be hazardous due to system pressure and electrical components. When working on this equipment, always observe precautions described in the literature, tags and labels attached to the unit. Follow all safety codes. Wear safety glasses and work gloves and place a fire extinguisher close to the work area. The following is a summary of the labels on the unit:

**! DANGER** ELECTRICAL SHOCK HAZARD. DISCONNECT VOLTAGE AT MAIN PANEL OR POWER SOURCE BEFORE OPENING ANY COVER. FAILURE TO COMPLY MAY RESULT IN INJURY OR DEATH.

**! WARNING** THIS COMPONENT DOES NOT MEET FEDERAL REQUIREMENTS FOR IGNITION PROTECTION. DO NOT INSTALL IN SPACES CONTAINING GASOLINE ENGINES, TANKS, LPG/CPG CYLINDERS, REGULATORS, VALVES OR FUEL LINE FITTINGS. FAILURE TO COMPLY MAY RESULT IN INJURY OR DEATH

**NOTICE** THIS COMPONENT IS CHARGED WITH HYDROCHLOROFLUOROCARBON (HCFC) REFRIGERANT R22. EFFECTIVE JULY 1, 1992 IT SHALL BE UNLAWFUL FOR ANY PERSON TO KNOWINGLY VENT OR OTHERWISE KNOWINGLY RELEASE ANY CLASS 1 (CFC) OR CLASS 2 (HCFC) SUBSTANCE AS A REFRIGERANT IN A MANNER WHICH PERMITS SUCH SUBSTANCE TO ENTER THE ATMOSPHERE PER THE CLEAN AIR ACT OF 1990. PUBLIC LAW 101-549 TITLE IV SECTION 608-C. FAILURE TO COMPLY MAY RESULT IN SEVERE PENALTIES, INCLUDING FINES AND IMPRISONMENT.

**! WARNING** TO MINIMIZE THE HAZARD OF ELECTRICAL SHOCK AND PERSONAL INJURY, THIS COMPONENT MUST BE EFFECTIVELY GROUNDED. REFER TO THE INSTALLATION GUIDELINES FOR FURTHER INFORMATION.

CAUTION! HIGH COMPRESSOR TEMPERATURE IS NORMAL. **DO NOT TOUCH.**

### REFRIGERANT CONNECTION SIZES

The Central System condensing units and Multi Ton condensing units are connected to their respective evaporators (air handlers) by copper line sets. Copper line sets come standard with flare fittings, quick disconnect fittings are available upon request. The table below shows connection sizes for all units.


|                           |          |      |      |          |      |
|---------------------------|----------|------|------|----------|------|
| Condensing Unit Size      | 6/9/12   | 16   | 24   | 30/36/48 | 60   |
| Evaporator Unit Size      | 4/6/9/12 | 16   | 24   | 36/48    | N/A  |
| Discharge Connection Size | 1/4"     | 1/4" | 3/8" | 3/8"     | 5/8" |
| Suction Connection Size   | 3/8"     | 1/2" | 5/8" | 3/4"     | 7/8" |

## PLACEMENT OF THE SYSTEM

Selecting a good location for your air conditioner is the most important part of your preparations. Be sure to consider the size of the area you are cooling, the air distribution needs, and the size of the unit you have chosen. Keeping in mind that cool air has a tendency to fall, it is highly recommended that you locate the supply air grille as high as possible in the cabin. Plan all connections which must be made prior to starting installation, including ducting, grilles, copper line-set, condensate drain, cooling water in and out, electrical power connections, location of control panel, and seawater pump placement and plumbing, to assure easy access for installation and servicing. See diagram below.

### Tools required

- standard tool box
- service wrench
- flaring tool
- refrigerant gauge manifold
- refrigerant tank
- nitrogen tank
- vacuum pump
- charging cylinder
- micron gauge
- electronic leak detector
- drill/hole saw
- jig saw
- insulated tape
- duct tape
- electrical tape
- teflon tape
- Beding compound to seal thru hull fittings
- Hardware to secure unit, pump, strainer, grilles & control panel

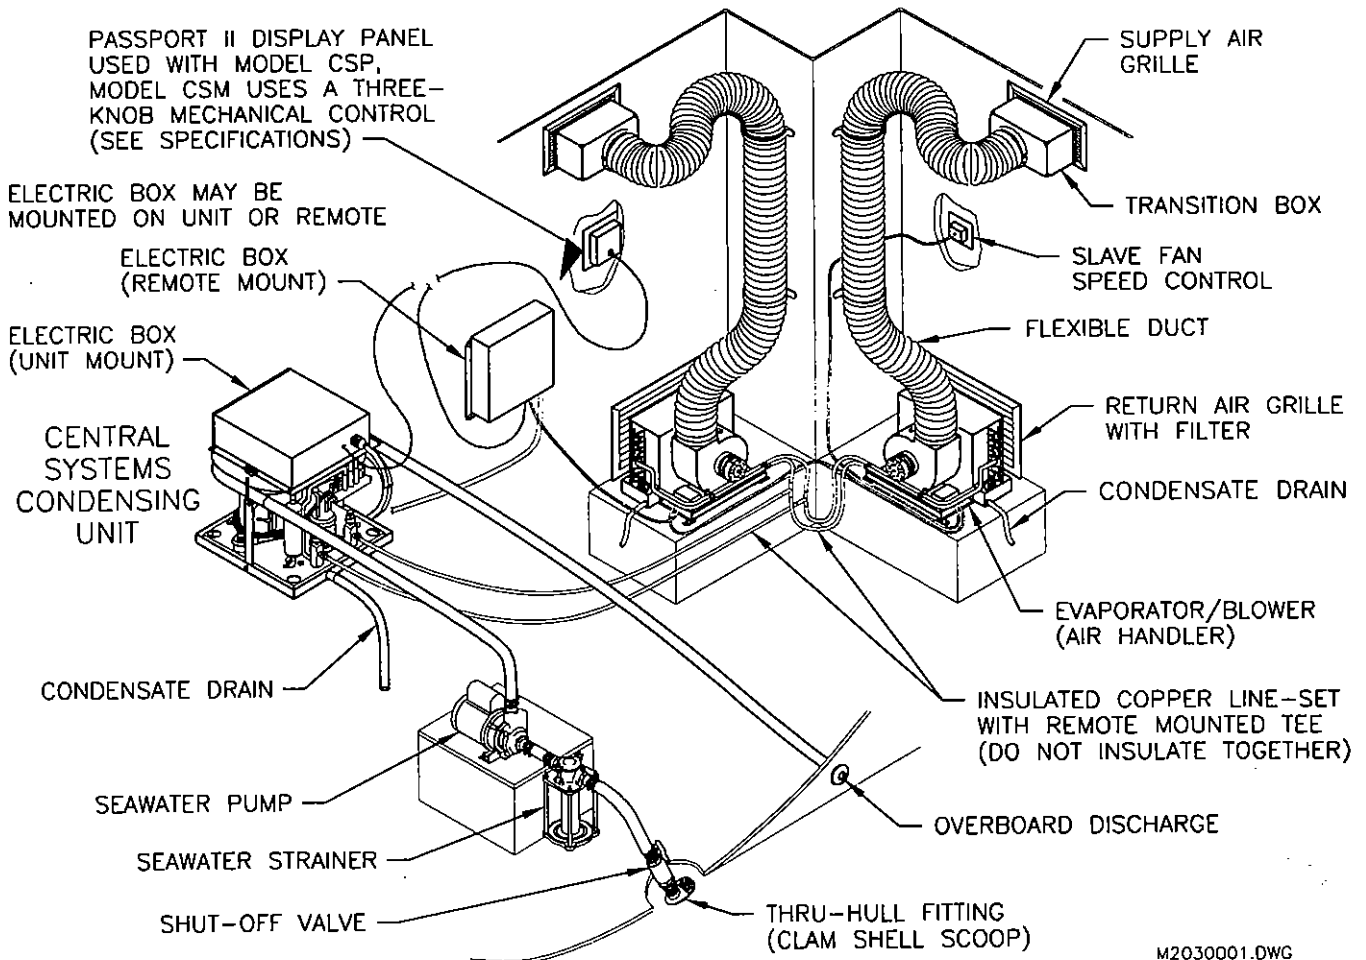

M2030001.DWG

## MOUNTING THE CONDENSING UNIT

The location of the condensing unit should be dry and accessible for service, and provide the most direct routing of refrigerant line sets relative to the air handler location(s). The condensing unit should be installed lower than the air handlers so that the refrigerant oil returns to the compressor. The vibration isolated condensing unit should be secured to a horizontal shelf that is designed for the weight of the unit and torsion loads from the vessel's movement. The multi ton unit's electrical box may be remotely mounted to a bulkhead or sturdy frame using the hardware provided. However, the electrical box does contain a position sensitive relay. The box can be remote mounted in the same position as it sits on the condensing unit or, if another position is desired, open the box and rotate the relay bracket to the proper position. The 6-16K unit's electrical box must remain mounted on the unit. The condensing unit should be mounted with the drain line pointing aft; the base pan can be rotated to accomplish this configuration.

## MOUNTING THE AIR HANDLER

The air handler should be installed as low as possible (such as under a V-berth, dinette seat or bottom of a locker) and the supply air should be ducted as high as possible. This type of installation creates an ideal air flow condition and will prevent short cycling. Securely fasten the air handler to a solid, level surface using the two mounting clips on the drain pan and the vibration isolators on the blower bracket with the four screws provided. Be sure that the blower motor has at least one inch (1") of air space in front of it to provide proper ventilation. Rotate the blower, if necessary, to provide the most direct route of ducting to the supply air grille(s) or transition boxes. To rotate the blower, remove the two self-tapping screws from the blower ring (between the blower housing and the evaporator shroud) and remove the two self-tapping screws from the blower mounting bracket. Rotate the blower to the desired position and replace the screws.

## CONDENSATE DRAIN LINES

The air handler condensate drain pan has two ½" FPT drain fittings. Screw the PVC hose barbs provided into the drain fittings using teflon tape for a watertight seal. The two drains may be teed together, providing there is a minimum drop of two inches (2") from the drain pan to the tee fitting. The condensing unit has a 5/8" O.D. drain pipe on its condensate drain pan. Use 5/8" hose and stainless steel hose clamps on all drain lines. During conditions of high humidity, condensate may be produced at a rate of up to two gallons per hour. With this in mind, it is important to route condensate drains downward to a sump pump. Do not route air handler condensate drain lines directly to the bilge (see warning below). Condensing unit drain line may terminate in the bilge because the condensing unit does not handle air. After the condensate drain installation is complete, test the installation by pouring a quart of water into the pan and checking for good flow. Occasionally pour a bleach and water solution into the pan to clean any algae or sediment out of the lines.

**WARNING:** Do not terminate air handler condensate drain lines within three (3) feet of any outlet of engine exhaust systems, nor in a compartment housing an engine or generator, nor in a bilge, unless the drain is properly connected to a sealed condensate or shower sump pump. Exhaust and/or bilge fumes can travel up a drain line and mix with the return air blowing into living areas.

## COPPER LINE-SETS

Refrigeration grade tubing is required to connect the refrigerant circuit from the evaporator to the condensing unit. Refrigerant tubing is normally soft drawn and nitrogen purged. All refrigerant lines should be capped to protect against moisture and dust infiltration until the flare connections are made to the

evaporator and condenser base valves. Extreme care must be taken not to crush or kink any portion of either line set. Use proper tools for line bending, avoiding sharp bends or kinks. Any kinked or crushed section must be replaced. Any excess tubing should be coiled in a horizontal plane and secured to prevent vibration. There should be no vertical loops (oil traps) in the copper lines. Keep tubing clear of bilge water, steering cables and similar obstructions. Secure tubing approximately every 12" to prevent vibration and/or chafing. **DO NOT CRUSH INSULATION.**

When using multiple evaporators, ensure that the dual, triple or quad fittings are sized correctly to allow correct size tubing to be connected to air handler fittings and provide proper refrigerant flow to and from each air handler.

## **SINGLE THICKNESS FLARE PROCEDURE**

The liquid and the suction line are to be flared and connected to the base mounted valves. Refrigeration flares must be perfect!!! Unsatisfactory installations result from faulty flare connections. **CHECK YOUR FLARING TOOL.** Ensure that the cone is clean, if the cone is scratched or damaged, do not attempt to make refrigeration quality flares with it. Use a refrigeration flaring tool, not a plumbing tool. See next section for proper flaring procedure.

Use a typical flaring tool consisting of Flare Block and on screw driven flaring cone. Cut and debur copper tubing—being careful not to allow any contaminants to fall inside the tubing. Slide flaring nut onto tubing before making the flare. Insert end of copper tubing into matching size block hole and push end through to line up with height gauge on flare yoke. Tighten clamp to secure tubing. Put a drop of refrigeration grade oil on the flaring cone. Tighten 1/2 turn then back off 1/4 turn. Repeat tightening and loosening procedure until flare is fully formed. Some service technicians make the flare using one continuous motion of the flaring tool. This technique can work-harden the tubing and make it more likely to split. Do not over-tighten the spinning tool because this will thin the wall of the tubing at the flare and weaken it.

Check each flare for splits and burrs. The flare nut should fit around the flare easily without contacting threads when nut is pulled to the end. Be certain that flares are expanded to provide a complete seat on the fittings. If the flare is over expanded and touching the flare nut threads, do not attempt to draw it up, remake the flare. The flare should almost fill the flare nut but not touch the threads. **IMPORTANT:** Add a drop of refrigerant oil to both the inside and outside of the flare to prevent galling (twisting and chafing) the copper flare. Hold the fitting with a backup wrench and turn only the flare nut when tightening a refrigeration connection. Leave enough length in the tubing so that the connection may be cut off and remade if necessary.

## **LEAK CHECKING OF THE SYSTEM**

Once the refrigerant line-set connections are made a pressure test and leak check of the system must be performed. **NOTE!** The base valves on the unit are shipped in the Front Seated Position to retain the refrigerant in the condensing unit. These valves must not be opened until the system is ready for operation.

### **PRESSURE TEST**

- 1) Connect the high and low side hoses of your gauge manifold to the condenser base valves.
- 2) Connect the charging hose to your **Nitrogen** tank and set the regulator to a maximum pressure of 300psig. **CAUTION!** Pressurizing the system above 120psig will put the needle of the low side gauge in the retard section and can damage the gauge. Prior to pressurizing the system it is recommended that the hose for the low side gauge be removed and the service port capped tightly to



retain the pressure. Compressed air or CO<sub>2</sub> should not be used as they can add moisture and other contaminants to the system! Refrigerant pressure varies with temperature and should not be used unless needed for electronic leak detection. **CAUTION!** Exceeding 300psig is dangerous due to the possibility of rupturing hoses or line-set connections due to poor flares.

- 3) Once the regulator on the nitrogen tank is set, open the tank valve. Crack open the high side valve on the gauge manifold and the low side valve if used. The needle(s) will rise as the pressure enters the line set and evaporator(s). Once the point of the predetermined pressure has been reached, close the gauge valve(s). Monitor the gauge reading(s) after the pressure has stabilized (should be less than a minute). The pressure should be left in the system for a minimum of 15 minutes. The gauge reading should remain constant, if the gauge pressure drops then there is a leak in the system. Refer to the leak check section to determine the location of the leak(s). If the gauge pressure holds then proceed to the evacuation and charging sections. **NOTE!** It is sometimes assumed that all leaks must be on the equipment when in reality they can also occur on the gauge manifold and hoses. Before use, inspect the fittings on the manifold for tightness and if the hoses are damaged or gaskets worn replace them.

### LEAK CHECK

- 1) A rapid drop in gauge pressure indicates a large leak or several small ones. Usually these can be detected by a hissing sound at the leaking fitting or felt by placing your hand around the fitting. **NOTE!** If the pipe insulation is encasing a leaking fitting the escaping nitrogen can be forced down the insulation to a remote location and give a false leak indication.
- 2) Small leaks, indicated by a slow drop in gauge pressure, can be difficult to locate.
  - a) A soap solution can be applied to the fittings. Bubbles will indicate leaks. **CAUTION!** Care must be taken to ensure soap solution does not ingress into a leaking fitting(s) and contaminate the system. After you have finished leak checking, clean off soap solution.
  - b) If the leak cannot be detected by soap solution, an electronic leak detector should be used. For this procedure a small quantity of refrigerant needs to be added to the nitrogen in the system.
- 3) The above procedures are to be repeated until all leaks are found and repaired. Once the system holds pressure, the nitrogen or nitrogen/refrigerant mixture is to be purged from the system. The line set and evaporator(s) are now ready for evacuation. **CAUTION!** When purging high-pressure nitrogen from the system wear safety glasses and gloves. Secure the hose end to prevent injury to personnel or property damage. Do not point the hose towards personnel or property. To prevent inhalation, the nitrogen should not be expelled into a confined space where personnel are working; the work area should be well ventilated. **If the nitrogen is mixed with refrigerant, contact with an open flame or hot surface could create PHOSGENE GAS, which can cause respiratory problems or death.**

### EVACUATING AND CHARGING THE SYSTEM

**WARNING!** If skin or eyes come into contact with refrigerant, flush thoroughly with water. Skin contact with refrigerant can cause frostbite. Wear gloves at all times.

### EVACUATION

Connect the center hose from the gauge manifold to the vacuum pump. Leave the high side hose connected to its base valve. If the low side hose is not connected to its respective base valve then do so. A micron gauge should be installed in the high or low side hose with an isolation valve (some gauge manifolds have an additional vacuum/charging port for this purpose). It should be noted that the base valves are front seated and should not be cracked open at this point. Open both hand valves on the gauge manifold as far as they will go (turn valves fully CCW). Open the isolation valve on the micron gauge. Start the vacuum pump, allow it to operate for half an hour and

then close the gauge manifold hand valves (CW). Observe the gauges for 10 minutes to see if the system holds its vacuum. If a leak is indicated then follow the leak check procedure above. Be sure to shut off the isolation valve for the micron gauge before pressurizing the system. If no leak is indicated, open (CCW) the hand valves on your gauge manifold and allow the vacuum pump to continue evacuating the system. When a vacuum of 500 microns (29.99in.Hg) is achieved, close both gauge manifold hand valves but do not close the isolation valve to the micron gauge. At this point the vacuum pump can be turned off. If the pump is turned off before the gauge manifold hand valves are closed the vacuum will be lost and the evacuation procedure will have to be repeated. Monitor the micron gauge again to see if a leak is indicated. If the system holds its integrity then the isolation valve for the micron gauge can be closed and the system is ready for charging.

## CHARGING

The base valves can now be opened starting with the liquid line valve first. Rotate the valve stem counter clockwise to the mid-seated position (cracked). The pressure will rise quickly on the high side gauge followed by a steady rise on the low side gauge as the refrigerant passes through the metering device. Open the suction side base valve to the cracked position also. This will allow the system pressures to be monitored when the unit is running and allow for the addition of refrigerant if necessary. The charge supplied with the condensing unit is sufficient for the condensing unit and the evaporator. The following chart shows the refrigerant charge of each unit as shipped from the factory.

|    | CS-6K | CS-9K | CS-12K | CS-16K | CS-24K | CS-30K | CS-36K | CS-48K | CS-60K |
|----|-------|-------|--------|--------|--------|--------|--------|--------|--------|
| Oz | 20    | 21    | 24     | 24     | 46     | 50     | 56     | 76     | 80     |
| Kg | 0.57  | 0.60  | 0.68   | 0.68   | 1.30   | 1.42   | 1.59   | 2.15   | 2.27   |

Evaporators with quick disconnect fittings are charged with one ounce (1 oz) of refrigerant (approximately 75 psig) as a holding charge. Line sets with quick disconnect fittings are factory charged with the amount of refrigerant denoted below in ounces per foot (oz/ft). One foot of line set includes both the liquid and suction lines (see example below chart). Use the chart below to charge line sets constructed in the field. Use this formula to convert ounces to kilograms: 1 oz = 0.0283 kg.

| LINE SIZE   | 1/4" suction | 3/8" suction | 1/2" suction | 5/8" suction | 3/4" suction |
|-------------|--------------|--------------|--------------|--------------|--------------|
| 1/4" liquid | 0.23 oz/ft   | 0.24 oz/ft   | 0.25 oz/ft   | 0.26 oz/ft   | 0.28 oz/ft   |
| 3/8" liquid | -            | 0.64 oz/ft   | 0.65 oz/ft   | 0.67 oz/ft   | 0.68 oz/ft   |
| 1/2" liquid | -            | -            | 1.23 oz/ft   | 1.24 oz/ft   | 1.26 oz/ft   |
| 5/8" liquid | -            | -            | -            | 2.02 oz/ft   | 2.03 oz/ft   |
| 3/4" liquid | -            | -            | -            | -            | 2.76 oz/ft   |

**EXAMPLE:** If a line set is twenty feet (20' long with a 1/4" liquid line and a 3/8" suction line then multiply 20 times **0.24** which equals 4.8 oz of refrigerant in the line set.

- If it is necessary to add refrigerant, connect the center hose from the gauge manifold to the charging cylinder. The cylinder valve should be opened and the hose purged of air. Refrigerant should be added through the low side of the gauge manifold in the form of vapor. However, in certain circumstances it may need to be added as a liquid. If so, it should still be added through the low side but in small amounts at any one time to prevent slugging the compressor. Once the system is charged, the valve on the charging cylinder can be closed but do not remove the hose. The liquid line base valve should now be turned fully counter clockwise (back-seated). Open both gauge manifold valves to allow the residual liquid/vapor in the hoses to return into the suction side. Close the gauge valves and back seat the suction base valve. The hoses can now be removed from the charging cylinder and unit. Put the protective caps back on the service valves.

Special air handlers are used for multiple evaporator applications. Air handler/evaporators used with multi ton condensing units (24K-60K BTU) are equipped with a check valve and either a thermostatic expansion valve (TXV) (24K) or cap tube (6-16K) assembly. These units have a suffix of "M" in the model number to indicate for multi ton use only.

When using two different size air handler/evaporators with a smaller condensing unit (9K-16K BTU), at least one air handler (usually the smaller one) should have a direct expansion (DEX) valve installed as indicated by "DX" in the model number. This valve is adjustable and will allow the system to be balanced. When balancing a multiple evaporator system, adjust the DEX valve on one evaporator until the other evaporator loads up. Turning the adjustment screw clockwise will open the valve allowing more refrigerant to flow. Turning the screw counterclockwise (ccw) will close the valve allowing less refrigerant to flow. NOTE: With the adjustment screw turned fully ccw the valve is still partially open.

## REFRIGERANT TEMPERATURE & PRESSURE

Calculating the high side and low side pressures is difficult due to the variables involved. The high side (liquid line) pressure on a properly operating water-cooled unit is determined by the temperature of the seawater, water flow and how clean the condenser coil is. The low side (suction line) pressure is affected by fan speed, static pressure, and wet and dry bulb readings. For this reason the refrigerant charge should be properly measured into the system for optimum operation (see previous charts). The following chart should be used as a reference to monitor performance in **cool mode** and should not to be used to charge the system.

| Water Temperature   | 40°F    | 50°F    | 60°F    | 70°F    | 80°F    | 90°F    |
|---------------------|---------|---------|---------|---------|---------|---------|
| Head Pressure Range | 144-176 | 153-187 | 162-198 | 180-220 | 198-242 | 220-270 |
| Back Pressure Range | 56-68   | 59-73   | 63-77   | 68-82   | 70-86   | 76-90   |

## INSULATING THE LINE-SETS

- 1) Use ¾" thick closed cell type tube insulation with an inside diameter equal to pipe size. Place dust caps on both ends of pipe. Slide the tube insulation on each pipe prior to making connections.
- 2) After making the connections, push the tube insulation flush against the fitting. Trim if necessary to ensure a smooth application with no air pockets.
- 3) Do not seal insulation until after checking for leaks.
- 4) Pipe insulation joints should be glued, not taped. There must be no air pockets between the pipe and the insulation. **All insulation must be airtight to prevent condensation forming on pipes.**
- 5) If the tube insulation is installed after the refrigerant circuit is connected, proceed as follows:
  - Use pre-slit insulation or cut existing tube insulation and wrap around pipe.
  - Apply insulation adhesive thoroughly along both cut edges.
  - Press the glued edges back together making sure a proper bond is made with no openings, gaps or air pockets. Do not use wire ties to hold insulation around pipe in lieu of adhesive.
- 6) Tie wraps, wire ties or zip ties should not be used to secure insulation. Using these will compress the insulation and cause poor performance leading to condensation drips and damage to the vessel.
- 7) Use insulation tape provided to wrap the flare nut and base valve connections at both ends of each the line set. There should be no exposed copper or brass on the line set.
- 8) **Do not insulate both lines together.**
- 9) Insulate the suction line only on a multi ton condensing unit system using models CS24-CS60.
- 10) Insulate the suction and liquid lines on a 6K-16K condensing unit system using models CS6-CS16.

## THE HEATING CYCLE

**MULTITON SYSTEMS WARNING!** Care should be taken when attaching the low side of a gauge manifold in the heat cycle. On multi ton units, the suction line and base valve in the cooling mode become the

hot gas discharge line in heating mode. High-pressure refrigerant can retard and damage a low side gauge. An additional suction side service port is provided on the compressor shell and should be used for all suction pressure readings in the heating mode.

In the following sections the liquid receiver and suction accumulator will not be mentioned; this is to simplify the description of system operation. On all systems and in both modes of operation the configuration of the discharge and suction lines between the reversing valve and compressor remain the same.

## **CENTRAL SYSTEMS: 6K - 16K**

In the **cooling mode** the reversing valve **is not** energized. Hot high-pressure gas is discharged from the compressor through the reversing valve to the water-cooled condenser coil. There the hot gas gives up heat to the cooler water circulating through the coil. The heated water is then discharged overboard. As the gas is cooled it condenses into a liquid. It is then fed to the metering device on the evaporator, which in this case is a capillary tube. The capillary tube is the transition point of the low and high side of the system and regulates the flow of liquid refrigerant into the evaporator. As the liquid travels through the evaporator tubing it absorbs heat from the air passing through the finned coil. This causes the liquid refrigerant to boil off into a vapor. The low-pressure vapor is then returned to the compressor via the suction line and then the reversing valve.

In the **heating mode** the reversing valve **is** energized. The plunger in the valve body moves, changing the direction of the refrigerant flow. The suction line becomes the hot gas discharge line. The hot gas line to the condenser now becomes the suction line. The hot gas flows to the air-cooled evaporator that is now the condenser. The cool air passing across the finned coil absorbs the heat from the refrigerant and warming the air as it is returned into the cabin. As the refrigerant gives up heat it again turns into a liquid. This is fed back through the capillary tubing into the liquid line and starts to boil off. The refrigerant passes through the condenser coil, which is now part of the low side evaporative circuit. Heat is absorbed from the water as it passes through the coil and the refrigerant boils off into a vapor. The vapor returns to the compressor via the reversing valve. The high side gauge should be moved to the other base valve to obtain a high side reading.

## **MULTITON SYSTEMS: 24K - 60K**


In the **cooling mode** the multi ton systems operate in much the same way as the smaller central systems. There is however a significant component configuration change. On the condensing unit there is a TXV (thermostatic expansion valve), which is the metering device, and check valve assembly located between the condenser coil and liquid line base valve. In the cooling mode the refrigerant flows through the condensing unit's check valve, bypassing the TXV. The evaporator coil also has a metering device and check valve combination. Refrigerant cannot flow through this check valve in cool mode and therefore is injected into the evaporator through the metering device. This metering device can either be a TXV or a capillary tube, depending on the evaporator capacity. 24K evaporator/blowers have a TXV and 6-16K units have a capillary tube.

In the **heating mode** the reversing valve **is** energized. Again the plunger in the valve body moves, changing the direction of the refrigerant flow. What was initially the suction line between the condenser and the evaporator is now the hot gas discharge line. The hot gas line to the condenser coil from the reversing valve becomes the suction line. The hot gas flows to the air-cooled evaporator, which is now the condenser. The cool air passing across the finned coil now absorbs the heat from the refrigerant and the warmed air passes into the cabin. As the refrigerant gives up heat, it turns into a liquid. The liquid refrigerant bypasses the metering device via the check valve assembly and is fed into the liquid line. The

# CENTRAL SYSTEMS REFRIGERANT SYSTEM SCHEMATICS


## CS 6-16 IN COOL MODE

DISCHARGE SIDE IS HIGH PRESSURE HOT GAS  
LIQUID SIDE IS HIGH PRESSURE LIQUID  
SUCTION SIDE IS LOW PRESSURE COOL GAS.  
RV = REVERSING VALVE IS NOT ENERGIZED  
CAP = CAPILLARY TUBE (METERING DEVICE)

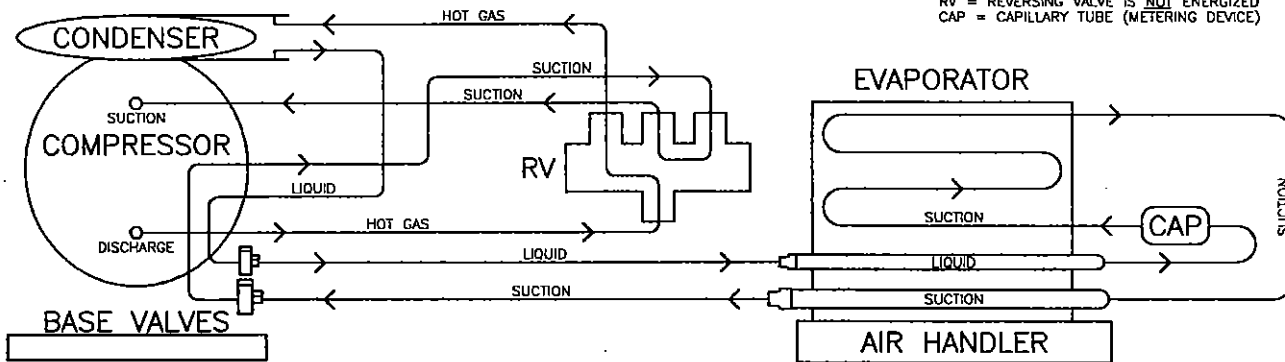


## CS 6-16 IN HEAT MODE

DISCHARGE SIDE IS HIGH PRESSURE HOT GAS  
LIQUID SIDE IS HIGH PRESSURE LIQUID  
SUCTION SIDE IS LOW PRESSURE COOL GAS.  
RV = REVERSING VALVE IS ENERGIZED IN HEAT  
CAP = CAPILLARY TUBE (METERING DEVICE)

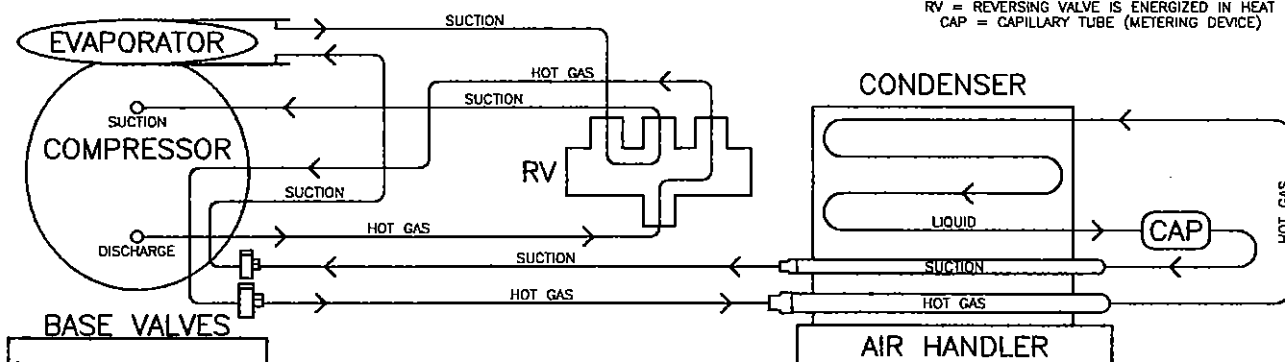


## CS 24-60 MULTI TON IN COOL MODE

DISCHARGE SIDE IS HIGH PRESSURE HOT GAS  
LIQUID SIDE IS HIGH PRESSURE LIQUID  
SUCTION SIDE IS LOW PRESSURE COOL GAS.  
RV = REVERSING VALVE IS NOT ENERGIZED  
CAP = CAPILLARY TUBE (METERING DEVICE)  
TXV = THERMOSTATIC EXPANSION VALVE (METERING DEVICE)  
CHK VLV = CHECK VALVE

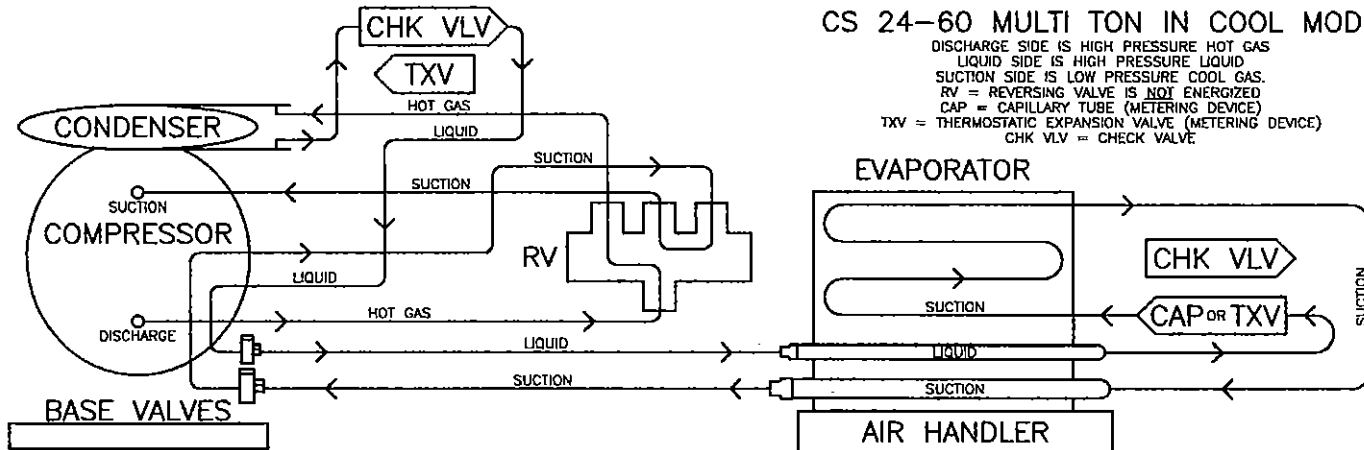

## CS 24-60 MULTI TON IN HEAT MODE

DISCHARGE SIDE IS HIGH PRESSURE HOT GAS  
LIQUID SIDE IS HIGH PRESSURE LIQUID  
SUCTION SIDE IS LOW PRESSURE COOL GAS.  
RV = REVERSING VALVE IS ENERGIZED IN HEAT  
CAP = CAPILLARY TUBE (METERING DEVICE)  
TXV = THERMOSTATIC EXPANSION VALVE (METERING DEVICE)  
CHK VLV = CHECK VALVE

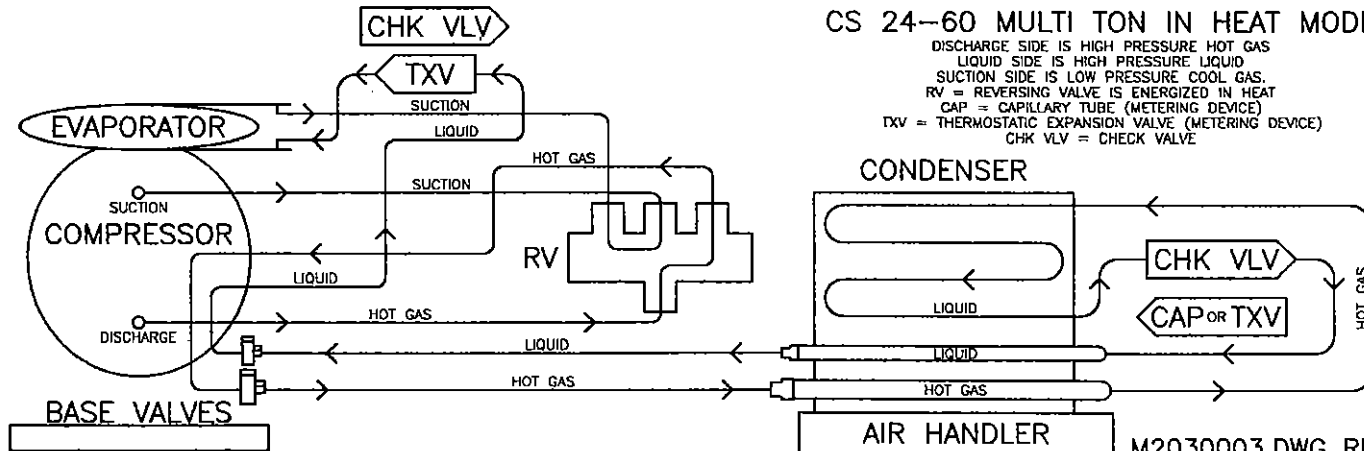

M2030003.DWG REV:B

refrigerant travels along the liquid line to the TXV on the condensing unit where it is metered into the condenser coil, which is now acting as an evaporator. Heat is absorbed from the water by the refrigerant as it passes through the coil. The vapor returns to the compressor via the reversing valve.

## SUPPLY & RETURN AIR GRILLES

Install the supply air grille as high as possible in a location that will provide uniform air distribution throughout the cabin, grille louvers should be directed upward. The return air grille should be installed as low and close to the a/c unit as possible to insure direct uninterrupted airflow to the evaporator. The return air grille should have a minimum four inches (4") of clearance in front of it, free from any furniture or other obstructions. In no instance should a supply air discharge be directed towards a return air grille, as this will cause the system to short cycle. Allow for adequate clearance behind the supply air grille(s) for the transition box and ducting connection. The following table shows minimum grille sizes. See the MAINTENANCE section of this manual for return air filter cleaning instructions.

## DUCTING

Good airflow is critical for the performance of the entire system. It is highly dependent on the quality of the ducting installation. The ducting should be run as straight, smooth and taut as possible minimizing the number of 90 degree bends (two tight 90 degree bends can reduce airflow by 25%). The following table shows minimum duct diameters and their corresponding supply and return air grille minimum areas in square inches. If a transition box is used, the total area of supply air ducts going out of the box should equal the area of the supply duct feeding the box. To calculate the square inch area of a round duct, multiply the radius (which is half of the diameter) by itself ( $r^2$ ) and multiply that number by 3.1416 ( $\pi$ ).

| MODEL             | E4FD/Z     | E6FD/Z     | E9FD/Z     | E12FD/Z    | E16FD/Z    | E24FD/Z    |
|-------------------|------------|------------|------------|------------|------------|------------|
| DUCT DIAMETER     | 5" dia     | 5" dia     | 5" dia     | 6" dia     | 7" dia     | 8" dia     |
| DUCT AREA         | 19.6 sq in | 19.6 sq in | 19.6 sq in | 28.3 sq in | 38.5 sq in | 50.3 sq in |
| Return Air GRILLE | 88 sq in   | 88 sq in   | 98 sq in   | 140 sq in  | 168 sq in  | 280 sq in  |
| Supply Air GRILLE | 40 sq in   | 40 sq in   | 50 sq in   | 70 sq in   | 84 sq in   | 140 sq in  |

### The following is a summary of proper ducting connections:

1. Pull back the fiberglass insulation exposing the inner mylar duct hose.
2. Slide the mylar duct hose around the mount ring until it bottoms out.
3. Screw 3 or 4 stainless steel sheet metal screws through the duct hose into the transition ring.  
Make sure to catch the wire in the duct hose with the heads of the screws. Do not use band clamps, as the hose will slide off.
4. Wrap duct tape around the ducting and ring joint to prevent any air leaks.
5. Pull the insulation back up over the mylar to the ring and tape the joint.
6. Remove excess ducting and use the same connection method at the s/a grille.


### All ducting should:

- Be appropriately sized for each application.
- Run as smoothly and taut as possible.
- Have as few bends or loops as possible.
- Be securely fastened to prevent sagging during boat operation.
- Have all excess ducting lengths trimmed off.
- Not be flattened or kinked.
- Insulated when located in high heat load areas (hull side, mechanical compartments, etc.).
- Be properly protected against potential damage when routed through open areas.

# SEAWATER PUMP AND PLUMBING

Seawater temperature will directly affect the a/c unit's efficiency. This a/c unit can effectively cool your boat in water temperatures up to 90°F and heat (if reverse cycle option is installed) in water as low as 40°F. Several guidelines should be followed during the installation of the seawater system. Since the circulation pump is centrifugal and not self-priming, it must be mounted so that it is always at least one foot below the water line regardless of which tack the vessel is on. The pump may be mounted horizontally or vertically, however the discharge must always be above the inlet. The pump head should be rotated toward the direction of water flow. *Install the seawater speed scoop intake as far below the water line and as close to the keel as possible in any application, but especially on a sailboat, to keep the intake in the water so that air does not get into the system when the boat heels over.* The speed scoop intake must face forward and not be shared with any other pump. A sea cock (shut off valve) must be installed directly on the speed scoop outlet. A seawater strainer is mandatory between the sea cock and pump. *Failure to install a seawater strainer will void the pump warranty.* The seawater system should be installed with an upward incline from the speed scoop & sea cock, through the strainer, to the inlet of the pump and then up to the inlet of the a/c unit's condenser coil. The discharge from the a/c unit should then run to the seawater outlet through hull fitting which should be located where it can be visually checked for water flow and as close as practicable to the waterline to reduce noise. Use only reinforced marine grade hose. All hose connections shall use double/reversed stainless steel hose clamps. Below is a summary of the seawater system installation:

1. Install the speed scoop thru-hull inlet as close to the keel and as far below the water line as possible, facing forward. Bed the scoop with a marine sealant designed for underwater use.
2. Install a bronze, full flow sea cock on the speed scoop thru-hull inlet.
3. Install a seawater strainer below the level of the pump with access to filter.
4. Mount the pump at least one foot below the waterline and above the strainer.
5. Connect the sea cock, strainer and pump with an uphill run of reinforced marine hose.
6. Connect the discharge from the pump uphill to the inlet of the a/c unit's condenser coil. And connect the outlet of the condenser coil to the overboard discharge thru-hull (seawater outlet).
7. Avoid loops, vertical bends (high spots) or the use of 90° elbows with seawater hose (each 90° elbow is equivalent to 2.5' of hose and a 90° elbow on the pump is equivalent to 20' of hose).
8. Double clamp all hose connections with stainless steel clamps, reversing the clamps.
9. Use teflon tape on all threaded connections.
10. *Connect all metallic parts in contact with seawater to the vessel's bonding system including the speed scoop inlet, strainer, pump and the air conditioner. Failure to do so will void warranty.*

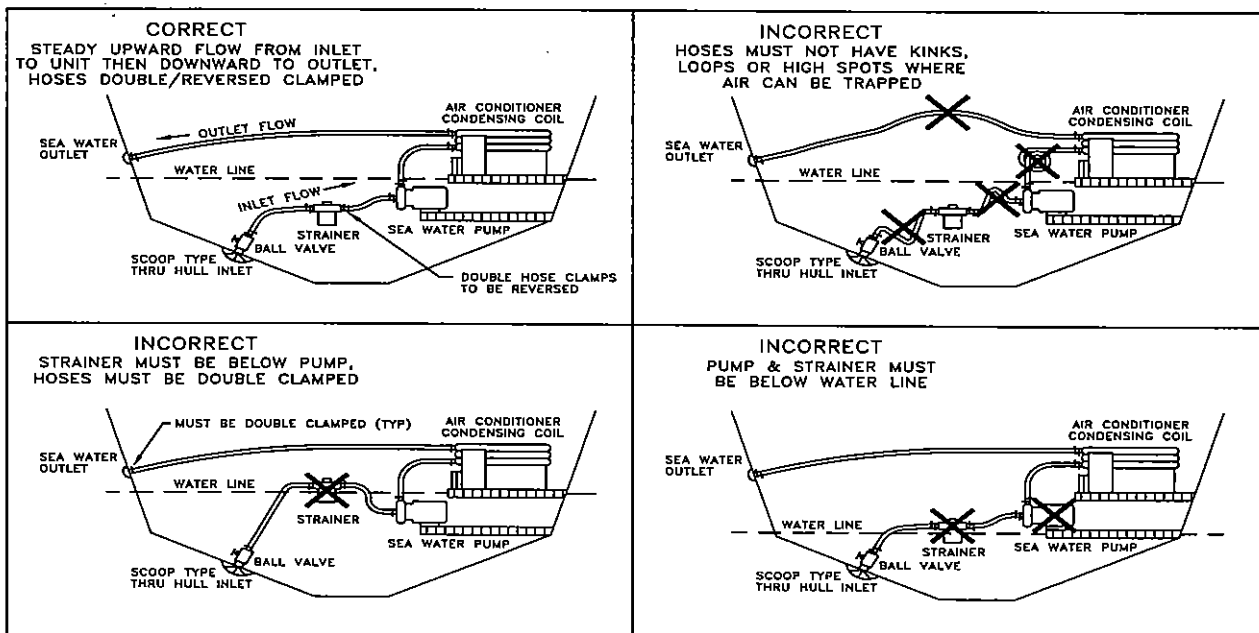

## ELECTRICAL CONNECTIONS, GROUNDING AND BONDING

All a/c units have a terminal strip mounted either inside or outside of the electric box. The terminal strip is labeled for proper connections of the electrical supply, ground wires and pump circuits. Wiring diagrams are provided in the electric box and in this manual. The correct size circuit breaker should be used to protect the system as specified on the a/c unit's data plate label. A minimum of 12 AWG boat cable should be used to supply power to the a/c unit and the seawater pump. All connections shall be made with ring or fork terminals. **Turn off a/c power supply circuit breaker before opening electric box.**

Each a/c unit installed requires its own dedicated circuit breaker. If there is only one a/c unit installed, the seawater pump does not require a circuit breaker; the wiring from the seawater pump is connected to the terminal strip in the electric box. If two or more a/c units use the same seawater pump, the pump wires will be connected to a pump relay panel (PRP) which in turn has its own dedicated circuit breaker sized for the pump (20 amp max). Please see the wiring diagram furnished with the PRP (NOTE: PRP triac must have mounting screw installed in order to dissipate heat). Electrical connections in the bilge and/or below the waterline should use heat shrink type butt splices.

Field wiring must comply with ABYC electrical codes. Power to the unit must be within the operating voltage range indicated on the data plate. Properly sized fuses or HACR circuit breakers must be installed for branch circuit protection. See data plate for maximum fuse/circuit breaker size (mfs) and minimum circuit ampacity (mca). All units must be effectively grounded to minimize the hazard of electrical shock and personal injury. The following are to be observed:

1. AC (alternating current) grounding (green wire) must be provided with the AC power conductors and connected to the ground terminal (marked "GRND") at the AC power input terminal block of the unit(s), per ABYC standard E-8, or equivalent.
2. Connections between the vessel's AC system grounding conductor (green wire) and the vessel's DC (Direct Current) negative or bonding system should be made as part of the vessel's wiring, per ABYC standard E-9, or equivalent.
3. When servicing or replacing existing equipment that contains a chassis-mounted ground stud, the service person or installer must check the vessel's wiring for the existence of the connection required in item 2 above.

ABYC standards are available from:                      American Boat and Yacht Council  
3069 Solomon's Island Rd.  
Edgewater, MD 21036  
Telephone: (410) 956-1050


**The a/c unit must be connected to the ship's bonding system to prevent corrosion due to stray electrical current.** All pumps, metallic valves and fittings in the seawater circuit that are isolated from the a/c unit by PVC or rubber hoses must be individually bonded to the vessel's bonding system also. This will help eliminate any possibility of corrosion due to stray current.

***FAILURE TO PROPERLY GROUND & BOND THE SYSTEM WILL VOID THE WARRANTY!***

### 3 PHASE NOTICE


It is extremely important to insure that wiring and phase sequencing of a three-phase power source is correct. Marine wiring standards call for power source phases L1, L2, and L3 to be color-coded BLACK, WHITE, and RED, respectively. These must be connected to the unit with the proper sequence; otherwise, it will not operate properly. If the wiring sequence is incorrect, the unit's compressor (Scroll type only) and pump (if applicable) will run in the reverse direction at a significantly increased noise level.



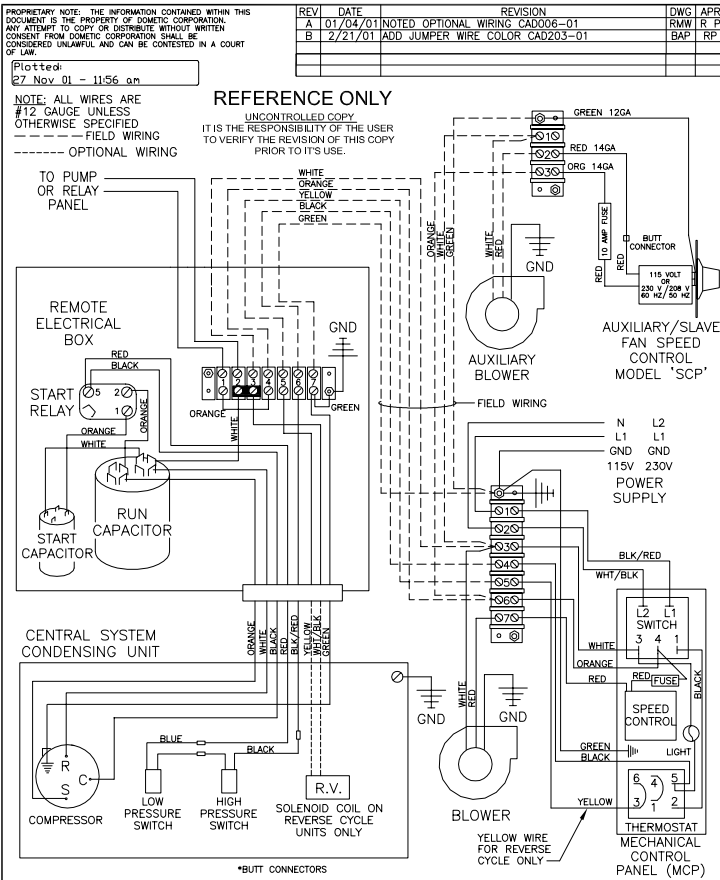


|                       |  |
|-----------------------|--|
| DATE: 12/07/00        | WIRING DIAGRAM                                   |
| PART NUMBER: 334908   | CSM6-48K(-Z/C/CZ)                                |
| SCALE: N.T.S.         | CENTRAL SYSTEM with MCP<br>115-230VAC/50-60HZ/1ø |
| DRAWN BY: RMW         | APPROVED BY: R P                                 |
| DRAWING NO: M2010064B |  |

|   |
|---|
| DOMETIC CORPORATION<br>MARINE AIR         |
| CRUISAIR-MARINE AIR-GRUNERT-SENTRY-TUNDRA |

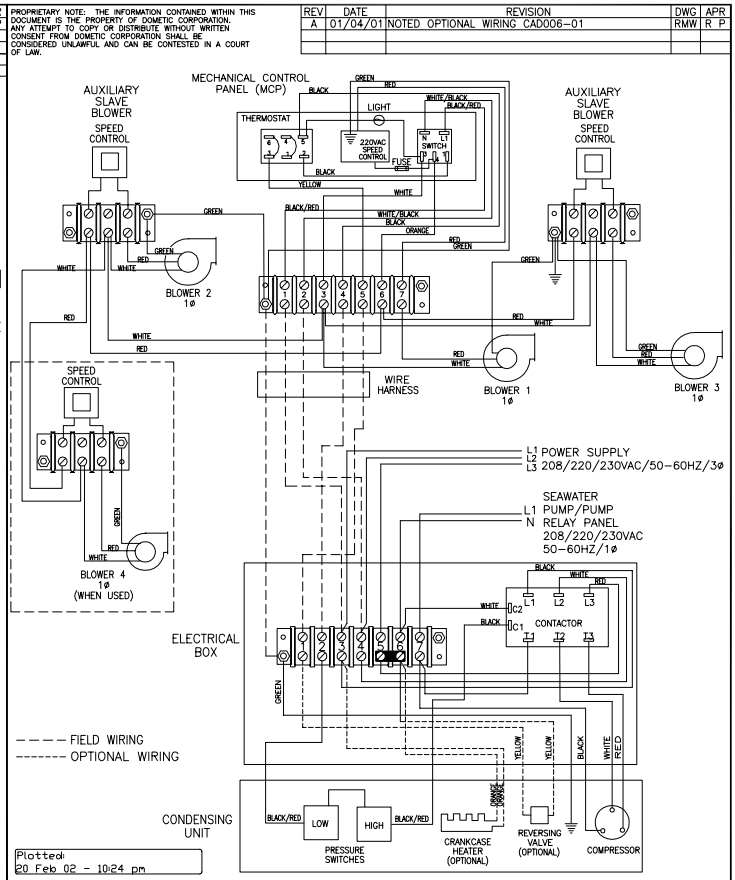


|                      |   |
|----------------------|---|
| DATE: 12/08/00       | WIRING DIAGRAM  |
| PART NUMBER: 334905  | CSM24-60K-3 PHASE                                     |
| SCALE: N.T.S.        | MULTI TON with MCP & SCP<br>208/220/230VAC/50-60HZ/3ø |
| DRAWN BY: RMW        | APPROVED BY: R P                                      |
| DRAWING NO: M2010061 |   |

|   |
|---|
| DOMETIC CORPORATION<br>MARINE AIR         |
| CRUISAIR-MARINE AIR-GRUNERT-SENTRY-TUNDRA |

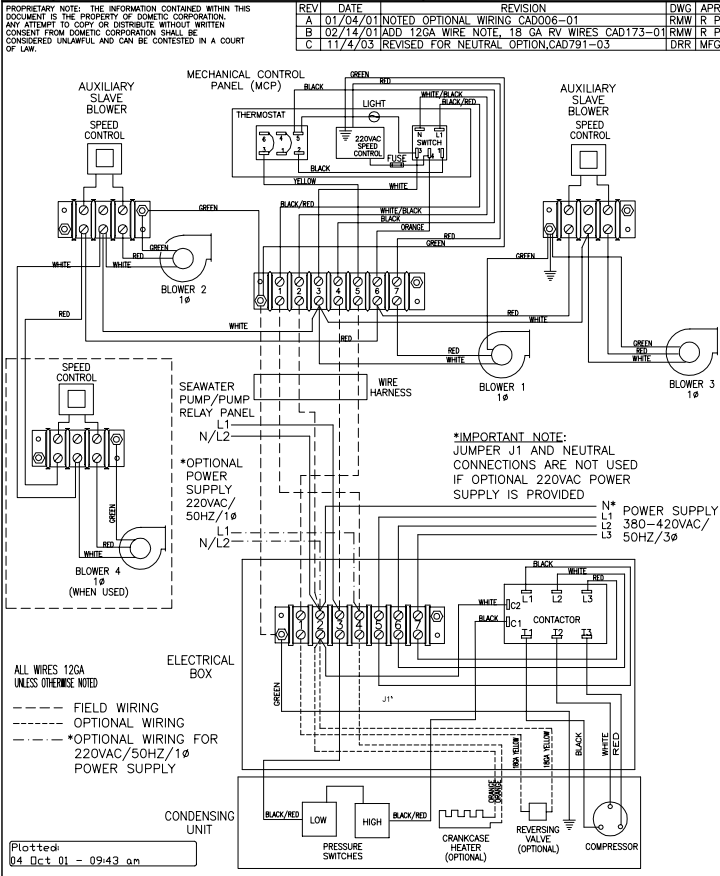

|                       |  |
|-----------------------|--|
| DATE: 12/15/00        | WIRING DIAGRAM                                 |
| PART NUMBER: 334907   | CSM24-60K-3 PHASE                              |
| SCALE: N.T.S.         | MULTI TON with MCP & SCP<br>380-420VAC/50HZ/3ø |
| DRAWN BY: RMW         | APPROVED BY: R P                               |
| DRAWING NO: M2010063C |  |


|   |
|---|
| DOMETIC CORPORATION<br>MARINE AIR         |
| CRUISAIR-MARINE AIR-GRUNERT-SENTRY-TUNDRA |

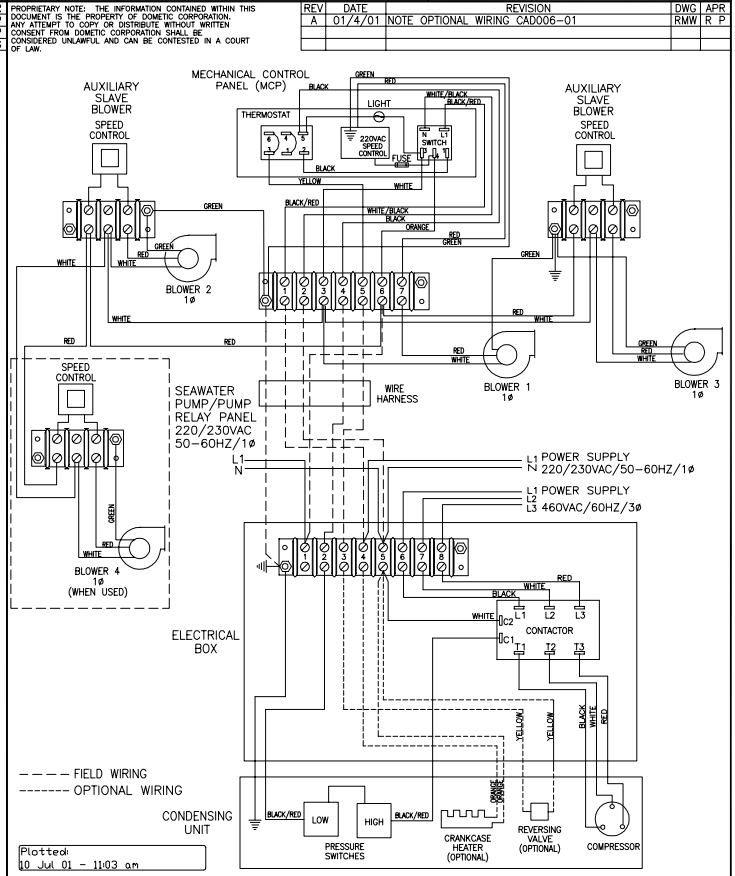


|                      |  |
|----------------------|--|
| DATE: 12/06/00       | WIRING DIAGRAM                             |
| PART NUMBER: 334906  | CSM24-60K-3 PHASE                          |
| SCALE: N.T.S.        | MULTI TON with MCP & SCP<br>460VAC/60HZ/3ø |
| DRAWN BY: RMW        | APPROVED BY: R P                           |
| DRAWING NO: M2010062 |  |

|   |
|---|
| DOMETIC CORPORATION<br>MARINE AIR         |
| CRUISAIR-MARINE AIR-GRUNERT-SENTRY-TUNDRA |


# Central System Wiring Diagrams for Passport I/O and Elite (1 of 2)

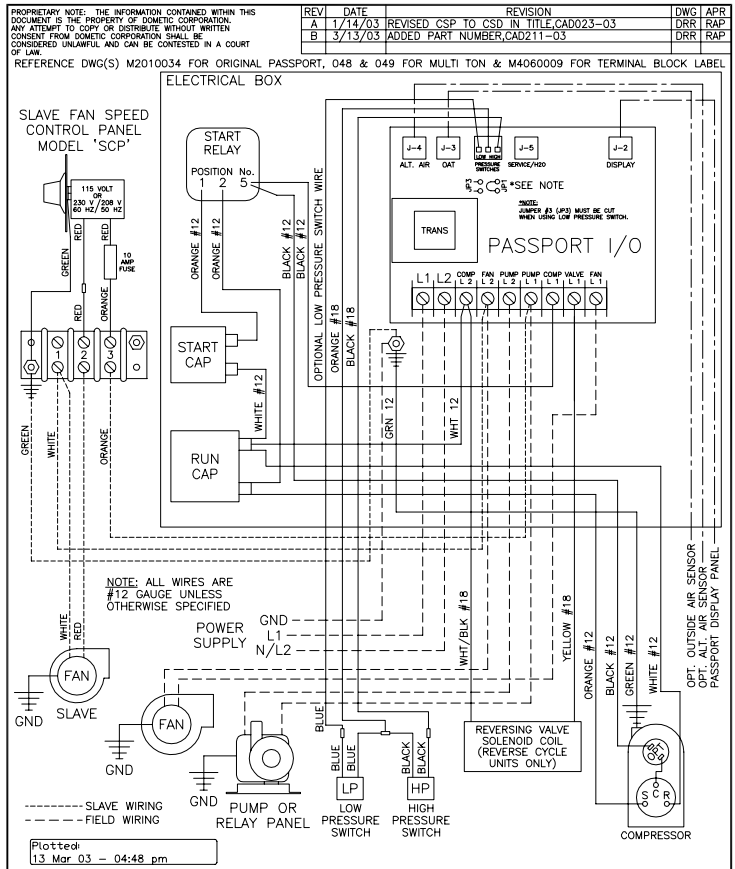

|                     |                                  |   |
|---------------------|----------------------------------|---|
| DATE: 12/05/02      | WIRING DIAGRAM                   | DOMETIC CORPORATION                       |
| PART NUMBER: 335553 | CSD6-16K(-Z/C/CZ)                | MARINE AIR                                |
| SCALE: N.T.S.       | CENTRAL SYSTEM with PASSPORT I/O |   |
| DRAWN BY: DRR       | 115-230VAC/50-60HZ/1Ø            |   |
| APPROVED BY: PJM    | M2010070B                        | CRUISAIR-MARINE AIR-GRUNERT-SENTRY-TUNDRA |



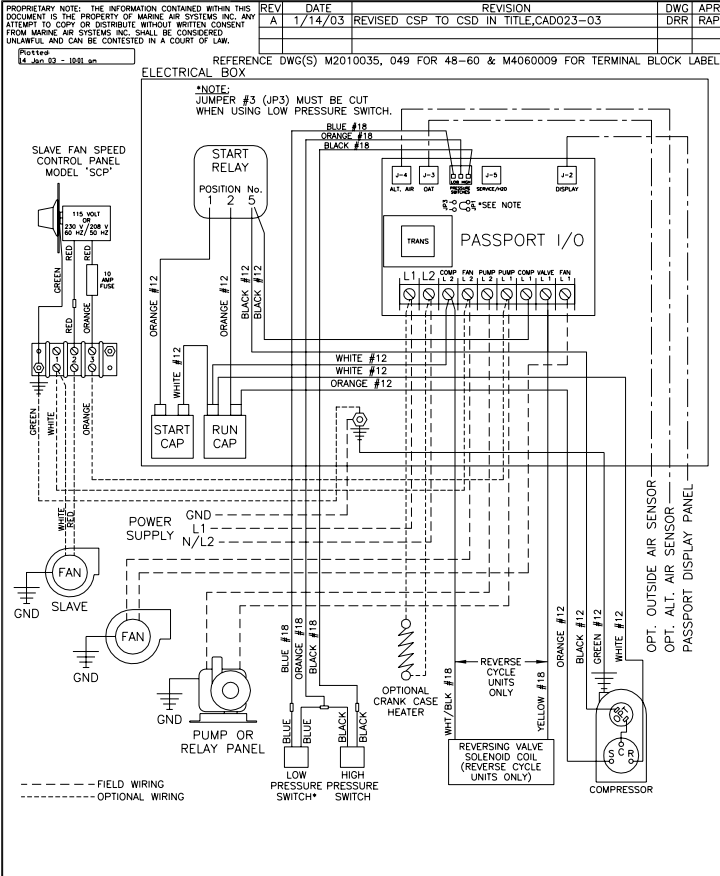


|                      |                                       |   |
|----------------------|---------------------------------------|---|
| DATE: 12/05/02       | WIRING DIAGRAM                        | DOMETIC CORPORATION                       |
| SCALE: N.T.S. (P)    | CSD24-36K(-Z/CZ)                      | MARINE AIR                                |
| PART NUMBER: CURRENT | MULTI TON with PASSPORT I/O           |   |
| DRAWN BY: DRR        | CSD24 230VAC/50-60/1Ø CSD36 230/60/1Ø | CRUISAIR-MARINE AIR-GRUNERT-SENTRY-TUNDRA |
| APPROVED BY: PJM     | M2010071A                             |   |

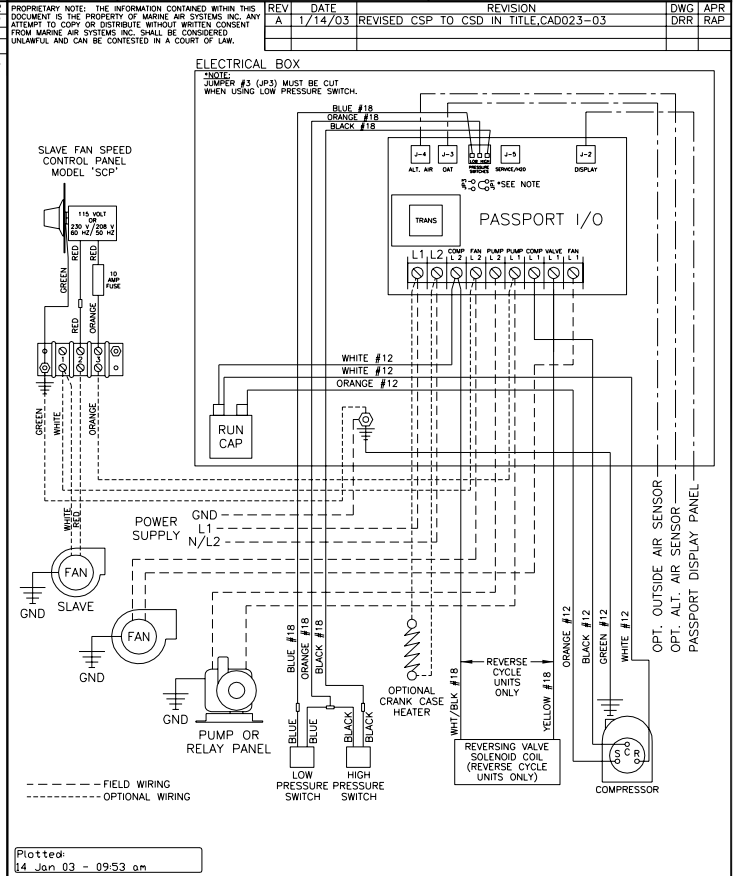

|                      |                                       |   |
|----------------------|---------------------------------------|---|
| DATE: 12/05/02       | WIRING DIAGRAM                        | DOMETIC CORPORATION                       |
| SCALE: N.T.S. (P)    | CSD24-36K(-Z/CZ)                      | MARINE AIR                                |
| PART NUMBER: CURRENT | MULTITON w/SCROLL COMP & PASSPORT I/O |   |
| DRAWN BY: DRR        | 230VAC/50-60/1Ø                       | CRUISAIR-MARINE AIR-GRUNERT-SENTRY-TUNDRA |
| APPROVED BY: PJM     | M2010072A                             |   |

# Central System Wiring Diagrams for Passport I/O and Elite (2 of 2)

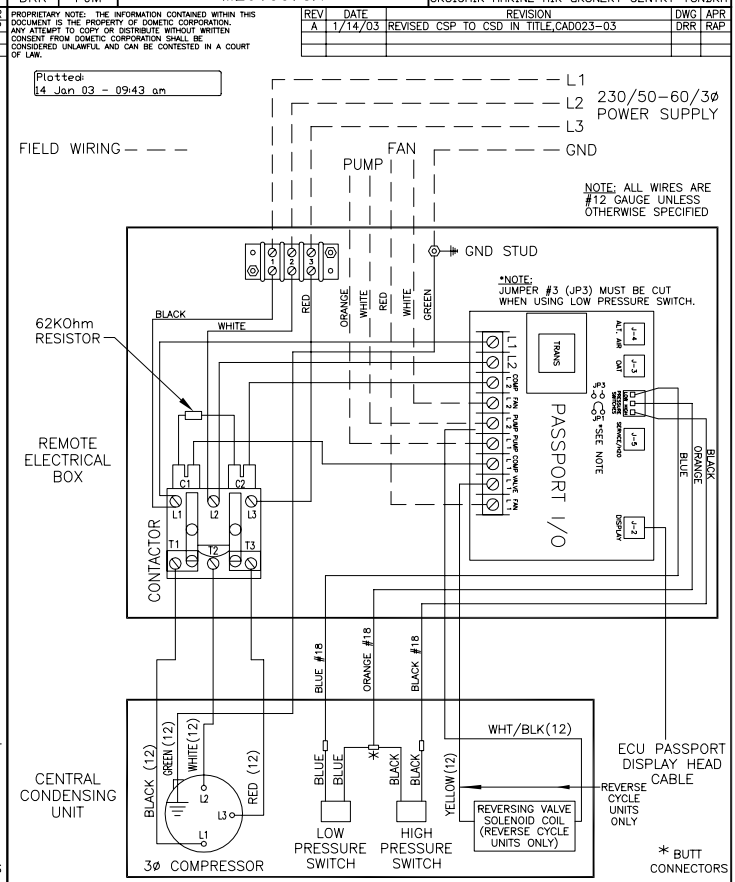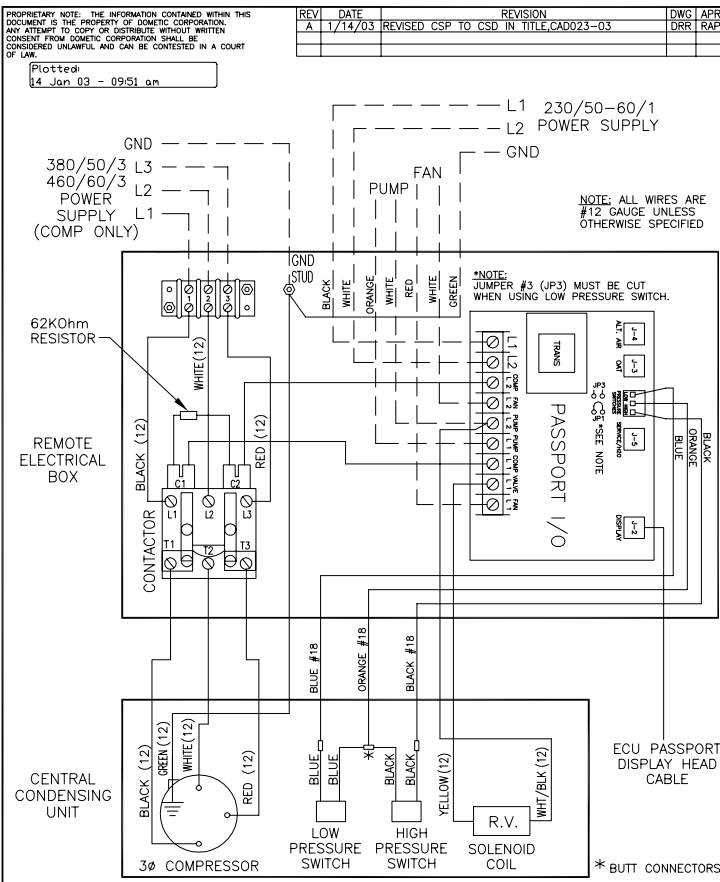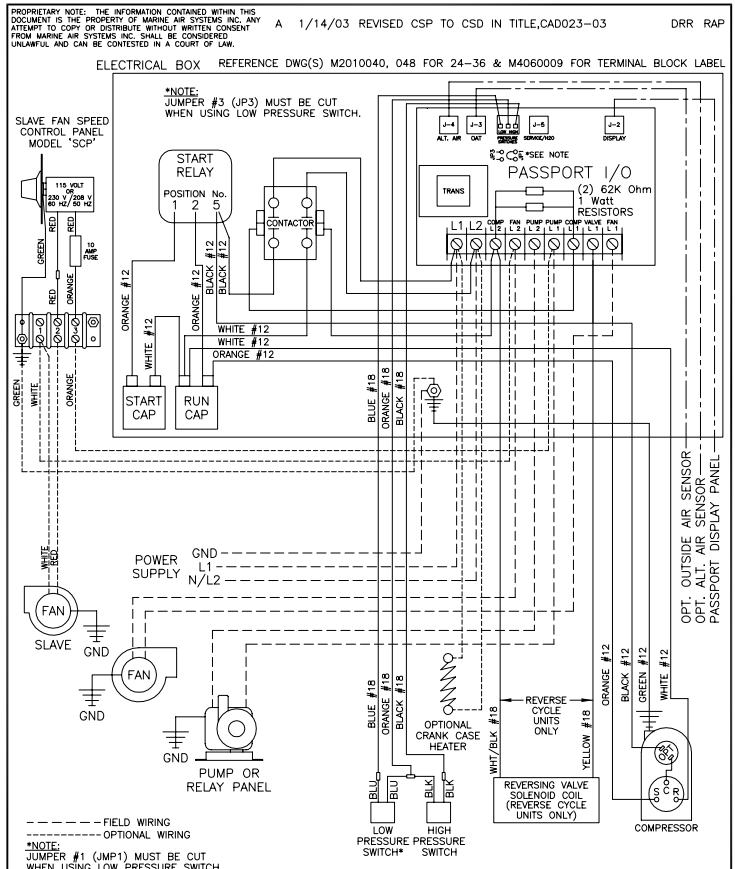

|                  |                                  |                                   |   |
|------------------|----------------------------------|-----------------------------------|---|
| DATE: 12/05/02   | PASSPORT II & INTERNAL TERMINALS | DOMETIC CORPORATION<br>MARINE AIR | CRUISAIR-MARINE AIR-GRUNERT-SENTRY-TUNDRA |
| PART NUMBER: TBD | CSD24-60K-Z-380/460              |                                   |   |
| SCALE: N.T.S.    | 380-460VAC/50-60HZ/3Ø COMPRESSOR |                                   |   |
| DRAWN BY: DRR    | 220-230VAC/50-60HZ/1Ø POWER      |                                   |   |
| APPROVED BY: PJM | M2010074A                        |                                   |   |


|                  |                                     |                                   |   |
|------------------|-------------------------------------|-----------------------------------|---|
| DATE: 12/05/02   | WIRING DIAGRAM WITH PASSPORT I/O    | DOMETIC CORPORATION<br>MARINE AIR | CRUISAIR-MARINE AIR-GRUNERT-SENTRY-TUNDRA |
| PART NUMBER: TBD | CSD24-60K-Z(CZ)3P                   |                                   |   |
| SCALE: N.T.S.    | W/PASSPORT I/O & INTERNAL TERMINALS |                                   |   |
| DRAWN BY: DRR    | 220-230VAC/50-60HZ/3Ø POWER         |                                   |   |
| APPROVED BY: PJM | M2010075A                           |                                   |   |

## MANUAL CONTROL PANEL (MCP) INSTALLATION

The MCP should be located within cap tube length of the a/c unit. The 3 knob MCP is configured either vertically (shown) or horizontally. The cut out size is 2.5" by 7.0", see MCP for orientation. Once the cut out is made, carefully uncoil the copper cap tube with return air sensor (copper bulb) and route the control wires and cap tube through the hole and back to the a/c unit **using caution not to kink the cap tube**. Mount the return air sensor into the clips provided on the evaporator coil. If the return air sensor cannot be mounted on the evaporator coil, mount it behind the return air grille. The sensor must be mounted in the return air stream. Make electrical connections according to the wiring diagram found in the electric box and/or in the operations manual.

## MCP OPERATION

- 1) Ensure seawater intake ball valve (sea cock) is open.
- 2) Turn SYSTEM SWITCH control knob to OFF.
- 3) Turn on AC circuit breaker. If the seawater pump has its own circuit breaker, turn that on too.
- 4) Turn the SYSTEM SWITCH control knob to START; this energizes the fan and seawater pump. Turn THERMOSTAT control knob to the coolest position by rotating fully clockwise. If system has reverse cycle, turn knob counter-clockwise for heat.
- 5) Check for a steady solid stream of seawater from the overboard discharge.
- 6) Turn FAN SPEED control knob clockwise to highest setting.
- 7) Verify that the fan is running and that there is steady airflow out of the supply air grille.
- 8) Turn the SYSTEM SWITCH to RUN; this will start the compressor. The indicator light on the control will illuminate.
- 9) To set the thermostat, allow sufficient time for the unit to cool/heat the area to the desired temperature. When the area is sufficiently cooled/heated, turn the thermostat knob slowly toward the center position until it clicks once (the indicator light will turn off). The thermostat is now set to maintain a constant temperature. While heating (if reverse cycle only), if the ambient temperature is less than 50°F, set the FAN SPEED control knob to low for five to ten minutes until the unit begins to heat well, then increase the fan speed for more heat output.

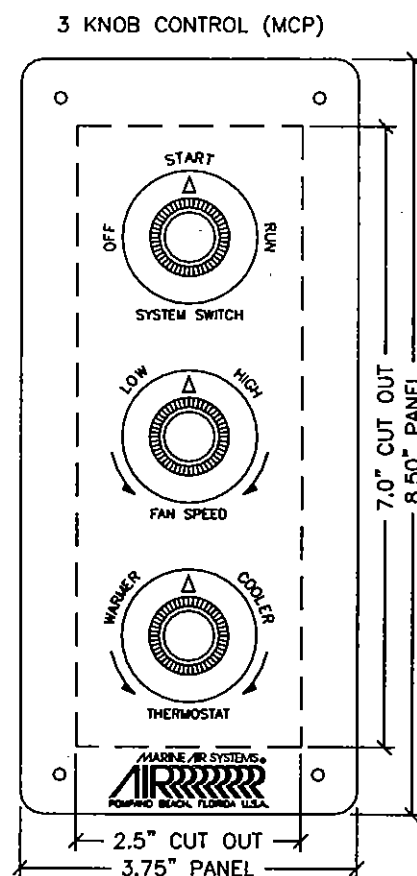

The thermostat on the MCP control panel serves to cycle the compressor on and off and provide an automatic changeover from cooling to heating (reverse cycle only) with a 3.5° differential. Rotating the thermostat to the left after it has been set for cooling will cause the unit to heat. If you rotate the thermostat to the right, the unit will cool. If the thermostat is left stationary after being set, the unit will cycle from cooling to neutral, or heating to neutral depending on the requirement.

Reverse cycle units have a reversing valve that must be energized periodically to keep the internal parts moving freely. To accomplish this, switch the a/c into HEAT for a few seconds once a month.

**Note: Do not turn the unit off and immediately turn it back on. Wait at least 30 seconds.**

## **SLAVE FAN SPEED CONTROL**

On multiple evaporator systems only one air handler is dedicated as the master control and the others are slaved from that circuit. Usually the largest capacity air handler or the one dedicated to the most frequently occupied space is chosen as the main control unit. When the master control unit energizes, all of the slave controls turn on. The only function of the slave speed control (model SCP) is controlling the speed of the fan on that air handler. Any air handler's fan speed is controlled by a triac, whether it is controlled from the Passport®II circuit board, mechanical 3-knob control (MCP) or slave fan speed control panel (SCP). Connecting triacs in series would negatively affect the performance of the fans; therefore auxiliary/slave fans should be wired to the master unit's pump control output - see the wiring diagrams included in this manual and in the condensing units' electrical box.

## INSTALLATION CHECKLIST (review prior to installation)

### Seawater cooling system:

- Speed scoop located as far below the water line and as close to the keel as possible
- Shut off valve and speed scoop properly sealed and tight
- Seawater pump is at least one foot below water line and securely mounted
- Strainer mounted below pump with access to filter
- Double/reversed stainless steel hose clamps on all hose connections
- Teflon tape on all threaded connections
- Hose runs uphill from speed scoop and sea cock to strainer, pump and a/c unit, then downhill (if possible) from a/c unit to overboard discharge
- Water flowing freely from overboard discharge while pump is running
- Pump relay panel, if used, must have its own circuit breaker sized for the pump (20 amp max)
- All metal fittings should be bonded

### Mounting

- Air handler not in engine room or bilge areas, must be sealed away from exhaust or fumes
- Proper spacing allowed around unit
- Attached to solid level platform with hold down clips provided
- Condensate drain routed aft and down hill to a sealed sump (not bilge)
- Blower rotated toward supply air grille

### Electrical

- All butt connections on pump wire tightly crimped and heat shrunk
- AC power source installed and grounded/bonded in accordance with ABYC standards
- Control wires connected to terminal strip with fork or ring terminals
- Circuit breakers sized according to specifications on the data plate label
- Remote electrical box mounted with position sensitive relay taken into consideration
- Passport II display cable is connected at both ends
- Pump Relay Panel (if used) has a dedicated circuit breaker sized for the pump but not to exceed 20 amps maximum.

### Grilles and Ducting

- Supply air grille mounted as high as possible
- Return air grille mounted as low and as close to the a/c unit as possible
- Return air grille mounted away from bilge vapors or exhaust fumes
- Ducting is pulled taut, straight, smooth and properly connected with no excess

### Line Sets

- Pressure tested
- Evacuated
- No kinks or crushed piping and no vertical loops
- Correct insulation thickness and properly sealed
- Piping supported

## QUICK START OPERATIONS CHECKLIST

- Ensure seawater intake ball valve (sea cock) is open.
- Turn on the A/C circuit breaker. If the seawater pump has its own circuit breaker, turn that on.
- Turn the system on.
- Set the desired cabin temperature (set point).
- Check for a steady solid stream of water from the overboard discharge.
- Verify that there is steady airflow out of the supply air grille.
- If the unit does not appear to be operating properly, refer to troubleshooting guidelines.

**Note: Do not turn the unit off and immediately turn it back on. Allow at least 30 seconds for refrigerant pressure equalization.**

## General Troubleshooting

Also see specific digital or mechanical control troubleshooting sections following these general guidelines.

### **Fault: Will not start.**

#### *Possible Reason/Correction*

1. **A/C circuit breaker is off.**  
Turn circuit breaker on at ship's panel.
2. **Control is not turned on.**  
See mechanical control section of this manual for MCP controls, or see the digital control manual for Elite or Passport I/O controls.
3. **Wrong wiring at terminal strip.**  
Check wiring diagram and correct if necessary.
4. **Push-on butt connectors became disconnected during installation.**  
Disconnect power supply and open electric box, check wiring diagram, correct if necessary
5. **Input line voltage is insufficient.**  
Check power source (shore/generator) for proper voltage. Check wiring and terminals for proper sizes and connections. Verify with a voltmeter that the power at the unit is the same as the power source.

### **Fault: Fan is not running.**

*Check specific control troubleshooting section*

### **Fault: No cooling or heating.**

#### *Possible Reason/Correction*

1. **Temperature set point is satisfied.**  
Lower or raise set point.
2. **Obstructed seawater flow.**  
Clean seawater strainer. Check for obstructions at speed scoop thru-hull inlet. Check for a good steady flow from the overboard discharge.
3. **Seawater pump may be air-locked.**  
Remove hose from pump discharge to purge air from line.
4. **Loss refrigerant gas.**  
Check a/c unit for refrigerant oil leakage, call service technician.
5. **Seawater temperature too high for cooling or too low for heating.**  
Seawater temperature will directly affect a/c unit's efficiency. This a/c unit can effectively cool your boat in water temperature up to 90°F and heat (if reverse cycle option is installed) in water as low as 40°F.
6. **Fan coil is iced (in cooling).**  
Check your specific control troubleshooting section.
7. **Fan is not running.**  
Check your specific control troubleshooting section.
8. **Seawater plumbing is air-locked.**  
Ensure that seawater plumbing is installed per the guidelines in this manual.

9. **Digital control is programmed for Cool or Heat only, or mechanical control thermostat is rotated to far towards either Cooler or Warmer setting.**  
See digital control manual for reprogramming or see mechanical control operation section in this manual.
10. **High pressure switch open (in cooling) due to improper seawater flow.**  
Strainer or intake may be plugged, sea cock may be closed, check seawater hose for kinks or collapses. Verify pump operation. Check the pump circuit breaker if applicable
11. **High pressure switch open (in heating) due to improper airflow.**  
Remove any obstructions in return air stream. Clean return air filter and grille. Check for crushed or restricted ducting, ducting must be as straight, smooth and taut as possible.
12. **High-pressure switch is open in heating mode.**  
System may cycle on high-pressure if seawater temperature is above 55°F.
13. **Compressor's thermal overload is open due to either of the above reasons.**  
Compressor needs to cool down. Turn system off for a while (it may take up to three hours to reset thermal overload).

### **Fault: No heating.**

#### ***Possible Reason/Correction***

1. **Unit is "cool only", or if reverse cycle, reversing valve may be stuck.**  
Tap reversing valve lightly with rubber mallet while unit is in heat mode. Call for service if that does not correct the problem.

### **Fault: Low airflow.**

#### ***Possible Reason/Correction***

1. **Airflow is blocked.**  
Remove any obstructions in return air stream. Clean return air filter and grille. Check for crushed or restricted ducting, ducting must be as straight, smooth and taut as possible.
2. **Fan Coil is iced.**  
See below.

### **Fault: Fan coil is iced.**

#### ***Possible Reason/Correction***

1. **Thermostat set point is too low.**  
Raise set point.
2. **Improper airflow.**  
Remove any obstructions in return air stream. Clean return air filter and grille. Check for crushed or restricted ducting, must be as straight, smooth and taut as possible. See the Digital Controls Troubleshooting section below for reprogramming options.
3. **Supply air is short-cycling.**  
Redirect supply air so that is not blowing into the return air stream. Seal any air leaks on duct.
4. **Humidity level too high.**  
Close hatches and doors.
5. **When all else fails.**  
Switch a/c to heat until ice melts or use hair dryer to melt.



### **Fault: Water coil is iced in the heating mode.**

1. **Seawater temperature is below 40°F.**  
Shut down system to prevent damage to condenser. Allow coil to defrost.

### **Fault: System runs continuously.**

#### *Possible Reason/Correction*

1. **Set point temperature is improperly set: too low for cooling or too high for heating.**  
Raise or lower set point.
2. **Porthole or hatches open.**  
Close all port holes and hatches.
3. **Seawater temperature too high for cooling or too low for heating.**  
Seawater temperature will directly affect the a/c unit's efficiency. This a/c unit can effectively cool your boat in water temperatures up to 90°F and heat (if reverse cycle option is installed) in water as low as 40°F.
4. **Improper air sensor location.**  
Check your specific control troubleshooting section.

## **Digital Controls Troubleshooting**

### **Fault: Digital display panel is not lit.**

#### *Possible Reason/Correction*

1. **8-pin display cable plugs are not making contact (unplugged, dirty, bent, or broken pins).**  
With POWER OFF at the circuit breaker, remove connector and inspect. If damaged, replace connector or entire display cable.

### **Fault: Fan is not running or runs continuously**

#### *Possible Reason/Correction*

1. **Digital control is programmed for either fan cycling with compressor or continuous fan operation.**  
Elite Control: Press and hold the fan button for 5 seconds to change to "con" so fan will stay on continuously or to "cyc" so the fan cycles with the compressor.  
Passport I/O Control: Reprogram parameter P-14.  
  
Note: After the compressor cycles off, the fan will continue to run for 2 minutes in cool mode and 4 minutes in heat mode regardless of parameter setting.

### **Fault: Fan is not running but the compressor is.**

#### *Possible Reason/Correction*

1. **Failed triac on Passport I/O circuit board.**  
Send for repair or call local service technician (see US Distributor listing).

**Fault: Fan runs continuously although it is set to cycle with compressor.**

***Possible Reason/Correction***

1. **Failed triac on Passport I/O circuit board.**  
Send for repair or call local service technician (see US Distributor listing).

**Fault: No cooling or heating.**

***Possible Reason/Correction***

1. **Digital control programmed for heat or cool only.**  
Elite Control: Press and release the Mode button (bottom right corner of display) until the desired mode LED is lit.  
Passport I/O Control: Reprogram parameter P-1.
2. **"HPF" or "LPF" is displayed.**  
See below.

**Fault: No heat.**

***Possible Reason/Correction***

1. **Digital Control may be set to Electric Heat, not Reverse Cycle.**  
Elite Control: Reprogram parameter P-13  
Passport I/O Control: Reprogram parameter P-15

**Fault: Unit switches to heat while in cool mode.**

***Possible Reason/Correction***

1. **De-icing feature enabled due to coil icing up.**  
Elite Control: Reprogram parameter P-7  
Passport I/O Control: Reprogram parameter P-8

**Fault: Fan coil is iced.**

***Possible Reason/Correction***

1. **Improper airflow.**  
See the General Troubleshooting section above first, before reprogramming digital control.  
Reprogram parameter P-7 for Elite or P-8 for Passport I/O. If de-icing cycle does not melt ice, switch a/c to heat until ice melts or use hair dryer to melt ice.  
If problem persists, reprogram Low Fan Speed Limit for maximum value. Set P-2 to 55 for Elite or set P-3 to 64 for Passport I/O.

**Fault: System runs continuously.**

***Possible Reason/Correction***

1. **Improper air sensor location.**  
Verify display head location with criteria found in the control manual. Install alternate air sensor if necessary.

## **Fault: "HPF" is displayed**

### ***Possible Reason/Correction***

- 1. High-pressure switch is open (in cooling) due to improper seawater flow.**  
Strainer or intake may be plugged, seacock may be closed, check seawater hose for kinks or collapses. Verify pump operation; check pump circuit breaker if applicable.
- 2. High-pressure switch open (in heating) due to improper airflow.**  
Remove obstructions in return air stream. Clean air filter and grille. Check for crushed or restricted ducting, ducting must be as straight, smooth and taut as possible.  
  
If problem persists, reprogram Low Fan Speed Limit for maximum value. Set P-2 to 55 for Elite or set P-3 to 64 for Passport I/O. And, set the Reverse Fan Speeds During Heating Mode parameter to "rEF" (P-12 for Elite or P-13 for Passport I/O), or manually set fan speed to high.

## **Fault: "LPF" is displayed**

### ***Possible Reason/Correction***

- 1. Low-pressure switch is open due to low seawater and/or low return air temperatures.**  
Try restarting the a/c unit; the optional low-pressure switch has a ten minute shutdown time delay that may be in affect.
- 2. Low pressure switch is open due to loss of refrigerant.**  
Check a/c unit for refrigerant oil leakage, call service technician.

## **Fault: "ASF" is displayed**

### ***Possible Reason/Correction***

- 1. Indicates failed faceplate air sensor, alternate air sensor or display cable.**  
Unplug alternate air sensor if installed or plug in alternate air sensor if not installed. Try another display cable.
- 2. Damaged jack/socket in display head or on circuit board.**  
Visually check to see that pins inside socket are not bent or corroded. Repair or replace display or circuit board if needed.

## **Fault: "PLF" is displayed (Elite Digital Control only).**

### ***Possible Reason/Correction***

- 1. Indicates that seawater flow through the condenser coil is insufficient.**  
Check for adequate seawater flow. Verify pump operation. Inspect the condenser coil; it may need cleaning (see maintenance section). Sensor may be faulty, replaced if necessary. Call for service tech.

## MCP Mechanical Control Panel

### **Fault: Fan is not running.**

#### *Possible Reason/Correction*

1. **3-Knob MCP system switch is not set properly.**  
Set MCP system switch to "START" for fan only or "RUN" for cooling and heating (if reverse cycle).
2. **3-Knob MCP fuse blown.**  
Replace 10-amp fuse behind MCP panel
3. **2-knob MCP system switch is not set properly.**  
Set system switch to "FAN" for fan only or "COOL" for cooling and heating.
4. **Wire became disconnected or loosened during installation.**  
Reconnect or tighten, verify with wiring diagram in this manual.

### **Fault: System runs continuously.**

#### *Possible Reason/Correction*

1. **Improper MCP air sensor location.**  
Verify return air sensing bulb location with criteria found in this manual.

### **Fault: No cooling or heating.**

#### *Possible Reason/Correction*

1. **High-pressure switch is open (in cooling) due to improper seawater flow.**  
Strainer or intake may be plugged, seacock may be closed, check seawater hose for kinks or collapses. Verify pump operation. Check the pump circuit breaker if applicable.
2. **High-pressure switch open (in heating) due to improper airflow.**  
Remove any obstructions in return air stream. Clean return air filter and grille. Check for crushed or restricted ducting, ducting must be as straight, smooth and taut as possible.
3. **MCP is not set properly.**  
3-knob should be set to "RUN". 2-knob should be set to "COOL".

# MAINTENANCE

## Reversing Valves

Reverse cycle units have a reversing valve; the valve must be energized periodically to keep the internal parts moving freely. To do this, switch the a/c unit into heat for a few seconds once a month.

## Seawater Strainer

Insure that your pump receives adequate seawater flow by regularly cleaning the strainer basket. Periodically check the overboard discharge for a steady stream of water. Check seawater intake speed scoop for obstructions. Make sure hoses are not looped, kinked or crushed.

## Reversing Valves

Reverse cycle units have a reversing valve; the valve must be energized periodically to keep the internal parts moving freely. To do this, switch the a/c unit into heat for a few seconds once a month.

## Condenser Coil Cleaning

1. With the system turned off at the circuit breaker on the ship's panel, disconnect the inlet and outlet connections of the condenser coil.
2. Use chemical resistant hoses (MAS white PVC 5/8" I.D., etc.) to connect the inlet of the condenser coil to the outlet of a chemical resistant, submersible pump (MAS P-500 pump, etc.) and let the hose connected to the coil outlet flow freely into the container mentioned below.
3. Place a strainer or piece of screen over the inlet of the pump and submerge the pump into a container filled with a 5% solution of muriatic or hydrochloric acid and fresh water or use a premixed over-the-counter solution. Use a large container as possible to hold the solution (5-25 gallons). **CAUTION:** avoid spilling or splashing the solution. Follow all warnings and recommendations given by the manufacturer of any acids or pre-mixed solutions.
4. Power the pump and circulate the solution through the condenser coil for 15-45 minutes depending upon the size of the coils and the extent of the contamination. Visual inspection of the solution in the container should indicate when the contamination removal has stopped.
5. Circulate fresh water through the coil to flush any residual acid from the system.
6. Restart the system and check operational parameters to ensure thorough cleaning has taken place. Additional cleaning may be necessary with extreme contamination.

**WARNING:** For the purpose of protecting the environment, dispose of any contaminated acid solutions in accordance with federal, state and/or local regulations.

## Return Air Filters

Check the return air filter about once a month and clean as necessary. To clean the filter, remove it from the unit, rinse with water, air dry and reinstall.

## Winterization

There are several methods of winterization, some of which work better than others. The four various methods employed using a 50/50 non-polluting biodegradable anti-freeze/water solution are:

1. Pumping of anti-freeze solution into the overboard thru-hull fitting, and discharging through the intake thru-hull fitting.
2. Use of the seawater pump to pump anti-freeze solution through the system and discharging through the overboard thru-hull fitting. Close sea cock, remove hose from strainer discharge, raise hose above pump (so pump does not lose its prime) and pour in anti-freeze solution. Pump solution through system. The strainer and hose to sea cock will also need to be drained of water.
3. Use of pressurized air injected at the overboard discharge fitting and the water being discharged through the seawater intake fitting.
4. Use of pressurized air to force water from the intake through the overboard discharge.

Any method that causes the anti-freeze solution to flow downward is the method of choice. By this means, the anti-freeze solution will displace any water trapped and eliminate the possibility of freezing in hidden areas. In addition, since the seawater pump utilizes a magnetically driven impeller, the impeller should be removed from the wet end assembly, wiped with an alcohol solution, and stored in a warm, dry area until commissioning takes place.

**Note: Collect all discharged liquids and recycle or dispose of in a proper manner.**

# MANUFACTURERS LIMITED WARRANTY AGREEMENT

The following warranty is extended to cover marine air conditioners manufactured or supplied by Dometic Corporation, and is subject to qualifications indicated. Dometic warrants for the periods set forth below that products manufactured or supplied by it will be free from defects in workmanship and material, provided such products are installed, operated, and maintained in accordance with Dometic's written instruction.

ALL IMPLIED WARRANTIES INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE TERMS AND PERIODS OF WARRANTY SET FORTH BELOW AND, TO THE EXTENT PERMITTED BY LAW, ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED.

**Warranty with the Elite or Passport I/O digital controls** (Coverage applies to units manufactured on or after 03/01/03 and applies only to units equipped with Elite or Passport I/O digital controls at the Dometic factory.): Components comprising of the Passport I/O circuit boards, Elite or Passport I/O digital displays, and associated cables are warranted for a period of three (3) years from the date of installation, but not to exceed four (4) years from the date of manufacture at the Dometic factory. All other components comprising a complete system (excluding pumps and pump relay panels) on a new installation are warranted for a period of two (2) years from the date of installation, but not to exceed three (3) years from the date of manufacture at the Dometic factory. Pumps and pump relay panels are warranted for a period of one (1) year from the date of installation, but not to exceed two (2) years from the date of purchase. OEM installed equipment warranties begin with the purchase of the vessel, not from the date of installation.

**Warranty with MCP (Mechanical Control Panel) control:** Components comprising a complete system on a new installation are warranted for a period of one (1) year from the date of installation, but not to exceed two (2) years from the date of manufacture at the Dometic factory. OEM installed equipment warranties begin with the purchase of the vessel, not from the date of installation.

In addition, Dometic will pay labor costs and travel as

outlined in its **Schedule of Limited Warranty Allowances** for removal and reinstallation of such components for a period of one (1) year from the date of installation, but not to exceed two (2) years from the date of manufacture at the Dometic factory. OEM installed equipment warranties begin with the purchase of the vessel, not from the date of installation. Warranty will be paid in accordance with our established schedule of allowances. Compensation for warranty repairs is only made to Dometic authorized service companies.

Dometic will repair, or replace at its option, components found to be defective due to faulty materials or workmanship, when such components, examined by an authorized service dealer or a factory service representative, are found to have a defect for which the company is responsible. **Refer to Manufacturer's Limited Warranty Policy** for complete coverage and exclusions. Replacement components are warranted for the duration of the remaining warranty period in effect on the original component. In the event that a unit has to be returned to the factory, it must be properly packaged to prevent shipping damages. If packaging is not available, Dometic will provide it at no charge. The warranty may be voided on any piece of equipment or component that is damaged due to improper packaging.

This limited warranty is extended in lieu of all other warranties, agreements or obligations, expressed or implied, concerning Dometic's components. This warranty is extended only to the original purchaser and is not transferable. This warranty shall be governed by the laws of the State of Florida and gives the original first end user definite legal rights.

This warranty does not cover damages incidental and/or consequential to the failure of Dometic's equipment including but not limited to; normal wear, accident, misuse, abuse, negligence, improper installation, lack of reasonable and necessary maintenance, alteration, civil disturbance or acts of God.

No person or dealer is authorized to extend any other warranties or to assume any other liabilities on Dometic's behalf, unless made or assumed in writing by an officer of Dometic.

# DISTRIBUTOR LISTING

Alabama  
Arkansas  
Colorado  
Kansas  
Louisiana  
Mississippi  
Missouri  
Nevada  
New Mexico  
Oklahoma  
Texas  
Utah

**AER Marine Supply**  
2301 Nasa Road One  
Seabrook, TX 77586  
Contact: Richard S. Miller  
Tel: (800) 767-7606  
(281) 474-3276  
Fax: (281) 474-2714  
E-mail: rsmiller@aersupply.com

Delaware  
Maryland  
Pennsylvania  
Virginia

**Ocean Options - Mid Atlantic**  
2830 Solomons Island Road  
Edgewater, MD 21037  
Contact: Mike Bowden  
Tel: (800) 400-8043  
(410) 266-8033  
Fax: (410) 841-2461  
E-mail: Sales@oceanoptions.com  
Website: www.oceanoptions.com

Georgia  
North Florida  
North Carolina  
South Carolina  
Tennessee

**Beard Marine Savannah**  
3101 River Drive  
Savannah, GA 31404  
Contact: Lynn Stork  
Tel: (800) 286-2674  
(912) 356-5222  
Fax: (912) 692-1006  
E-mail: beardsav@aol.com  
Website: www.beardmarine.com

New York  
New Jersey

**Marine Specialists**  
2231 5<sup>th</sup> Avenue, Unit 17  
Ronkonkoma, NY 11779  
Contact: Mike Budney  
Tel: (631) 580-0545  
Fax: (631) 580-0551  
E-mail: Sales@marinespecialists.com  
Website: www.marinespecialists.com

Illinois  
Indiana  
Iowa  
Kentucky  
Michigan  
Minnesota  
N. Dakota  
Ohio  
S. Dakota  
Wisconsin

**Midwest Marine Supply**  
24300 Jefferson Avenue  
St. Clair Shores, MI 48080  
Contact: Dan Gruninger  
Tel: (586) 778-8950  
Fax: (586) 778-6108

Connecticut  
Maine  
Massachusetts  
New Hampshire  
Rhode Island  
Vermont

**Ocean Options**  
95 Riverside Drive  
Tiverton, RI 02878  
Contact: Mike Bowden  
Tel: (401) 624-7334  
Fax: (401) 624-8050  
E-mail: Sales@oceanoptions.com  
Website: www.oceanoptions.com

Idaho  
Montana  
Oregon  
Washington  
Wyoming

**American Marine Contractors**  
8313 46<sup>th</sup> Place West  
Mukilteo, WA 98275  
Contact: Gene Lawing  
Tel: (206) 660-2240  
Fax: (425) 740-0246  
E-mail: glawing@earthlink.net

Arizona  
California  
Hawaii  
Mexico

**Southern California Marine Enterprises**  
1214 Rosecrans Street  
San Diego, CA 92106  
Tel: (888) 657-1606  
Fax: (619) 226-0496  
E-mail: sales@southernmarine.com  
Website: www.southernmarine.com

## INTERNATIONAL

Please contact us for international dealers & distributors



**Dometic Corporation, Marine Division**

2000 N. Andrews Ave. • Pompano Beach, FL 33069-1497 USA  
Phone: 954-973-2477 • Fax: 954-979-4414

**24/7 Support for United States & Canada**

8:00 AM to 5:00 PM Eastern Time: 800-542-2477  
After hours and weekends: 888-440-4494

**International Sales & Service**

Europe and the Middle East: +44(0)870-330-6101  
For all other areas visit our website to find your nearest distributor.

Website: [www.dometicusa.com](http://www.dometicusa.com) • Email: [marinesales@dometicusa.com](mailto:marinesales@dometicusa.com)