



***Emerson***®

***1.0 CUBIC FOOT  
MICROWAVE OVEN  
WITH  
OMNI WAVE COOKING SYSTEM™***

***OWNER'S MANUAL  
AND  
COOKING GUIDE***

***MW8108BSC***

Visit our web site at "[www.emersonelectronics.ca](http://www.emersonelectronics.ca)"

UNAUTHORIZED MODIFICATIONS TO THIS DEVICE COULD VOID  
THE USER'S AUTHORITY TO OPERATE IT.

# PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a)** Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy.  
It is important not to defeat or tamper with the safety interlocks.
- (b)** Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c)** Do not operate the oven if it is damaged.  
It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- (d)** The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

## CONTENTS

Precautions to Avoid Possible Exposure to Excessive Microwave Energy .....	1	The Emerson Omni Wave Cooking System™ .....	18
Important Safety Instructions .....	2	Food Characteristics .....	19
Safety Precautions .....	3	Microwave Techniques .....	20
Grounding Instructions .....	4	Auto Weight Defrosting .....	21
Installation .....	4	Popping Popcorn .....	22
Care of Your Microwave Oven .....	5	Reheating .....	22
How to Use Your Microwave Oven Safely .....	5	Beverage Reheating .....	23
Feature Locations .....	6	Hold Warm .....	23
Operation Procedure .....	7	Hot Snacks and Appetizers .....	23
Controls .....	8	Meats .....	23
Setting The Clock .....	8	Poultry .....	25
Auto Weight Defrosting .....	9	Seafood .....	25
Cooking in One Stage .....	10	Eggs & Cheese .....	27
Cooking in Two and Three Stages .....	11	Vegetables .....	28
Plus Time .....	12	Soups .....	28
Auto Weight Defrosting and Cooking in Two Stages .....	12	Sauces .....	29
Popcorn .....	13	Casseroles .....	29
Beverages .....	13	Sandwiches, Including Hamburgers and Hot Dogs .....	30
Potatoes .....	11	Pastas & Grains .....	30
Pizza .....	11	Convenience Foods .....	31
Dinner Plate .....	15	Beverages .....	31
Hold Warm .....	16	Desserts .....	32
Child Lock .....	17	Weight & Measure Conversion Chart .....	32
To Stop the Oven While it is Operating .....	17	Specifications .....	33
Cooking Guide .....	18	Before You Call for Service .....	33
The Principles of Microwave Cooking .....	18		

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

**WARNING:** - To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

- 1 Read all instructions before using this appliance.
- 2 Read and follow the specific **“PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY”** found on the inside front cover.
- 3 This appliance must be grounded. Connect only to properly grounded outlet. See **“GROUNDING INSTRUCTIONS”** found on page 4
- 4 Install or locate this appliance only in accordance with the provided installation instructions.
- 5 Some products such as whole eggs and sealed containers - for example, closed glass jars - are able to explode and should not be heated in this oven.
- 6 Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
- 7 As with any appliance, close supervision is necessary when used by children.
- 8 Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- 9 This appliance should be serviced only by qualified service personnel. Contact the nearest authorized service facility for examination, repair or adjustment.
- 10 Do not cover or block any openings on this appliance.
- 11 Do not store this appliance outdoors. Do not use this product near water - for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
- 12 Do not immerse cord or plug in water.
- 13 Keep cord away from heated surfaces.
- 14 Do not let cord hang over edge of a table or counter.
- 15 When cleaning surfaces of door and oven that come together when closing the door, use only mild non-abrasive soaps or detergents applied with a sponge or soft cloth.
- 16 To reduce the risk of fire in the oven cavity:
  - (a) Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
  - (b) Remove wire twist-ties from paper or plastic bags before placing bag in oven.
  - (c) If materials inside the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord or shut off power at the fuse or circuit breaker panel.
  - (d) Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
- 17 Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. **THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.**

To reduce the risk of injury to persons:

  - (a) Do not overheat the liquid.
  - (b) Stir the liquid both before and halfway through heating it.
  - (c) Do not use straight-sided containers with narrow necks.
  - (d) After heating, allow the container to stand in the microwave over for a short time before removing the container.
  - (e) Use extreme care when inserting a spoon or other utensil into the container.

## SAVE THESE INSTRUCTIONS

# SAFETY PRECAUTIONS

## General Use

- 1 Do NOT attempt to tamper with or make any adjustments or repairs to door, control panel or any other part of the oven. Do NOT remove outer panel from oven. Repairs should only be done by qualified service personnel.
- 2 Do NOT operate the oven empty. The microwave energy will reflect continuously throughout the oven if no food or water is present to absorb energy.
- 3 If a fire occurs in the oven, touch the CLEAR/PAUSE pad and LEAVE THE DOOR CLOSED. Disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
- 4 Do NOT attempt to dry clothes, newspapers or other materials in the oven. They may catch on fire.
- 5 Do NOT use recycled paper products, as they may contain impurities which may cause sparks and/or fires when used.
- 6 Do NOT hit or strike control panel. Damage to controls may occur.
- 7 Avoid inserting nails, wire, etc. through any holes in the unit during operation. Never insert a wire, nail or any other metal objects through the holes on the cavity or any other holes or gaps, because such objects may cause electric shock and microwave leakage.

## Paper Products

- 1 Paper towels and napkins - Use for short-term heating and covering. They absorb excess moisture and prevent spattering. Do not use recycled paper towels which may contain metal and can catch fire.
- 2 Paper plates and cups - Use for short-term heating at low temperatures. Do not use recycled paper which may contain metal and can catch fire.

## Utensils

- 1 METAL CONTAINERS or dishes with metallic rims should not be used. Arcing may occur.
- 2 METAL TWIST-TIES may not be used in the microwave oven.
- 3 Do NOT use SEALED JARS or NARROW NECK bottles for cooking or reheating. They may shatter.

- 4 Do NOT use CONVENTIONAL THERMO-METERS in the microwave oven. They may cause arcing.
- 5 Remove PLASTIC STORE WRAPS before cooking or defrosting foods in the oven.
- 6 For FURTHER INFORMATION on proper cooking utensils, refer to the microwave cooking guide.

## Food

- 1 Never use your microwave oven for HOME CANNING. The oven is not designed to permit proper canning. Improperly canned food may spoil and be dangerous to consume.
- 2 COOKING TIMES given in the cooking guide are approximate. Factors that may affect cooking are starting temperature, altitude, volume, size and shape of food and utensils used. As you become familiar with the oven, you will be able to adjust for these factors.
- 3 It is better to UNDERCOOK RATHER THAN OVERCOOK foods. If food is undercooked, it can always be returned to the oven for further cooking. If food is overcooked, nothing can be done. Always start with minimum cooking times.
- 4 SMALL QUANTITIES of food or foods with LOW MOISTURE content can burn, dry out, or catch fire if cooked too long.
- 5 Do NOT boil eggs in their shell. Pressure may build up and the eggs may explode.
- 6 Potatoes, apples, egg yolks, whole acorn squash and sausage are examples of food with NONPOROUS SKINS. These must be pierced before cooking to prevent bursting.
- 7 POPCORN must be popped in a microwave corn popper. Microwave popped corn produces a lower yield than conventional popping. Do not use oven for popcorn unless popped in a microwave approved popcorn utensil or unless it's commercially packaged and recommended especially for microwave ovens. Do not use oil unless specified by the manufacturer.
- 8 Do NOT attempt to deep fat fry in your oven.
- 9 HEATED LIQUIDS can ERUPT if not mixed with air. Do not heat liquids in your microwave oven without first stirring.

## GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be inserted into an outlet that is properly installed and grounded.

**WARNING:** Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.

If it is necessary to use an extension cord, use only a three-wire extension cord that has a three-prong grounding plug, and a three-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord should be equal to or greater than the electrical rating of the appliance.

## INSTALLATION


- 1. Steady, flat location:** When positioning the microwave oven, it should be set on a flat, steady surface.
- 2. Ventilation:** Do not block air vents. If they are blocked during operation, the oven may overheat and eventually cause oven failure. For proper ventilation, keep 3 inches of space between the oven's top, sides, front and the area where the unit is to be installed.
- 3. Radio and TV reception:** Poor television reception and radio interference may result if the oven is located close to a TV, radio, antenna, or antenna wire. Position the oven as far from them as possible.
- 4. Temperature and moisture:** Keep the oven away from hot air, steam, or splashing liquids when installing a place to locate it, otherwise, the unit's operation may be adversely affected, causing fire or shock.
- 5. Power supply:**
  - Check your local power source. This microwave oven requires a 120V, 60Hz power supply on a 15A dedicated branch circuit. No other appliances should be connected to this circuit.
  - Use a receptacle that will accept the ground prong.
  - Power supply cord is 1.05 meters (3 feet).
    1. A short power supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
    2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
    3. If a long cord or extension cord is used, (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, (2) the extension cord must be a grounding-type 3-wire cord, and (3) the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over accidentally.
- 6. Examine the oven for any damage such as:** Cracks, a missing ground. Use oven only if a part of the cavity (any) of the above are visible. DO NOT INSTALL THE UNIT.  
NOT BY THE DEALER IMMEDIATELY.

### When using a 3-pronged plug




When using a grounding adaptor, make sure the receptacle box is fully grounded.

The use of grounding adaptors is prohibited in Canada.

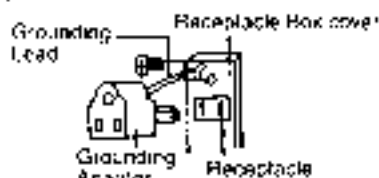

## CARE OF YOUR MICROWAVE OVEN

- 1 Disconnect the AC plug from the outlet before cleaning.
- 2 Keep the inside of the oven clean. When food spatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. The use of harsh detergent or abrasives is not recommended.
- 3 The outside oven surface should be cleaned with soap and water, rinsed and dried with a soft cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation slots.
- 4 If the Control Panel becomes wet, clean with a soft, dry cloth. Do not use harsh detergents or abrasives on Control Panel.
- 5 If steam accumulates on both sides of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions and this is not an indication of a malfunction in the unit.
- 6 It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm, sudsy water or in a

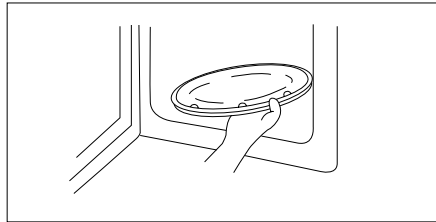


- 7 dishwasher.
- 7 The roller guide and oven cavity floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent water or window cleaner and dry. The roller guide may be washed in mild, sudsy water or dishwasher.
- 8 Be sure to replace the turntable and roller guide.

### Roller Guide

- 1 The ROLLER GUIDE and oven floor should be cleaned frequently to prevent excessive noise.
- 2 The ROLLER GUIDE MUST ALWAYS be used for cooking together with the Glass Tray.

### Glass Tray

- 1 Do NOT operate the oven without the Glass Tray in place.
- 2 Do NOT use any other Glass Tray with this oven.
- 3 If the Glass Tray is hot, ALLOW IT TO COOL before cleaning it or placing in in water.
- 4 Do NOT cook directly on the Glass Tray.

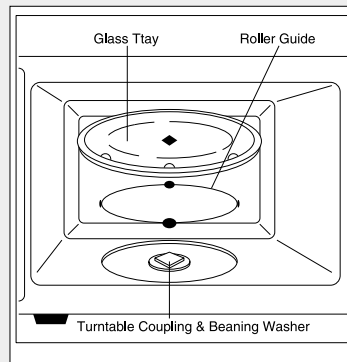


## HOW TO USE YOUR MICROWAVE OVEN SAFELY

**Although your oven is provided with safety features, it is important to observe the following:**

- a) It is important not to defeat or tamper with safety interlocks.
- b) Do not place any object between the oven face and the door or allow residue to accumulate on sealing surfaces. Wipe the sealing area frequently with a mild detergent, rinse and wipe dry. Never use abrasive powders or pads.
- c) When opened, the door must not be subjected to strain, for example, a child hanging on an open door or any load which could cause the oven to fall forward and cause injury and damage the door. Do not operate the oven if it is damaged, until it has been repaired by a qualified person. It is particularly important that the oven door close properly and that there is no damage to the:
  - i) Door (bent), ii) Hinges and Latches (broken or loosened), iii) Door seals and sealing surfaces.
- d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

## FEATURE LOCATIONS

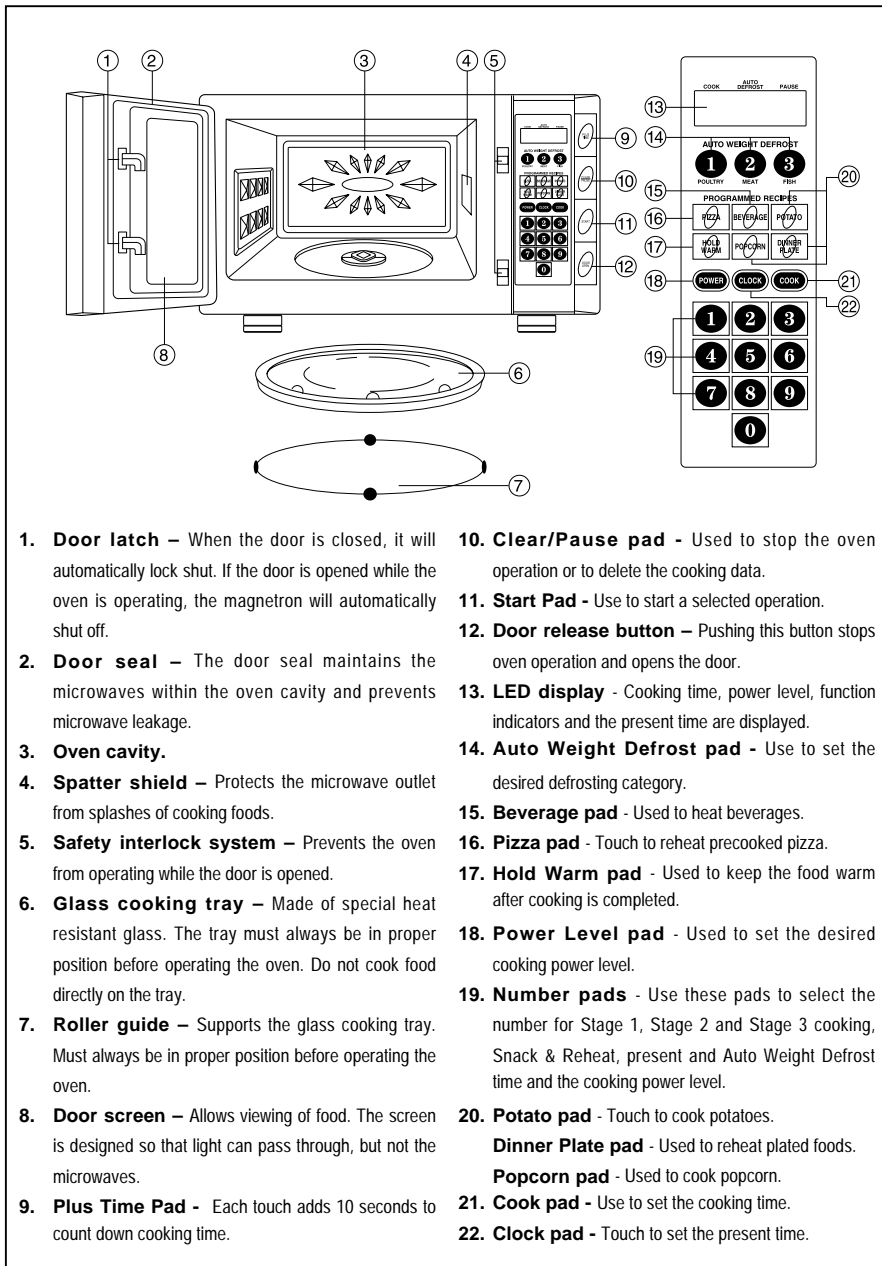

1. **Door latch** – When the door is closed, it will automatically lock shut. If the door is opened while the oven is operating, the magnetron will automatically shut off.
2. **Door seal** – The door seal maintains the microwaves within the oven cavity and prevents microwave leakage.
3. **Oven cavity.**
4. **Spatter shield** – Protects the microwave outlet from splashes of cooking foods.
5. **Safety interlock system** – Prevents the oven from operating while the door is opened.
6. **Glass cooking tray** – Made of special heat resistant glass. The tray must always be in proper position before operating the oven. Do not cook food directly on the tray.
7. **Roller guide** – Supports the glass cooking tray. Must always be in proper position before operating the oven.
8. **Door screen** – Allows viewing of food. The screen is designed so that light can pass through, but not the microwaves.
9. **Plus Time Pad** - Each touch adds 10 seconds to count down cooking time.
10. **Clear/Pause pad** - Used to stop the oven operation or to delete the cooking data.
11. **Start Pad** - Use to start a selected operation.
12. **Door release button** – Pushing this button stops oven operation and opens the door.
13. **LED display** - Cooking time, power level, function indicators and the present time are displayed.
14. **Auto Weight Defrost pad** - Use to set the desired defrosting category.
15. **Beverage pad** - Used to heat beverages.
16. **Pizza pad** - Touch to reheat precooked pizza.
17. **Hold Warm pad** - Used to keep the food warm after cooking is completed.
18. **Power Level pad** - Used to set the desired cooking power level.
19. **Number pads** - Use these pads to select the number for Stage 1, Stage 2 and Stage 3 cooking, Snack & Reheat, present and Auto Weight Defrost time and the cooking power level.
20. **Potato pad** - Touch to cook potatoes.  
**Dinner Plate pad** - Used to reheat plated foods.  
**Popcorn pad** - Used to cook popcorn.
21. **Cook pad** - Use to set the cooking time.
22. **Clock pad** - Touch to set the present time.

## OPERATION PROCEDURE

### This Section Includes Useful Information About Oven Operation

1. Plug the power supply cord into a standard 3-pronged 20 Amp, 120V AC, 60 Hz power outlet.
2. After placing the food in a suitable container, open the oven door and put it on the glass tray. The glass tray and roller guide must always be in place during cooking.
3. Shut the door. Make sure that it is firmly closed.

**1** When the oven door is opened, the light turns off. This is standard procedure for the oven. There are no microwaves being produced when the door is open.

**2** The oven door can be opened at any time during operation by pressing the Door Release button on the control panel. The oven will automatically shut off. To restart the oven, close the door and then press the START pad.

**3** Each time a pad is touched, a beep will sound to acknowledge the touch (except Child Lock feature). One of the function pads must be touched before the number pads. Therefore, no beep will sound if a number pad is touched before the function pad.

**4** The oven automatically cooks on high power (PL 10) unless set to a lower power level.

**5** The display will flash "0:00" when the oven is first plugged in.

**6** The display shows "End" when the oven turns off. To return to the time of day, touch the CLEAR/PAUSE pad or open the oven door.

**7** When the CLEAR/PAUSE pad is touched during oven operation, the oven stops operating and all information is retained. To erase all information (except the present time and memory data), touch the CLEAR/PAUSE pad once more. If the oven door is opened during operation, all information is retained.

**8** If the START pad is touched and the oven does not operate, check the area between the door and the door seal for obstructions and make sure the door is closed securely. The oven will not start cooking until the door is completely closed or the program has been reset. Make sure the Child Lock feature is not turned on.

### **9 CHILD LOCK**

This safety feature prevents unwanted or unauthorized use by small children or other people.

1. To lock the oven, touch the number pad "0" once and then press the START pad five times. The display will show "L OC" and the oven will not operate.
2. To unlock the oven, repeat the above procedure. The oven display will return to the present time.

### **10 BEEP TONE**

When a correct pad is touched, a beep tone (0.2 seconds long) will be heard (except with Child Lock feature). If a pad is touched and no beep tone is heard, the unit has not, or cannot accept the instruction(s).

At the end of the last cook cycle, the oven beeps 5 times, turns off automatically and "End" appears in the display window.

### **11 DOOR RELEASE**

Opening the door during cooking will stop any cooking process without cancelling any program. Cooking resumes as soon as the door is closed and the START pad is touched.

### **12 TO CORRECT ANY IMPROPER PROGRAM ENTRIES**

- A) Touch the CLEAR/PAUSE pad.
- B) Repeat the desired program entry from the beginning.
- C) Any erroneous entries will cause the display to show "Err" (error) when the START pad is touched.

Make sure the oven is properly installed and plugged into the electrical outlet.



### ADDITIONAL INFORMATION

1. You cannot program more than 99 minutes and 99 seconds in each stage.
2. You cannot program for more than 6 lbs of poultry, 4 lbs of meat or 3 lbs of fish in the Auto Weight Defrost stage.
3. If you open the oven door during cooking, be sure to touch the START pad to begin cooking again.
4. The oven door can be opened at any time while the oven is operating. If the door is opened, the oven will stop and the display will stop counting down the cooking time.
5. If a function or program is selected, but not started within one minute, the display returns to the present time and the program is erased.

## CONTROLS


### SETTING THE CLOCK

When the oven is first plugged in, the display will flash "0:00" and a tone will sound. If the AC power ever goes off, the display will flash "0:00" when the power comes back on.

The display will flash "0:00" and a tone will sound.



1. Press the Door Release button to open the door. Touch the Number pads to set the present time.



**EXAMPLE:** To set the time to "10:12", touch "1", "0", "1", "2" in sequence. The display will show the numbers pressed in the order you pressed them.



2. Touch the **CLOCK** pad.



The display will show the present time and stops blinking. The 12 hour digital clock allows you to set it from "1:00" to "12:59".

**NOTE:** If the oven is used before the present time is set, the display will show "0" after the cooking is completed and the door is opened.


To reset present time in the display window when the oven is off, touch the CLOCK pad. The colon starts blinking. Enter the correct present time by following the above procedures.

## AUTO WEIGHT DEFROSTING

**AUTO WEIGHT DEFROST** lets you easily defrost foods by eliminating guesswork in determining defrosting time. The minimum weight for Auto Weight Defrost is 0.1lb. The maximum weight depends on the food category. Up to 6.0 lbs for poultry, 4.0 lbs for meat and 3.0 lbs for fish. Follow the steps below for easy defrosting.



1. Press the Door Release button to open the door. Enter the desired auto weight category.

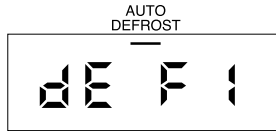

**EXAMPLE:** To select POULTRY, touch "1"; the display will show "dEF 1" and the AUTO DEFROST indicator will light.

Category	Display	Food	Range
1	dEF 1	Poultry	0.1 lb to 6.0 lb
2	dEF 2	Meat, Ground	0.1 lb to 4.0 lb
3	dEF 3	Fish	0.1 lb to 3.0 lb


2. Enter the food weight.



**EXAMPLE:** To select 0.5 (1/2) lbs, touch "5".



3. Close the door and then touch the **START** pad.

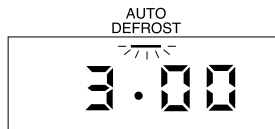


When the **START** pad is touched, the **AUTO DEFROST** indicator will blink, the display will count down the remaining defrosting time in minutes and seconds and will beep 5 times when defrosting is completed.

## COOKING IN ONE STAGE

Use the 10 key pads (number pads) to select a cooking or other operational time.




1. Press the Door Release button to open the door. Touch the **COOK** pad.



The display will show "0" and a tone will sound; the COOK indicator will light.


2. Touch the Number pads for desired cooking time.



**EXAMPLE:** To set the cooking time to "13:40"(13 min. 40 sec.), touch "1", "3", "4" and "0" in sequence.



3. Touch the **POWER LEVEL** pad and then the Number pad for the power.



**EXAMPLE:** To select 30% power, touch the **POWER LEVEL** pad and then "3". The display will show "PL 3".

**NOTE:** If this step is omitted, the oven will cook at full (100%) power. (P10)



4. Close the door and then touch the **START** pad.

When the **START** pad is touched, the COOK indicator will blink, the display will count down the remaining cooking time in minutes and seconds and will beep 5 times when cooking is completed.

## WATTAGE OUTPUT CHART


Press	Power Level	Wattage Output
none	10	1100W
9	9	990W
8	8	880W
7	7	770W
6	6	660W
5	5	550W
4	4	440W
3	3	330W
2	2	220W
1	1	110W

## COOKING IN TWO AND THREE STAGES

For best results, some recipes call for one power level for a certain length of time and another power level for a different length of time. Your microwave oven can be set to change from one power level to another, or you may Auto Weight Defrost in the first stage and then cook in the second and/or third stages.



1. Press the Door Release button to open the door.  
Touch the **COOK** pad.



The display will show "0" and a tone will sound. The **COOK** indicator will light.


2. Touch the Number pads for the desired cooking time for Stage 1.



**EXAMPLE:** To set the Stage 1 cooking time to "11:40" (11 min. 40 sec.), touch "1", "1", "4" and "0" in sequence. The display will show the numbers pressed in the order you pressed them.



3. Touch the **POWER LEVEL** pad and then the Number pad for the power.




**EXAMPLE:** To select 30% power, touch the **POWER LEVEL** pad and then "3". The display will show "PL 3".

**NOTE:** If this step is omitted, the oven will cook at full (100%) power. (P10)




4. Touch the **COOK** pad.



The display will show "0" and a tone will sound.


5. Touch the Number pads for the desired cooking time for Stage 2.



**EXAMPLE:** To set the Stage 2 cooking time to "11:20" (11 min. 20 sec.), touch "1", "1", "2" and "0" in sequence. The display will show the numbers pressed in the order you pressed them.



6. Touch the **POWER LEVEL** pad and then the Number pad for the power.




**EXAMPLE:** To select 80% power, touch the **POWER LEVEL** pad and then '8'. The display will show "PL8".

**NOTE:** If this step is omitted, the oven will cook at full (100%) power. (P10)



7. Close the door and then touch the **START** pad. The oven will begin cooking in Stage 1, then switch to Stage 2.



When the **START** pad is touched, the **COOK** indicator will start blinking to show the oven is cooking Stage 1. The display will count down the remaining cooking time in Stage 1, then the oven will beep and start Stage 2.

## PLUS TIME

The Plus Time Feature allows you to add cooking time in 10 second intervals.



1. **PlusTime** pad can be used during cooking without door open in stage one through stage three only. Plus Time cannot be used during Auto Weight Defrost or preprogrammed recipes, such as Popcorn, Beverages, Potatoes.
2. **Plus Time** pad adds 10 seconds for each touch to count down cooking time when cooking in stages one through three.
3. **Plus Time** pad can be used for any cooking time up to 89:59 minutes. If cooking time displayed is 90:00 minutes or more, the Plus Time pad will not work.

## AUTO WEIGHT DEFROSTING AND COOKING IN TWO STAGES (COOKING IN THREE STAGES)

Some recipes require frozen foods to be thawed before cooking. This oven can be programmed to automatically defrost foods before cooking.

1. Program the oven to perform the desired Auto Weight Defrost function as described on page 9. This is considered first stage when using the Auto Weight Defrost feature in conjunction with Stge 1 and Stage 2 cooking.
2. Press the **COOK** pad and program the oven to cook in the remaining two stages as described starting on page 11.

**NOTE:** To Auto Weight Defrost and Cook in one stage only, skip the programming of the first stage.

## PREPACKAGED POPCORN

Place the prepackaged popcorn (3.5 oz) onto a microwaveable dish in the oven.



1. Open the door and then touch the **POPCORN** pad.



When the **POPCORN** pad is touched, the display will show "PO P".



2. Close the door and then touch the **START** pad.



When the **START** pad is touched, the display will count down the cooking time of 1:45 and will beep 5 times when cooking is completed.

- NOTE:**
1. Use only 1 package (approx. 3.5 oz) at a time.
  2. Use only a microwaveable popcorn package in the microwave oven.
  3. Do not try to pop unpopped kernels.
  4. Do not leave the oven unattended while popping popcorn. If the popcorn does not pop sufficiently, do not press the POPCORN pad again as the popcorn may burn. Check the popcorn bag for cooking instructions.
  5. When opening the package, face it away from you to avoid contact with any steam released.

## BEVERAGES

Use the Beverage feature to heat up to 3 cups (9 oz per cup) of beverage. Place each cup in the oven.




1. Open the door and then touch the **BEVERAGE** pad repeatedly until the desired number of cups appear in the display window.



**EXAMPLE:** To select 2 mugs, touch the **BEVERAGE** pad 2 times; "CU P2" will appear in the display.



2. Close the door and then touch the **START** pad; the beverage will be heated.



When the **START** pad is touched, the oven will start heating. The display will count down remaining heating time and will beep 5 times when cooking is completed.

**NOTE:** Up to 3 mugs of beverage can be heated. Heating time is as follows:

1 CUP	CU P1 ( 1 Min., 35 Sec.)
2 CUPS	CU P2 ( 2 Min., 50 Sec.)
3 CUPS	CU P3 ( 4 Min., 20 Sec.)

## POTATOES

Place 1 – 3 medium size potatoes in the oven.



1. Press the Door Release button to open the door. Touch the **POTATO** pad once for each potato.



When the **POTATO** pad is touched, the display will show "PO 1"



2. Close the door and then touch the **START** pad.



When the **START** pad is touched, the display will count down the remaining cooking time in minutes and seconds and will beep 5 times when cooking is completed.

1 Potato	2 Potatoes	3 Potatoes
"PO 1"	"PO 2"	"PO 3"
3.00	5.00	6.00

## PIZZA

Use the Pizza feature to reheat refrigerated pizza (1 – 3 slices).



1. Press the Door Release button to open the door. Touch the **PIZZA** pad once for each slice.



When the **PIZZA** pad is touched, the display will show "P 1".



2. Close the door and the touch the **START** pad.



When the **START** pad is touched, the display will count down the remaining cooking time in minutes and seconds and will beep 5 times when cooking is completed.

1 Slice	2 Slices	3 Slices
"P 1"	"P 2"	"P 3"
0.25	0.50	1.50

## DINNER PLATE

Use the Dinner Plate feature to reheat precooked foods from the refrigerator.



1. Press the Door Release button to open the door. Touch the **DINNER PLATE** pad once for regular amount, twice for smaller amount and three times for a larger amount of food.




**EXAMPLE:** For regular amount of food, touch the **DINNER PLATE** pad once. "rE G" will be displayed.

**REGULAR:** A regular amount of food: Approx. 9 oz (for example, 4oz sliced meat or poultry, 3 oz potato or rice and 2 oz vegetables or equivalent.)  
**SMALL:** A smaller amount of food: Approx. 6 oz.  
**BIG:** A larger amount of food: Approx. 12 oz.



2. Close the door and then touch the **START** pad.



The oven will start cooking and the display will count down the cooking time. When cooking is completed, the oven will beep 5 times.


Regular	Small	Larger
"rE G"	"SA L"	"bl G"
2.20	1.20	2.50



## HOLD WARM

The Hold Warm feature can be used to keep food warm after microwave or conventional cooking is completed.


1. Program the desired power level and cooking time as previously instructed.



**EXAMPLE:** Select a cooking time of '25:10'.




2. Touch the **HOLD WARM** pad for every 10 minutes of Hold Warm time desired (up to 30 minutes).



**EXAMPLE:** To select 20 minutes, touch the **HOLD WARM** pad 2 times.




3. Close the door and then touch the **START** pad; the oven will begin cooking as programmed in step 1.



**EXAMPLE:** To HOLD WARM indicator will light, the oven will begin cooking and the display will count down the remaining cooking time.

When the cooking is completed, the oven will begin the Hold Warm mode as programmed in step 2.



The display will count down the remaining Hold Warm time. When the Hold Warm time ends, you will hear 5 beeps.

### NOTES:

- \* The Hold Warm feature operates independently or together with Stage 1 cooking.
- \* To keep food warm after conventional cooking, omit step 1.

## CHILD LOCK

---

The Child Lock prevents unwanted oven operation by small children.  
The oven can be set so that the control panel is deactivated or locked.

---

### TO SET CHILD LOCK

---

1. Touch the "0" pad once.
- 



2. Touch the **START** pad 5 times.



The display will show "LO C".

---


### TO CANCEL THE CHILD LOCK

---

1. Touch the "0" pad once.
- 



2. Touch the **START** pad 5 times.



The display will return to the present time.

---

**NOTE:** One beep sound will be heard when setting or cancelling the Child Lock.

### TO STOP THE OVEN WHILE IT IS OPERATING

---

1. Press the **CLEAR/PAUSE** pad.
  - The **PAUSE** indicator will start blinking.
  - The oven can be restarted by pressing the **START** pad.
  - Touch the **CLEAR/PAUSE** pad one more time to erase all instructions.
  - You must enter new instructions.
2. Open the door.
  - You can restart the oven by closing the door and touching the **START** pad.

## COOKING GUIDE

### THE PRINCIPLES OF MICROWAVE COOKING

Microwaves are a form of high frequency radio waves similar to those used by a radio including AM, FM and CB. Electricity is converted into microwave energy by the magnetron tube. From the magnetron tube, microwave energy is transmitted to the oven where it is reflected, transmitted, and absorbed by the food.

#### Reflection

Microwaves are reflected by metal just as a ball is bounced off a wall. For this reason, metal utensils are not suitable for use in the microwave. A combination of stationary interior walls and a rotating metal turntable or stirrer fan helps assure that the microwaves are well distributed within the oven cavity to produce even cooking.


#### Transmission

Microwaves pass through some materials such as paper, glass and plastic much like sunlight shining through a window. Because these substances do not absorb or reflect the microwave energy, they are ideal materials for microwave oven cooking containers.

#### Absorption

During cooking, microwaves will be absorbed by food. They penetrate to a depth of about 3/4 to 1 1/2 inches. Microwave energy activates the molecules in the food (especially water, fat and sugar), and heat is produced. If you vigorously rub your hands together, you will feel heat produced by friction. The internal cooking of larger foods is done by conduction as the heat which is produced by friction is conducted to the middle of the food. Foods also continue to cook by conduction during standing time.


### THE EMERSON OMNI WAVE COOKING SYSTEM™

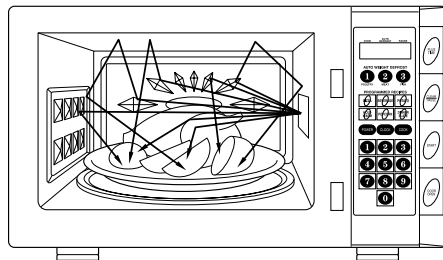

This new, specially designed "Omni Wave Cooking System™" utilizes a series of performance-engineered pyramids in the oven's interior cavity. They distribute microwave energy in a much more effective omni-directional pattern to the food. This action promotes faster, more uniform cooking, with fewer hot or cold spots. Together with the integral rotating glass tray, this new "Omni Wave Cooking System™" is very efficient and fast.

Omni Wave Radiates microwave energy at convex diverters that maximize the microwave absorbed by the food mass, which result in even cooking. No more hot or cold spots!

## Reduced Cooking Time of North America's Most Popular Microwave Food - 3.5oz Popcorn

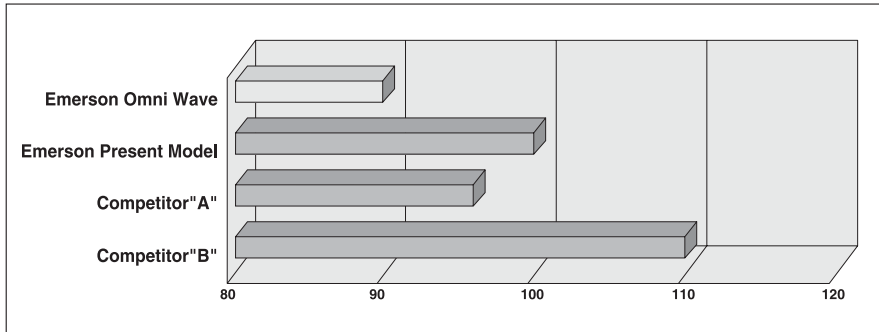

Using three speeds, cooking by directing more microwave energy to the food mass, instead of increased cooking space within the microwave oven. A highly efficient design that reduces cooking time approximately 10 percent.

## FOOD CHARACTERISTICS

**Quantity:** The amount of food per unit of volume, weight, or mass. In this case, the amount of popcorn is approximately 3.5oz per unit of volume, weight, or mass.

**Size:** The physical size of the food item. In this case, the size of the popcorn is approximately 1/4 inch in diameter.

**Shape:** The physical shape of the food item. In this case, the shape of the popcorn is approximately spherical.

**Starting Temperature:** The temperature of the food item at the start of cooking.

**Base and Fat:** The base and fat content of the food item. In this case, the base is popcorn and the fat is oil.

**Moisture Content:** The amount of water in the food item. In this case, the moisture content is approximately 10%.

**Density:** The mass per unit volume of the food item. In this case, the density is approximately 0.25 g/cm<sup>3</sup>.

**Parching:** The process of cooking the food item at a high temperature. In this case, the parcing is the process of cooking the popcorn at a high temperature.

## MICROWAVE TECHNIQUES

**Stirring:** Stir foods from outside to center of dish once or twice during cooking to equalize heat and speed microwaving. Foods will not burn or stick, so there's no need to stir constantly as you do in conventional cooking.

**Arrangement:** Arrange foods with thin or delicate ends, like drumsticks or asparagus spears with the thick or tougher portions to the outside of the dish. The parts which need more cooking will receive more energy, so food will microwave evenly.

**Spacing:** Individual foods, such as baked potatoes and cupcakes will cook more evenly if placed in the oven an equal distance apart. When possible, arrange foods in a circular pattern. Similarly, when placing foods in a baking dish, arrange around the outside of dish, not lined up next to each other. Food should not be stacked on top of each other.

**Rearrangement:** Rearrange overlapping areas, like tails of long fish fillets, from top to bottom, and closely packed pieces, like meatballs, from the outside to the center of the dish.

**Standing Time:** Standing time is especially important in microwave cooking. Microwave energy creates heat in the outer layers of the food. As a result of normal conduction, the food continues to cook for a few minutes after removal from the oven. Letting roasts, large whole vegetables, casseroles and cakes stand to finish cooking allows the middles to cook completely without overcooking, drying or toughening the outsides.

**Covering:** Covering speeds cooking time, retains moisture, tenderizes, insures even cooking and prevents spattering. Casserole lids or plastic wrap are used for a tighter seal. Vent plastic by turning back one edge at the side of dish to form a narrow slot where excess steam can escape. Various degrees of moisture retention are also obtained by using wax paper or paper towels.

**Browning:** Microwave energy cooks some foods so quickly that the fats and sugars within the food do not have time to caramelize and give a "browned" appearance. Browning agents do not affect the quality of microwaved foods, but can add color and flavor. For meats and poultry, use bouquet sauce diluted with water or melted butter; soy, Worcestershire, barbecue or steak sauce: a sprinkling of paprika or dry gravy mix; jelly glaze or crumb coating. Frosting and topping finish cakes and breads. Top casseroles at the end of microwaving with grated cheese or crumbs.

### **Some Foods do not Microwave Well**

**Eggs in Shells** and shelled boiled eggs can burst.

**Pancakes** do not crust, but they reheat well. Fully-prepared, frozen pancakes are available for microwaving.

**Deep Fat Frying** can cause burns.

**Bottles** with narrow necks may shatter if heated.

**Pop Popcorn** only in special microwave poppers. Do not use oil unless specified by the manufacturer, or heat longer than recommended. Never pop popcorn in paper bags or glass utensils or directly on the glass tray.

## AUTO WEIGHT DEFROSTING

Defrosting frozen food is one of the benefits of a microwave oven. Microwave defrosting is much faster than refrigerator defrosting and safer than room temperature defrosting, since it does not promote the growth of harmful bacteria. Furthermore, your oven does program defrosting for foods listed below. See page 9 for more information.

### AUTO WEIGHT DEFROSTING CHART

You can Auto Weight Defrost foods up to the weight limits shown below.

CATEGORY	DISPLAY	FOOD	RANGE
1	dEF 1	Poultry	0.1 to 6.0 lbs
2	dEF 2	Meat, Ground	0.1 to 4.0 lbs
3	dEF 3	Fish	0.1 to 3.0 lbs

### Preparing food for freezing

For best results, select good quality food and freeze immediately. Food should be wrapped as airtight as possible before freezing.

Wrapping materials best suited for use in the freezer are odorless, and moisture and vapor proof. Heavy duty plastic wraps and bags, and freezer wrap are suitable.

When wrapping for freezing, arrange meat, poultry, fish and seafood in thin, uniform layers. Package minced meat in 1 to 2 inch thick rectangular square or round shapes. Chicken pieces, chops, stew meat and fish fillets will defrost more easily if frozen in 1 or 2 piece layers rather than in bulky thick packages. To aid in separating chops, hamburger patties and fish fillets during defrosting, place two pieces of wax paper between the layers.

Remove giblets from fresh poultry. (The giblets may be frozen separately, if desired.) Clean and dry poultry. Tie legs and wings with string; this helps poultry keep its shape during freezing. Remove excess air from package. Label contents, date and weight.

### Conversion Chart

Ounces	Hundredths of a Pound	Tenths of a pound	Grams
1 - 2	.06 - .15	0.1	50
3 - 4	.16 - .25	0.2	100
5 - 6	.26 - .35	0.3	150
7	.36 - .45	0.4	200
8 - 9	.46 - .55	0.5	250
10 - 11	.56 - .65	0.6	300
12 - 13	.66 - .75	0.7	350
14	.76 - .85	0.8	400
15 - 16	.86 - .95	0.9	450

- If a roast weighs 3.95 pounds or 3 pounds, 15 ounces, program 3.9 pounds (1950 grams).
- If a roast weighs 3.99 pounds or 4 pounds, 0 ounces, program 4 pounds (2000 grams).

To obtain the best results, follow special techniques for defrosting. Remember when defrosting to allow for a standing time to evenly thaw food. Unwrap food, place in dish, or arrange properly on dish so microwaves can reach all sides. Halfway through defrosting time, stir, turn over or redistribute food. Breaking up the pieces of chicken, fish and meat that are partially thawed will help. Any pieces which are thawed should be removed.

## POPPING POPCORN

One of the major features of your microwave oven is popping popcorn. Place the microwave popcorn package (3.5 oz) onto a microwaveable dish, then on the glass tray, following the manufacturer's instructions.

Touch the POPCORN pad and the oven will operate for 2 minutes and 55 seconds at full power (PL 10), the average popping time. Do not leave the oven unattended while popping popcorn. If popcorn does not pop sufficiently, cook a few seconds longer. Do not press the POPCORN pad again as the popcorn may burn. When opening the package, face it away from you to avoid contact with any steam released.

**NOTE:** Do not use the POPCORN pad with single servings bags of microwave popcorn as they require less cooking time. Always follow instructions on the popcorn bag.

## REHEATING

**One of the major bonuses of the microwave cooking method is its efficiency in reheating cooked food. Most food can be reheated in the microwave oven without loss of quality or texture. Leftovers taste as good as when freshly prepared, and it is no longer necessary to keep foods hot until everyone is ready to eat.**

**Main dishes reheat** especially well, some even improve in flavor if they are made in advance. Care must be taken to avoid additional cooking; rare meat should never be heated beyond its original doneness temperature, or it will cook to medium or well done.

**To retain moisture during reheating,** cover food with a lid. Exceptions are rare or medium meats, some sandwiches, griddle foods like pancakes, and baked foods. Wrap breads and sandwiches in paper napkins to absorb moisture and prevent sogginess.

**Follow the directions** for recommended foods and weights that can be cooked on each category. There are 3 categories for reheating. Use only microwaveable containers.

### Reheating Chart (touch the DINNER PLATE pad and select the reheat setting)

Food	Amount	Starting Temperature	Suggested Serving Temp.	Special Techniques
Meat Slices turkey, beef, ham, pork.	1 to 2 servings (12 oz)	Refrigerated.	150 to 160°F	Cover with wax paper. Do not cover rare or medium meats.
Casseroles	2 to 3 servings (16 oz)	Refrigerated.	140 to 170°F	Cover, stir after half the time.
Soups	1 serving (10 oz)	Refrigerated.	140 to 170°F	Cover, stir after half the time.
Breads: cake (coffee cake, doughnuts, sweet rolls), dinner rolls, muffins.	3 pieces (6 oz)	Refrigerated.		Wrap in paper napkin or towel.
Plated Meals: meat plus 2 vegetables.	1 plate (12 oz)	Refrigerated.	150 to 160°F	Cover plate with wax paper or plastic wrap.

**REGULAR:** A regular amount of food: Approx. 9 oz (for example, 4oz sliced meat or poultry, 3 oz potato or rice and 2 oz vegetables or equivalent.)

**SMALL:** A smaller amount of food: Approx. 6 oz.

**BIG:** A larger amount of food: Approx. 12 oz.

Regular	Small	Larger
*rE G*	*SA L*	*bl G*
2.20	1.20	2.50

## BEVERAGE REHEATING

You can reheat leftover beverages easily and quickly in your oven.

Reheating can be from one cup to three cups. Place cups (mugs) in the oven and press the BEVERAGE pad once for each cup. When pressing, consult the list below. (Do not use cups with metal trim.)

1 CUP	CUP 1	1 cup ( 1 min., 35 sec.)
2 CUPS	CUP 2	2 cups ( 2 min., 50 sec.)
3 CUPS	CUP 3	3 cups ( 4 min., 20 sec.)

Arrange cups in a ring with space between them when reheating more than two cups. Leave the center empty. After reheating, remove cups carefully. They may be quite hot.

## HOLD WARM

When not serving food immediately after cooking, it can be kept warm by using the Hold Warm function. It keeps food warm by heating at the lowest power constantly. The Hold Warm mode operates with Stage 1 cooking or independently.

Set the cooking times and power level, then press the HOLD WARM pad. Thereafter, foods can be kept warm properly until serving. To keep foods warm after conventional cooking, cook food in conventional oven, then press the HOLD WARM pad. See page 16 for detailed instructions.

## HOT SNACKS AND APPETIZERS

Hot hors d'oeuvres and appetizers can be prepared very quickly in the oven by the hostess, or individual servings may be prepared by guests.

Many appetizers may be cooked on the serving platter, provided the platter does not have metal trim. A time saver tip - prepare these foods ahead of time, refrigerate or freeze and refresh in the oven at serving time. A plate of appetizers will take only seconds to prepare or refresh. Cheese melts very rapidly and will toughen if overcooked, so watch foods combined with cheese closely so that overcooking will not occur. As soon as cheese starts to bubble, cooking is completed. Appetizers that have a crisp pastry exterior are best prepared in a conventional oven. To prepare appetizers wrapped in bacon, it will be necessary to precook the bacon and then wrap around the foods. Oysters wrapped in bacon are easier to prepare in the broiler of your conventional range. Seafood mixtures can be prepared in serving shells as microwave energy will pass through the seafood shells without heating. Aluminum foil should not be used for shells. If spreads are placed on crackers, care should be taken not to overcook as moisture from the food will cause crackers to become soggy. Crackers used for spreads should be very dry and crisp. This helps avoid sogginess. Heat only until spread is at serving temperature. The time required to heat all appetizers will depend on the amount of food, and the number and the type of dish selected. Remember the food will become very hot even if the dish is cool. Cheese mixtures retain heat longer when heated with microwave energy.

## MEATS

### Guide for Auto Weight Defrosting Meats

You may defrost meat within its original plastic wrappings. Remove all metal rings, wire twist-ties and foil wrapping.

Place meat in a microwaveable dish.

Defrost in the microwave oven only as long as necessary, since standing time will complete the thawing process.



<b>Item</b>	<b>Standing Time (minutes per lb)</b>	<b>Special Techniques</b>
<b>BEEF</b>		
Minced	4 1/2 - 6 1/2 min.	Break apart and remove thawed portions with a fork.
Stew Meat	4 1/2 - 6 1/2 min.	Separate and remove thawed portions.
Loin Roast	4 1/2 - 6 1/2 min.	Turn over after half the time.
Patties	4 1/2 - 6 1/2 min.	Turn over after half the time.
<b>PORK</b>		
Loin Roast	4 1/2 - 6 1/2 min.	Turn over after half the time.
Spare Ribs	4 1/2 - 6 1/2 min.	Separate and rearrange once.
Chops	4 1/2 - 6 1/2 min.	Separate and turn over once.
Minced	4 1/2 - 6 1/2 min.	Break apart and remove thawed portions with a fork.

### Guide for Cooking Meats

Roasts, chops, hamburgers and small cuts of tender meat cook beautifully in the microwave oven. Most roasts can be cooked rare, medium rare or even well done in less than one hour. Less tender cuts of meat such as pot roast can be simmered fork tender in a sauce or gravy. Tough cuts that require slow cooking will do better in the conventional range or oven. A large piece of meat, especially if the shape is uneven, should be turned over occasionally for uniform roasting.

<b>Meat</b>	<b>Power Level</b>	<b>Cooking Time (per lb)</b>	<b>Standing Time</b>	<b>Special Notes</b>
<b>Beef Roast</b>				
Rare	6	5 1/2 - 7 min.	4 1/2 - 6 1/2 min.	
Medium	6	7 - 9 min.	9 - 13 1/2 min.	Turn over after half the time.
Well	6	9 - 11 min.	9 - 13 1/2 min.	
<b>Pork Roast</b>				
Bone-in	6	11 - 13 1/2 min.	9 min.	Cover with plastic wrap.
Boneless	6	13 1/2 - 15 1/2 min.	9 - 13 1/2 min.	Turn over after half the time.
<b>Lamb Roast</b>				
Bone-in	Medium	6	6 1/2 - 8 min.	9 - 11 min.
	Well	6	8 1/2 - 10 1/2 min.	9 - 13 1/2 min.
Boneless	Medium	6	8 - 10 min.	9 - 11 min.
	Well	6	10 - 12 min.	9 - 13 1/2 min.
<b>Beef Patties (3 1/2 oz) each</b>				
2 patties	8	2 1/2 - 3 min.	4 1/2 - 6 1/2 min.	Turn over and rearrange after half the time.
4 patties	8	3 - 4 min.	4 1/2 - 6 1/2 min.	
<b>Meat Loaf (2lbs)</b>				
	8	13 1/2 - 15 1/2 min.	9 - 11 min.	Cover with wax paper.
<b>Bacon</b>				
Slices (4 strips) (1 slice; weight: 1 oz, length: 11 in.)	10	3 - 4 min.	—	Cover with a paper towel.
<b>Ham</b>				
Slices (1 in. thick) 4 slices	10	6 - 7 min.	4 1/2 - 6 1/2 min.	Cover with plastic wrap.

## POULTRY

### Guide for Auto Weight Defrosting Poultry

Poultry dishes can be defrosted in your microwave oven. Remove giblets and defrost fully before cooking. Use a microwaveable dish and defrost only as long as necessary. Standing time will complete the thawing process.

Item	Standing Time (minutes per lb)	Special Techniques
Whole Chicken	9 - 13 1/2 min.	Breast side down. Turn over after half the time.
Pieces	6 1/2 - 9 min.	Separate and rearrange once.
Breasts	4 1/2 - 6 1/2 min.	Separate and rearrange once.
Cornish Hens	4 1/2 - 6 1/2 min.	Breast side down. Turn over after half the time.
Turkey Breasts	4 1/2 - 6 1/2 min.	Turn over after half the time.

### Guide for Cooking Poultry

Chicken is one of the most popular foods and microwaving chicken is one of the best uses of your microwave oven. Chicken stays juicy and tender in the microwave oven. However, juiciness prevents browning because chicken crisps and browns only when the skin dries out enough to change color. Standing time is important, because it allows the interior to finish cooking without toughening the delicate breast meat.

Food	Power Level	Cooking Time (per lb)	Standing Time	Special Notes
<b>Roast</b>				
Chicken whole	8	5 1/2 - 7 min.	10 - 15 min.	Place breast side up on roasting rack. Let stand, covered, before serving.
Chicken cut up	8	5 1/2 - 6 1/2 min.	7 - 10 min.	
Turkey	8	5 1/2 - 6 1/2 min.	10 - 15 min.	
Cornish Hens	8	6 1/2 - 7 min.	7 - 10 min.	
Turkey Breast	6	7 - 8 1/2 min.	5 - 7 min.	Rearrange once during the cooking. Cover with wax paper.

## SEAFOOD

### Guide for Auto Weight Defrosting Seafood

Item	Standing Time (minutes per lb)	Special Techniques
Whole Fish	5 - 7 min.	Turn over after half the time.
Fish Fillets	5 - 7 min.	Separate and turn over once.
Shrimp	5 - 7 min.	Separate and turn over once.

## Guide for Cooking Seafood

Microwaving is one of the easiest and most efficient ways of preparing fish and seafood, which stay delicate and tender with quick, moist cooking. Overcooking dries out and toughens seafood, so you should check it after the minimum time. If thick pieces like fish steaks or lobster tails are done on the outside, but still slightly translucent in the middle, let them stand for a few minutes; internal heat will complete the cooking.

<b>Food</b>	<b>Power Level</b>	<b>Cooking Time</b>	<b>Standing Time</b>	<b>Special Notes</b>
Whole Fish 10 (1 lb to 1 1/2 lbs)	8	5 1/2 - 6 1/2 min.	4 1/2 min.	Turn over after half the time.
Fish Fillet (1 lb)	8	4 1/2 - 5 1/2 min.	3 1/2 - 4 1/2 min.	Turn over after half the time.
Fish Steak 10 1 inch thick (1 lb)	8	3 1/2 - 4 1/2 min.	4 1/2 - 5 1/2 min.	Turn over after half the time. Cover with wax paper.
Shrimp (1 lb)	8	3 - 3 1/2 min.	4 1/2 min.	Rearrange once during cooking. Cover with plastic wrap.
Sea Scallops (1 lb)	8	5 - 6 min.	4 1/2 min.	Rearrange once during cooking. Cover with plastic wrap



## VEGETABLES

### Guide for Cooking Fresh Vegetables

Nutrition research indicates that many microwaved vegetables and fruits lose less water soluble vitamin C than when cooked conventionally. This is due to shorter cooking time and to the fact that less cooking water is needed when microwaving fruits and vegetables. Best of all, vegetables keep their fresh color, texture and flavor. Vegetables should be microwaved covered with vented plastic wrap or a casserole lid. Vegetables cooked in their skins, such as potatoes, are already so tightly covered that they should be pricked with a fork before cooking in order to release excess steam. To assure even cooking, vegetables should be cut in uniform pieces and stirred during the cooking time. Always add salt to water before adding vegetables. Reduce time a minute or two for crisp-tender texture. Increase time for very soft texture. Remember to allow standing time of 2 to 5 minutes after cooking, because as most foods do, vegetables will continue to cook after they are removed from the microwave oven.

Food	Water Amount	Cook on Power 10	Standing Time	Special Notes
<b>Asparagus</b>				
Spears (1lb) 1/4 cup	1/4 cup	4 - 5 min.	2 min.	Medium Casserole. Rearrange once.
Cuts (1lb) 1/2 cup	1/2 cup	4 - 5 min.	2 min.	
<b>Beans</b>				
Fresh green (1/2lb)	1/4 cup	3 - 4 min.	2 min.	Stir twice.
Frozen green (1/2lb)	2 Tbsp	4 1/2 - 5 1/2 min.	2 min.	Stir twice.
Green Peas (2 cups)	1/4 cup	3 - 4 min.	2 min.	Small casserole. Stir twice.
Broccoli (2 cups)	1/4 cup	3 - 4 min.	2 min.	Medium casserole. Rearrange once during cooking.
Brussels Sprouts (1lb)	1/4 cup	5 - 5 1/2 min.	2 - 3 min.	Medium casserole. Stir once.
Cabbage (1lb)	1/4 cup	4 - 5 min.	2 - 5 min.	Rearrange once during cooking.
Cauliflower pieces (1 head)	1/4 cup	5 - 6 min.	2 - 5 min.	Wrap in plastic wrap. Stir once.
Mushroom slices (1/2lb)	2 Tbsp	2 1/2 - 3 1/2 min.	2 - 3 min.	Small casserole. Stir once.

## SOUPS

### Guide for Cooking Soups

Satisfy appetites with savory soups prepared in your microwave oven. Follow our recipes for homemade soups and stews or adapt your favorites by using similar cooking times and techniques.

Food	Power Level	Cooking Time	Standing Time	Special Notes
<b>Canned Condensed</b>				
Cream style, Bean, Pea or Mushroom (10 1/2 - 11 1/2 oz) with Water	10	3 1/2 - 4 1/2 min.	2 - 3 min.	Stir halfway through cooking time. Cover.
	8	4 1/2 - 5 1/2 min.	2 - 3 min.	
Dry Soup Mix	10	4 1/2 - 6 1/2 min.	2 - 3 min.	Add water. Cover with lid. Stir twice.
(1 envelope (10 1/2 oz)	then 6	3 1/2 - 4 min.		
Broth (10 1/2 oz)	10	5 - 6 min.	2 - 3 min.	Stir twice. Cover with lid.

## SAUCES

### Guide for Cooking Sauces

Sauces boil over rapidly, especially those that contain milk. As soon as the door is opened, cooking stops. If ingredients are not taken directly from the refrigerator, cooking time will be less than given in the recipe. Stir sauce quickly, about every 30 seconds to eliminate lumps. Be sure to use a container twice the size of the amount of liquid to prevent boiling over.

A wooden spoon may be left in the dish while sauce is cooking for easy stirring. If sauce is stirred slowly, cooking time may require about 15 seconds longer. If desired, a 1 quart glass measure may be used to prepare some sauces.

### White Sauce

Amount	Butter	Flour	Milk	Cook Butter	Cook Sauce	Special Notes
1 cup, thin	1 Tbsp	1 Tbsp	1 cup	30 sec.	2 - 3 min.	Cook on Full power as directed or until thickened, stirring once. Let stand, covered, before serving.
med.	2 Tbsp	2 Tbsp	1 cup	40 sec.	2 1/2 - 3 1/2 min.	
thick	3 Tbsp	3 Tbsp	1 cup	1 min.	3 - 4 min.	

### Brown Gravy

Amount	Fat from Drippings	Flour	Liquid or Drippings	Cook on Power 10	Special Notes
1 cup, thin	1 Tbsp	1 Tbsp	1 cup	2 - 3 min.	Cook on Full power as directed or until thickened, stirring once. Let stand, covered, before serving.
med.	1 Tbsp	1 Tbsp	1 cup	2 1/2 - 3 1/2 min.	
thick	1 Tbsp	1 Tbsp	1 cup	3 - 4 min.	

## CASSEROLES

Casseroles may require occasional stirring to distribute heat. They cook more evenly when made with ingredients of similar size and shape. Because of their shorter cooking time, casseroles cooked in the microwave oven generally need less liquid. Casseroles with cream and cheese sauces, or meats which need slower cooking to tenderize, cook best on power level 4.

When cooking a favorite casserole, make two and freeze the second for future use. Line a casserole or baking dish with plastic wrap. Transfer the cooked food to the lined container and freeze. As soon as the food is frozen in the shape of the dish, remove it and wrap with freezer paper. Later it can be unwrapped and returned to the container for defrosting and heating.

### Dry Casserole Mixtures

Many prepared box type casseroles are available on the grocery shelves. Many have freeze dried foods or evaporated foods included. Cooking periods are so short there may not be time for the foods to absorb the moisture sufficiently and reconstitute the foods. To prepare this type, boil the amount of water recommended on the package. Add the noodles (when included), cover and cook for approximately 10 minutes. Allow noodles to stand covered for an additional 10 minutes, rinse with warm water and drain. Then follow package directions for preparing the mix. Reheat 4 to 6 minutes before serving.

## SANDWICHES, INCLUDING HAMBURGERS AND HOT DOGS

### Guide for Heating Sandwiches

Sandwiches heat very quickly because, being porous, they have a low density. Since the filling is usually more dense than the bread or rolls, the filling determines the heating time. Surprisingly, the filling will always be hotter than the bread feels. Care must be taken not to overcook as the bread will become tough. Use several thin slices of meat. Thin slices heat more quickly and are better than one thick slice. The slow heating thick slice often causes the bread to overcook before the meat is hot. Sandwiches may be placed on a paper plate, napkin or paper towel to be warmed. The sandwich should be covered with a paper towel. Remove wrapping immediately after warming. Already-baked frozen breads and rolls may be used for sandwiches. The filling, however, should be thawed first. Toasted bread is fine for sandwiches and provides a firm base. The toast is warmed only; no further browning occurs.

Food	Amount	Cooking on Power 10	Special Notes
Sandwich	1	1 1/2 min.	
(6 oz)	2	1 1/2 - 2 min.	Place on paper towels.
	4	3 - 3 1/2 min.	
Hamburger	1	1 min.	Cover with paper towel.
(4 oz)	4	3 - 3 1/2 min.	
Hot Dogs	4	1 - 1 1/2 min.	Cover with paper towel.
(2 oz)			
Sloppy Joes	4	3 - 3 1/2 min.	Place on microwaveable plate.

## PASTA & GRAINS

### Guide for Cooking Pasta and Grains

Raw long grain rice takes time to rehydrate. Microwaving time is a little shorter than conventional, but the greatest advantage is the ease with which you can prepare fluffy rice without sticking or burning. Cooked rice and pasta reheat easily in the microwave oven without loss of flavor or texture. No extra water is needed to prevent sticking or drying, so there's no danger of overcooking rice and pasta or thinning sauces.

Food	Hot Water	Salt	Oil or Butter	Power Level	Cooking Time	Standing Time
<b>Pasta (8 oz)</b>						
Egg Noodles	4 cups	1 tsp.	1 Tbsp.	10	5 1/2 - 6 1/2 min.	2 - 4 1/2 min.
Macaroni	4 cups	1 tsp.	1 Tbsp.	10	6 1/2 - 8 min.	2 - 4 1/2 min.
Spaghetti	4 cups	1 tsp.	1 Tbsp.	10	6 1/2 - 8 min.	2 - 4 1/2 min.
Lasagna Noodles	4 cups	1 tsp.	1 Tbsp.	10	10 - 12 min.	2 - 4 1/2 min.
<b>Rice, Long Grain</b>						
White Rice (1 cup)	2 cups	1 tsp.	1 tsp.	10 then 8	4 - 5 min. 8 - 10 min.	4 1/2 - 6 1/2 min.
Brown Rice (1 cup)	2 cups	1/2 tsp.	1 tsp.	10 then 8	4 - 5 min. 18 - 21 1/2 min.	4 1/2 - 6 1/2 min.

## CEREALS

Microwaved hot cereals can be cooked directly in the cereal bowl and make washing-up easy.

## **CONVENIENCE FOODS**

### **Frozen Foods**

A large variety of frozen foods, special dishes and dinners are available and the selections continue to increase. The market is changing rapidly, therefore it is impossible to list the foods and types available and recommend cooking procedures. In this book we can only give general directions to assist you.

### **T.V. Dinners**

To prepare a T.V. dinner, follow the maker's instructions for use with microwave ovens. To cook a T.V. dinner will require approximately 7 to 9 minutes for the food to thaw and heat to serving temperature (depending on the types of food). Allow plastic wrap to remain over the dish for 2 minutes to allow heat to equalize. Dinners that contain mashed potatoes have presented a bit of a problem due to the large compact mass of this particular food. You may want to remove about half the mashed potatoes after defrosting is started, then spread the remaining potatoes over the individual section of the tray. Heat the removed mashed potatoes in an individual dish. For foods that should be crisp when cooking is completed, remove the plastic wrap and use the broiler of a conventional range to crisp the food.

### **Individual Frozen Foods**

These may be commercially prepared or frozen at home. Place the container of frozen food in the oven and heat only until the food starts to defrost and can be removed easily. Empty contents into a casserole or serving dish and continue to defrost and heat. Do not heat foods in deep foil containers. To crisp and brown special toppings, use the broiler of a conventional range. If allowed to heat to serving temperature in a plastic container, the container will warp or melt from the high heat of food.

### **Frozen Foods in Cooking Pouches or Boilable Bags**

To prepare these foods, slit the plastic bag. An X-type cut will help remove the food at the end of cooking time. Place the cut side down on a serving dish (with no metal trim). Heat foods other than vegetables for about 4 minutes. Frozen vegetables require about 10 - 12 minutes of cooking time. Allow the pouch bag to remain over the food for about 2 minutes to allow time for the heat to equalize. Foods prepared in cheese or white sauce should be removed from the pouch and placed in a glass casserole dish and stirred to prevent overcooking of the sauce around the edges of the dish.

### **Complete Meals from Table Leftovers**

Complete meals from leftovers can be prepared in advance. Foods can be frozen and ready for quick heating in the oven at any time. Choose foods suitable for freezing and put serving portions on paper, glass or china (no metal trim) plate. Wrap with recommended freezer paper and freeze quickly. When apportioning the servings of food on the plate, use approximately the same amount of each kind of food for more even heating. Mashed potatoes will heat quicker if spread slightly and hollowed, with a pat of butter in the center. To prevent small pieces of vegetables, corn, peas, etc., from dehydrating during heating, mound well near the center of the plate.

## **BEVERAGES**

Beverages can be quickly heated or reheated in the microwave oven. Individual servings can be heated directly in cups or mugs, so you avoid washing sticky pans. Handles of cups and mugs stay cool, even though the beverage gets hot. Beverages can be quickly reheated. Save leftover coffee in a glass measuring cup or serving cup and refrigerate. Later, reheat it in the microwave oven. The coffee will taste as if it had just been freshly brewed. Remember, however, to always vigorously stir a beverage before it is reheated. Chocolate squares may be melted in their original paper wrapper, in a glass mixing bowl, in custard cups or glass measuring cups. If milk is to be added to melted chocolate squares, add water to the melted chocolate for easier blending.



## DESSERTS

There's always time to make dessert with a microwave oven. Fruit desserts have a remarkably fresh flavor and texture. Microwaved cakes are higher and more tender than conventionally baked; since cakes are usually frosted, browning is unimportant. Microwaved pie crusts are exceptionally tender and flaky, while delicate custards and puddings are easy to prepare.

### Guide for Cooking Cakes

Food	Power Level	Cooking Time	Standing Time	Special Notes
Cake, round (Mixed 9 inch)	10 8	3 - 4 min. 3 1/2 - 5 min.	2 - 4 1/2 min.	Pour into greased and wax paper lined cake dishes.
Ring or Angel Food Cake	8	4 1/2 - 5 1/2 min.	2 - 4 1/2 min.	Cover with wax paper.
Muffin (6 muffins)	6	4 1/2 - 5 1/2 min.	2 - 4 1/2 min.	Rearrange once.
Custard (6 servings)	6	8 - 10 min.	4 1/2 - 6 1/2 min.	Rearrange once.

### Baking

- Bar cookies work best. Greasing or lining of the microwaveable baking dish is optional.
- If insufficient browning disturbs you, frost, glaze or add food coloring to white or yellow batters.
- A serviceable microwaveable cookie sheet can be made by covering cardboard with waxed paper.
- Round glass baking dishes, and fluted or smooth microwaveable ring molds work best for cakes. You can make a microwaveable ring mold of your own by placing a medium-size glass in the center of a round glass baking dish.
- Because your cakes will rise higher in microwave cooking, never fill microwaveable cake pans more than half full.
- Reduce baking powder and soda by approximately one-fourth when converting a conventional recipe.
- Fill paper-lined muffin cups to only half full which allows for muffins to rise more than normal.
- You can prepare your own "brown 'n serve" breads and rolls by baking them ahead of time in the microwave oven. Then, place them in a conventional oven to brown prior to serving.
- Breads and rolls should be reheated to the point where they are warm to the touch. Overheating or overcooking makes bread tough and rubbery.
- When making yeast bread in a microwave oven, choose a recipe with cornmeal, whole wheat flour, or rye flour to achieve a richer color.

## WEIGHT & MEASURE CONVERSION CHART

### • POUNDS & OUNCES TO GRAMS


POUNDS (lbs)	GRAMS (g)	OUNCES (oz)	GRAMS (G)	OUNCES (oz)	GRAMS (g)
1/4	114	1	28	9	255
1/2	227	2	57	10	284
3/4	341	3	85	11	312
1	454	4	113	12	340
2	907	5	142	13	369
3	1361	6	170	14	397
4	1814	7	198	15	425
5	2268	8	227	16	454
6	2722				
7	3175				
8	3629				
9	4082				
10	4536				
11	4990				

• FLUID MEASUREMENTS		
1 Cup =	8 fluid ounces =	240 ml
1 Pint =	16 fluid ounces =	480 ml
1 Quart =	32 fluid ounces =	960 ml
1 Gallon =	128 fluid ounces =	3840 ml

## SPECIFICATIONS

Style	5000 Series Range
Control Panel	Top Control Panel, 27" wide, 24" high, 18" deep
Control Panel Finish	Black
Material - Top Panel	Stainless
Material - Body	20 Gauge
Control Methods	2.5" Wide, 1.5" High, 1.5" Deep Knobs
Control Dimensions	20.5" Wide, 18" High, 15" Deep
Weight	44.5 lbs.
Clear	Minimum 24" High, 30" Wide

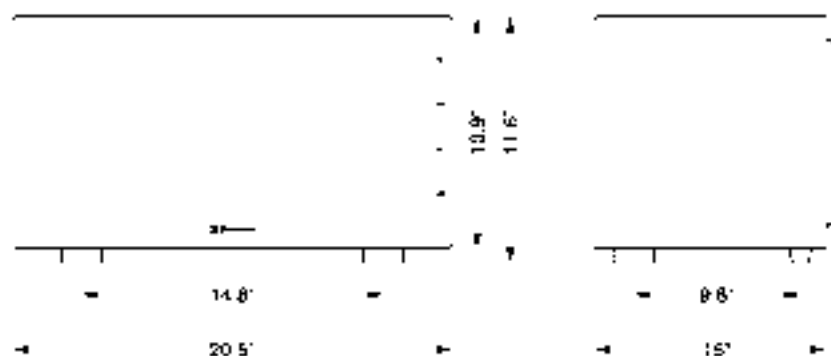

## BEFORE YOU CALL FOR SERVICE

Refer to the following checklist before you call for service:

The oven does not work:

1. Check the power. Check the plug.
2. Check the door is properly closed.
3. Check the oven is properly vented.
4. Check the oven is not plugged into a double outlet.
5. Check the oven is not plugged into a double outlet.

Sparking in the cavity:

1. Check the oven is properly vented. Check the vent is not blocked.

©2005 Sunbeam Products, Inc. All rights reserved. For more information, visit us online at [www.sunbeam.com](http://www.sunbeam.com).

## WEIGHT & MEASURE CONVERSION CHART

### • POUNDS & OUNCES TO GRAMS

POUNDS (lbs)	GRAMS (g)	OUNCES (oz)	GRAMS (g)	OUNCES (oz)	GRAMS (g)
1/4	113	1	28	9	255
1/2	227	2	57	10	284
3/4	340	3	85	11	312
1	454	4	113	12	340
2	907	5	142	13	369
3	1361	6	170	14	397
4	1814	7	198	15	425
5	2268	8	227	16	454
6	2722				
7	3175				
8	3629				
9	4082				
10	4536				
11	4990				

• FLUID MEASUREMENTS			
1 Cup	=	8 fluid ounces	= 240 ml
1 Pint	=	16 fluid ounces	= 480 ml
1 Quart	=	32 fluid ounces	= 960 ml
1 Gallon	=	128 fluid ounces	= 3840 ml

## AUTO WEIGHT DEFROST AND COOK CONVERSION CHART

Ounces	Hundredths of a Pound	Tenths of a pound	Grams
1 - 2	.06 - .15	0.1	50
3 - 4	.16 - .25	0.2	100
5 - 6	.26 - .35	0.3	150
7	.36 - .45	0.4	200
8 - 9	.46 - .55	0.5	250
10 - 11	.56 - .65	0.6	300
12 - 13	.66 - .75	0.7	350
14	.76 - .85	0.8	400
15 - 16	.85 - .95	0.9	450

**HOLD WARM (To keep food warm after cooking is completed)**

1. Program the desired cooking time and power level (do not perform this step if warming after conventional cooking).
2. Press the Door Release button to open the door. Press the HOLD WARM pad once for every 10 minutes of Hold Warm time (up to 30 minutes).
3. Close the door. Press START pad. The oven will cook and then begin Hold Warm feature.

**DINNER PLATE (To reheat plated foods)**

1. Press the Door Release button to open the door. Press the DINNER PLATE pad once for regular amount, twice for smaller amount or three times for a larger amount of food.
2. Close the door. Press the START pad; the oven will cook at full (100%) power at the desired time as shown in the chart.

Regular	Small	Larger
*rE G*	*SA L*	*bl G*
2:20	1:20	2:50

**PIZZA (To reheat refrigerated leftover pizza)**

1. Press the Door Release button to open the door. Press the PIZZA pad once for each slice of pizza to be reheated.
2. Close the door. Press the START pad; the oven will cook at full (100%) power at the time as shown in the chart.

1 Slice	2 Slices	3 Slices
*P 1*	*P 2*	*P 3*
0:25	0:50	1:50

**POTATO (To cook up to 3 potatoes)**

1. Press the Door Release button to open the door. Press the POTATO pad once for each potato to be cooked.
2. Close the door. Press the START pad; the oven will cook at full (100%) power at the time as shown in the chart.

1 Potato	2 Potatoes	3 Potatoes
*PO 1*	*PO 2*	*PO 3*
3:00	5:00	6:00

**PREPACKAGED POPCORN (To cook a 3.5oz microwaveable popcorn package)**

1. Press the Door Release button to open the door. Press the POPCORN pad.
  2. Close the door. Press the START pad; the oven will cook for 1 minutes, 45 seconds at full (100%) power.
- NOTE: Do not leave the oven unattended while popping popcorn.

**BEVERAGES**

1. Press the Door Release button to open the door. Press the BEVERAGES pad repeatedly until the desired number of cups appear in the display window (up to 3).
2. Close the door. Press the START pad; the oven will cook at full (100%) power at the time as shown in the chart.

**NOTE:** Up to 3 cups of beverage can be heated. Heating time is as follows:

1 CUP	CU P1 (1 Min., 35 Sec.)
2 CUPS	CU P2 (2 Min., 50 Sec.)
3 CUPS	CU P3 (4 Min., 20 Sec.)

**TO SET CHILD LOCK FEATURE**

The oven can be set so the control panel is deactivated or locked.

1. Press the 0 pad once.
2. Press the START pad 5 times; the display will show "LOC".

**TO CANCEL CHILD LOCK FEATURE**

1. Press the 0 pad once.
2. Press the START pad 5 times; the display will return to the present time.

**NOTE:** One beep sound will be heard when setting or cancelling the Child Lock feature.

### COOKING IN TWO STAGES

1. Press the Door Release button to open the door. Press the COOK pad.
2. Press the number pads to set the cooking time for the first stage.
3. Press the POWER LEVEL pad and then the number pads to set the power level for the first stage.  
(If cooking at full power, omit this step and the oven will cook at full power for the first stage.)
4. Press the COOK pad first and then press the number pads to set the cooking time for second stage.
5. Press the POWER LEVEL pad and then the number pads to set the power level for the second stage.  
(If cooking at full power, omit this step and the oven will cook at full power for the second stage.)
6. Close the door. Press the START pad.

### PLUS TIME

1. Plus Time pad can be used during cooking in stage one through stage three only, with the door closed.  
Plus Time can not be used during Auto Weight Defrost or preprogrammed recipes, such as Popcorn, Beverages, Potatoes, etc.
2. Plus Time pad adds 10 seconds for each touch to count down cooking time when cooking in stages one through three.
3. Plus Time pad can be used for any cooking time up to 89:59 minutes. If cooking time displayed is 90:00 minutes or more, the Plus Time pad will not work.

### AUTO WEIGHT DEFROSTING

1. Press the Door Release button to open the door. Press the desired auto weight category.
2. Press the number pads to enter the food's weight.
3. Close the door. Press the START pad.

Category	Display	Food	Range
1	dEF 1	Poultry	0.1 lb to 6.0 lb
2	dEF 2	Meat, Ground	0.1 lb to 4.0 lb
3	dEF 3	Fish	0.1 lb to 3.0 lb

### AUTO WEIGHT DEFROSTING AND COOKING IN TWO STAGES

1. Press the Door Release button to open the door. Press the desired auto weight category (see chart above).
2. Press the number pads to enter the food's weight (this is stage 1).
3. Press the COOK pad.
4. Press the number pads to set the cooking time for the second stage.
5. Press the POWER LEVEL pad and then the number pads to set the power level for the second stage.  
(If cooking at full power, omit this step and the oven will cook at full power for the second stage.)
6. Press the COOK pad first and then press the number pads to set the cooking time for the third stage.
7. Press the POWER LEVEL pad and then the number pads to set the power level for the third stage.  
(If cooking at full power, omit this step and the oven will cook at full power for the third stage.)
8. Close the door. Press the START pad.

### TO STOP/CLEAR/RESTART THE OVEN

1. Press the CLEAR/PAUSE pad: the PAUSE indicator will start blinking and the oven stops cooking.
2. Press the CLEAR/PAUSE pad again to clear programmed instructions, or press the START pad to restart the oven.

NOTE: The oven stops operating when the door is opened.

## **MICROWAVE OVEN COOKING CHART**

THIS CHART PROVIDES A QUICK REFERENCE FOR OPERATING YOUR MICROWAVE OVEN. REFER TO THE OWNER'S MANUAL FOR DETAILED INSTRUCTIONS.  
BEFORE USING THE MICROWAVE OVEN, READ AND FOLLOW ALL SAFETY INSTRUCTIONS AND PRECAUTIONS OUTLINED IN THE OWNER'S MANUAL.

<b>COOK</b>	<b>PORTION</b>	<b>POWER (MINUTES)</b>	<b>TIME (MINUTES)</b>	<b>STANDING TIME (MINUTES)</b>
Bacon	3.5 oz. (4 strips)	Power 10	3 to 4	—
Canned Soup	11 oz.	Power 10	3 1/2 to 4 1/2	2
Hamburger	4 patties	Power 8	3 to 4	4 1/2 to 6 1/2
Meatloaf	2 lb.	Power 8	13 1/2 to 15 1/2	9 to 11
Beef Roast	3.5 to 4 lbs	Power 6	20 to 22 1/2	9 to 11
Pork Roast	3 lbs	Power 6	24 to 29	9 to 11
Chicken - whole	2.5 lbs	Power 8	10 to 13 1/2	9 to 11
Chicken - parts	2 lb.	Power 8	8 to 12	6 1/2 to 9
Fish Fillets	1 lb.	Power 8	4 1/2 to 5 1/2	3 1/2 to 4 1/2
Shrimp	1 lb.	Power 8	2 1/2 to 3 1/2	4 1/2
Fresh Vegetables	1 lb.	Power 10	3 to 4	2
Frozen Vegetables	1 lb.	Power 10	3 1/2 to 5 1/2	2
Hot Dogs	4 hot dogs	Power 8	1 to 1 1/2	1
Muffin	6 muffins	Power 6	3 1/2 to 5 1/2	2 to 5
TV-style Dinner	1 dinner (11 oz.)	Power 8	4 1/2 to 6 1/2	2

### **SETTING THE CLOCK (The clock should be set to operate the oven.)**

1. Open the door. Press the CLOCK pad.
2. Press the number pads to set the time.
3. Press the CLOCK pad.

### **COOKING IN ONE STAGE**

1. Open the door. Press the COOK pad.
2. Press the number pads to set the cooking time.
3. Press the power level pad and then the number pads to set the power level. (If cooking at full power, omit this step and the oven will cook at full (100%) power.)
4. Close the door. Press the START pad.



**EMERSON RADIO CORP.  
MODEL MW8108BSC**

For Assistance Call 1-800-287-4871

## **EMERSON MICROWAVE OVEN WARRANTY**

We appreciate your purchase of a EMERSON Microwave. We take pride in the quality of our products and have manufactured your new Microwave unit to exacting quality standards. We feel confident that in normal use, it will provide you with satisfactory performance. However, should you experience difficulty, you are protected under the provisions of this warranty. EMERSON Microwave Ovens are warranted against manufacturing defects in materials and workmanship in normal use for the following periods from the date of purchase by the original user, and is conditional upon the unit being installed and used as directed in the instruction manual.

### **WARRANTY PERIOD**

Domestic Microwave Ovens – Carry-in Service :

One (1) year parts and labour : Seven (7) years on Magnetron – labour not included after initial Twelve (12) months.

EMERSON's obligation under this warranty should be limited to the repair, including all necessary parts and the labour connected therewith, or at our option the exchange of any Microwave Oven which shows evidence of a manufacturing defect within the warranty period. Replacement parts, furnished in connection with this warranty shall be warranted for a period equal to the unexpired portion of the original equipment warranty.

### **CUSTOMER OBLIGATIONS**

This warranty applies to the product from the original date of purchase at retail. Therefore, the owner must provide a copy of the original, dated bill of sale. No warranty service will be performed without a bill of sale. Transportation to and from the service depot is the responsibility of the owner.

### **WARRANTY EXCLUSIONS**

This warranty is extended to EMERSON Microwave Ovens purchased and used in Canada. This warranty shall not apply to appearance or accessory items including but not limited to: glass tray, cabinet, cabinet parts, knobs. This warranty shall, in addition, not apply to damages due to handling, transportation, unpacking, set-up, installation, customer adjustments that are covered in the instruction book, repair or replacement of parts supplied by other than the EMERSON authorized service depot, any malfunction or failure caused by or resulting from abnormal environmental conditions, improper unauthorized service, improper maintenance, modifications or repair by the consumer, abuse, misuse, neglect, accident, fire, flood, or other Acts of God, and incorrect line voltage. This Appliance product is only warranted to the original retail purchaser. This warranty becomes void in the event of commercial or rental use. This warranty becomes void in the event serial numbers are altered, defaced or removed.

EMERSON reserves the right to make changes in design or to make additions to or improvements upon this product without incurring any obligation to install the same on products previously manufactured. The foregoing is in lieu of all other warranties expressed or implied and EMERSON neither assumes nor authorizes any person to assume for it any other obligation or liability in connection with the sale or service of this product. In no event shall EMERSON or its EMERSON dealers be liable for special or consequential damage arising from the use of this product, or for any delay in the performance of this warranty due to cause beyond our control.

The purchaser may have other rights under existing provincial or federal laws, and where any terms of this warranty are prohibited by such laws, they are deemed null and void, but the remainder of the warranty shall remain in effect.

### **HOW TO OBTAIN SERVICE**

Should this product require service, you may obtain specific information on how to obtain service by contacting the EMERSON Dealer from whom this product was purchased, or by contacting us directly:

#### ***SONIGEM SERVICE***

300 Alden Road  
Markham, Ontario  
L3R 4C1

PHONE: (905) 940-5089 FAX: (905) 940-2303

TOLL FREE: 1-800-287-4871