

CE



User's Guide



<http://www.omega.com>  
e-mail: [info@omega.com](mailto:info@omega.com)

**CN9400**  
**Dual Display Autotune Temperature Controller**

<b>SAFETY INFORMATION</b>	A1	<b>SECOND SETPOINT (SP2)</b>	12
<b>FUNCTIONS MENU</b>	A3	SP2 as an alarm	12
<b>QUICK START</b>		SP2 subsidiary mode	13
Quick Start Set-up	1a	SP2 as a proportional output	13
<b>INTRODUCTION</b>	2	SP2 alarm condition table	13
The controllers	2	SP2 alarm annunciator	13
<b>OVERVIEW</b>	3	<b>ERROR MESSAGES</b>	14
Installation	3	Recommendations	14
Set-up	3	Autotune data in <i>tECH</i>	14
Autotune	3	<b>IMPROVING CONTROL ACCURACY</b>	15
Cycle-time	4	Using <i>ChEK</i> accuracy monitor	15
<b>SET-UP</b>	5	<b>FUNCTION LIST</b>	16
Power-up	5	Level 1	16
Select input sensor	5	Level 2	18
Select display units	5	Level 3	19
Allocate output device	5	Level 4	21
Enter initial configuration	5	<b>OUTPUT OPTIONS</b>	22
Set main setpoint	5	<b>ADVANCED SETTINGS</b>	23
<b>MENU NAVIGATION</b>	6	Heat Cool strategy	23
Using program mode	6	Calibration to other instrument	24
<b>AUTOTUNE 7</b>	7	Linear input calibration	25
Tune program	7	<b>MECHANICAL INSTALLATION</b>	27
Tune at setpoint program	8	DIN panel cut-outs	27
<b>PROPORTIONAL CYCLE-TIME</b>	9	Minimum spacing	27
Cycle-time selection methods	9	Mounting	28
Cycle-time recommendations	9	<b>ELECTRICAL INSTALLATION</b>	29
Autotune calculated cycle-time	9	General requirements	29
<b>PROGRAMMER</b>	11	Connection diagrams	30
Ramp-Soak	11	<b>INPUT/SENSOR SELECTION</b>	31
		<b>SPECIFICATION</b>	32
		<b>WARRANTY INFORMATION</b>	Inside back cover

# SAFETY INFORMATION

## INSTALLATION



Designed for use:  
UL873 - only in products where the acceptability is determined by Underwriters Laboratories Inc.  
EN61010-1 / CSA 22.2 No 1010.1 - 92  
To offer a minimum of Basic Insulation only.  
Suitable for installation within Category II and III and Pollution Degree 2.

### SEE ELECTRICAL INSTALLATION P29 & P30

It is the responsibility of the installation engineer to ensure this equipment is installed as specified in this manual and is in compliance with appropriate wiring regulations.

## CONFIGURATION

All functions are front selectable, it is the responsibility of the installing engineer to ensure that the configuration is safe. Use the program lock to protect critical functions from tampering.

## ULTIMATE SAFETY ALARMS

Do not use SP2 as the sole alarm where personal injury or damage may be caused by equipment failure.

# FUNCTIONS MENU

Functions Menu

KEY ★ OR ★ TOGETHER TO CHANGE LEVELS OR OPTIONS



Range of Adjustment shown in red under description. If applicable, factory settings shown in bold.  
 \* Note: Dual Relay and Dual SSd Output Options Models CN9411 and CN9422 have their outputs pre-configured. (see page 22)



Setpoint 1 Output indicator (green)

Process temperature (PV) or Function (green)  
 Setpoint temperature (SP) or Option (orange)  
 Setpoint 2 Output indicator (red)

## INSTRUMENT ADJUSTMENTS

- To enter or exit program mode: Press ▲ ▼ together for 3 seconds
- To scroll through functions: Press ▲ or ▼
- To change levels or options: Press ★ ▲ together or ★ ▼ together
- To view setpoint: Press ★
- To increase setpoint: Press ★ ▲ together
- To decrease setpoint: Press ★ ▼ together
- To reset an alarm or fault condition: Press ▲ ▼ together briefly

**Notes:** If in difficulty by becoming "lost" in program mode, press ▲ and ▼ together for 3 seconds to return to display mode, check the INSTRUMENT ADJUSTMENTS above and try again.

When in program mode, after 60 seconds of key inactivity the display will revert to either ..... or, if the initial configuration has been completed, the measured value. Any settings already completed will be retained.



## 2 Select unit.

Press and hold **\*** and use the **▲** or **▼** buttons to scroll through the unit selection list until the correct unit is displayed. Release the buttons.

The display will read selected unit e.g. ....



Press **▲** once The display will now read .....



## 3 Select SP1 (Main setpoint output device)

**Note:** Dual Relay and Dual SSd Output Options Models CN9411 and CN9422 have their outputs pre-configured. (see page 22)

Press and hold **\*** and use the **▲** or **▼** buttons to select **SSd** or **rLY** as required.

The controller will now read selected output device e.g. ....



## 4 To enter initial configuration into controller memory

Press and hold both **▲** and **▼** buttons for 3 seconds. The upper display will now alternate **ParK** and measured variable (temperature) (eg. **23**) **ParK** is displayed because a setpoint has not yet been entered as shown by the lower display .....



### To display setpoint

Press and hold **\*** The displays will now read **unit** (eg. **°C**) and **0** .....



### To enter setpoint

Press and hold **\*** and use **▲** button to increase or **▼** button to decrease the reading and scroll to required setpoint value. (The digit roll-over rate increases with time).

### THE CONTROLLER IS NOW OPERATIONAL WITH FACTORY SETTINGS

**Note:** For precise control of an application the controller may need to be TUNED. Please study section headed FUNCTIONS and OPTIONS before moving to the section on AUTOTUNE.

# INTRODUCTION



CN9400

The CN9400 is a 1/16 DIN dual display, dual output miniature controller with PID control strategy.

Control can be optimised with a single shot autotune either on initial warm-up or at setpoint. The second setpoint can be configured in a variety of alarm modes or PID Heat-Cool strategy. A programmer offers a single ramp to setpoint with a choice of timed soak period before switching off the output.

Control of non temperature processes is achieved by the provision of linear input ranges and scaling in commonly used engineering units.

Serial communication is available as an option, and the easy to use **CN9-SW** is a graphic WINDOWS™ based software package designed for PC supervision of up to 32 instruments, for remote adjustment, configuration, cloning, saving and retrieving settings to files and logging and charting in real time.

**CN9-SW** uses the MODBUS® protocol via either a fully isolated RS232 or RS485 link depending on the number of instruments and the transmission distances involved in the application.

A users manual is supplied with the comms option. For more information contact OMEGA. For details, see rear cover.

It is suggested that users read the **OVERVIEW** section of this manual before any installation or setting-up procedures are undertaken.

**Note:** The controller will not be operational until either the **QUICK-START** or **SET-UP** procedure has been completed.

**NB:** Please note that in program mode, **functions** are shown in the upper display (green) and **options** in the lower display (orange) .....



## INSTALLATION

The Model CN9400 controller is designed to be mounted in a 1/16 DIN panel cut-out. See the **INSTALLATION** section.

## SET-UP

After installation the controller requires programming with the following information:

- Type of Input Sensor
- Operating unit (C or F etc)
- Type of Output Device
- Temperature Setpoint

**Note:** The controller will not be operational until this information is entered.

When the above information has been programmed into the controller it will be operational with the following factory PID (proportional band, integral time, derivative time) settings.

Proportional band/Gain	10°C/18°F
Integral time/Reset	5 mins
Proportional cycle-time	20 secs
Derivative time/Rate	25 secs
DAC Derivative approach control	1.5

## AUTOTUNE

To precisely control an application the controller will need to be 'tuned' using the built-in '**AUTOTUNE**' feature. Autotune 'teaches' the controller the main characteristics of the process and 'learns' by cycling the output on and off. The results are measured and used to calculate optimum PID values which are automatically entered in the controller memory.

During **AUTOTUNE** the optimum cycle-time is calculated but is not automatically implemented. The cycle-time requires manual acceptance unless pre-selected.

To ensure good control over a wide range of applications two versions of the Autotune program are provided, **TUNE** and **TUNE AT SETPOINT**.

The **TUNE** method normally achieves the best results. Starting with the load cool, tuning occurs during warm-up preventing overshoot. This method of tuning is recommended.

The **TUNE AT SETPOINT** method is used for specialist applications. eg. Heat-cool, multizones and processes below 100°C/200°F. During the tuning cycle some overshoot occurs because the tuning cycle is at set point.

The **DAC** setting is not re-calculated.

## CYCLE-TIME

The choice of cycle-time is influenced by the external switching device or load. e.g. contactor, SSR, Valve. A setting that is too long for the process will cause oscillation and a setting that is too short will cause unnecessary wear to an electro-mechanical switching device.

### Cycle-time selection methods

The following methods of cycle-time selection may be used:

#### Autotune calculated

After **Autotune** has been run and completed the calculated cycle-time can be manually accepted or adjusted to suit the switching device. For selection method see **Select Autotune Calculated Cycle-time**.

#### Pre-select autotune cycle-time

The controller can be programmed to automatically accept the calculated **Autotune** cycle-time. For selection method see **Pre-Select Automatic Acceptance of Any Autotune Cycle-time**.

#### Pre-select before autotune

The controller can be programmed manually with any cycle-time between 0.1 and 81 sec. This cycle-time will not be changed by any **Autotune** functions. For selection method see **Pre-Select Cycle-time Before Autotune**.

#### Factory set

To use the 20 sec factory set cycle-time no action is needed whether **Autotune** is used or not.

Further information can be programmed into the controller, see **SECOND SETPOINT, RANGING AND SETPOINT LOCK, IMPROVING CONTROL ACCURACY**


### Functions and options

The facilities of the controller are selected from the multi-level menu using the front panel mounted buttons.

**Note:** It is advisable to study this section before any programming is undertaken.

Each level within the multi-level menu offers different functions, see **FUNCTIONS MENU** for menu of main functions. Each function has a range of user selections or options, see **FUNCTION LIST** for functions and options details.

The controller has two modes, program mode and operating mode. When in program mode the controller can be programmed with settings and functions to suit the application. When in operating mode the controller uses the setting and functions entered in the program mode to control the application and also displays both the process variable and setpoint temperatures. For full details on how to program the controller see **VIEWING AND SELECTING FUNCTIONS**.

**Note:** In this manual the letter k is represented by the character 



This section details the four step initial configuration that enables control with factory PID settings to start, once the setpoint has been entered.

## POWER-UP

On power-up the controller will display the self test sequence and brief display blanking .....




### 1 SELECT INPUT SENSOR

Press and hold **★** and use either the **▲** or **▼** buttons to scroll through the sensor selection (see table p.31). When the correct sensor is displayed, release the buttons. The controller will now display selected sensor type e.g. ....



### 2 TO SELECT °C/°F

Press and release the **▲** button, the controller will now display .....



Press and hold the **★** button and using the **▲** button select **°C**, **°F**, **Bar**, **PSI**, **Ph**, **Rh** or **SEt** as required. Release the buttons when the correct unit is displayed.

The controller will now display **unit** and e.g. **°C** .....




### 3 TO SELECT SP1 (Main setpoint output device)

Note: Dual Relay and Dual Ssd Output Options Models CN9411 and CN9422 have their outputs pre-configured. (see page 22)

Press and release the **▲** button, the controller will now display .....



Press and hold the **★** button and using the **▲** button select **SSd** or **rLY** as required. Release the buttons when the correct device is displayed. The controller will now display **SP1.d** and selected output device e.g. **SSd**. ....



### 4 To enter initial configuration into controller memory

Press and hold both **▲** and **▼** buttons for 3 seconds. The upper display will now alternate **ParK** and measured variable (temperature) (eg. **23**) **ParK** is displayed because a setpoint has not yet been entered as shown by the lower display .....



## TO SET THE MAIN SETPOINT

To display the setpoint, press and hold the **★** button. **°C** and **0** or **°F** and **32** will be displayed. Press and hold the **★** button. Press **▲** to increase or **▼** to decrease the setpoint. The main setpoint LED will flash indicating that SP1 output is ON. The controller will now be set with the factory PID settings.

# MENU NAVIGATION

The facilities of the controller are selected from the multi-level menu using the front panel mounted buttons.

Each level within the multi-level menu offers different functions, see **FUNCTIONS MENU** page A3. Each function has a range of user selections or options, see **FUNCTION LIST** pages 16–22

In operating mode, the upper (green) display reads process temperature (PV) and the lower (orange) display reads setpoint temperature (SP).

When in program mode, settings of each **function**, shown in the upper display, can be made by selecting an appropriate **option** from the lower display.

## USING PROGRAM MODE

**Note:** The controller will auto-exit program mode after 60 seconds of inactivity.

### To enter program mode from normal operating mode

Press and hold both ▲ and ▼ buttons for at least 3 seconds.

Release the buttons together and the controller will now display the function and option (setting of that function), e.g. ....



### To view function on the same level and display current option

Press ▲ or ▼ button once to view the next function.

Press and hold ▲ or ▼ buttons to scroll through functions. The current option or function value is shown in the lower display.

### To change an option value or setting

Press and hold the ✱ button, then press ▲ to increase or ▼ to decrease the value or select the next option.

**Note:** Check the new option value before moving to another function or exiting program mode.

### To change levels

Press and hold ▼ to scroll through the functions until **LEUL** is displayed. Release ▼ to display current level. Press and hold the ✱ button, then press ▲ to increase or ▼ to decrease the level. Release buttons when required level is obtained.

### To exit program mode

Press and hold both ▲ and ▼ buttons for at least 3 seconds.

**Note:** Control commences with any new instructions now entered in the memory.

## REMINDER OF INSTRUMENT ADJUSTMENTS

Press ▲ ▼ together for 3 seconds for program entry or exit.

Press ▲ or ▼ to scroll through functions.

Press ✱ ▲ together or ✱ ▼ together to change levels or alter options.

**Note:** If in difficulty by becoming “lost” in program mode, press ▲ and ▼ together for 3 seconds to return to display mode, check the Menu Navigation summary above and try again.

Select the most appropriate method of Autotune , Tune or Tune at Setpoint, to suit the application.

**Note:** The proportional cycle-time can be pre-selected before starting Autotune, see **PROPORTIONAL CYCLE-TIME**.

The **TUNE** program should be run with the load cool. The output is cycled at 75% of the setpoint value to avoid any overshoot during the tuning cycle. The warm-up characteristics are monitored and set DAC which minimises overshoot on subsequent warm-ups.

The **TUNE AT SETPOINT** program is recommended:

when the setpoint is below 100°C/200°F, where TUNE's tuning cycle at 75% setpoint may be too close to ambient to produce good results;


when the process is already hot and the cooling rate is slow;

when controlling multi-zone or heat-cool applications;

to re-tune if the setpoint is changed substantially from previous Autotune.

**Note:** dAC is not re-tuned by **TUNE AT SETPOINT**.

## TUNE PROGRAM

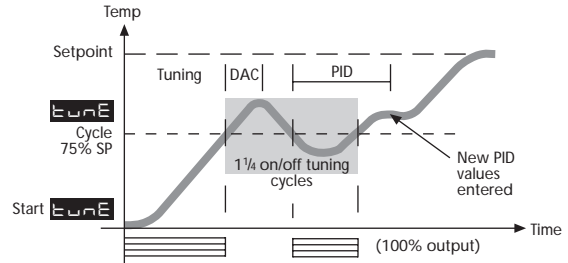

Enter program mode

and from the display .....



press and hold **★** and press **▲** once,

the controller will now display .....



Exit program mode.

The **TUNE** program will now start. The upper display will alternate between **tune** and the process temperature as it climbs to setpoint.


The lower display will read the setpoint value e.g. ....



**Note:** During tuning, the main setpoint (SP1) LED will flash.

When the **TUNE** program is complete the upper alternating display stops and only the process temperature is displayed. The PID values are entered automatically. The process temperature will rise to setpoint and control should be stable. If not, this may be because optimum cycle time is not automatically implemented. To set the cycle time see **PROPORTIONAL CYCLE-TIME**.

### TUNE AT SETPOINT PROGRAM

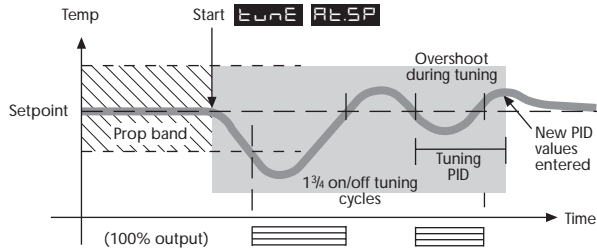

Enter program mode and select .....



And from the display select .....



Exit program mode.

The **TUNE AT SETPOINT** program will now start. The upper display will alternate **tune** and the process temperature. The lower display will read the setpoint value.

**Note:** During tuning the main setpoint (SP1) LED will flash.

When the **TUNE AT SETPOINT** program is complete the upper alternating display stops and only the process temperature is displayed. The PID values are entered automatically. The process temperature will rise to setpoint and control should be stable. If not, this may be because optimum cycle time is not automatically implemented. To set the cycle time see **PROPORTIONAL CYCLE-TIME**.

#### REMINDER OF INSTRUMENT ADJUSTMENTS

- Press ▲ ▼ together for 3 seconds for program entry or exit.
- Press ▲ or ▼ to scroll through functions.
- Press ✱ ▲ together or ✱ ▼ together to change levels or alter options.

**Note:** If in difficulty by becoming "lost" in program mode, press ▲ and ▼ together for 3 seconds to return to display mode, check the Menu Navigation summary above and try again.

# PROPORTIONAL CYCLE-TIME

The choice of cycle-time is influenced by the external switching device or load. eg. contactor, SSR, valve. A setting that is too long for the process will cause oscillation and a setting that is too short will cause unnecessary wear to an electro-mechanical switching device.

## CYCLE-TIME SELECTION METHODS

The following methods of cycle-time selection may be used:

### Autotune calculated

After Autotune has been run and completed the calculated cycle-time can be manually accepted or adjusted to suit the switching device. For selection method see **Select Autotune Calculated Cycle-time**.

### Pre-select Autotune cycle-time

The controller can be programmed to automatically accept any calculated Autotune cycle-time. For selection method see **Pre-Select Automatic Acceptance of Any Autotune Cycle-time**, page 10.

### Pre-select before Autotune

The controller can be programmed manually with any cycle-time between 0.1 and 81 sec. This cycle-time will not be changed by any Autotune functions. For selection method see **Pre-Select Cycle-time Before Autotune**, page 10.

### Factory set

To use the 20 sec factory set cycle-time no action is needed whether autotune is used or not.

## CYCLE-TIME RECOMMENDATIONS

Output Device	Factory Setting	Recommended Minimum	Load max (resistive)
Internal relay rLY/rLY1	20 seconds	10 seconds	2A/250 Vac
Internal relay rLY2	20 seconds	10 seconds	1A/250 Vac
Solid state drives SSd/SSd1/SSd2	20 seconds	0.1 seconds	Externally fitted SSR (n/a)

## To Select AUTOTUNE CALCULATED CYCLE-TIME

On completion of Autotune enter program mode.

Select .....



The controller will display **CYC.t** and **20** (the factory setting) in seconds .....



To view the calculated optimum cycle-time press and hold the **✳** button then press and hold **▼** until indexing stops.

The controller will display the calculated cycle-time in the lower display e.g. **A 16**. This indicates that the calculated cycle-time is 16 seconds .....



### Proportional Cycle-time (continued)

If this cycle-time is suitable press and hold both ▲ and ▼ buttons for 3 seconds to enter it into the controllers memory.

If the calculated cycle-time is not compatible with the switching device press and hold the ✱ button then press and hold ▲ or ▼ until a more suitable cycle-time is displayed. Release the buttons, then press and hold both ▲ and ▼ buttons for 3 seconds to enter it into the controllers memory.

#### Pre-Select Automatic Acceptance of Any Autotune Cycle-time

Before selecting Autotune, enter program mode.

Select .....



Press and hold the ✱ button then press and hold ▼ until indexing stops and A - - is displayed in the lower display .....



Note: A - - indicates that no cycle-time exists.

Press and hold ▼ to scroll to *tunE*  
 The controller will now display .....  
 Press and hold the ✱ button and use ▲ to select either **on** or **At.SP**. Release ▲.



The controller will now run Autotune and will accept the calculated cycle-time.

#### To Pre-Select Cycle-time Before Autotune

Before selecting Autotune, enter program mode.

Select .....




Press and hold the ✱ button, then press ▲ to increase or ▼ to decrease the displayed cycle-time. Release buttons when required value is displayed.

Select .....



or index to another function then exit program mode.

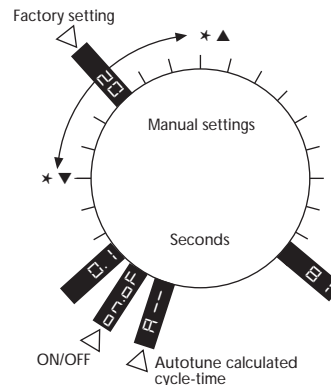


## RAMP-SOAK

This feature enables the controller to ramp up or down from current temperature to a target setpoint at a pre-determined rate. It then controls at the target setpoint for an adjustable soak period before switching off the heat output.

Set **Ramp rate** (0 to 9995 deg/hour)

Press ▲ and ▼ buttons for 3 seconds to enter program entry point .....



Press ▲ to scroll to .....



Press and hold ★, then press ▲ or ▼ to scroll to required ramp value in the lower display

Set **Soak** (if required) 0 to 1440 minutes

Press ▲ to scroll to .....




Press and hold ★, then press ▲ or ▼ to scroll to required soak period in the lower display.

Set **Ramp On** (Off) : On : hold

Press ▲ to scroll to .....



Press and hold ★, then press ▲ to select **On**

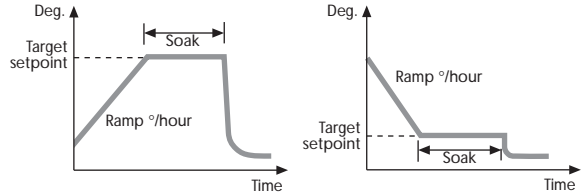

Exit program to enter settings into memory and commence ramp to target setpoint.

### Notes

In **Ramp on** configuration, if power is removed from the controller, the Ramp will re-start when power is restored.

The **Ramp hold** option suspends the ramp at its last value.

If no **Soak** period has been set, control at target setpoint continues indefinitely.

SP2 deviation alarms follow the ramp setpoint and can be used to alarm "out of limits" ramp rate.

### WARNING

The Soak timer is triggered when the ramp setpoint reaches the target setpoint. If the ramp rate is set too fast for the process, the Soak timer will be triggered before the process temperature reaches the target setpoint.



# SECOND SETPOINT (SP2)

The second setpoint SP2 can be used to trigger an alarm or as a proportional control output.

## TO CONFIGURE SP2 AS AN ALARM

Enter program mode.

Select level 2 .....  
then followed by the required option below:

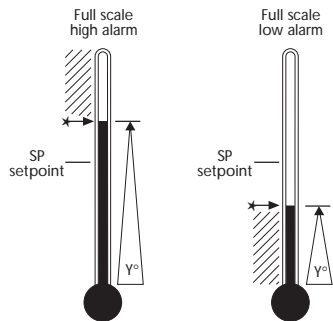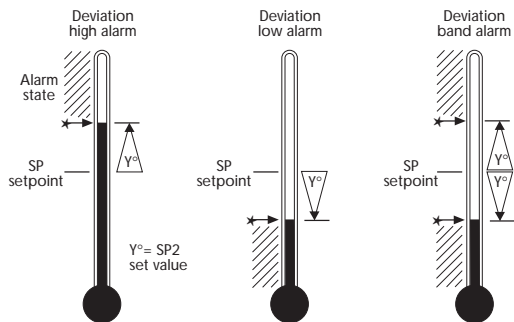

**dV.hi** sets off alarm signal when temperature rises above a pre-set temperature above the setpoint.

**dV.Lo** sets off alarm signal when temperature falls below a pre-set temperature below the setpoint.

**bAnd** sets off alarm signal when temperature rises above or falls below a pre-set temperature above or below the setpoint.

**FS.hi** sets off alarm signal when the temperature rises above setpoint to a pre-set temperature above scale minimum.

**FS.Lo** sets off alarm signal when the temperature falls below setpoint to a pre-set temperature above scale minimum.

Select level 1 .....  
and set the required setpoint value ( $Y^{\circ}$ ).



If the factory set hysteresis 2.0°C/3.6°F is unsuitable:

Index to .....  
and adjust the setting.



Check .....  
is set to **on.oF** (for alarm).



Exit program mode. SP2 is now operational as an alarm.

**Cool** see heat-cool configuration, page 23.



## SUBSIDIARY SP2 MODE:

Latch/sequence or non-linear cool.




Latch alarm *LtCh*

When activated, the alarm latches until manually reset, even though the alarm condition may have disappeared.

Sequence alarm *hoLd*

When *hoLd* is selected, in any alarm mode, it prevents an alarm signal on power-up. The alarm is enabled only after the process temperature has reached setpoint.

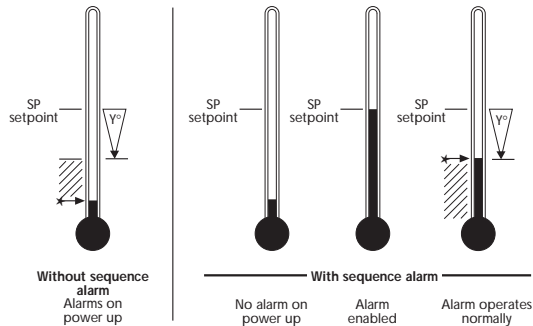

## TO CONFIGURE SP2 AS A PROPORTIONAL CONTROL OUTPUT

In level 2 select .....  
then select the required option.



In level 1 select .....  
and then set the required proportional band.




In level 1 select .....  
and then set the setpoint (SP2) value ( $y^{\circ}$ ).



## SP2 OUTPUT AND LED INDICATION STATES - IN ALARM CONDITION

Alarm type	ON-OFF operating mode		Proportional operating mode	
Deviation DU.H DU.Lo bPnd	SP2 Output state 	SP2 LED state 	SP2 Output state 	SP2 LED state 
Full scale FS.h FS.Lo				
Cool Strategy	Temperature above setpoint			

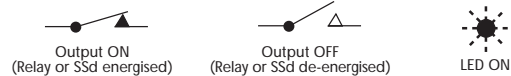

## SP2 ALARM ANNUNCIATOR

When an SP2 alarm mode is selected in SP2.A the alarm annunciator *-AL-* is displayed, alternating with the process temperature, during alarm condition.

**Note:** The annunciator may be disabled by selecting function .....  
and option *on* in level 4.



## SP2 in cool strategy

(See heat-cool configuration in **ADVANCED SETTINGS** page 23).

# ERROR MESSAGES

## SENSOR FAULT

Upper display alternates: **inPt** and **FAiL** .....

Indicates: thermocouple burnout RTD/Pt100 open or short circuit or negative over-range.

Action: Check sensor/wiring



## NON-VOLATILE MEMORY ERROR

Upper display alternates: **dAtA** and **FAiL** .....

Action: De-power briefly. Replace unit if problem persists



## MANUAL POWER ERROR

Upper display alternates: **hAnd** and **FAiL** .....

SP1 set to ON/OFF in **CYC.t**

Action: Select proportional mode



## IMMEDIATE FAIL ON AUTOTUNE START

Upper display alternates: **PV tunE** and **FAiL** .....

Lower display 0

1. No setpoint entered.

Action: Enter setpoint



2. SP1 set to ON/OFF in .....

Action: Select proportional mode



Note: To reset and clear error press **▲▼** together briefly to cancel message.

## FAIL LATER DURING AUTOTUNE CYCLE

The thermal characteristics of the load exceed the Autotune algorithm limits. The failure point indicated by any display 0.0 in .....

e.g. Ctb = 0.0 see adjacent diagram.



- Action:
1. Change the conditions. eg. raise setpoint
  2. Try .....
  3. Check SP1.P percentage power (see **IMPROVING CONTROL ACCURACY**)
  4. If the error message persists, call CAL for advice.




## READING AUTOTUNE TUNING CYCLE RESULTS IN *tECh*

1. Index to ..... release **▲** or **▼**, lower display will alternate **Ct.A** and value
2. Keep **★** pressed and press **▲** once, the lower display will alternate **Ct.b** and value (eg. 19.6)
3. Repeat step 3 above to view: **Ct 1, Ct 2, Ct 3, Ct 4, oS 1, uS** and **oS 2**.



## Autotune tuning data and limits

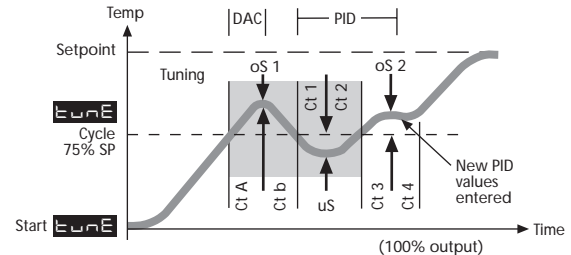

# IMPROVING CONTROL ACCURACY


The following functions are to assist engineers with machine development, commissioning and troubleshooting.


**READ SP1 OUTPUT PERCENTAGE POWER** ..... 

Poor control may be due to incorrectly sized heaters. **SP1.P** (Level 2) constantly displays the output percentage power applied, which at normal setpoint should ideally be within 20 - 80% to achieve stable control.


**CONTROL ACCURACY MONITOR** ..... 

This measures the control stability, to within 0.1 °C/°F.


The monitor is started using **CheK** (Level 3) and the variance (deviation), maximum and minimum temperature are displayed and constantly updated in ..... 

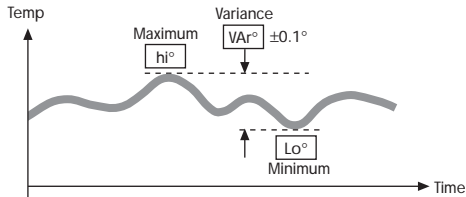

Using the **CheK** Control accuracy monitor

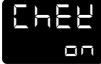To start the monitor select ..... 


Note: During monitoring either return to normal operation or remain in program mode.

To view monitor readings: index to ..... 

The lower display will alternate between **Var°** and the variance displayed in degrees (e.g. 0.6)

Press and hold **★** and press **▲** once, the lower display will alternate between **VAR°** and the maximum **hi°** displayed in degrees (e.g. 320.3)

Press and hold **★** and press **▲** once, the lower display will alternate between **VAR°** and the minimum **Lo°** displayed in degrees (e.g. 319.7)

**CheK OFF** stops monitor retaining readings ..... 

**CheK on** resets readings. .... 

On de-powering **CheK** resets to **OFF** and **rEAd** is zeroed.

# FUNCTION LIST (Levels 1 to 4)

Note: A Functions Menu is shown on the cover fold-out A3

## LEVEL 1


**Function**    **Options**    *[Factory settings] shown in brackets*

### SELECT AUTOTUNE

**tunE**    *[oFF] on ParK At.Sp*  
 Used to switch the Autotune feature on and off, to select **ParK** or Autotune at setpoint.  
**ParK** temporarily turns the output(s) off. To use select **ParK** and exit program mode. To disable re-enter program at **tunE** and select **oFF**.


### SP1 OPERATING PARAMETERS

**bAnd**    *0.1 to \* °C/°F    [10°C/18°F]*  
**SP1 proportional band/Gain or Hysteresis**  
 \* 25% sensor maximum  
 Proportional control eliminates the cycling of on-off control. Heater power is reduced, by time proportioning action, across the proportional band.



Too narrow (oscillates)

increase **bAnd**



Too wide (slow warm up and response)

decrease **bAnd**

**Function**    **Options**    *[Factory settings] shown in brackets*

**intE**    *oFF    0.1 to 60 minutes    [5.0]*  
**SP1 integral time/reset**  
 Auto-corrects proportional control offset error



Too short (overshoots and oscillates)



Too long (slow warm up and response)

**dEr.t**    *oFF    1 - 200 seconds    [25]*  
**SP1 derivate time/rate**  
 Suppresses overshoot and speeds response to disturbances




Too short (slow warm up and response, under corrects)



Too long (oscillates and over corrects)

**dAC**    *0.5 - 5.0 x bAnd    [1.5]*  
**SP1 derivative approach control dAC**  
 Tunes warm-up characteristics, independent of normal operating conditions, by controlling when derivative action starts during warm-up (smaller dAC value = nearer setpoint).



Too small (overshoots)



Too large (slow stepped warm up)

## LEVEL 1 (continued)

Function Options [Factory settings] shown in brackets

**CYCL** A -- on.oF 0.1 - 81 sec [20]  
**SP1 proportional cycle-time** (see pages 9/10)  
 Determines the cycle rate of the output device for proportional control. Select **on.oF** for ON/OFF mode.

**oFSt** [0] to \* °C/°F  
**SP1 offset/manual reset**  
 \* ±50% **bAnd**. Applicable in proportional and ON/OFF mode with integral disable: **Int.t oFF**.

**SP.Ld** [oFF] on  
**Lock main setpoint**  
 Locks the setpoint preventing unauthorised adjustment.

## PROGRAMMER SETTINGS (see page 11)

**SP.r** [0] to 9995 deg/hour  
 Sets the ramp rate

**SP.rn** on [oFF] hoLd  
 Switches the ramp on or off, or hold at last ramp value

**SoAR** [oFF] 0 to 1440 min  
 Sets the soak time

## SP2 OPERATING PARAMETERS (see pages 12/13)

Function Options [Factory settings] shown in brackets

**SEt.2** 0 to \* °C/°F [0]  
**Adjust SP2 setpoint**  
 \* Deviation Alarms **DV.hi**, **DV.Lo**, **bAnd**  
 25% sensor maximum (see figure 7).  
 \* Full scale alarms **FS.hi**, **FS.Lo**  
 sensor range f/s (see figure 8)

**band.2** 0.1 - \* °C/°F [2.0 °C/3.6°F]  
**Adjust SP2 hysteresis or proportional band/gain**  
 (see **CyC.2** setting)  
 \* 25% sensor f/s

**CYC.2** [on.oFF] 0.1-81 seconds  
**Select SP2 ON/OFF or proportional cycle-time**  
 Select on.oFF for ON/OFF mode, or the cycle rate of SP2 output device for proportional mode.

# LEVEL 2

Function Options [Factory settings] shown in brackets

## MANUAL CONTROL MODES

- SP1.P

**0 to 100 % 'read only'**

Read SP1 output percentage power
- hAnd

**[oFF] 1 to 100 % (not in ON/OFF)**

SP1 manual percentage power control

For manual control should a sensor fail.

Record typical **SP1.P** values beforehand.
- PL.1

**100 to 0 % duty cycle [100]**

Set SP1 power limit percentage

Limits maximum SP1 heating power during warm-up and in proportional band.
- PL.2

**100 to 0 % duty cycle [100]**

Set SP2 percentage power limit (cooling)

## SP2 OPERATING MODES (see page 12/13)

- SP2.A

**[nonE] dV.hi dV.Lo bAnd FS.hi FS.Lo Cool**

Main SP2 operating mode

Function Options [Factory settings] shown in brackets

- SP2.b

**[nonE] LtCh hoLd nLin**

Subsidiary SP2 mode: latch/sequence

Non-linear cool proportional band

## INPUT SELECTION AND RANGING

- d.SP

**[1] 0.1**

Select display resolution: for display of process temperature, setpoint, **OFSt, Set.2, hi.SC, LoSC.**
- h.SC

**sensor minimum [sensor maximum]**

°C/°F

Set full scale
- LoSC

**[sensor minimum] sensor maximum .....**

°C/°F

Set scale minimum (default 0°C or 32°F)
- i.nPt

Select input sensor **[nonE] .....**

(See **SENSOR SELECTION** table, page 31)
- u.ni.t

**[nonE] °C °F bAr Psi Ph rh SEt.....**

Select °C/°F or process units

# LEVEL 3

## OUTPUT CONFIGURATION

**Note:** 'Read only' after initial configuration. **rSET ALL** full reset to factory settings required to change **SP 1.d** subsequently.

Function Options *[Factory settings] shown in brackets*

**SP 1.d** *[nonE] rLY SSd rLY1 rLY2 SSd1*  
 Select SP1 output device

**SP2.d** *[nonE] SSd rLY rLY2 rLY1 SSd2*  
 Read SP2 output device  
 (read only)

**Dual Relay and Dual SSd** output options Models CN9411 and CN9422 are factory set. See page 22

**Note:** (when in initial configuration only)

Hold **★** and **▲** or **▼** for 10 seconds to move to or from output devices in shaded portion.



### Sensor burn-out/break protection

**Caution:** Settings affect fail safe state.

	SP1	SP2
<i>[uP.SC]</i>	Upscale	Upscale
<i>dn.SC</i>	Downscale	Downscale
<i>1u.2d</i>	Upscale	Downscale
<i>1d.2u</i>	Downscale	Upscale



### Select output modes: Direct/Reverse

**Caution:** Settings affect fail safe state.

	SP1	SP2
<i>[1r.2d]</i>	Reverse	Direct
<i>1d.2d</i>	Direct	Direct
<i>1r.2r</i>	Reverse	Reverse
<i>1d.2r</i>	Direct	Reverse

Select **Reverse** on SP1 for heating and **Direct** for cooling applications.

## LEVEL 3 (continued)

Function Options [Factory settings] shown in brackets

**rEuL**

Select SP1/2 LED indicator modes

	SP1	SP2
[1n.2n]	Normal	Normal
1i.2n	Invert	Normal
1n.2i	Normal	Invert
1i.2i	Invert	Invert

**SPAn**

[0.0] to  $\pm 25\%$  sensor maximum

Sensor span adjust

For recalibrating to a remote standard e.g. External Meter, data logger. See **ADVANCED SETTINGS** page 24,25.

**ZEro**

[0.0] to  $\pm 25\%$  sensor f/s

Zero sensor error, see SPAn

**ChEe**

[oFF] on

Select control accuracy monitor

**rEAd**

[Var] hi Lo

Read control accuracy monitor

Function Options [Factory settings] shown in brackets

**tEEh**

[Ct A] CT b Ct 1 Ct 2 Ct 3

Ct 4 oS 1 uS oS 2

Read Autotune tuning cycle data (see figure, page 14)

**UEr**

Software version number

**rSEt**


[nonE] ALL

Resets all functions to factory settings

**Caution:** Note current configuration before using this function, otherwise initial configuration and OEM settings must be re-entered.



## LEVEL 4

Access to level 4 is gained through  in level 3.  
Press and hold ▲ and ▼  
for 10 seconds.

Enter level 4 at **Lock**, release ▲ and ▼ together.  
Display reads .....



### Program security using Lock

Select from three **Lock** options:

Press and hold ✱, press ▲ to index.

- LEV.3** locks level 3 and 4 only - Technical Functions.
- LEV.2** locks levels 2, 3 and 4 only - Configuration and Technical Functions.
- ALL** locks all functions .....



**Note:** Locked functions and options may be read.

**Function Options** [Factory settings] shown in brackets

Press ▼ to access following functions



**[Auto] StAY**

Program mode auto-exit switch  
Auto-exit returns display to normal if 60 seconds of  
key inactivity, select **StAY** to disable



**[oFF] on**

Disable SP2 alarm annunciator -AL-  
Select on to disable -AL-



**dir 1 to 32 [6]**

Display sensitivity  
**dir** = direct display of input  
**1** = maximum, **32** = minimum sensitivity



**0.1 to 1.0 [0.5]**

Derivative sensitivity





**IMPORTANT NOTE FOR OEM's: For safety and to protect settings from tampering  
USE THE SOFTWARE SECURITY LOCK.... THEN REMOVE THIS SECTION.**

# FACTORY SET OUTPUT OPTIONS

## DUAL RELAY OR DUAL SSd OUTPUT MODELS

The table below details the factory set output options. rLY2 is a 1A electromechanical relay, and SSd1/SSd2 is an identical second SSR drive output.

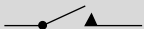Product Code	Terminals			
	3	4	5	6
CN9411	rLY1 (2A)		rLY2 (1A)	
				
CN9422	SSd1		SSd2	
	(+)	(-)	(+)	(-)

**QUICK START** (page 1a) or **SET-UP** (page 5) follow steps 1 and 2 ignore step 3 and proceed straight to step 4.

**Factory Options CN9411 and CN9422** pre-allocate SP1 to terminals 3 and 4.

**Note:** Output device rLY/rLY1 is rated 2A  
Output device rLY2 is rated 1A

**Factory Option CN9411** offers the ability to change the allocation of SP1 to terminals 5 and 6.

To make this selection during the initial configuration in either **QUICK START** (page 1b) or **SET-UP** (page 5), start from step 3.

### 3 TO SELECT SP1 (Main setpoint output device)

From the display .....  
press and hold **★** button then press the **▲** once  
to display **rLY2** in the lower display.



# ADVANCED SETTINGS

Before embarking on the Advanced Settings, please familiarise yourself with the basic operation of the controller as described in this manual. The following instructions assume that the user understands how to make the initial configuration, can navigate through the Function Menu and successfully Autotune the controller in heating mode.

## HEAT COOL STRATEGY CONFIGURATION

Using  Cool option

Heat-Cool strategy is a feature that improves control of processes that need heating and cooling, depending on the conditions, for example:

Environmental test chambers used in rooms where the ambient temperature swings above and below the test temperature.

Plastics extruders where the material initially needs heating, then cooling, when it begins to heat itself exothermically due to pressure and friction applied by the process.

The purpose of cool strategy is to maintain smooth control of the process during transition from heating to cooling. This is achieved by using PID control for heating and cooling with the proportioning bands linked by an adjustable deadband.

**From cold** (normal procedure on a new installation)

Enter setpoint and allow the process to reach the setpoint using factory settings for **heating only**.

### Autotune at setpoint

Make the following pre-settings:

Level 1 set  to 1.0  to 10 and  to 10

Level 2 set  to **Cool**

Level 1 set  to **At.SP**


Autotune will cause a temporary disturbance. Check that the temperature has stabilised in **heating** mode before running the process in cooling mode.

If regular temperature oscillations occur, change **CYC.t** to optimum value. See page 9. **To select Autotune Calculated Cycle-time**

### Further adjustments – Cooling


Autotune uses the same calculated **bAnd** value for both **SP1** (heating) and **SP2** (cooling). In some processes, regular temperature oscillations occur when cooling.

Make the following manual adjustment:

In level 1 double the value of ..... 

### Heat Cool Strategy Configuration (continued)

If no improvement, return to the original value and;

In level 1 halve the value of ..... 

If the process hunts between heating and cooling, a deadband setting may be needed. Enter a small value, eg. 1 and observe the process. Increase the setting until hunting stops.

Level 1 adjust value ..... 

### Water cooled applications



Water cooled applications operating at temperatures greater than 100°C may suffer from the non linear effect caused by water turning to steam. This can be countered by the non linear setting for SP2;



In level 2 set  to *nL in*


### Multi zone applications

When tuning multi zone applications like extruders, distortions due to thermal interaction between adjacent zones can be minimised by running autotune on all controllers at the same time.


## CALIBRATION TO ANOTHER INSTRUMENT

If the controller and instrument readings are different, the  and/or  function in Function Menu Level 3 will require adjustment.

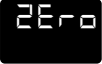Adjust .....   
to make an equal adjustment across the full scale of the controller and .....   
to make a correction when the error increases/ decreases across the scale.

1 To adjust using the  function

1.1 Substitute measured values in the expression:

Instrument reading – controller reading = ..... 

Example:

Instrument reading = 396°  
Controller reading = 400°  
396 – 400 = (-)4°

1.2 Adjust  to (-) 4° to correct error.

### Calibration to Another Instrument (continued)

To make a correction when there are different errors across the scale.

2 Adjust using the **SPAN** function

- 2.1 Chose a temperature near the bottom and another near the top of the scale.
- 2.2 Run the process at the lower temperature ( $T_1$ ). Note the error ( $E_1$ ) between the controller and the instrument readings.
- 2.3 Repeat at the upper temperature ( $T_2$ ) and note error ( $E_2$ ).
- 2.4 Substitute the values for  $T_1$ ,  $T_2$ ,  $E_1$  and  $E_2$  in the expression below to calculate .....



$$\frac{E_2 - E_1}{T_2 - T_1} \times hi.SC = SPAN$$

For **hi.SC** settings see level 2.

Example:	$T_1$	$T_2$
Instrument reading	58°	385°
Controller reading	60°	400°
Error	$E_1 (-) 2^\circ$	$E_2 (-) 15^\circ$

$$\frac{(-15) - (-2) \times 450}{385 - 58} = \frac{(-13) \times 450}{327} = (-)17.9$$

2.5 Therefore adjust **SPAN** to (-) 18 to correct error.


- Notes:** (1) After making the adjustment the reading will immediately change. Allow time for the temperature to stabilise at  $T_2$  before making any further adjustment. At this point, a **ZERO** adjustment may be needed, refer to step 1 above.
- (2) Check that the temperature correctly stabilises at  $T_2$  and then adjust setpoints to  $T_1$ . If an error is present at  $T_1$  repeat from step 2.

### LINEAR INPUT CALIBRATION

In addition to the ten temperature inputs, the controller has five linear input ranges which can be calibrated to display a range of engineering units. This procedure involves making adjustments to the controller's **hi.SC**, **ZERO** and **SPAN** adjustments found in function menu levels 2 and 3.

**Note:** The controllers linear inputs are in mV. If your transducer provides an output in mA this should be converted to mV by feeding the controller input via a high stability one ohm resistor, see figure page 26. Other low Vdc signals can be connected via a suitable voltage divider network to match the controller input requirements.

## Linear Input Calibration (continued)

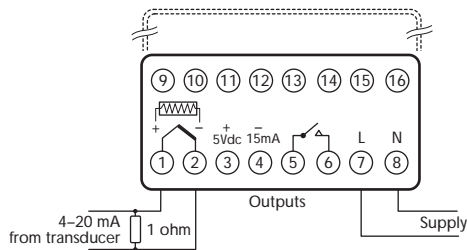

- Power up the controller, and in response to the prompt ..... select an appropriate Linear Range from the table below.



Ensure that the Nominal Signal Span chosen is wider than the transducer's actual signal span, and the Nominal Scale is wider than the full scale of the engineering units to be displayed.

Linear Range	Nom. Signal Span	Nom. Scale Span	Max. Scale Settings
Lin 1	0-20 mV	0 - 100	0 - 400
Lin 2	4-20 mV	0 - 100	-25 to 400
Lin 3	0-20 mV	0 -1000	0 to 3000
Lin 4	4-20 mV	0 - 1000	-250 to 3000
Lin 5	0-20 mV	0 - 2000	0 to 3000

- Select ..... then select the process unit, °C, °F, Bar, PSI, Ph, or rh. If the required unit is not shown select **Set**.



- Allocate the output devices at function ..... as described in **SET-UP**, enter the configuration into the memory and proceed as follows:




Calculate the values for the controller settings for **hi.SC** and **SPAN** using the example below as a guide:



4 to 7mV input from transducer is required to display 0 - 110 units

Chose Linear Range Lin4 4-20mV = 0 to 1000 units.



$$= \frac{\text{Nominal Signal Span} \times \text{required span}}{\text{actual signal span}}$$

$$\frac{(20-4) \times (110-0)}{(7-4)} = 587$$



$$= \frac{(\text{hi.SC} - \text{nominal scale span}) \times \text{hi.SC}}{\text{Nominal Scale Span}}$$

$$\frac{(587-1000) \times 587}{1000} = -242$$

These settings should provide the correct scaling adjustment, but a value for **Zero** may need to be established by applying the lowest and highest mV input signal and recording the display offset. Check that this is the same at each end, and enter this plus or minus value as a **Zero** adjustment. Should there be a difference between the two readings, a further adjustment of the **SPAN** setting can be made.

# MECHANICAL INSTALLATION

The CN9400 Controller is designed to be mounted in a 1/16 DIN panel cutout.


The unit is sleeve mounted with the front bezel assembly rated NEMA4/IP66 provided that:

- the panel is smooth and the panel cutout is accurate;
- the mounting instructions are carefully followed.

## DIN PANEL CUTOUT

### 1/16 DIN panel cutout size

45.0mm +0.6mm -0.0mm (1.77in. +0.02in. -0.0in.) wide  
45.0mm +0.6mm -0.0mm (1.77in. +0.02in. -0.0in.) wide  
9.5mm (0.374in) maximum panel thickness.

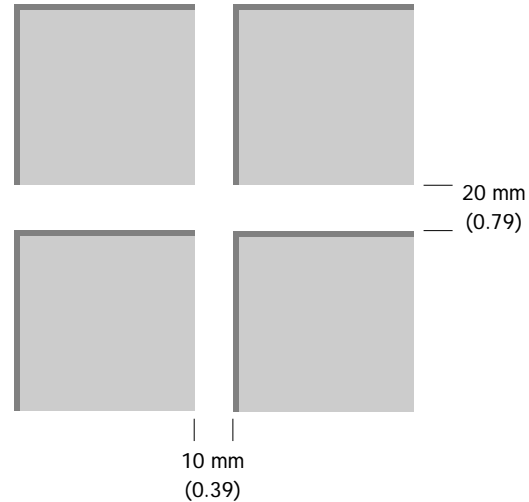

## MINIMUM SPACING MOUNTING

To mount a Controller proceed as follows:

- 1 Check that the controller is correctly orientated and then slide the unit into the cutout.
- 2 Slide the panel clamp over the controller sleeve pressing it firmly against the panel until the controller is held firmly.
- 3 The controller front bezel and circuit board assembly can be unplugged from the sleeve. Grasp the bezel firmly by the recesses on each side and pull. A

screwdriver can be used as a lever if required.


- 4 When refitting the bezel assembly it is important to press it firmly into the sleeve until the latch clicks in order to compress the gasket and seal to NEMA4X/IP66.

### Cleaning

Wipe down with damp cloth (water only)

**Model CN9400**  
Dimensions in mm (inches)

**Note:** The controller should be isolated before removing or refitting it in the sleeve, and electrostatic precautions should be observed when handling the controller outside the sleeve.

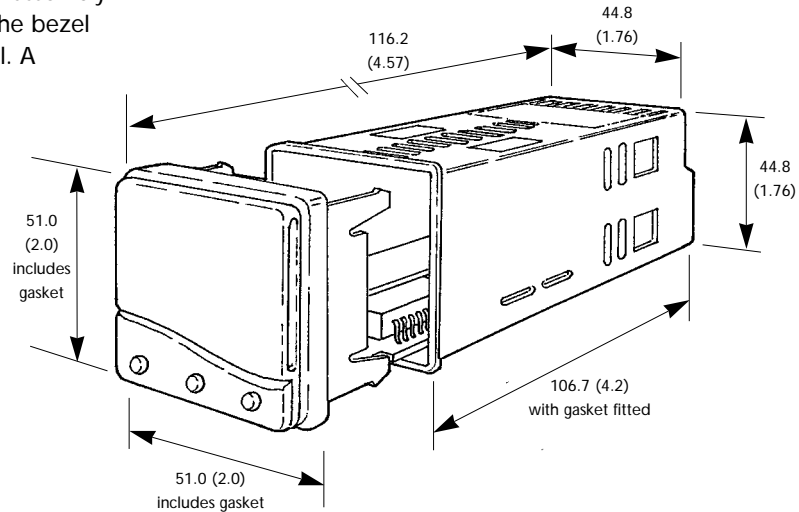



# ELECTRICAL INSTALLATION

## OUTPUT DEVICES

Two of the following output devices are fitted to the controllers, depending on the model.

- 1        **Solid state relay drive (SSd/SSd1/SSd2)**  
5Vdc +0/-15%, 15mA non isolating  
To switch a remote SSR (or logic)
- 2        **Miniature power relay (rLY/rLY1)**  
2A/250V resistive, Form A/SPST contacts.
- 3        **Sub miniature power relay (rLY2)**  
1A/250V resistive, Form A/SPST contacts.

## OUTPUT DEVICE ALLOCATION

Either of the available outputs may be chosen for the main setpoint (SP1), the remaining device being automatically allocated to the second setpoint (SP2).

See example illustrated on page 30.

### STANDARD MODEL CN9412

Output Device 1 + Output Device 2

### DUAL RELAY MODEL CN9411

Output Device 2 + Output Device 3

### DUAL SSd MODEL CN9422

Output Device 1 + Output Device 1

Dual relay or dual SSd model options CN9411 / CN9422 are fully detailed on page 22.

Designed for use with the following supply voltages:

**100 - 240V 50-60 Hz 4.0 VA (nominal)**

**+/-10% maximum permitted fluctuation**

**12V - 24V (AC/DC) +/-20% 4.5 VA Polarity not required**

## WIRING THE CONNECTOR

Prepare the cable carefully, remove a maximum of 8mm insulation and ideally tin to avoid bridging. Prevent excessive cable strain. Maximum recommended wire size: 32/0.2mm<sup>2</sup> 1.0mm<sup>2</sup> (18AWG).

## INDUCTIVE LOADS

To prolong relay contact life and suppress interference it is recommended engineering practice to fit a snubber (0.1uF/100 ohms), refer to illustration on page 30.

### CAUTION:

**Snubber leakage current can cause some electro-mechanical devices to be held ON. Check with the manufacturers specifications.**

## ELECTRICAL INSTALLATION (continued)

### EN61010 - /CSA 22.2 No 1010.1 92

Compliance shall not be impaired when fitted to the final installation.

Designed to offer a minimum of Basic Insulation only.

The body responsible for the installation is to ensure that supplementary insulation suitable for Installation Category II or III is achieved when fully installed.

To avoid possible hazards, accessible conductive parts of the final installation should be protectively earthed in accordance with EN6010 for Class 1 Equipment.

Output wiring should be within a Protectively Earthed cabinet.

Sensor sheaths should be bonded to protective earth or not be accessible.

Live parts should not be accessible without the use of a tool.


When fitted to the final installation, an IEC/CSA APPROVED disconnecting device should be used to disconnect both LINE and NEUTRAL conductors simultaneously.

A clear instruction shall be provided not to position the equipment so that it is difficult to operate the disconnecting device.

## MODEL CN9412 TYPICAL CONNECTION DIAGRAM

The SSR driver output is allocated to SP1 and wired to switch the load (heater) using an SSR

- F1 Fuse:** time lag type to IEC127. CSA/UL rating 250Vac
- F2 Fuse:** High Rupture Capacity (HRC) Suitable for maximum rated load current
- S1 Switch:** IEC/CSA/UL Approved disconnecting Device

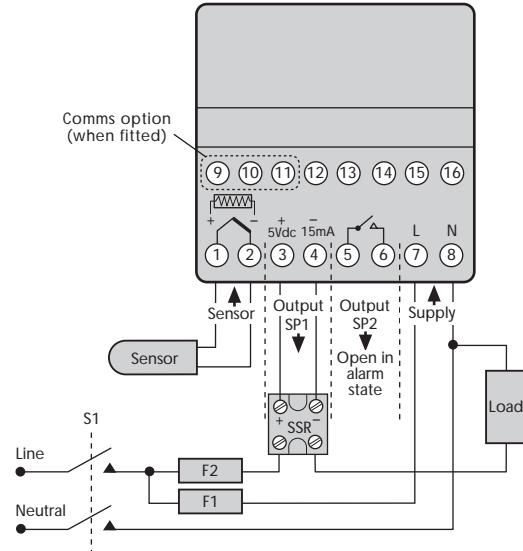

# SENSOR SELECTION

Option/Sensor type	Sensor range			Linearity	
<b>Thermocouples</b>					
tc b	B	0 to 1800 °C	32 to 3272 F	Pt-30%Rh/Pt-6%Rh	2.0 *
tc E	E	0 to 600 °C	32 to 1112 F	Chromel/Con	0.5
tc J	J	0 to 800 °C	32 to 1472 F	Iron/Constantan	0.5
tc K	K	-50 to 1200 °C	-58 to 2192 F	Chromel/Alumel	0.25*
tc L	L	0 to 800 °C	32 to 1472 F	Fe/Konst	0.5
tc n	N	-50 to 1200 °C	-58 to 2192 F	NiCrosil/NiSil	0.25*
tc r	R	0 to 1600 °C	32 to 2912 F	Pt-13%Rh/Pt	2.0*
tc s	S	0 to 1600 °C	32 to 2912 F	Pt-10%Rh/Pt	2.0*
tc t	T	-200 / 250 °C	-273 / 482 F	Copper/Con	0.25*

## Resistance thermometer

rtd	-200 / 400 C	-273 / 752 F	Pt100/RTD-2	0.25*
-----	--------------	--------------	-------------	-------

## Linear process inputs (Input mV range: 0 to 50mV)

Displays	0 - 20mV	4 - 20mV	setpoint limits	
<i>Lin1</i>	0 - 100		0 - 400	± 0.5%
<i>Lin2</i>		0 - 100	-25 - 400	± 0.5%
<i>Lin3</i>	0 - 1000		0 - 3000	± 0.5%
<i>Lin4</i>		0 - 1000	-250 - 3000	± 0.5%
<i>Lin5</i>	0 - 2000		0 - 3000	± 0.5%

**Notes:** 1 Linearity: 5-95% sensor range

2 \* Linearity B:5° (70° - 500°C) K/N:1° >350°C exceptions: R/S: 5° <300°C T:1° <- -25° >150°C RTD/Pt100: 0.5° <-100°C

# SPECIFICATION

## Thermocouple

9 types  
Standards: IPTS/68/DIN 43710  
CJC rejection: 20:1 (0.05°/°C) typical  
External resistance: 100Ω maximum

## Resistance thermometer

RTD-2/Pt100 2 wire  
Standards: DIN 43760  
(100Ω 0°C/138.5Ω 100°C Pt)  
Bulb current: 0.2mA maximum

## Linear process inputs

mV range: 0 to 50mV

## Applicable to all inputs SM = sensor maximum

Calibration accuracy:  $\pm 0.25\%SM \pm 1^\circ C$   
Sampling frequency: input 10Hz, CJC 2 sec.  
Common mode rejection: Negligible effect up to 140dB,  
240V, 50-60Hz  
Series mode rejection: 60dB, 50-60Hz  
Temperature coefficient: 150ppm/°C SM  
Reference conditions: 22°C  $\pm 2^\circ C$ , rated voltage after 15  
minutes settling time.

## Output devices

SSd/SSd1/SSd2: solid state relay driver: To switch a  
remote SSR 5Vdc +0/-15% 15mA  
non-isolated

Miniature power relay: form A/SPST contacts (AgCdO)  
rLY and rLY1: 2A/250ac resistive load  
rLY2: 1A/250ac resistive load

## General

Displays: Upper, 4 Digits, high brightness  
green LED. 10mm (0.4") high.  
Lower, 4 Digits, Orange LED. 9mm  
(0.35") high  
Digital range -199 to 9999  
Hi-res mode -199.9 to 999.9

LED output indicators - flashing  
SP1 square, green; SP2 round, red

Keypad: 3 elastomeric buttons

## Environmental

Humidity: Max 80%  
Altitude: up to 2000M  
Installation: Categories II and III  
Pollution: Degree II  
Protection: NEMA 4X, IP66  
EMC emission: EN50081-1 FCC Rules 15 subpart J  
Class A  
EMC immunity: EN50082-2  
Ambient: 0-50°C (32-130°F)  
Mouldings: flame retardant polycarbonate  
Weight: 130g (4.2 oz)

## WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of 37 months from date of purchase. OMEGA Warranty adds an additional one (1) month grace period to the normal three (3) years product warranty to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit should malfunction, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of being damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

## RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR WARRANTY RETURNS, please have the following information available BEFORE contacting OMEGA:

1. P.O. number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR NON-WARRANTY REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. P.O. number to cover the COST of the repair,
2. Model and serial number of product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering. OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 1996 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without prior written consent of OMEGA ENGINEERING, INC.



**OMEGAnet<sup>SM</sup> On-Line Service**  
<http://www.omega.com>

**Internet e-mail**  
[info@omega.com](mailto:info@omega.com)

### Servicing North America:

**USA:** ISO 9001 Certified  
One Omega Drive, Box 4047  
Stamford, CT 06907-0047  
Tel: (203) 359-1660  
FAX: (203) 359-7700  
e-mail: [info@omega.com](mailto:info@omega.com)

**Canada:**  
976 Berger  
Laval (Quebec) H7L 5A1  
Tel: (514) 856-6928  
FAX: (514) 856-6886  
e-mail: [canada@omega.com](mailto:canada@omega.com)

### For immediate technical or application assistance:

**USA and Canada:**  
Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA<sup>SM</sup>  
Customer Service: 1-800-622-2378 / 1-800-622-BEST<sup>SM</sup>  
Engineering Service: 1-800-872-9436 /  
1-800-USA-WHEN<sup>SM</sup>  
TELEX: 996404 EASYLINK: 62968934  
CABLE: OMEGA

**Mexico and Latin America:**  
Tel: (95) 800-TC-OMEGA<sup>SM</sup>  
FAX: (95) 203-359-7807  
En Español: (203) 359-7803  
e-mail: [espanol@omega.com](mailto:espanol@omega.com)

### Servicing Europe:

**Benelux:**  
Postbus 8034, 1180 LA Amstelveen,  
The Netherlands  
Tel: (31) 20 6418405 FAX: (31) 20 6434643  
Toll Free in Benelux: 06 0993344  
e-mail: [nl@omega.com](mailto:nl@omega.com)

**Czech Republic:**  
ul. Rude armady 1868, 733 01 Karvina-Hranice,  
Czech Republic  
Tel: 420 (69) 6311899 FAX: 420 (69) 6311114  
e-mail: [czech@omega.com](mailto:czech@omega.com)

**France:**  
9, rue Denis Papin, 78190 Trappes  
Tel: (33) 130-621-400 FAX: (33) 130-699-120  
Toll Free in France: 0800-4-06342  
e-mail: [france@omega.com](mailto:france@omega.com)

**Germany/Austria:**  
Daimlerstrasse 26, D-75392  
Deckenpfronn, Germany  
Tel: 49 (07056) 3017 FAX: 49 (07056) 8540  
Toll Free in Germany: 0130 11 21 66  
e-mail: [germany@omega.com](mailto:germany@omega.com)

**United Kingdom:** ISO 9002 Certified  
• 25 Swannington Road, Broughton Astley,  
Leicestershire, LE9 6TU, England  
Tel: 44 (1455) 285520  
FAX: 44 (1455) 283912  
• P.O. Box 7, Omega Drive, Irlam,  
Manchester, M44 5EX, England  
Tel: 44 (161) 777-6611  
FAX: 44 (161) 777-6622  
Toll Free in England: 0800-488-488  
e-mail: [uk@omega.com](mailto:uk@omega.com)

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

**WARNING:** These products are not designed for use in, and should not be used for, patient connected applications.