

E3000-5

User manual

Built-In Electric Oven

Thank you for choosing one of our high-quality products.

To ensure optimal and regular performance of your appliance please read this instruction manual carefully. It will enable you to navigate all processes perfectly and most efficiently.

To refer to this manual any time you need to, we recommend you to keep it in a safe place. And please pass it to any future owner of the appliance.

We wish you much joy with your new appliance.

Contents

| | | | |
|--|-----------|--------------------------------------|-----------|
| Operating Instructions | 3 | Grill sizes | 18 |
| Safety instructions | 3 | Defrosting | 19 |
| Description of the Appliance | 4 | Drying | 19 |
| General Overview | 4 | Making preserves | 20 |
| Control Panel | 5 | Cleaning and Care | 21 |
| Oven Features | 5 | Outside of the appliance | 21 |
| Oven accessories | 6 | Oven interior | 21 |
| Before Using for the first time | 6 | Accessories | 21 |
| Initial Cleaning | 6 | Shelf Support Rails | 21 |
| Using the Rings | 7 | Oven Lighting | 22 |
| Setting the heat setting | 7 | Oven Ceiling | 23 |
| Using the Oven | 8 | Oven door | 24 |
| Switching the Oven On and Off | 8 | Oven door glass | 26 |
| Oven Functions | 9 | What to do if ... | 29 |
| Inserting the Oven Shelf and the Baking Tray | 9 | Disposal | 30 |
| Uses, Tables and Tips | 10 | Installation Instructions | 31 |
| Cooking table | 10 | Safety information for the installer | 31 |
| Baking | 11 | Guarantee/Customer Service | 35 |
| Roasting | 16 | Service | 38 |

The following symbols are used in this user manual:



Important information concerning your personal safety and information on how to avoid damaging the appliance.



General information and tips



Environmental information

Operating Instructions



Safety instructions

Electrical safety

- This appliance must be only connected by a **registered electrician**.
- In the event of a fault or damage to the appliance: Take the fuses out or switch off.
- **Repairs** to the appliance must only be carried out by **qualified service engineers**. Considerable danger may result from improper repairs. If repairs become necessary, please contact our Customer Services or your dealer.

Child Safety

- Never leave children unsupervised when the appliance is in use.

Safety whilst using

- People (including children) who, because of their physical, sensory or mental capabilities or their inexperience or ignorance are not able to use the device safely, should not use this device without supervision or instruction by a responsible person.
- This appliance is intended to be used for cooking, roasting and baking food in the home.
- Take care when connecting electric appliances to sockets nearby. Do **not** allow connecting leads to come into contact with or to catch beneath the hot oven door.
- **Warning: Risk of burns!** The interior of the oven becomes hot during use.
- Using ingredients containing alcohol in the oven may create an alcohol-air mixture that is easily ignited. In this case, open the door carefully. Do not have embers, sparks or naked flames in the vicinity when opening the door.



Information on acrylamides

According to the latest scientific knowledge, intensive browning of food, especially in products containing starch, can constitute a health risk due to acrylamides. Therefore we recommend cooking at the lowest possible temperatures and not browning foods too much.

How to avoid damage to the appliance

- Do not line the oven with aluminium foil and do not place baking trays, pots, etc. on the oven floor, as the heat that builds up will damage the oven enamel.
- Fruit juices dripping from the baking tray will leave stains, which you will not be able to remove. For very moist cakes, use a deep tray.
- Do not put any strain on the oven door when open.
- Never pour water directly into the oven when it is hot. This could cause damage to or discolouration of the enamel.
- Rough handling, especially around the edges of the front panel, can cause the glass to break.
- Do not store any flammable materials inside the oven. These could ignite when the oven is switched on.

- Do not store any moist foods inside the oven. This could damage the oven enamel.
- After switching off the cooling fan, do not keep uncovered dishes in the oven. Moisture may condense in the oven interior or on the glass doors and may get into the units.




Note on enamel coating


Changes in the colour of the oven's enamel coating as a result of use do not affect the appliance's suitability for normal and correct use. They therefore do not constitute a defect in the sense of the warranty law.

Description of the Appliance


General Overview

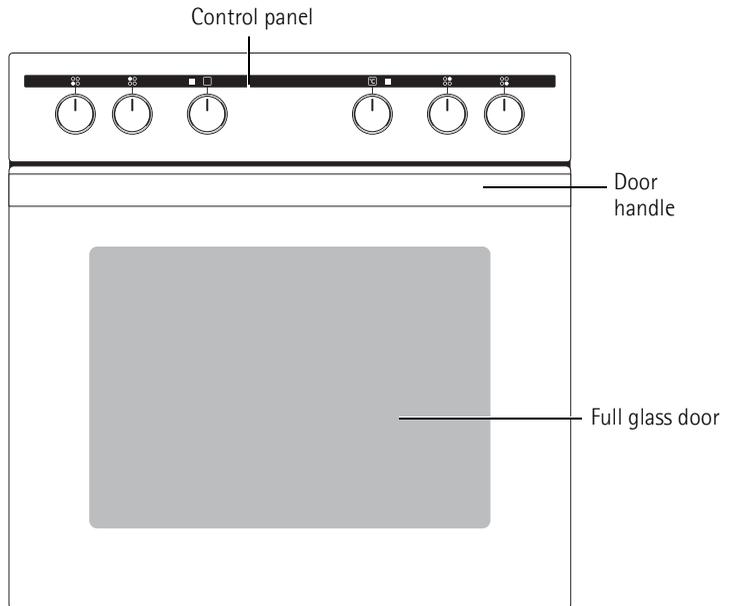

Control Panel

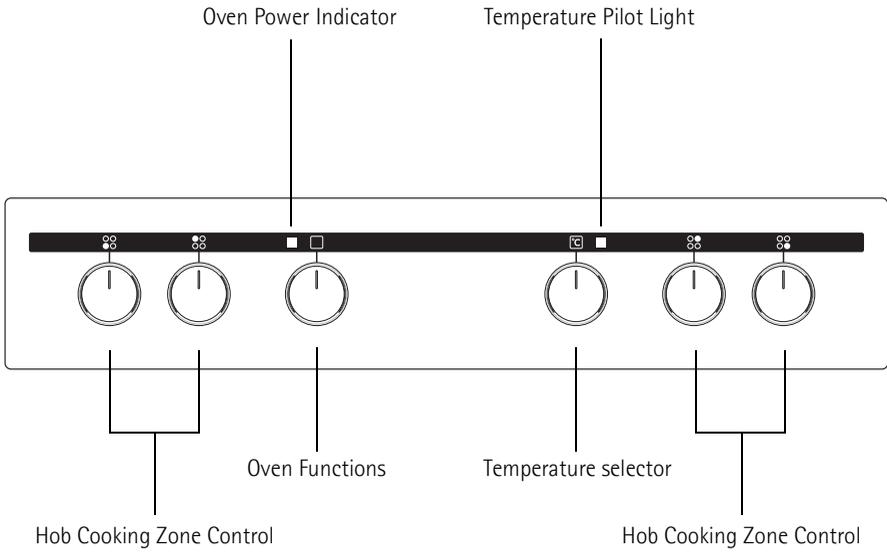


Oven Features

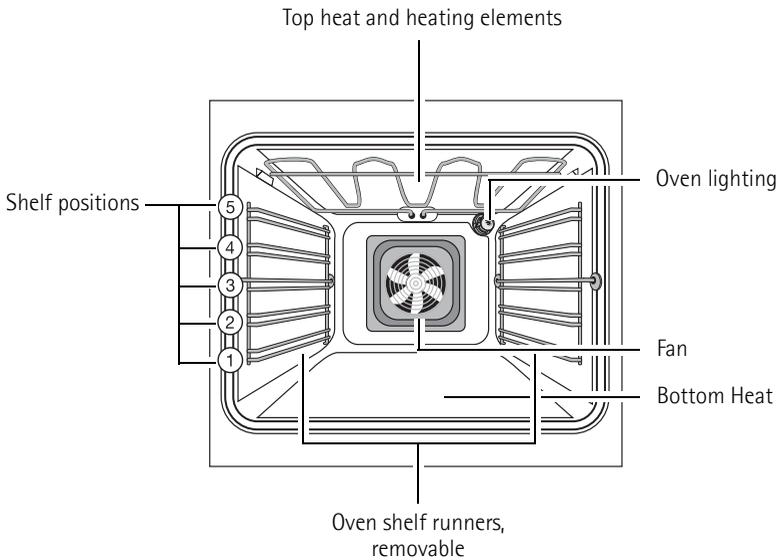

Oven steam vent


The steam from the oven is fed directly upwards via the duct in the rear of the cooking surface.

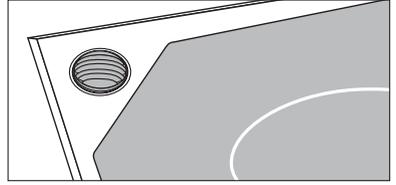

Oven accessories


Oven shelf

For cookware, cake tins, roasts and grilled foods.

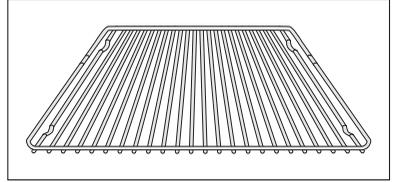

Baking tray

For cakes and biscuits.

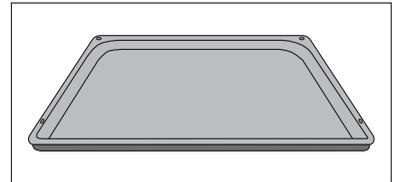

Before Using for the first time

Initial Cleaning

Before using the oven for the first time you should clean it thoroughly.



Caution: Do not use any caustic, abrasive cleaners! The surface could be damaged.

To clean metal fronts use commercially available cleaning agents.

1. Turn the oven function switch to oven lighting .
2. Remove all accessories and the shelf support rails and wash them with warm water and washing up liquid.
3. Then wash out the oven with warm water and washing-up liquid, and dry.
4. Wipe the front of the appliance with a damp cloth.

Using the Rings




Also refer to the operating instructions for your built-in hob. It contains important information on ovenware, operation, cleaning and care.

Heat settings

- You may select the heat settings within the range of settings 1-9.
 - Intermediate positions may be selected between settings 2 and 7.
- 1 = lowest heat setting
9 = highest heat setting




Switch the cooking zone off approx. 5-10 minutes before cooking is finished to make use of the residual heat. This saves electricity.

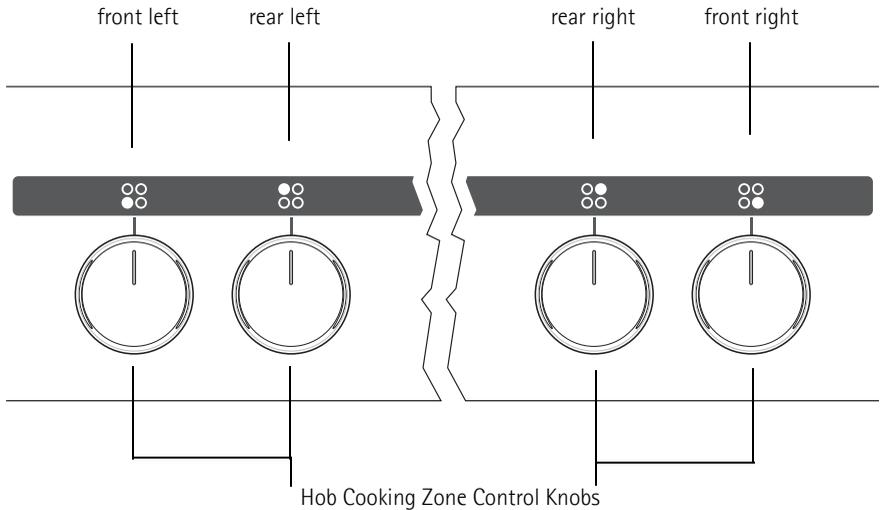

Setting the heat setting


- Select the heat setting.

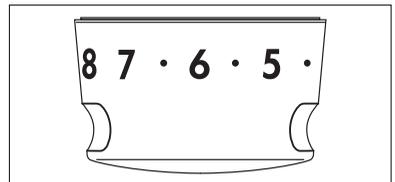

- To end the cooking process, turn back to the Off position.




The power indicator light is lit as long as a ring is on.

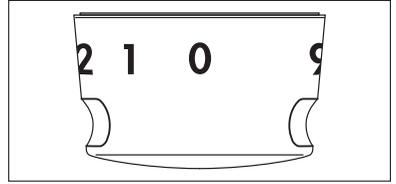

Using the Oven

Switching the Oven On and Off

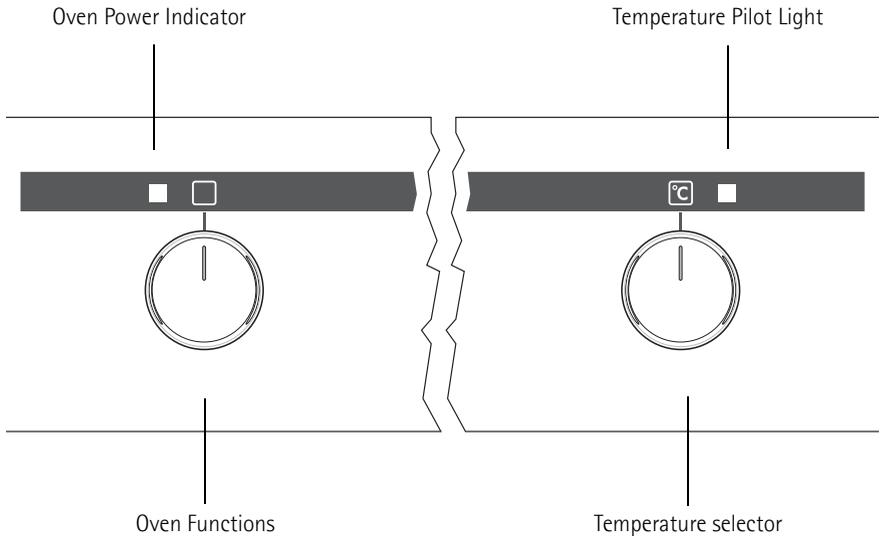

- Turn the oven functions dial to the desired function.
- Turn the temperature selector to the desired temperature.
The power indicator is lit as long as the oven is in operation.
The temperature pilot light is lit as long as the oven is heating up.
- To turn the oven off, turn the oven functions dial and the temperature selector to the Off position.



Cooling fan

The fan switches on automatically in order to keep the appliance's surfaces cool. When the oven is switched off, the fan continues to run to cool the appliance down, then switches itself off automatically.

Oven Functions

The oven has the following functions:

| Oven function | Application |
|---|---|
|  Light | Using this function you can light up the oven interior, e.g. for cleaning. |
|  Fan-assisted circulation | For baking on up to two oven levels . Set the oven temperatures 20-40 °C lower than when using Conventional. |
|  Conventional | For baking and roasting on one oven level . |
|  Base heat | For baking cakes with crispy or crusty bases . |
|  Defrost | For defrosting e. g. flans and gateaux, butter, bread, fruit or other frozen foods . |
|  Single grill | For grilling flat food items placed in the middle of the grill and for toasting . |
|  Dual grill | For grilling flat food items in large quantities and for toasting . |
|  Rothitherm | For roasting larger joints of meat or poultry on one level. The function is also suitable for gratinating and browning . |

Inserting the Oven Shelf and the Baking Tray




Shelf runner safety and anti-tip device

As a shelf runner safety device, all insertable components have a small curved indentation at the bottom on the right and left-hand edge.

Always insert insertable components so that this indentation is at the back of the oven interior. This indentation is also important for preventing the insertable components from tipping.

Inserting the baking tray

Push the baking tray between the guide bars of the selected oven level.

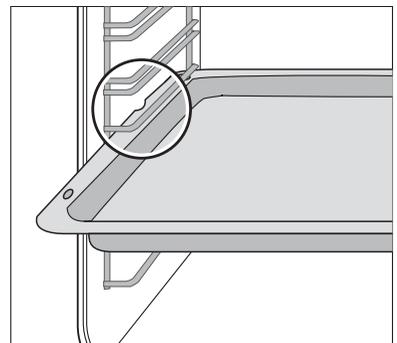


Inserting the oven shelf:

Insert the oven shelf so that the feet point downwards.

Push the oven shelf between the guide bars of the selected oven level.




The high rim around the oven shelf is an additional device to prevent cookware from slipping.

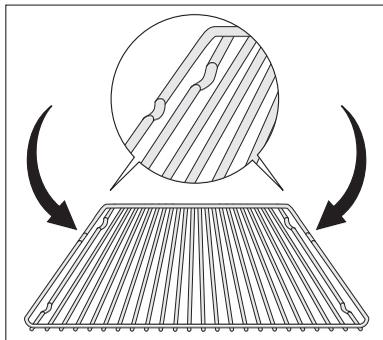**Inserting the oven shelf and the baking tray together:**

Lay the oven shelf on the baking tray.

Push the baking tray **between** the guide bars of the selected oven level.

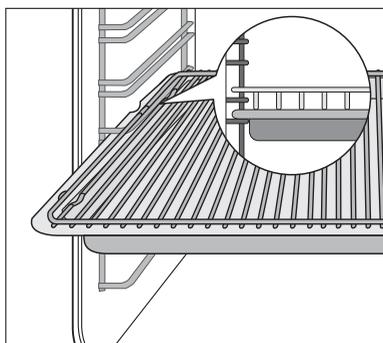

Uses, Tables and Tips

Cooking table

The information in the table is for guidance only.

| Heat setting | Cooking-process | suitable for | Cooking time | Hints |
|--------------|------------------------------|--|--------------|---|
| 0 | | Residual heat, Off position | | |
| 1 | Keeping food warm | To keep cooked foods warm | as necessary | Cover |
| 1-2 | Melting | Hollandaise sauce, to melt butter, chocolate, gelatine | 5-25 mins. | Stir occasionally |
| | Solidifying | Fluffy omelettes, baked eggs | 10-40 mins. | Cook with lid on |
| 2-3 | Simmering on low heat | To simmer rice and milk-based dishes To heat up ready meals | 25-50 mins. | Add minimum twice as much liquid as rice, stir milk dishes some times |

| Heat setting | Cooking-process | suitable for | Cooking time | Hints |
|--------------|--|---|--------------------|---|
| 3-4 | Steaming Braising | To steam vegetables, fish to braise meat | 20-45 mins. | With vegetables add only some liquid (some table-spoons) |
| 4-5 | Boiling | To steam potatoes | 20-60 mins. | Use only some liquid, e.g.: max. 1/4 l water for 750 g potatoes |
| | | To cook larger quantities of food, stews and soups | 60-150 mins. | 3 l liquid maximum plus ingredients |
| 6-7 | Gentle Frying | To fry escalopes, veal cordon bleu, cutlets, rissoles, sausages, liver, roux, eggs, pancakes, doughnuts | Steady frying | Turn occasionally |
| 7-8 | Heavy Frying | Hash browns, loin steaks, steaks, Flädle (pancakes for garnishing soup) | 5-15 mins. per pan | Turn occasionally |
| 9 | Boiling Searing Deep frying | To boil large quantities of water, to cook pasta, to sear meat (goulash, pot roast), deep frying chips | | |



We recommend when boiling or searing foods using the highest heat setting at first and then letting foods requiring a longer cooking time finish cooking on the desired heat setting.



Overheated fats and oils can ignite very quickly. Warning! Fire hazard!

Baking

Oven function: Fan-assisted circulation  or Conventional 

Baking tins


- For Conventional , dark metal and non-stick tins are suitable.
- For Fan-assisted circulation  bright metal tins are also suitable.

Oven levels


- Baking with Conventional  is only possible on one level.
- With Fan-assisted circulation  you can bake dry cakes and biscuits on 2 baking trays at the same time.

1 baking tray:


e.g. oven level 3

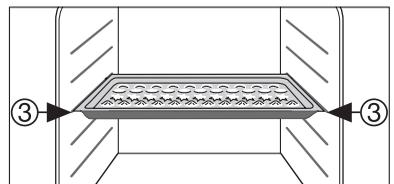

1 cake tin:
e.g. oven level 1

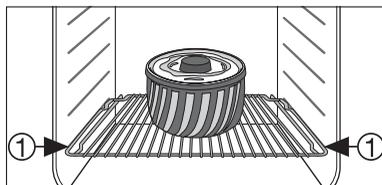

2 baking trays:
e. g. oven levels 1 and 3

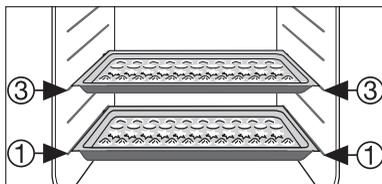

General Instructions

- Insert the tray with the bevel at the front.
- With Conventional  or Fan-assisted circulation  you can also bake with two tins next to one another on the oven shelf at the same time. This does not significantly increase baking time.



When frozen foods are used the trays inserted may distort during cooking. This is due to the large difference in temperature between the freezing temperature and the temperature in the oven. Once the trays have cooled the distortion will disappear again.

How to use the Baking Tables

The tables give the required temperature settings, baking times and oven shelf levels for a selection of typical dishes.

- Temperatures and baking times are for guidance only, as these will depend on the consistency of pastry or mixture, the number and the type of cake tin.
- We recommend using the lower temperature the first time and then if necessary, for example, if a deeper browning is required, or baking time is too long, selecting a higher temperature.
- If you cannot find the settings for a particular recipe, look for the one that is most similar.
- If baking cakes on baking trays or in tins on more than one level, baking time can be extended by 10-15 minutes.
- Moist recipes (for example, pizzas, fruit flans, etc.) are baked on one level.
- Cakes and pastries at different heights may brown at an uneven rate at first. If this occurs, **please do not change the temperature setting**. Different rates of browning even out as baking progresses.
- Your new oven may bake or roast differently to your previous appliance. So adapt your normal settings (temperature, cooking times) and oven shelf levels to the recommendations in the following tables.



With longer baking times, you can switch the oven off about 10 minutes before the end of the baking time, in order to utilise the residual heat.

Unless otherwise stated, the values given in the tables assume that cooking is started with the oven cold.

Baking table

| Type of baking | | Ovenfunction | Shelf position | Temperature °C | Time Hours mins. |
|---|---|--------------------------|----------------|------------------------------|-------------------|
| Baking in tins | | | | | |
| Ring cake or brioche |  | Fan-assisted circulation | 1 | 150-160 | 0:50-1:10 |
| Madeira cake/Fruitcakes |  | Fan-assisted circulation | 1 | 140-160 | 1:10-1:30 |
| Sponge cake |  | Fan-assisted circulation | 1 | 140 | 0:25-0:40 |
| Sponge cake |  | Conventional | 1 | 160 | 0:25-0:40 |
| Flan base - short pastry |  | Conventional | 3 | 180-200 | 0:10-0:25 |
| Flan base - sponge mixture |  | Fan-assisted circulation | 3 | 150-170 | 0:20-0:25 |
| Apple pie |  | Conventional | 1 | 170-190 | 0:50-1:00 |
| Apple pie (2 tins Ø20cm, diagonally off set) |  | Fan-assisted circulation | 1 | 160 | 1:10-1:30 |
| Apple pie (2 tins Ø20cm, diagonally off set) |  | Conventional | 1 | 180 | 1:10-1:30 |
| Savoury flan (e. g. quiche lorraine) |  | Conventional | 1 | 180-200 | 0:30-1:10 |
| Cheesecake |  | Conventional | 1 | 170-190 | 1:00-1:30 |
| Cakes/pastries/breads on baking trays | | | | | |
| Plaited bread/bread crown |  | Conventional | 3 | 170-190 | 0:30-0:40 |
| Christmas stollen |  | Conventional | 3 | 160-180 ¹⁾ | 0:40-1:00 |
| Bread (rye bread) -first of all -then |  | Conventional | 1 | 250 ¹⁾ 160-180 | 0:20 0:30-1:00 |
| Cream puffs/Eclairs |  | Fan-assisted circulation | 3 | 160-170 ¹⁾ | 0:15-0:30 |
| Swiss roll |  | Conventional | 3 | 180-200 ¹⁾ | 0:10-0:20 |
| Cake with crumble topping(dry) |  | Fan-assisted circulation | 3 | 150-160 | 0:20-0:40 |
| Buttered almond cake/ sugar cakes |  | Conventional | 3 | 190-210 ¹⁾ | 0:15-0:30 |
| Fruit flans (made with yeast dough/sponge mixture) |  | Fan-assisted circulation | 3 | 150 | 0:35-0:50 |
| Fruit flans (made with yeast dough/sponge mixture) |  | Conventional | 3 | 170 | 0:35-0:50 |

| Type of baking | | Ovenfunction | Shelf position | Temperature °C | Time Hours mins. |
|--|---|--------------------------|----------------|-----------------------|------------------|
| Fruit flans made with short pastry |  | Conventional | 3 | 170-190 | 0:40-1:20 |
| Yeast cakes with delicate toppings (e. g. quark, cream, vanilla cream) |  | Conventional | 3 | 160-180 | 0:40-1:20 |
| Pizza (with a lot of topping) |  | Conventional | 1 | 190-210 ¹⁾ | 0:30-1:00 |
| Pizza (thin crust) |  | Conventional | 1 | 230-250 ¹⁾ | 0:10-0:25 |
| Unleavened bread |  | Conventional | 1 | 250-270 | 0:08-0:15 |
| Tarts (CH) |  | Conventional | 1 | 200-220 | 0:35-0:50 |
| Biscuits | | | | | |
| Short pastry biscuits |  | Fan-assisted circulation | 3 | 150-160 | 0:06-0:20 |
| Short pastry biscuits |  | Fan-assisted circulation | 1 / 3 | 150-160 | 0:06-0:20 |
| Viennese whirls |  | Fan-assisted circulation | 3 | 140 | 0:20-0:30 |
| Viennese whirls |  | Fan-assisted circulation | 1 / 3 | 140 | 0:25-0:40 |
| Viennese whirls |  | Conventional | 3 | 160 ¹⁾ | 0:20-0:30 |
| Biscuits made with sponge mixture |  | Fan-assisted circulation | 3 | 150-160 | 0:15-0:20 |
| Biscuits made with sponge mixture |  | Fan-assisted circulation | 1 / 3 | 150-160 | 0:15-0:20 |
| Pastries made with egg white, meringues |  | Fan-assisted circulation | 3 | 80-100 | 2:00-2:30 |
| Macaroons |  | Fan-assisted circulation | 3 | 100-120 | 0:30-0:60 |
| Biscuits made with yeast dough |  | Fan-assisted circulation | 3 | 150-160 | 0:20-0:40 |
| Puff pastries |  | Fan-assisted circulation | 3 | 170-180 ¹⁾ | 0:20-0:30 |
| Rolls |  | Fan-assisted circulation | 3 | 160 ¹⁾ | 0:20-0:35 |
| Rolls |  | Conventional | 3 | 180 ¹⁾ | 0:20-0:35 |
| Small cakes (20per tray) |  | Fan-assisted circulation | 3 | 140 ¹⁾ | 0:20-0:30 |

| Type of baking | | Ovenfunction | Shelf position | Temperature °C | Time Hours mins. |
|--------------------------|---|--------------------------|----------------|-------------------|------------------|
| Small cakes (20per tray) |  | Fan-assisted circulation | 1 / 4 | 140 ¹⁾ | 0:25-0:40 |
| Small cakes (20per tray) |  | Conventional | 3 | 170 ¹⁾ | 0:20-0:30 |

1) Pre-heat the oven

Tips on baking

| Baking results | Possible cause | Remedy |
|--|---|--|
| The cake is not browned enough at the bottom | Wrong oven level | Place cake lower in the oven |
| The cake sinks (becomes soggy, lumpy, streaky) | Oven temperature too high | Use a slightly lower setting |
| | Baking time too short | Set a longer baking time Baking times cannot be reduced by setting higher temperatures |
| | Too much liquid in the mixture | Use less liquid Pay attention to mixing times, especially if using mixing machines |
| Cake is too dry | Oven temperature too low | Set oven temperature higher |
| | Baking time too long | Set a shorter baking time |
| Cake browns unevenly | Oven temperature too high and baking time too short | Set a lower oven temperature and a longer baking time |
| | Mixture is unevenly distributed | Spread the mixture evenly on the baking tray |
| Cake is not done within the baking time given | Temperature too low | Use a slightly higher oven setting |

Bakes and gratins table

| Dish | | Oven function | Shelf position | Temperature °C | Time Hours mins. |
|---|---|---------------|----------------|----------------|------------------|
| Pasta bake |  | Conventional | 1 | 180-200 | 0:45-1:00 |
| Lasagne |  | Conventional | 1 | 180-200 | 0:25-0:40 |
| Vegetables au gratin ¹⁾ |  | Rothitherm | 1 | 160-170 | 0:15-0:30 |
| Baguettes topped with melted cheese ¹⁾ |  | Rothitherm | 1 | 160-170 | 0:15-0:30 |
| Sweet bakes |  | Conventional | 1 | 180-200 | 0:40-0:60 |

| Dish | Oven function | Shelf position | Temperature °C | Time Hours mins. | |
|--------------------|---|----------------|----------------|------------------|-----------|
| Fish bakes |  | Conventional | 1 | 180-200 | 0:30-1:00 |
| Stuffed vegetables |  | Rothitherm | 1 | 160-170 | 0:30-1:00 |

1) Pre-heat the oven

Frozen ready meals table

| Food to be cooked | Oven function | Shelf position | Temperature °C | Time | |
|------------------------------------|---|----------------|----------------|------------------------------------|------------------------------------|
| Frozen pizza |  | Conventional | 3 | as per manufacturer's instructions | as per manufacturer's instructions |
| Chips ¹⁾ (300-600 g) |  | Rothitherm | 3 | 200-220 | as per manufacturer's instructions |
| Baguettes |  | Conventional | 3 | as per manufacturer's instructions | as per manufacturer's instructions |
| Fruit flans |  | Conventional | 3 | as per manufacturer's instructions | as per manufacturer's instructions |

1) Comments: Turn chips 2 or 3 times during cooking

Roasting

Oven function: Conventional  or Rothitherm 

Ovenware for roasting

- Any heat-resistant ovenware is suitable to use for roasting. (Please read the manufacturer's instructions.)
- For all lean meats, we recommend **roasting these in a roasting tin or dish with a lid**. The meat will be more succulent.
- All types of meat, that can be browned or have crackling, can be roasted in a **roasting tin or dish without a lid**.



Tips on using the Roasting Table

The information given in the following table is for guidance only.

- We recommend cooking meat and fish **weighing 1kg or more** in the oven.
- To prevent meat juices or fat from burning onto the ovenware, we recommend adding some liquid.
- If required, turn the roast (after 1/2 - 2/3 of the cooking time).
- Baste large roasts and poultry with their juices several times during roasting. This will give better roasting results.
- You can switch the oven off about 10 minutes before the end of the roasting time, in order to utilise the residual heat.

Roasting table

| Type of meat | Quantity | Ovenfunction | Shelf position | Temperature °C | Time Hours mins. | |
|-----------------------------|----------------------|---|----------------|----------------|-----------------------|----------------------|
| Beef | | | | | | |
| Pot roast | 1-1.5 kg |  | Conventional | 1 | 200-250 | 2:00-2:30 |
| Roast beef or fillet | per cm. of thickness |  | Rothitherm | 1 | 190-200 ¹⁾ | per cm. of thickness |
| - rare | | | | | | 0:05-0:06 |
| - medium | | | | | | 0:06-0:08 |
| - well done | | | | | | 0:08-0:10 |
| Pork | | | | | | |
| Shoulder, neck, ham joint | 1-1.5 kg |  | Rothitherm | 1 | 160-180 | 1:30-2:00 |
| Chop, spare rib | 1-1.5 kg |  | Rothitherm | 1 | 170-180 | 1:00-1:30 |
| Meat loaf | 750 g-1 kg |  | Rothitherm | 1 | 160-170 | 0:45-1:00 |
| Porkknuckle (pre-cooked) | 750 g-1 kg |  | Rothitherm | 1 | 150-170 | 1:30-2:00 |
| Veal | | | | | | |
| Roast veal | 1 kg |  | Rothitherm | 1 | 160-180 | 1:30-2:00 |
| Knuckle of veal | 1.5-2 kg |  | Rothitherm | 1 | 160-180 | 2:00-2:30 |
| Lamb | | | | | | |
| Leg of lamb, roast lamb | 1-1.5 kg |  | Rothitherm | 1 | 150-170 | 1:15-2:00 |
| Saddle of lamb | 1-1.5 kg |  | Rothitherm | 1 | 160-180 | 1:00-1:30 |
| Game | | | | | | |
| Saddle of hare, leg of hare | up to 1 kg |  | Conventional | 3 | 220-250 ¹⁾ | 0:25-0:40 |
| Saddle of venison | 1.5-2 kg |  | Conventional | 1 | 210-220 | 1:15-1:45 |
| Haunch of venison | 1.5-2 kg |  | Conventional | 1 | 200-210 | 1:30-2:15 |
| Poultry | | | | | | |
| Poultry portions | 200-250g each |  | Rothitherm | 1 | 200-220 | 0:35-0:50 |
| Half chicken | 400-500g each |  | Rothitherm | 1 | 190-210 | 0:35-0:50 |
| Chicken, poulard | 1-1.5 kg |  | Rothitherm | 1 | 190-210 | 0:45-1:15 |
| Duck | 1.5-2 kg |  | Rothitherm | 1 | 180-200 | 1:15-1:45 |

| Type of meat | Quantity | Ovenfunction | Shelf position | Temperature °C | Time Hours mins. |
|-----------------------|------------|--|----------------|----------------|------------------|
| Goose | 3.5-5 kg |  Rothitherm | 1 | 160-180 | 2:30-3:30 |
| Turkey | 2.5-3.5 kg |  Rothitherm | 1 | 160-180 | 1:45-2:30 |
| Turkey | 4-6 kg |  Rothitherm | 1 | 140-160 | 2:30-4:00 |
| Fish (steamed) | | | | | |
| Whole fish | 1-1.5 kg |  Conventional | 1 | 210-220 | 0:45-1:15 |

1) Pre-heat the oven

Grill sizes

Oven function: Single grill  or Dual grill  with maximum temperature setting



Important: Always grill with the oven door closed.



The empty oven should **always be pre-heated with the grill functions for 5 minutes.**

- For grilling, place the **shelf** in the **recommended shelf position**.
- Always insert the **tray** into the **first shelf position** from the bottom.
- The grilling times are guidelines.
- Grilling is particularly suitable for flat pieces of meat or fish.

Grilling table

| Food to be grilled | Oven level | Grilling time | |
|---|------------|---------------|-------------|
| | | 1st side | 2nd side |
| Burgers | 4 | 8-10 mins. | 6-8 mins. |
| Pork fillet | 4 | 10-12 mins. | 6-10 mins. |
| Sausages | 4 | 8-10 mins. | 6-8 mins. |
| Fillet steaks, veal steaks | 4 | 6-7 mins. | 5-6 mins. |
| Fillet of beef, roast beef (approx. 1 kg) | 3 | 10-12 mins. | 10-12 mins. |
| Toast ¹⁾ | 3 | 4-6 mins. | 3-5 mins. |
| Toast with topping | 3 | 6-8 mins. | --- |

1) Do not pre-heat

Defrosting

Oven function: Defrost (no temperature setting)

- Unwrap the food and place it on a plate on the oven shelf.
- Do not cover with a plate or bowl, as these can substantially lengthen the defrosting time.
- For defrosting, place the shelf in the **1st oven level from the bottom**.

Defrosting table

| Dish | Defrosting time mins. | Further defrosting time (mins.) | Comments |
|--------------------|-----------------------|---------------------------------|---|
| Chicken, 1000 g | 100-140 | 20-30 | Place the chicken on an upturned saucer placed on a large plate Turn halfway through |
| Meat, 1000 g | 100-140 | 20-30 | Turn halfway through |
| Meat, 500 g | 90-120 | 20-30 | Turn halfway through |
| Trout, 150g | 25-35 | 10-15 | --- |
| Strawberries, 300g | 30-40 | 10-20 | --- |
| Butter, 250g | 30-40 | 10-15 | --- |
| Cream, 2 x 200g | 80-100 | 10-15 | Cream can also be whipped when still slightly frozen in places |
| Gateau, 1400g | 60 | 60 | --- |

Drying

Oven function: Fan-assisted circulation

- Use oven shelves covered with greaseproof paper or baking parchment.
- You get a better result if you switch the oven off halfway through the drying time, open the door and leave the oven to cool down overnight.
- After this finish drying the food to be dried.

| Food to be dried | Temperature in °C | Oven level | | Time in hours (Guideline) |
|---------------------|-------------------|------------|----------|---------------------------|
| | | 1 level | 2 levels | |
| Vegetables | | | | |
| Beans | 60-70 | 3 | 1 / 4 | 6-8 |
| Peppers (strips) | 60-70 | 3 | 1 / 4 | 5-6 |
| Vegetables for soup | 60-70 | 3 | 1 / 4 | 5-6 |
| Mushrooms | 50-60 | 3 | 1 / 4 | 6-8 |
| Herbs | 40-50 | 3 | 1 / 4 | 2-3 |

| Food to be dried | Temperature in °C | Oven level | | Time in hours (Guideline) |
|------------------|-------------------|------------|----------|---------------------------|
| | | 1 level | 2 levels | |
| Fruit | | | | |
| Plums | 60-70 | 3 | 1 / 4 | 8-10 |
| Apricots | 60-70 | 3 | 1 / 4 | 8-10 |
| Apple slices | 60-70 | 3 | 1 / 4 | 6-8 |
| Pears | 60-70 | 3 | 1 / 4 | 6-9 |

Making preserves

Oven function: Base heat

- For preserving, use only commercially available preserve jars of the same size.
- **Jars with twist-off or bayonet type lids and metal tins are not suitable.**
- When making preserves, the **first shelf position from the bottom** is the one most used.
- Use the shelf for making preserves. There is enough room on this for up to six 1-litre preserving jars.
- The jars should all be filled to the same level and clamped shut.
- Place the jars on the baking tray in such a way that they are not touching each other.
- Pour approx. 1/2 litre of water into the baking tray so that sufficient moisture is produced in the oven.
- As soon as the liquid starts to pearl in the first jars (after about 35-60 minutes with 1 litre jars), switch the oven off or reduce the temperature to 100 °C (see table).

Preserves table

The times and temperatures for making preserves are for guidance only.

| Preserve | Temperature in °C | Cooking time until simmering in mins. | Continue to cook at 100 °C in mins. |
|---|-------------------|---------------------------------------|-------------------------------------|
| Soft fruit | | | |
| Strawberries, blueberries, raspberries, ripe gooseberries | 160-170 | 35-45 | --- |
| Unripe gooseberries | 160-170 | 35-45 | 10-15 |
| Stone fruit | | | |
| Pears, quinces, plums | 160-170 | 35-45 | 10-15 |
| Vegetables | | | |
| Carrots ¹⁾ | 160-170 | 50-60 | 5-10 |
| Cucumbers | 160-170 | 50-60 | --- |
| Mixed pickles | 160-170 | 50-60 | 15 |
| Kohlrabi, peas, asparagus | 160-170 | 50-60 | 15-20 |

1) Leave standing in oven when switched off

Cleaning and Care



Warning: First switch off the appliance and let it cool down before carrying out any cleaning.

Warning: For safety reasons, do **not** clean the appliance with steam blasters or high-pressure cleaners.

Attention: Do not use any corrosive cleaning fluids, sharp objects or stain removers.

Do not clean the glass oven door with abrasive fluids or metal scrapers, which could scratch the surface. The glass could crack and shatter.

Outside of the appliance

- Wipe the front of the appliance with a soft cloth and a solution of hot water and washing up liquid.
- For metal fronts, use normal commercially available cleaning agents.
- Please do not use scouring agents and abrasive sponges.

Oven interior

Clean the appliance after each use. In this way, dirt is easier to clean off and is not allowed to burn on.

1. For cleaning, turn the oven light on.
2. After every use, wipe the oven with a solution of washing-up liquid and allow to dry.



Clean stubborn dirt with a special oven cleaner.



Important: If using an oven spray, please follow the manufacturer's instructions exactly.

Accessories


Wash all slide-in units (shelf unit, baking tray, shelf support rails etc.) after each use and dry well. Soak briefly to make them easier to clean.


Shelf Support Rails

The shelf support rails on the left and right hand sides of the oven can be removed for cleaning the side walls.

Removing the shelf support rails

First pull the front of the rail away from the oven wall (1) and then unhitch at the back (2).

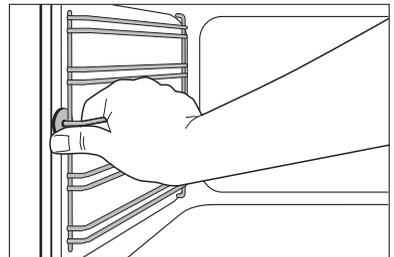


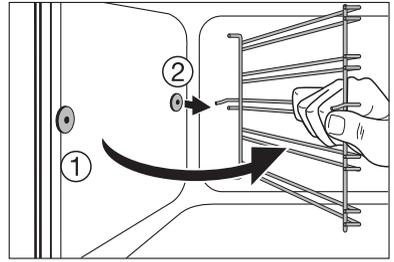


Fitting the shelf support rails



Important! The rounded ends of the guide rails must be pointing forwards!

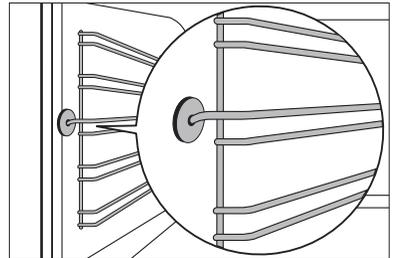

To re-insert, first hook the rail into place at the back (1) and then insert the front and press into place (2).

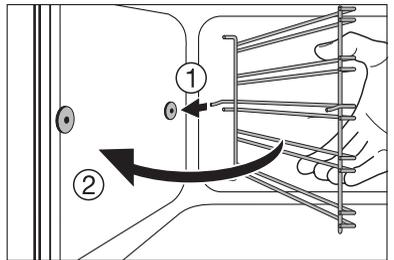

Oven Lighting



Warning: Risk of electric shock! Prior to changing the oven light bulb:


- Switch off the oven!
- Disconnect from the electricity supply.



Place a cloth on the oven floor to protect the oven light and glass cover.

Changing the oven light bulb/cleaning the glass cover

1. Remove the glass cover by turning it anti-clockwise and then clean it.
2. If necessary: replace with **25 watt, 230 V, 300 °C heat-resistant oven lighting.**
3. Refit the glass cover.

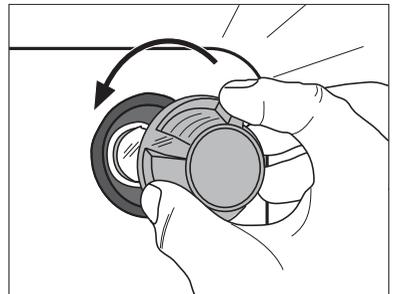

Oven Ceiling

The upper heating element can be folded down to make it easier to clean the oven ceiling.

Folding down the heating element




Warning: Only fold down the heating element when the oven is switched off and there is no risk of being burnt!

1. Remove the side shelf support rails.
2. Grip the heating element at the front and pull it forwards and out over the support lug on the inner wall of the oven.
3. The heating element will now fold down.



Caution: Do not use force to press the heating element down! The heating element might break.

Cleaning the oven ceiling

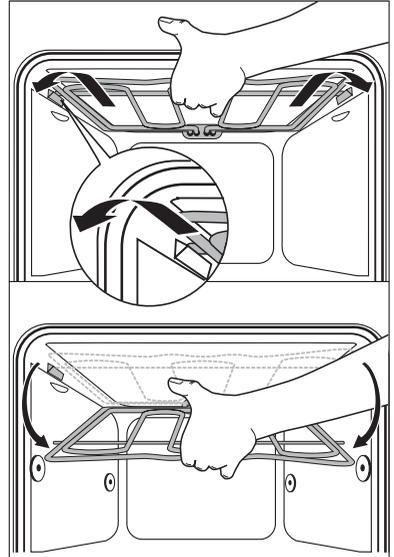


Repositioning the heating element

1. Move the heating element back up towards the oven ceiling.
2. Pull the heating element forwards against the spring pressure and guide it over the oven support lug.
3. Settle it onto the support.
4. Insert shelf support rail.



Important: The heating element must be positioned correctly and securely on both sides above the support lug on the inner wall of the oven.



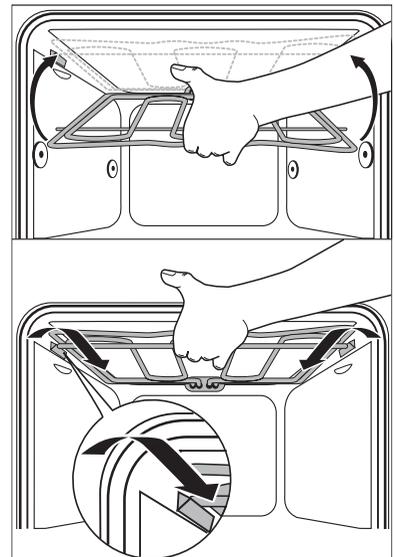


Oven door

For easier cleaning of the oven interior the oven door of your appliance can be taken off its hinges.

Removing the oven door from its hinges


1. Open the oven door as far as it will go.
2. Undo the **clamping levers (A)** on both door hinges **fully**.
3. Close the oven door as far as the first position (approx. 45°).

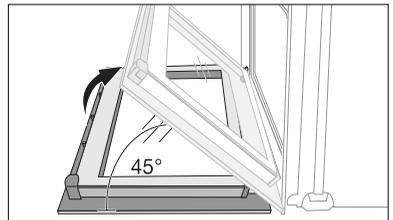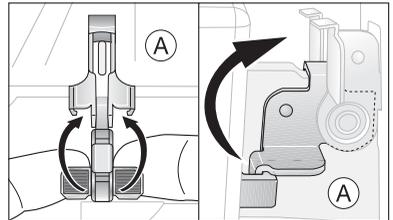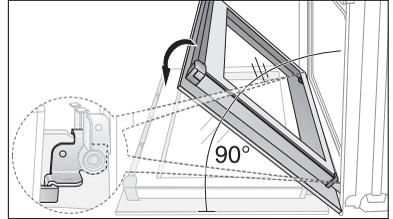

4. Take hold of the oven door with a hand on each side and pull it away from the oven at an upwards angle (**Take care:** It is heavy).




Lay the oven door with the outer side facing downwards on something soft and level, for example, a blanket in order to prevent scratches.

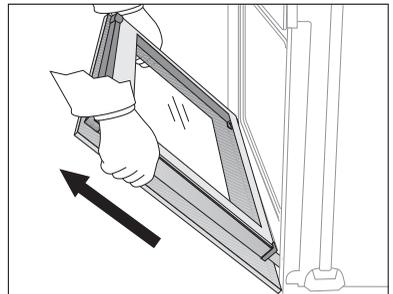


Hanging the oven door back on its hinges



1. From the handle side take hold of the oven door with a hand on each side and hold at an angle of approx. 45°. Position the recesses on the bottom of the oven door on the hinges on the oven. Let the door slide down as far as it will go.

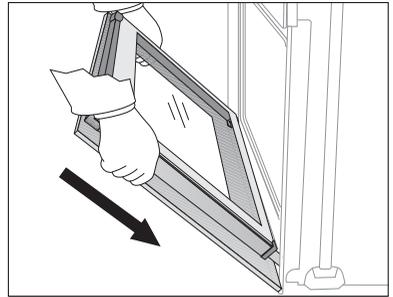

2. Open the oven door as far as it will go.

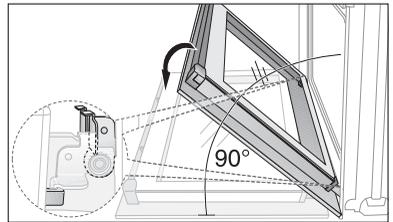

3. Fold up the clamping levers (A) on both door hinges back into their original positions.

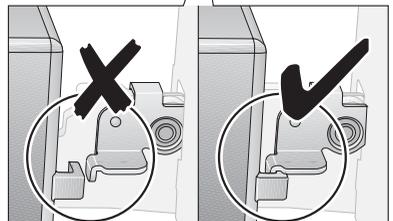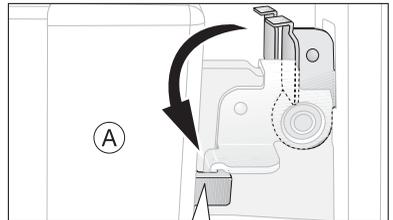

4. Close the oven door.

Oven door glass


The oven door is fitted with two panels of glass mounted one behind the other. The inner panel can be removed for cleaning.




Important Rough handling, especially around the edges of the front panel, can cause the glass to break.

Removing the door glass


1. Open the oven door as far as it will go.

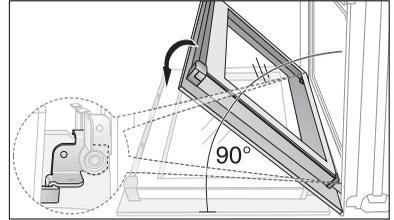


2. Undo the **clamping levers (A)** on both door hinges **fully**.

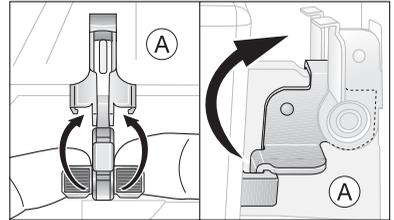


3. Close the oven door as far as the first position (approx. 45°).

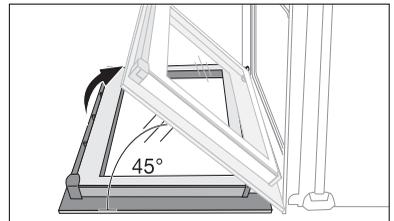

4. Take hold of the door trim (B) on the upper edge of the door at both sides and press inwards to release the clip seal. Then remove the door trim by pulling upwards.

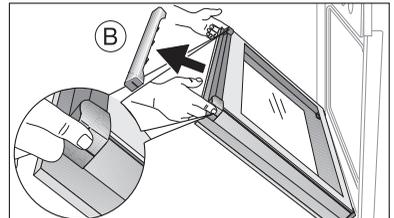

5. Take hold of the door glass on its upper edge and take it out of the guide by pulling it upwards.

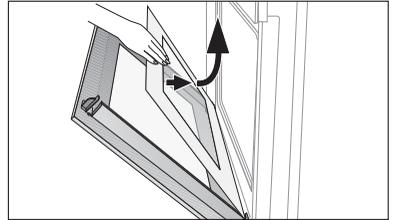


Cleaning the door glass


Clean the door glass thoroughly with a solution of water and washing up liquid. Then dry it carefully.

Putting the door glass back

1. From above insert the door glass at an angle into the door profile at the bottom edge of the door and lower it.


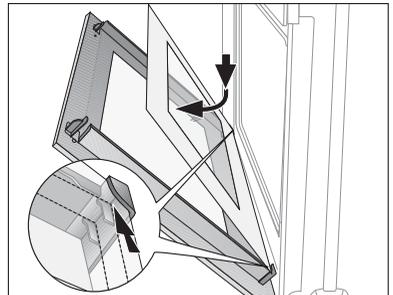


2. Take hold of the door trim (B) at each side, position it on the inside edge of the door and plug the door trim (B) into the upper edge of the door.

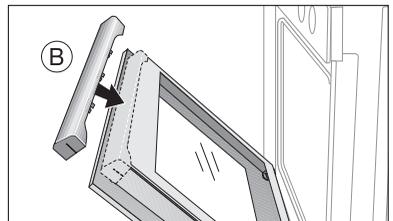






On the open side of the door trim (B) there is a guide bar (C). This must be pushed **between** the outer door panel and the guide corner (D). The clip seal (E) must be snapped in.

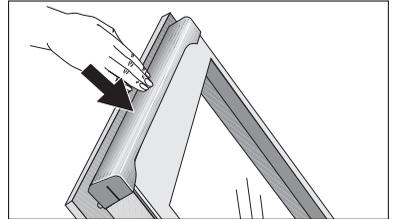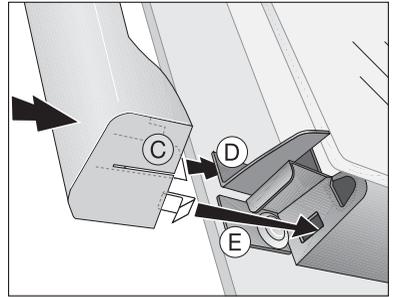

3. Open the oven door as far as it will go.

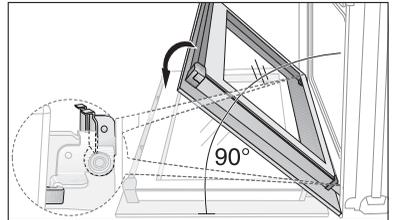

4. Fold up the clamping levers (A) on both door hinges back into their original positions.

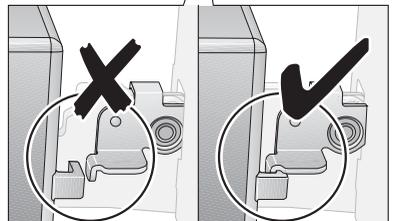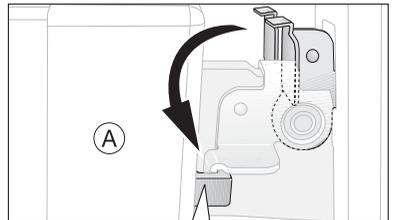

5. Close the oven door.

What to do if ...

| Problem | Possible cause | Remedy |
|---------------------------------------|---|---|
| The cooking zones are not functioning | Consult the operating instructions for the built-in cooking surface | |
| The oven does not heat up | The oven is not switched on | Switch the oven on |
| | The required settings have not been set | Check the settings |
| | The house wiring fuse (in the fuse box) has tripped | Check the fuse. If the fuses trip repeatedly, please call an authorised electrician. |
| The oven lighting is not operating | The oven light bulb is faulty | Replace oven light bulb |

If you are unable to remedy the problem by following the above suggestions, please contact your local Service Force Centre.



Warning! Repairs to the appliance are only to be carried out by qualified service engineers. Considerable danger to the user may result from improper repairs.



If the appliance has been operated incorrectly, the engineer's visit will be chargeable, even during the warranty period.



Advice on cookers with metal fronts:

Because of the cold surface at the front of the cooker, opening the oven door during (or just after) baking or roasting may cause the glass to steam up.

Disposal



Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.





Old appliance




The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.




Warning: So that the old appliance can no longer cause any danger, make it unusable before disposing of it.

To do this, disconnect the appliance from the mains supply and remove the mains cable from the appliance.

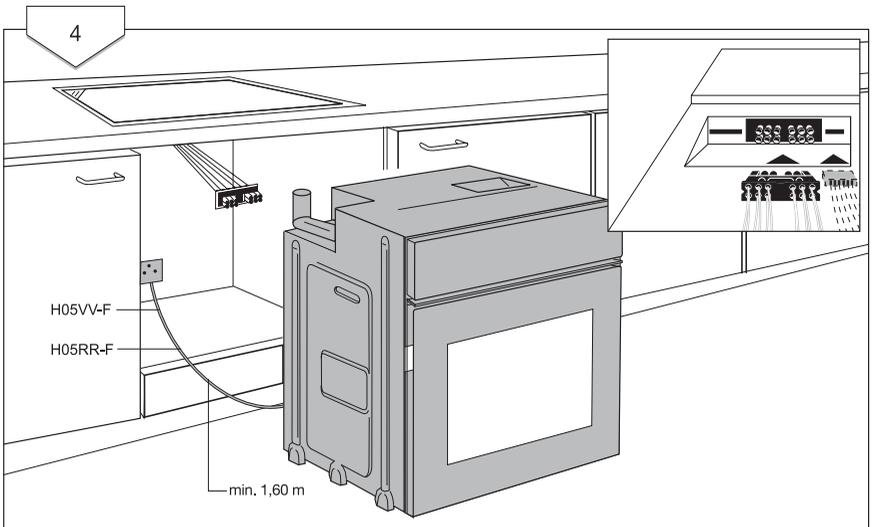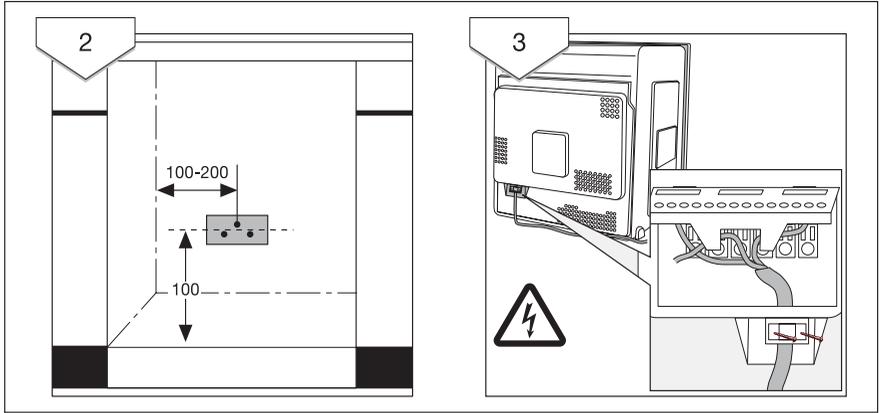

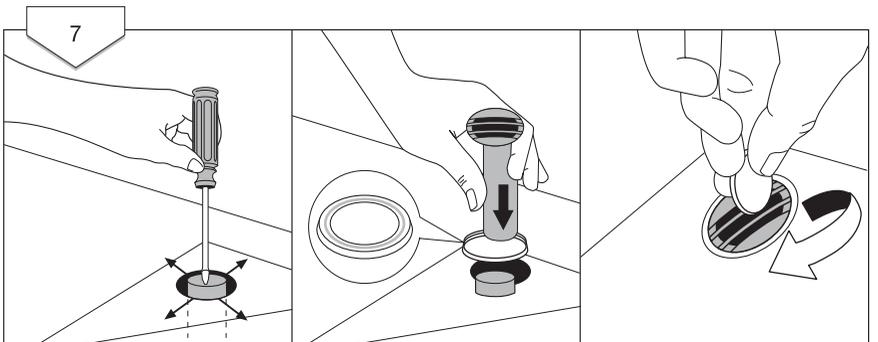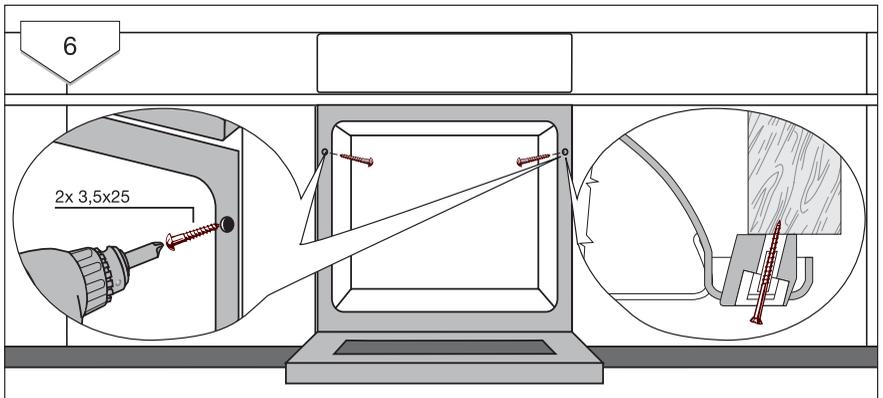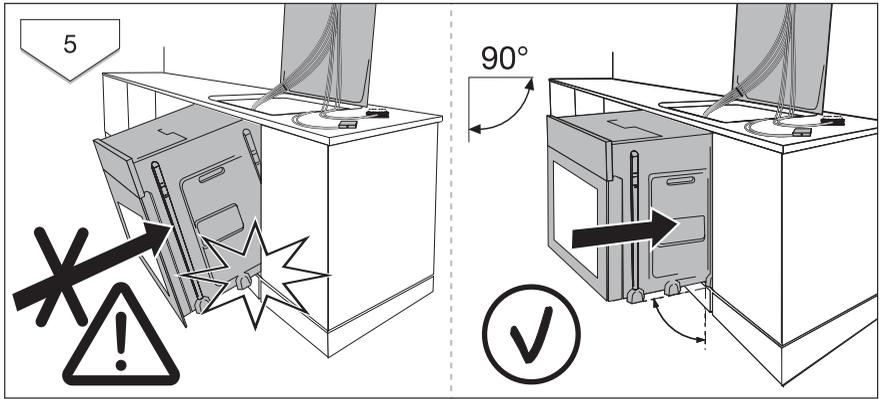

Ausbau/Removal

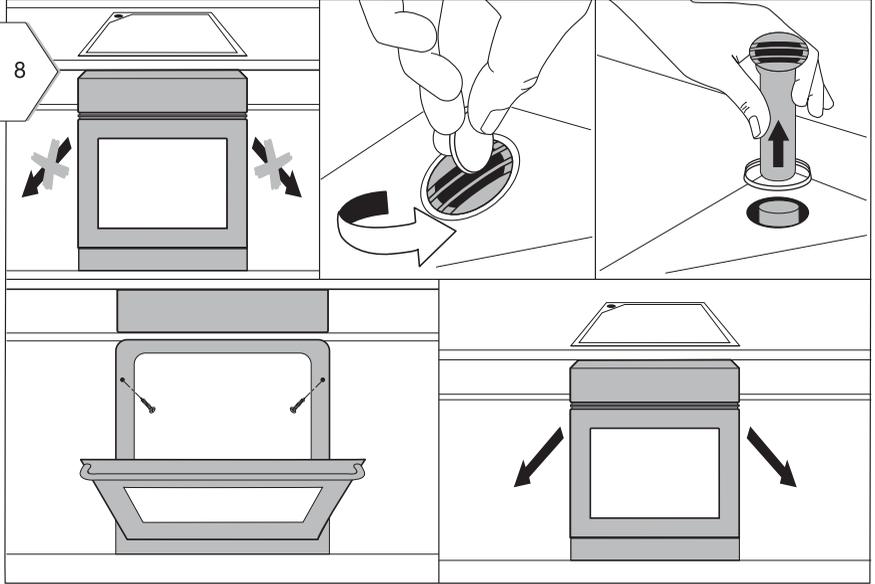

Guarantee/Customer Service

European Guarantee

This appliance is guaranteed by Electrolux in each of the countries listed at the back of this user manual, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of the countries listed below the appliance guarantee will move with you subject to the following qualifications:

- The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by the seller of the appliance.
- The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your new country of residence for this particular model or range of appliances.
- The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user.
- The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes.
- The appliance is installed in accordance with all relevant regulations in force within your new country of residence.

The provisions of this European Guarantee do not affect any of the rights granted to you by law.

www.electrolux.com

|  |  |  |
|---|---|---|
| Albania | +35 5 4 261 450 | Rr. Pjeter Bogdani Nr. 7 Tirane |
| Belgique/België/ Belgien | +32 2 363 04 44 | Bergensesteenweg 719, 1502 Lembeek |
| Česká republika | +420 2 61 12 61 12 | Budějovická 3, Praha 4, 140 21 |
| Danmark | +45 70 11 74 00 | Sjællandsgade 2, 7000 Fredericia |
| Deutschland | +49 180 32 26 622 | Fürther Straße 246, 90429 Nürnberg |
| Eesti | +37 2 66 50 030 | Mustamäe tee 24, 10621 Tallinn |
| España | +34 902 11 63 88 | Carretera M-300, Km. 29,900 Alcalá de Henares Madrid |
| France | www.electrolux.fr | |
| Great Britain | +44 8705 929 929 | Addington Way, Luton, Bedfordshire LU4 9QQ |
| Hellas | +30 23 10 56 19 70 | 4 Limnou Str., 54627 Thessaloniki |
| Hrvatska | +385 1 63 23 338 | Slavonska avenija 3, 10000 Zagreb |
| Ireland | +353 1 40 90 753 | Long Mile Road Dublin 12 |
| Italia | +39 (0) 434 558500 | C.so Lino Zanussi, 26 - 33080 Porcia (PN) |
| Latvija | +37 17 84 59 34 | Kr. Barona iela 130/2, LV-1012, Riga |
| Lithuania | +3702780607 | Žirmūnų 67, LT-09001 Vilnius |
| Luxembourg | +352 42 431 301 | Rue de Bitbourg, 7, L-1273 Hamm |
| Magyarország | +36 1 252 1773 | H-1142 Budapest XIV, Erzsébet királyné útja 87 |
| Nederland | +31 17 24 68 300 | Vennootsweg 1, 2404 CG - Alphen aan den Rijn |
| Norge | +47 81 5 30 222 | Risløkkvn. 2, 0508 Oslo |
| Österreich | +43 18 66 400 | Herziggasse 9, 1230 Wien |
| Polska | +48 22 43 47 300 | ul. Kolejowa 5/7, Warszawa |
| Portugal | +35 12 14 40 39 39 | Quinta da Fonte - Edifício Gonçalves Zarco - Q 35 2774 - 518 Paço de Arcos |
| Romania | +40 21 451 20 30 | Str. Garii Progresului 2, S4, 040671 RO |
| Schweiz/Suisse/ Svizzera | +41 62 88 99 111 | Industriestrasse 10, CH-5506 Mägenwil |
| Slovenija | +38 61 24 25 731 | Electrolux Ljubljana d.o.o. Gerbičeva 98, 1000 Ljubljana |
| Slovensko | +421 2 43 33 43 22 | Electrolux Slovakia s.r.o., Electrolux Domáce spotrebiče SK, Seberínho 1, 821 03 Bratislava |
| Suomi | www.electrolux.fi | |
| Sverige | +46 (0)771 76 76 76 | Electrolux Service, S:t Göransgatan 143, S-105 45 Stockholm |

|  |  |  |
|---|---|---|
| Türkiye | +90 21 22 93 10 25 | Tarlabaşı caddesi no : 35 Taksim İstanbul |
| Россия | +7 495 937 7837 | 129090 Москва, Олимпийский проспект, 16, БЦ „Олимпик“ |
| Україна | +380 44 586 20 60 | 04074 Київ, вул.Автозаводська, 2а, БЦ „Алкон“ |

Service


In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions (section "What to do if...").

If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners.

In order to be able to assist you quickly, we require the following information:

- Model description
- Product number (PNC)
- Serial number (S No.)
(for numbers see rating plate)
- Type of fault
- Any error messages displayed by the appliance

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

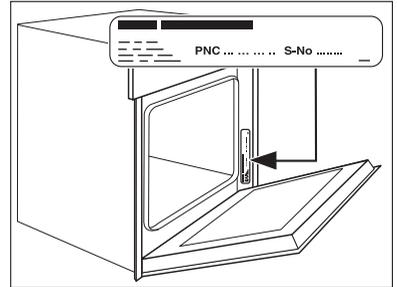

Model description:

PNC:

S No:

822 722 071-A-240309-01 Subject to change without notice