

***Grizzly***  
***Industrial, Inc.***®

**PROFESSIONAL SERIES  
PLANERS**

**MODELS G5850Z/G5851Z/G7213Z/G0544  
INSTRUCTION MANUAL**



COPYRIGHT © MAY, 2002 BY GRIZZLY INDUSTRIAL, INC. REVISED SEPTEMBER, 2005.  
**WARNING: NO PORTION OF THIS MANUAL MAY BE REPRODUCED IN ANY SHAPE  
OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.**  
#TR4135 PRINTED IN TAIWAN REVISED MARCH, 2006 (JK)

# WARNING

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints.
- Crystalline silica from bricks, cement, and other masonry products.
- Arsenic and chromium from chemically treated lumber.

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

# Table Of Contents

	PAGE
<b>1. SAFETY</b>	
SAFETY RULES FOR ALL TOOLS .....	2-3
ADDITIONAL SAFETY INSTRUCTIONS FOR PLANERS .....	4
<b>2. CIRCUIT REQUIREMENTS</b> .....	5
220V SINGLE-PHASE .....	5
220V 3-PHASE .....	5
GROUNDING .....	6
EXTENSION CORDS .....	6
<b>3. GENERAL INFORMATION</b> .....	7
COMMENTARY .....	7
UNPACKING .....	8
PIECE INVENTORY .....	8
HARDWARE RECOGNITION CHART .....	9
CLEAN UP .....	10
SITE CONSIDERATIONS .....	10
<b>4. ASSEMBLY</b> .....	11
BEGINNING ASSEMBLY .....	11
DUST HOOD .....	11
ADJUSTMENT HANDLE .....	11
<b>5. ADJUSTMENTS</b> .....	12
ADJUSTMENT CONTROLS .....	12
CUTTERHEAD KNIVES .....	13-14
TABLE .....	15-17
FEED ROLLERS, PRESSURE BAR & CHIP BREAKER .....	18-19
TABLE ROLLERS .....	20
FEED ROLLER TENSION .....	21
TEST RUN .....	21
<b>6. OPERATION</b> .....	22
OPERATION CONTROLS .....	22
FEED RATE .....	23
OPERATIONAL TIPS .....	23
WOOD CHARACTERISTICS .....	24
<b>7. MAINTENANCE</b> .....	25
GENERAL .....	25
CLEANING .....	25
TABLE .....	25
LUBRICATION .....	25-26
V-BELT .....	26
INDEXABLE INSERTS (G0544) .....	27
G5850Z/G5851Z/G0544 WIRING DIAGRAM .....	28
G7213Z WIRING DIAGRAM .....	29
<b>8. CLOSURE</b> .....	30
G5850Z/G0544 MACHINE DATA .....	31
G5850Z/G0544 PARTS BREAKDOWN AND PARTS LIST .....	32-37
G5851Z MACHINE DATA .....	38
G7213Z MACHINE DATA .....	39
G5851Z/G7213Z PARTS BREAKDOWN AND PARTS LIST .....	40-45
WARRANTY AND RETURNS .....	46

# SECTION 1: SAFETY

## WARNING

### For Your Own Safety Read Instruction Manual Before Operating This Equipment

The purpose of safety symbols is to attract your attention to possible hazardous conditions. This manual uses a series of symbols and signal words which are intended to convey the level of importance of the safety messages. The progression of symbols is described below. Remember that safety messages by themselves do not eliminate danger and are not a substitute for proper accident prevention measures.

 **DANGER** Indicates an imminently hazardous situation which, if not avoided, WILL result in death or serious injury.

 **WARNING** Indicates a potentially hazardous situation which, if not avoided, COULD result in death or serious injury.

Indicates a potentially hazardous situation which, if not avoided, MAY result in minor or moderate injury. It may also be used to alert against unsafe practices.

 **CAUTION**

**NOTICE**

This symbol is used to alert the user to useful information about proper operation of the equipment.

## WARNING

### Safety Instructions For Power Tools

1. **KEEP GUARDS IN PLACE** and in working order.
2. **REMOVE ADJUSTING KEYS AND WRENCHES.** Form habit of checking to see that keys and adjusting wrenches are removed from tool before turning *ON*.
3. **KEEP WORK AREA CLEAN.** Cluttered areas and benches invite accidents.
4. **NEVER USE IN DANGEROUS ENVIRONMENT.** Do not use power tools in damp or wet locations, or where any flammable or noxious fumes may exist. Keep work area well lighted.
5. **KEEP CHILDREN AND VISITORS AWAY.** All children and visitors should be kept at a safe distance from work area.
6. **MAKE WORKSHOP CHILD PROOF** with padlocks, master switches, or by removing starter keys.
7. **NEVER FORCE TOOL.** It will do the job better and safer at the rate for which it was designed.
8. **USE RIGHT TOOL.** Do not force tool or attachment to do a job for which it was not designed.

# WARNING

## Safety Instructions For Power Tools

- 9. USE PROPER EXTENSION CORD.** Make sure your extension cord is in good condition. Conductor size should be in accordance with the chart below. The amperage rating should be listed on the motor or tool nameplate. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. Your extension cord must also contain a ground wire and plug pin. Always repair or replace extension cords if they become damaged.

Minimum Gauge for Extension Cords

AMP RATING	LENGTH		
	25ft	50ft	100ft
0-6	18	16	16
7-10	18	16	14
11-12	16	16	14
13-16	14	12	12
17-20	12	12	10
21-30	10	10	No

- 10. WEAR PROPER APPAREL.** Do not wear loose clothing, gloves, neckties, rings, bracelets, or other jewelry which may get caught in moving parts. Non-slip footwear is recommended. Wear protective hair covering to contain long hair.
- 11. ALWAYS USE SAFETY GLASSES.** Also use face or dust mask if cutting operation is dusty. Everyday eyeglasses only have impact resistant lenses, they are NOT safety glasses.
- 12. SECURE WORK.** Use clamps or a vise to hold work when practical. It is safer than using your hand and frees both hands to operate tool.
- 13. NEVER OVERREACH.** Keep proper footing and balance at all times.
- 14. MAINTAIN TOOLS WITH CARE.** Keep tools sharp and clean for best and safest performance. Follow instructions for lubricating and changing accessories.
- 15. DISCONNECT TOOLS** before servicing and changing accessories, such as blades, bits, cutters, and the like.
- 16. REDUCE THE RISK OF UNINTENTIONAL STARTING.** Make sure switch is in *OFF* position before plugging in. Also, the magnetic switch on this machine may start if the switch gets bumped hard enough.
- 17. USE RECOMMENDED ACCESSORIES.** Consult the owner's manual for recommended accessories. The use of improper accessories may cause risk of injury.
- 18. CHECK DAMAGED PARTS.** Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced.
- 19. NEVER LEAVE TOOL RUNNING UNATTENDED. TURN POWER OFF.** Do not leave tool until it comes to a complete stop.
- 20. NEVER USE UNDER THE INFLUENCE** of alcohol or drugs, or when tired.
- 21. NEVER ALLOW UNSUPERVISED OR UNTRAINED PERSONNEL TO OPERATE THE MACHINE.** Make sure any instructions you give in regards to the operation of the machine are approved, correct, safe,

## **WARNING**

# Additional Safety Instructions For Planers

1. **READ THIS ENTIRE MANUAL BEFORE TURNING THE PLANER ON.**
2. **ENSURE THAT THE MACHINE IS ON FLAT, STABLE GROUND BEFORE USE.** Any “wobbles” must be corrected by shimming or blocking before operation.
3. **NEVER PLANE MATERIAL OTHER THAN WOOD STOCK WITH THIS MACHINE.**
4. **NEVER POSITION FINGERS OR THUMBS NEAR THE INFEED ROLLER.**
5. **ENSURE THAT THE PLANER IS PROPERLY ADJUSTED AND THAT THERE ARE NO LOOSE PARTS BEFORE OPERATING.**
6. **PLANE IN THE SAME DIRECTION AS THE GRAIN OF THE WOOD STOCK.**
7. **ALWAYS STAND TO THE SIDE OF THE PLANER WHILE FEEDING THE WORKPIECE.**
8. **DO NOT LOOK INSIDE THE PLANER DURING OPERATION!**
9. **ALWAYS PROVIDE ADEQUATE INFEED AND OUTFEED SPACE WHEN OPERATING THE PLANER.** Always support long pieces of stock on both sides of the planer.
10. **DO NOT REMOVE MORE THAN ¼" FROM THE SURFACE OF THE WOOD STOCK IN A SINGLE PASS.**
11. **INSPECT YOUR STOCK BEFORE PLANING.** Never plane stock with nails, staples or other foreign objects which may be embedded in the surface. Always properly prepare workpieces before running them through the planer. Do not plane lumber with loose knots or knots that may become loose during planing.
12. **DO NOT ATTEMPT TO REMOVE JAMS UNTIL POWER IS DISCONNECTED** and all moving parts have come to a complete stop.
13. **DO NOT PLANE WORKPIECES LESS THAN 12" LONG AND ¼" THICK.**
14. **DO NOT OPERATE PLANER WITH DULL OR DAMAGED KNIVES.**
15. **ALWAYS UNPLUG THE PLANER WHENEVER MAKING ANY ADJUSTMENTS** that would bring your hands near the cutterhead.
16. **IF AT ANY TIME YOU ARE EXPERIENCING DIFFICULTIES PERFORMING THE INTENDED OPERATION, STOP USING THE PLANER!** Then contact our service department or ask a qualified expert how the operation should be performed.

## **WARNING**

Like all power tools, there is danger associated with planers. Accidents are frequently caused by lack of familiarity or failure to pay attention. Use this tool with respect and caution to lessen the possibility of operator injury. If normal safety precautions are overlooked or ignored, serious personal injury may occur.

## **CAUTION**

No list of safety guidelines can be complete. Every shop environment is different. Always consider safety first, as it applies to your individual working conditions. Use this and other machinery with caution and respect. Failure to do so could result in serious personal injury, damage to equipment or poor work results.


# SECTION 2: CIRCUIT REQUIREMENTS

## 220V Single-Phase

The Model G5850Z/G5851Z/G0544 is prewired with a 5 HP single-phase motor. Under normal use, this motor draws approximately 28 amps at 220V. We recommend using a 40 amp circuit. This includes the appropriate wiring and circuit breaker. If frequent circuit failure occurs when using the planer, contact our service department.

The planer must be connected to its own dedicated 40A circuit. It should not share a circuit with any other machine. A standard 2-pole breaker is necessary for use with the planer.

We recommend using a NEMA-style L6-50 plug and outlet similar to that in **Figure 1**. You may also “hard-wire” the planer directly to your panel, provided you place a disconnect near the machine. Check the electrical codes in your area for specifics on wiring requirements.

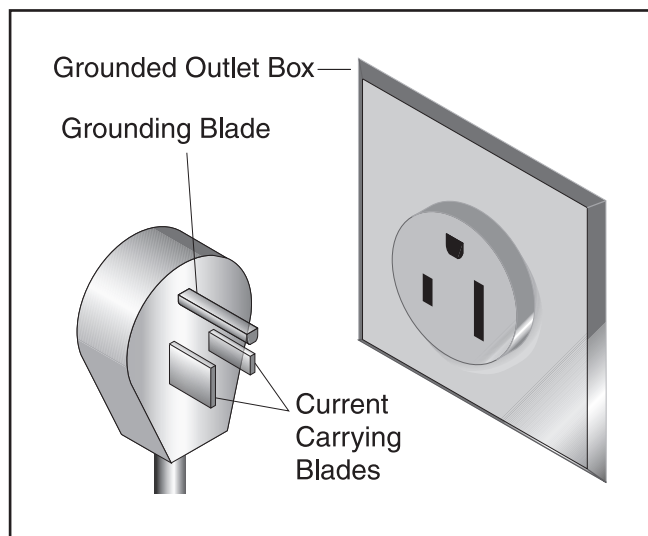

**Figure 1.** Typical plug configuration for 220V, single-phase operation.




## 220V 3-Phase

The Model G7213Z Planer is prewired with a 7½ HP 3-phase motor. Under normal use, the motor draws approximately 22 amps at 220V. We recommend using a 25 amp circuit. This includes the appropriate wiring and circuit breaker. If frequent circuit failure occurs when using the planer, contact our service department.

The planer must be connected to its own dedicated 25A circuit. It should not share a circuit with any other machine. A standard 3-pole breaker is necessary for use with 3-phase power.

We recommend using a NEMA-style L15-30 plug and outlet similar to that in **Figure 2**. You may also “hard-wire” the planer directly to your panel, provided you place a disconnect near the machine. Check the electrical codes in your area for specifics on wiring requirements.

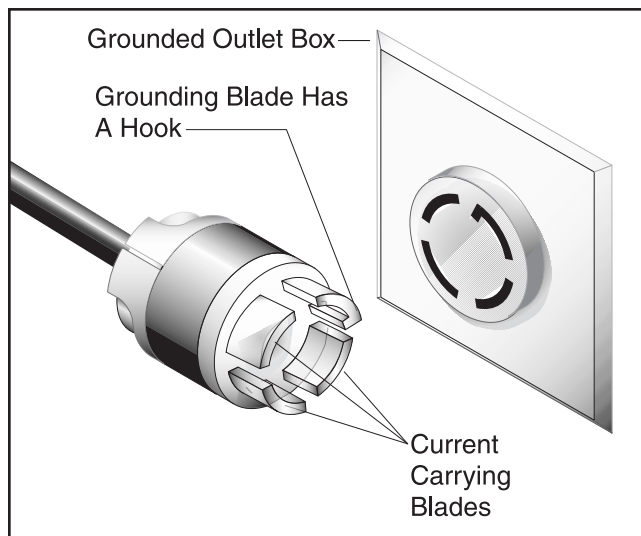

**Figure 2.** Typical plug configuration for 220V, 3-phase operation.




# Grounding

---

---

In the event of an electrical short, grounding reduces the risk of electric shock by providing a path of least resistance to disperse electric current. This tool is equipped with an electric cord that has an equipment-grounding conductor which must be properly connected to a grounding plug. The plug must be plugged into a matching outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Improper connections of the electrical-grounding conductor can result in the risk of electric shock. The conductor with green or green and yellow striped insulation is the electrical-grounding conductor. If repair or replacement of the electric cord or plug is necessary, do not connect the equipment grounding conductor to a live terminal.

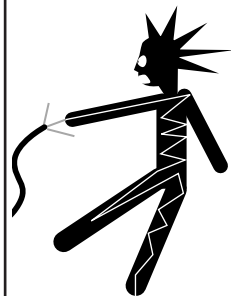	<p><b>⚠️ WARNING</b> This equipment must be grounded. Verify that any existing electrical outlet and circuit you intend to plug into is actually grounded. Under no circumstances should the grounding pin from any three-pronged plug be removed. Serious injury may occur.</p>
--	--

# Extension Cords

---

---

We do not recommend the use of extension cords on 220V equipment. It is much better to arrange the placement of your equipment and the installed wiring to eliminate the need for extension cords. Should it be necessary to use an extension make sure the cord is rated Hard Service (grade S) or better. Refer to the chart in *Section 1: Safety* to determine the minimum gauge for the extension cord. The extension cord must also contain a ground wire and plug pin. Always repair or replace extension cords when they become worn or damaged.





# SECTION 3: GENERAL INFORMATION

## Commentary

Grizzly Industrial, Inc. is proud to offer the Professional Series Planers. These planers are part of Grizzly's growing family of fine woodworking and metalworking machinery. When used according to the guidelines stated in this manual, you can expect years of trouble-free, enjoyable operation.

The Models G0544, G5850Z, G5851Z & G7213 Professional Series Planers are the same machine with the exception of motor size, electrical phase and cutterhead differences. Please refer to the chart below to distinguish planer differences.

These planers are intended for heavy-duty professional use and are capable of operating at 5200 RPM with a 17-26 FPM variable feed rate.


We are also pleased to provide this manual with the Models G0444, G5850Z, G5851Z & G7213 Professional Series Planers. It was written to guide you through assembly, review safety considerations, and cover general operating procedures. If you have any criticisms that you feel we should address in our next printing, please write to us at the address below:

Grizzly Industrial, Inc.  
 % Technical Documentation  
 P.O. Box 2069  
 Bellingham, WA 98227

Most important, we stand behind our machines. We have an excellent Service Department at your disposal should the need arise. If you have any service questions or parts requests, please call or write to us at the location listed below.

Grizzly Industrial, Inc.  
 1203 Lycoming Mall Circle  
 Muncy, PA 17756  
 Phone:(570) 546-9663  
 Fax:(800) 438-5901  
 E-Mail: techsupport@grizzly.com  
 Web Site: <http://www.grizzly.com>

The specifications, drawings, and photographs illustrated in this manual represent the Professional Series Planers as supplied when the manual was prepared. However, owing to Grizzly's policy of continuous improvement, changes may be made at any time with no obligation on the part of Grizzly. Whenever possible, though, we send manual updates to all owners of a particular tool or machine. Should you receive one, we urge you to insert the new information with the old and keep it for reference.

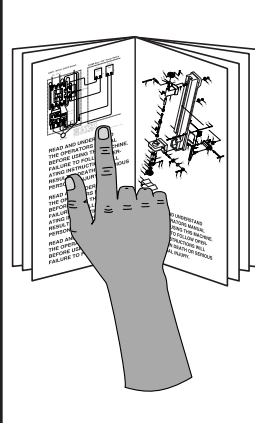


### ⚠ WARNING

**Read the manual before assembly and operation. Become familiar with the machine and its operation before beginning any work. Serious personal injury may result if safety or operational information is not understood or followed.**

Description	G0544	G5850Z	G5851Z	G7213Z
Motor	5 HP	5 HP	5 HP	7½ HP
Phase	1-Phase	1-Phase	1-Phase	3-Phase
Size	20"	20"	24"	24"
Cutterhead	Spiral Cutterhead w/ Indexable Inserts	4-Knife	4-Knife	4-Knife

# Unpacking

The planer base unit and the hardware are shipped from the manufacturer in a carefully packed carton. If you discover the machine is damaged after you have signed for delivery, and the truck and driver are gone, you will need to file a freight claim with the carrier. Save the containers and all packing materials for possible inspection by the carrier or its agent. Without the packing materials, filing a freight claim can be difficult. *If you need assistance determining whether you need to file a freight claim, or with the procedure to file one, please contact our Customer Service.*

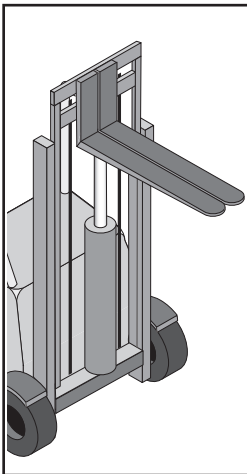

## **!WARNING**

**These planers are heavy machines—1030 lbs. shipping weight. DO NOT over-exert yourself while unpacking or moving your machine. Use power equipment. Serious personal injury may occur if safe moving methods are not followed.**

When you are completely satisfied with the condition of your shipment, you should inventory its parts.




# Piece Inventory

After all the parts have been removed from the carton, you should have:

Part	Qty
• Planer Unit	1
• Dust Hood	1
• Adjustment Handle	1
• Combo Wrench 10/12mm	1
• Combo Wrench 12/14mm	1
• Combo Wrench 17/19mm	1
• Hex Wrench 4mm	1
• Knife Setting Jig	1

In the event that any nonproprietary parts are missing (e.g. a nut or a washer), we would be glad to replace them, or for the sake of expediency, replacements can be obtained at your local hardware store.

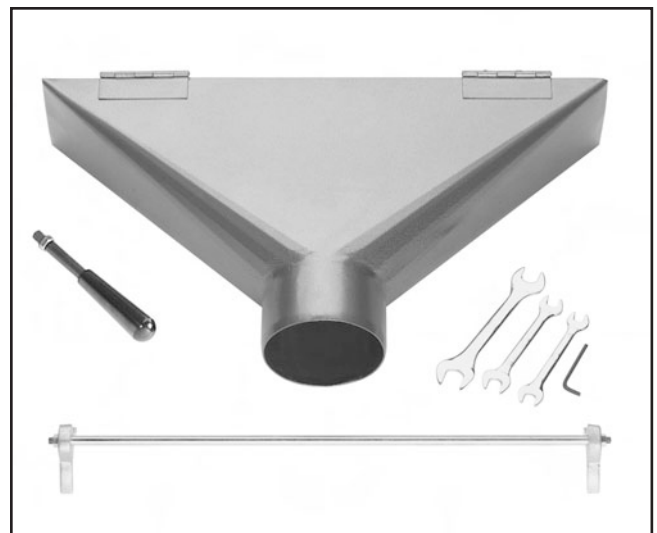

**Figure 3. Loose Parts.**




# Hardware Recognition Chart


Use this chart to match up hardware pieces during the assembly process!

MEASURE BOLT DIAMETER BY PLACING INSIDE CIRCLE


- #10
- 1/4"
- 5/16"
- 3/8"
- 7/16"
- 1/2"

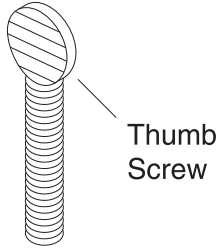


Thumb Screw

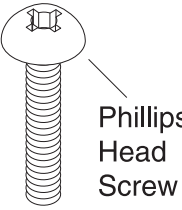


Phillips Head Screw

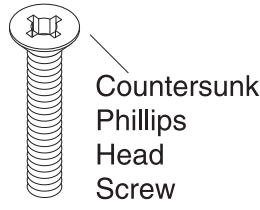


Countersunk Phillips Head Screw

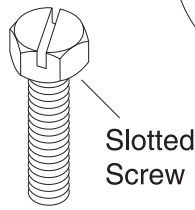


Slotted Screw

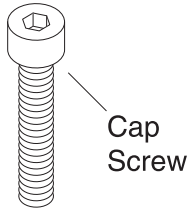


Cap Screw

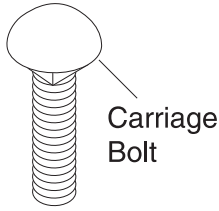

Carriage Bolt

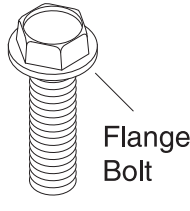


Flange Bolt

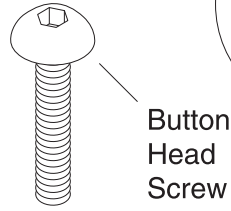


Button Head Screw




Setscrew

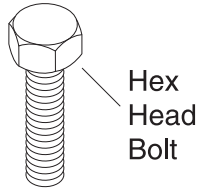


Hex Head Bolt

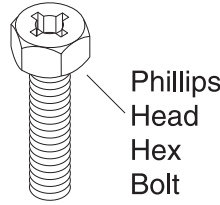

Phillips Head Hex Bolt

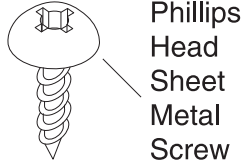


Phillips Head Sheet Metal Screw

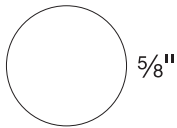




Washer



Lock Washer



Hex Nut

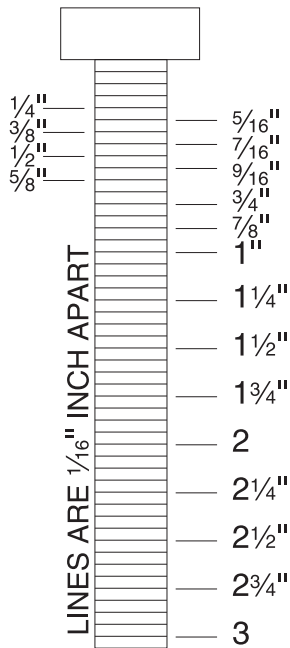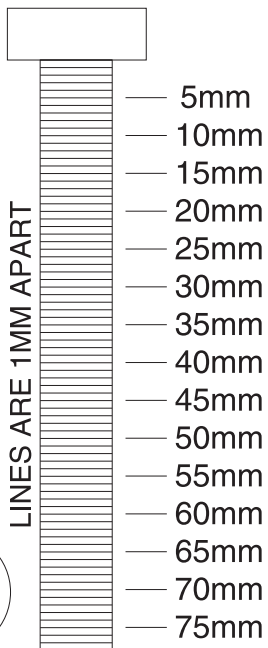

WASHERS ARE MEASURED BY THE INSIDE DIAMETER

WASHER DIAMETER 5/8"

WASHER DIAMETER 9/16"

WASHER DIAMETER 1/2"

WASHER DIAMETER 7/16"

WASHER DIAMETER 12mm

WASHER DIAMETER 10mm

WASHER DIAMETER 8mm

WASHER DIAMETER 4mm

WASHER DIAMETER 3/8"

WASHER DIAMETER 5/16"


WASHER DIAMETER 6mm


WASHER DIAMETER 1/4"

WASHER DIAMETER #10

# Clean Up

The unpainted surfaces are coated with a waxy oil to protect them from corrosion during shipment. Remove this protective coating with a solvent cleaner or citrus-based degreaser such as Grizzly's G7895 Degreaser. To clean thoroughly, some parts may need to be removed. **For optimum performance from your machine, make sure you clean all moving parts or sliding contact surfaces that are coated.** Avoid chlorine-based solvents as they may damage painted surfaces should they come in contact. Always follow the manufacturer's instructions when using any type of cleaning product.

	<p><b>⚠ WARNING</b> Do not use gasoline or other petroleum-based solvents to clean with. They have low flash points which make them extremely flammable. A risk of explosion and burning exists if these products are used.</p>
--	---

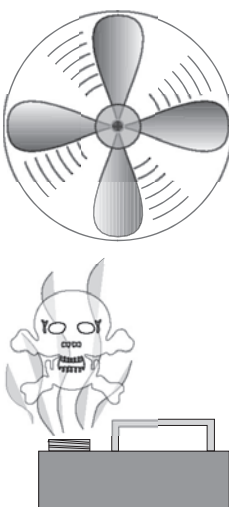	<p><b>⚠ CAUTION</b> Many of the solvents commonly used to clean machinery can be toxic when inhaled or ingested. Always work in well-ventilated areas far from potential ignition sources when dealing with solvents. Use care when disposing of waste rags and towels to be sure they do not create fire or environmental hazards.</p>
---	---

# Site Considerations

## FLOOR LOAD

Your Professional Series Planer represents a very large weight load in a moderate sized footprint. Most commercial shop floors will be adequate for the 1030 lb. weight of the planer. Some floors may require additional support. Contact an architect or structural engineer if you have any question about the ability of your floor to handle the weight.

## WORKING CLEARANCES

Working clearances can be thought of as the distances between machines and obstacles that allow safe operation of every machine without limitation. Consider existing and anticipated machine needs, size of material to be processed through each machine, and space for auxiliary stands and/or work tables. Also consider the relative position of each machine to one another for efficient material handling. Be sure to allow yourself sufficient room to safely run your machines in any foreseeable operation.

## LIGHTING AND OUTLETS

Lighting should be bright enough to eliminate shadow and prevent eye strain. Electrical circuits should be dedicated or large enough to handle combined motor amp loads. Outlets should be located near each machine so power or extension cords are not obstructing high-traffic areas. Be sure to observe local electrical codes for proper installation of new lighting, outlets or circuits.


	<p><b>⚠ CAUTION</b> Make your shop "child safe." Ensure that your workplace is inaccessible to children by closing and locking all entrances when you are away. Never allow visitors in your shop when assembling, adjusting or operating equipment.</p>
--	--



# SECTION 4: ASSEMBLY

## Beginning Assembly

Most of your Professional Series Planer has been assembled at the factory, but some parts must be assembled or installed after delivery. We have organized the assembly process into steps. Please follow along in the order presented in this section.

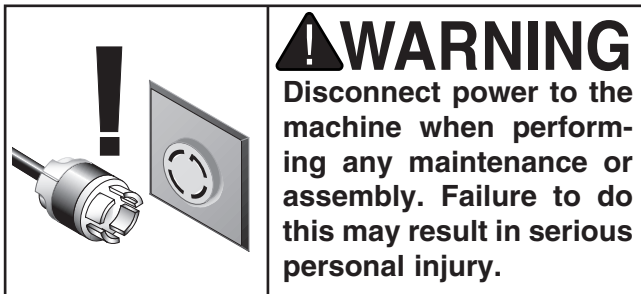

## Dust Hood

A dust hood with a 5" dust port comes with the planer for dust collection purposes. Install the dust hood as shown in **Figure 4** with the hex bolts already mounted to the top of the planer. **Do not use the dust hood if dust collection is not available.**



Figure 4. Dust hood installed.



## Adjustment Handle



An adjustment handle has been provided with the planer for adequate leverage when adjusting the bed rollers.

**To install the adjustment handle:**

1. Screw the adjustment handle into the hub that controls bed roller adjustments.
2. Tighten down the handle lock nut to the hub to keep the handle secure.



# SECTION 5: ADJUSTMENTS

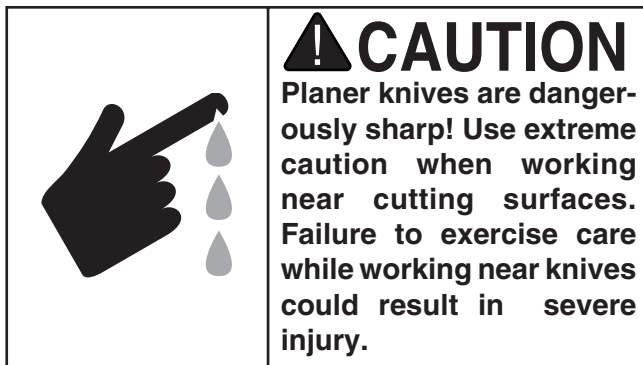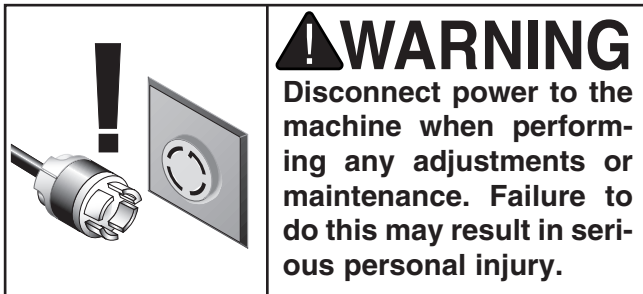

## Adjustment Controls

Figures 5 and 6 point out the primary controls and components that will be used during the adjustment process. Take a few minutes to familiarize yourself with these.

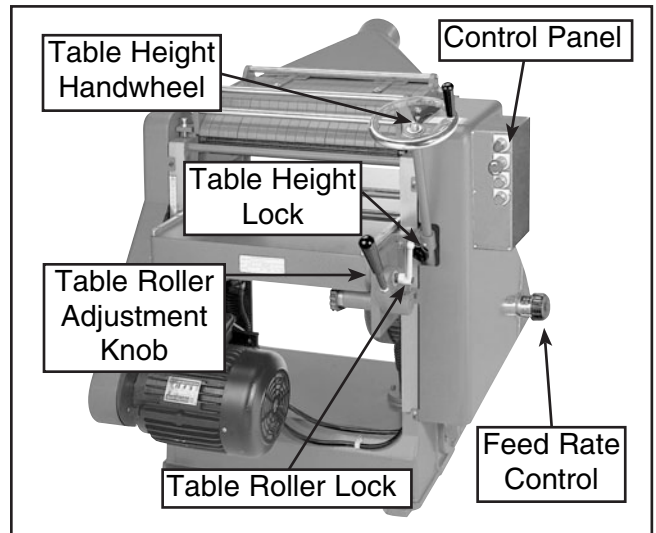


Figure 5. Planer controls.

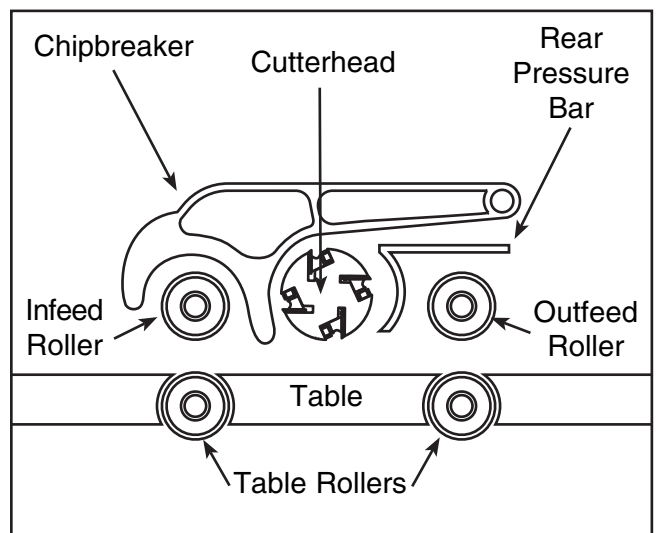


Figure 6. Planer components.




# Cutterhead Knives

The G5850Z, G5851Z & G7213 Professional Series Planers feature 4-knife cutterheads. These knives must be periodically replaced or adjusted. To prolong the sharpness of the knife edges, adjustments should be within .002" from one side to the other. Improperly adjusted knives can unbalance the cutterhead and shorten the bearing life, as well as produce substandard planing results.

To be safe, always test the planer with a scrap piece of wood before using expensive stock.

## To inspect the knife set:

1. **Make sure the planer is unplugged!**
2. Open the top cover to gain access to the cutterhead. Remove the pulley cover from the left side of the machine (this will allow you to rotate the cutterhead without putting your hands near the blades).
3. The knife setting jig has special grooves cut into it that fit the knife edge profile. One end of the jig should be fixed in place and the other end should be loose enough to swivel and match the fixed end.
4. Place the jig on the cutterhead so the grooves catch on the knife edge, keeping the jig in place. If the knife is adjusted right, the feet should touch the cutterhead body on both sides of the knife, and the knife should fit in the special grooves in the jig. Repeat this inspection for the other three knives.

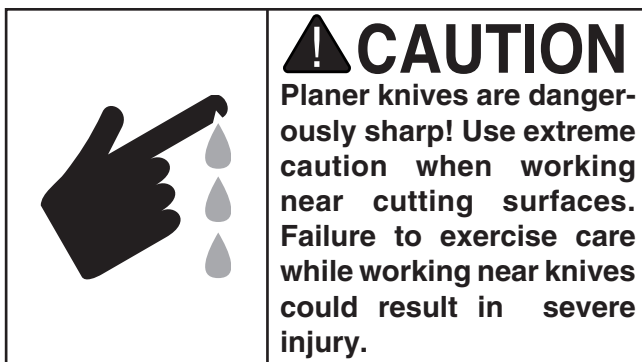

## To adjust the knife set:

1. Before beginning, make sure you have followed **steps 1-4** from the previous knife inspection instructions! See **Figure 7** to familiarize yourself with the components of the cutterhead.
2. Loosen all the gib bolts (work on only one knife at a time). Wear heavy leather gloves or place a rag over the exposed knife to protect your hands if the wrench slips while loosening the gib bolts.
3. Using the holes in the cutterhead body for access, insert a hex wrench into the jack screws as shown in **Figure 8**. These screws will allow you to lower/raise the knife.

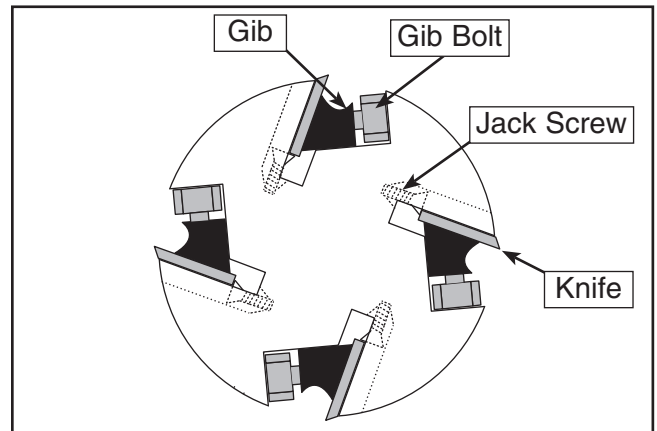


Figure 7. Parts of the cutterhead.



Figure 8. Adjusting knife height.

4. Turn the jack screws with the hex wrench to raise the knife so it barely touches the jig. Perform this adjustment on both sides.
5. Snug, but do not completely tighten, one gib bolt on each side then double check to make sure that the knife did not move. **The back edge of beveled knife edge should never be set below the cutterhead body.**
6. Repeat **steps 2-6** on the other three knives.
7. Now tighten the two center bolts of each of the four knives. Tighten the next two bolts from the center of each knife, and continue tightening the rest of the gib bolts in this manner until all bolts on all four knives have been tightened.

Tightening the gib bolts evenly, two at a time, each knife at a time, will prevent distortion of the cutterhead from over-torquing the gib bolts.

8. Replace all of the removed planer parts and adjust the pressure bar before operating the planer (pressure bar adjustment is covered later in this manual).

### Aftermarket Knife Setting Jigs

To ease the knife adjustment process, consider using Planer Pals<sup>®</sup> shown in **Figure 9** and available in the current Grizzly catalog. Using magnets, a pair of these devices will automatically hold the knife blades within .001" of each other, thereby allowing you to quickly and accurately lock the knife in place.



**Figure 9.** Planer Pal<sup>®</sup>.

	<p><b>! WARNING</b>  <b>Disconnect power to the machine when performing any adjustments or maintenance. Failure to do this may result in serious personal injury.</b></p>
--	---






# Table

To obtain accurate results with your Professional Series Planer, the table must be parallel with the cutterhead. We strongly suggest using a Rotacator® for making adjustments to your planer. This tool is well worth the money, because it provides accuracy to .001" and will save you hours of frustration. Check with the current Grizzly catalog for details.

As an alternative to using a Rotacator®, construct a block of scrap wood to aid in checking the table. The wood block should be rectangular and should have one side that sits flat on the table. Make the block tall enough to leave adequate working room between the table and the cutterhead, but thin enough to fit between the chip deflector and pressure bar.

## To check the table with a Rotacator®:

1. **Make sure the planer is unplugged!**
2. Set the Rotacator® dial to .000". Place the Rotacator® under the cutterhead on one end. Turn the cutterhead so the plunger on the Rotacator® will contact the cutterhead body as shown in **Figure 10**. Raise the table up enough for the cutterhead to get a reading on the dial.

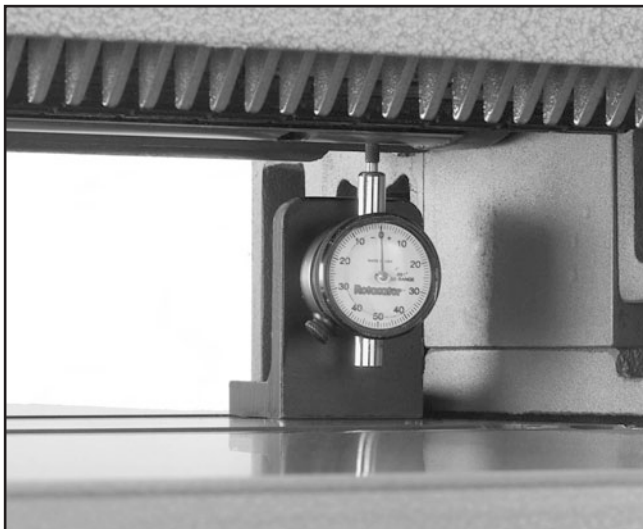


**Figure 10.** Rotacator measuring cutterhead/table for being parallel to each other.

3. Move the Rotacator® back and forth to find bottom dead center on the cutterhead (you will reach bottom dead center when you have the highest reading on the Rotacator®.)
4. Now raise the table up so the Rotacator® reads exactly .050", and set the dial to .000".
5. Move the Rotacator® to the other side of the cutterhead and find bottom dead center. If the difference in either direction of the dial is more than .002", then the table should be adjusted.

## To check the table with the block of wood:

1. **Make sure the planer is unplugged!**
2. Place the block of wood on the table, underneath the cutterhead. Position the block on the left side of the cutterhead as illustrated in **Figure 11**.
3. Raise the table up until the top of the block lightly contacts the bottom of the cutterhead drum.
4. Without moving the table position, slide the block over to the other side.
5. If the block will not fit under the cutterhead or if the gap between the block and the cutterhead exceeds .002" (use a feeler gauge to measure this), the table must be adjusted.

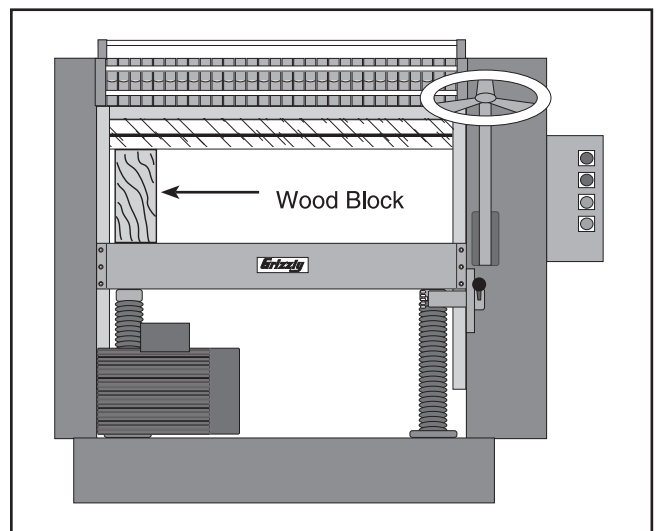


**Figure 11.** Using a wood block to determine if table is parallel with cutterhead body.

### To adjust the table with the Rotacator®:

1. Make sure the planer is unplugged!
2. Set the Rotacator® dial to .000". Place the Rotacator® under the cutterhead on the right-hand side (facing front).
3. Turn the cutterhead so the plunger on the Rotacator® will contact the cutterhead body. Raise the table up enough for the cutterhead to get a reading on the dial.
4. Move the Rotacator® back and forth to find bottom dead center on the cutterhead. (You will reach bottom dead center when you have the highest reading on the Rotacator®.)
5. Adjust the table with the height handwheel to make the dial on the Rotacator® read .050", then set the dial to .000". Move the Rotacator® over to the far left end of the cutterhead and find bottom dead center.
6. Locate the two columns underneath the table. These are covered in flexible rubber sleeves. The column on the left hand side of the machine (from the front) has a clamping collar where it mounts to the table. Loosen the pressure on this clamp and loosen the two mounting bolts that secure the column to the table.
7. Pull the rubber sleeve down to expose the adjustment collar shown in **Figure 11**. Turning this collar counter-clockwise will lower the left side of the table; turning this collar clockwise will raise the left side of the table.
8. Turn the adjustment collar as necessary to make the left side read .050" on the Rotacator dial. Double check the table-to-cutterhead measurement on the right end to make sure it did not move. Adjust as necessary. The Rotacator® will allow you to easily get each end within .002" of each other.
9. When each end is adjusted properly, tighten all of the nuts at the table mount and clamp. Double check the table-to-cutterhead measurement to make sure the table did not move.

### To adjust the table with the wood block:

1. Make sure the planer is unplugged!
2. Place the wood block on the far side of the table where the tightest gap exists between the table and the cutterhead.
3. Raise the table so the cutterhead barely touches the wood block. Slide the wood block to the other end of the table.
4. Locate the two columns underneath the table. These are covered in flexible rubber sleeves. The column on the left hand side of the machine (from the front) has a clamping collar where it mounts to the table. Loosen the pressure on this clamp and loosen the two mounting bolts that secure the column to the table.
5. Pull the rubber sleeve down to expose the adjustment collar shown in **Figure 12**. Turning this collar counter-clockwise will lower the left side of the table; turning this collar clockwise will raise the left side of the table.

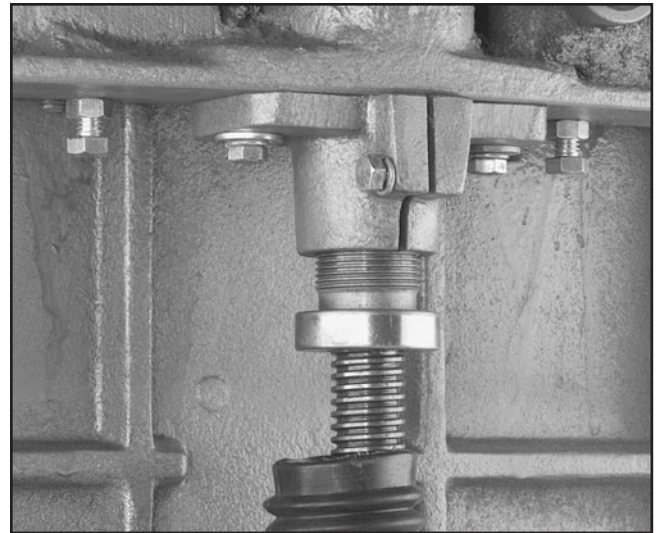

**Figure 12.** Column adjustment flange underneath table.

6. Adjust the table as necessary until each side is equal to or less than .003" from each other. Use a feeler gauge to check the tolerances.
7. Tighten all of the nuts at the table mount and clamp. Double check the table-to-cutterhead measurement to make sure the table did not move.
8. Move the rubber sleeve back to its original position. The rubber sleeves must cover the lifting column to keep fine sawdust from building up in the gear grease.

### Table Gibs

The front of the table is equipped with gibs (**see Figure 13**) to prevent the table from rocking back and forth during operation.

These gibs should be adjusted individually so they are lightly contacting all four surfaces. The gibs should be tight enough to prevent rocking or movement of the table during operation.

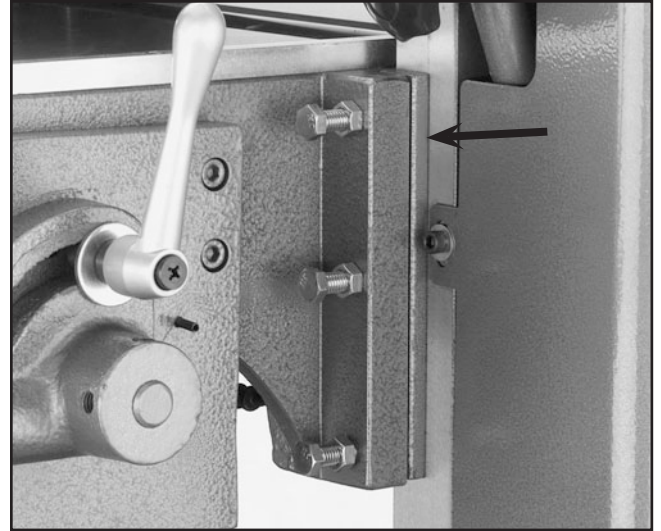


Figure 13. Table gib.



# Feed Rollers, Pressure Bar & Chip Breaker

For most planing applications, the feed rollers, pressure bar, and chipbreaker should be approximately .040" below the knife edge at bottom dead center. **All of these components are factory set. Adjusting them can be a difficult process and is not recommended when the machine is new, unless you are getting unsatisfactory performance.**

Although not required, we recommend using a Rotacator® for the following setup. Check with the current Grizzly catalog for details. Also, remove the cover on the left-hand side of the machine so you can advance the cutterhead with the pulley.

## To set the feed rollers, pressure bar, and chipbreaker with a Rotacator®:

1. **Make sure the planer is unplugged** and the knives are adjusted properly.
2. Place the Rotacator® on the table, underneath the cutterhead. Place the Rotacator® plunger against the body of the cutterhead. Move the Rotacator® back and forth to find bottom dead center.
3. Rotate the cutterhead so a knife edge will push the plunger down as far as it will go before leaving bottom dead center. Set the dial to .000" and lock in place.
4. Move the Rotacator® directly under one side of the feed roller and set the plunger on a bottom dead center edge. With the adjustment screws shown in **Figure 14**, move the feed roller down .040". (The feed roller has two .040" indications on the dial. Do not skip the first one as the needle moves clockwise or your reading will actually be .060".)
5. Repeat **step 4** on each end of each feed roller. Double check for accuracy, then lock the check nuts in place. While doing this, watch the Rotacator® dial to make sure the height setting does not change.

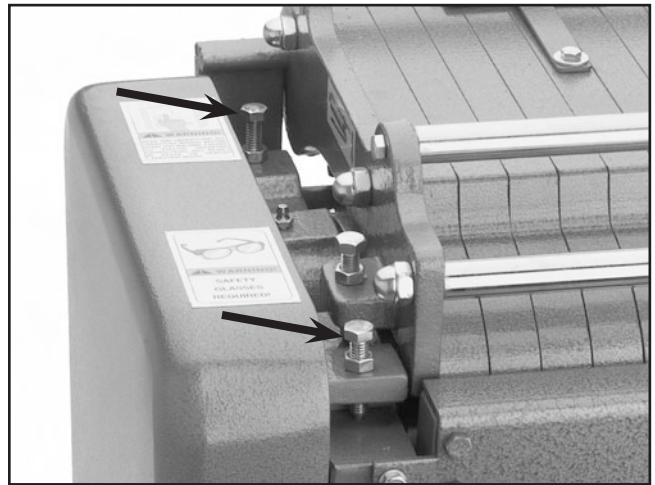


Figure 14. Feed roller adjustment controls

6. Adjust the pressure bar and chip breaker using the same procedure as with the feed rollers. The adjustment controls for each are shown in **Figures 15 and 16**.

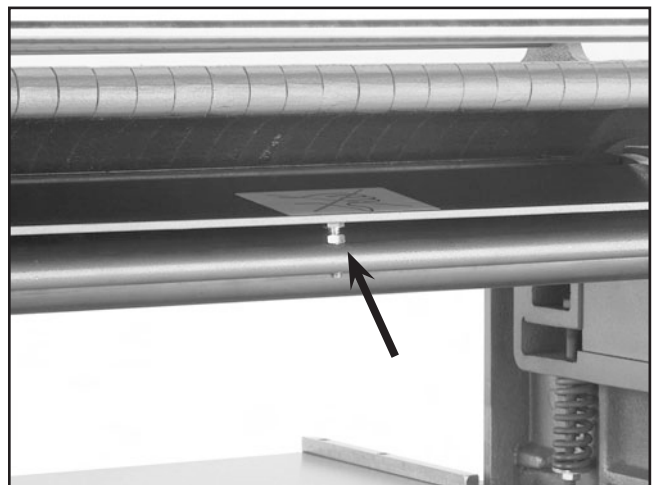


Figure 15. Pressure bar adjustment controls.


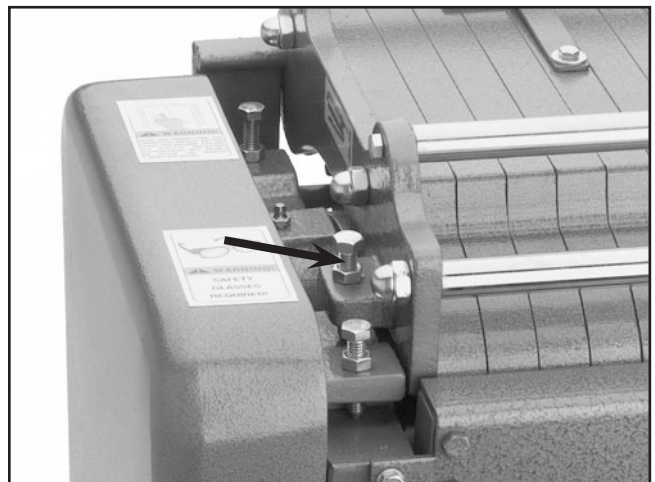


Figure 16. Chip breaker adjustment controls.

**To set the feed rollers and pressure bar using hardwood blocks:**

1. **Make sure the machine is unplugged** and the knives have been set up properly!
2. Obtain a milled piece of hardwood that is within .002" from one side to another in thickness. Rip this piece down the middle. (Two separate boards may also be used if they are within .002" of each other in thickness.)
3. Lower the bed rollers below the surface of the table.
4. Place the boards on each side of the table as shown in **Figure 17**, so each board spans from the front of the table to the back.

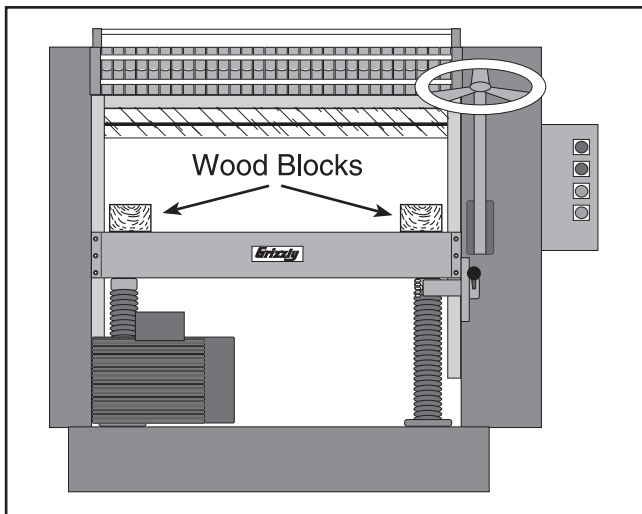


**Figure 17.** Board position on table.

5. Open the top cover. Loosen the feed roller adjustment screws and turn the adjustment bolts on each end to raise the feed roller up approximately 1/2" (enough to be above the bottom-dead-center horizontal plane of the cutterhead knife/insert).
6. Place a sheet of newspaper on each wood block. (This will act as a type of feeler gauge while keeping your hands away from the sharp knife edges.) Raise the table close to the knife/insert edge. Continue raising the table while constantly checking for resistance on the newspaper. When you get a medium drag between the knife edge and the wood block, stop raising the table and remove the newspaper.

Because the table position is nearly even with the knife edge, it will now be your reference point from which to make the other adjustments.

7. Lower the feed rollers so they rest on the wood blocks. Back the adjustment bolts out another 1/8" (approximately).
8. Notice the position of your pointer on the table height scale (shown in **Figure 18**). Lower the table approximately 1mm on this scale (this is very close to .040").

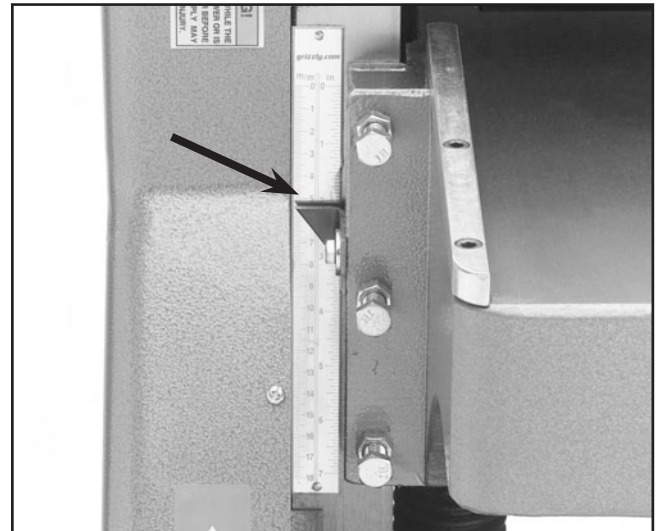

**Figure 18.** Table height scale and pointer.

9. Tighten the check nuts while holding the adjustment bolts in place so they do not move.
10. Adjust the pressure bar stop bolt so the pressure bar rests on the wood blocks.
11. Tighten the check nut to keep the pressure bar stop bolt in place.

The feed rollers and pressure bar should now be approximately .040" below the knife edge.

## NOTICE

The settings described here are to be used as a guide and are not absolute. Raising or lowering feed rollers/pressure bar for different types of stock may increase the quality of your finished results.




# Table Rollers

After completing the table adjustments, set the table rollers. The height of the table rollers will vary, depending on the type of material you intend to plane. When planing rough stock, you will need to set the rollers high to keep the lumber from dragging along the table. Milled lumber should be planed with the rollers set lower.

## To adjust the table rollers:


1. Loosen the lock on the adjustment lever shown in **Figure 18**. Moving the lever up will raise the table rollers up.

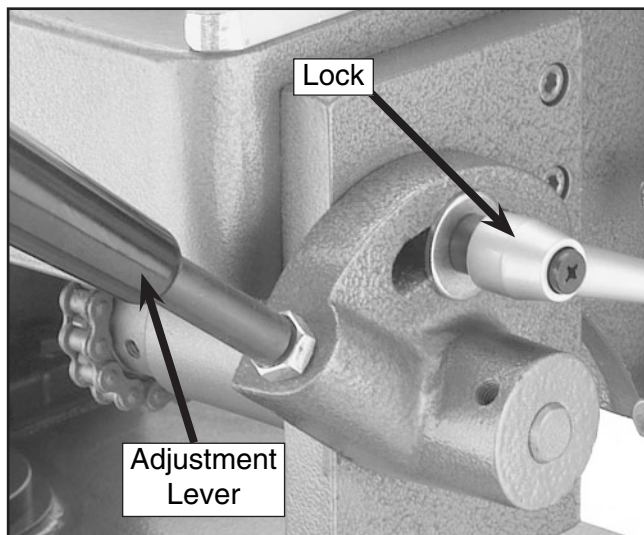

**Figure 18.** Roller height adjustment controls.

2. Determine the appropriate height for the type of stock you are using. The ideal tolerance for the height of the bed rollers is between .002"-.016". If the bed rollers are too high, snipe or chipping may occur at the ends of the workpiece. Only use the higher settings for rough cut lumber. If you are unsure about which height to use, experiment on scrap lumber through trial and error. Always start at smaller tolerances and work up.
3. Place a high quality straightedge across the length of the table. Raise and lock the table rollers and use a feeler gauge to measure the distance between the bottom of the straightedge and the table.


If you have a Rotacator<sup>®</sup>, place it on the table with the plunger against the table surface. Set the dial to 0. Move it back and forth over the table roller to find top dead center.

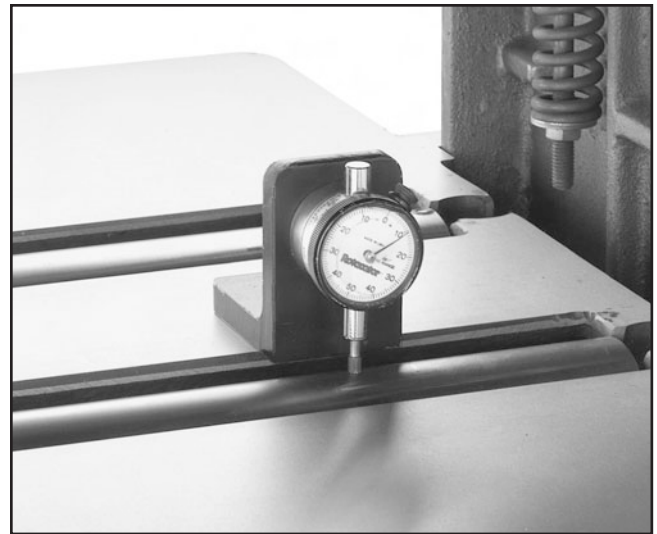

**Figure 19.** Rotacator<sup>®</sup> on bed rollers.

4. Adjust the roller height until it is satisfactory for your particular situation.

The first time you set your table rollers, and periodically after that, check the roller height at both ends of the table. If one roller is more than .016" different in height than the other roller, then the roller adjustment equipment needs to be corrected. The adjustment bolts shown in **Figure 20** allow you to move one end of the rollers to correct this situation.

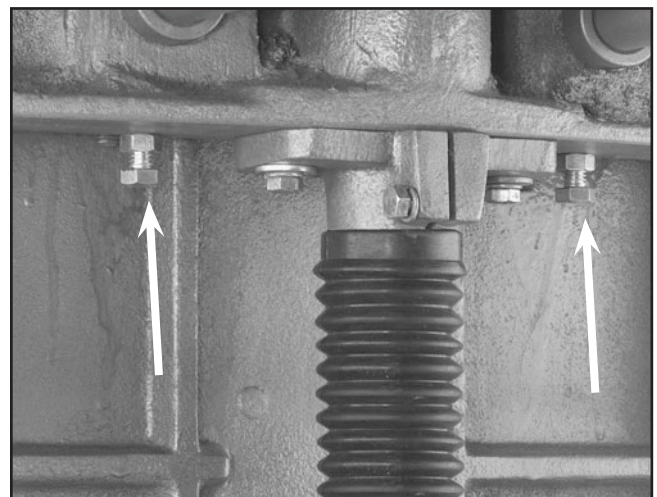

**Figure 20.** Roller adjustment bolts.



# Feed Roller Tension


---

---

The spring tension on the feed rollers is factory set and should require no initial adjustments, unless needed for a special type of stock. If a situation develops where the workpiece does not feed straight, adjustments to one roller may be necessary. Usually if the board is moving more to one side, that side needs less pressure.

Open the top cover of the planer and locate the adjustment bolts attached to springs (shown in **Figure 21**). Loosen the lock nuts and turn the bolts clockwise to lower the feed rollers and counter-clockwise to raise the feed rollers.

In general, rough stock or deeper cuts require more feed rate pressure (spring tension). Shallow cuts need less feed rate pressure. Too much pressure increases snipe. Often the best way to find a setting that is right for your application is through trial and error.

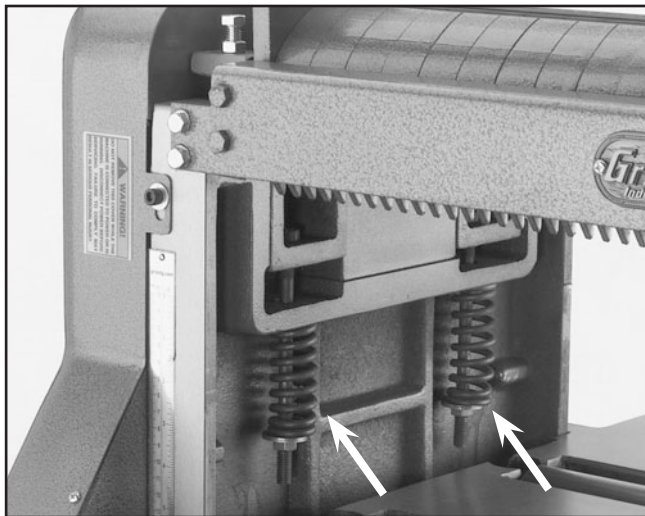

**Figure 21.** Feed roller spring tension bolts.



# Test Run

---

---


Once assembly is complete and adjustments are done to your satisfaction, you are ready to start the machine.

Turn on the power supply at the main panel. Press the *START* button. Make sure that your finger is poised on the *STOP* button, just in case there is a problem. The planer should run smoothly with little or no vibration or rubbing noises. Strange or unnatural noises should be investigated and corrected before operating the machine further.



Run the planer for a short time to ensure that the moving parts are working properly with no excessive vibration. If any problem develops, correct it before attempting to use the machine.

If you cannot locate the source of unusual noises or cannot fix any problems that arise, immediately contact our service department for help.

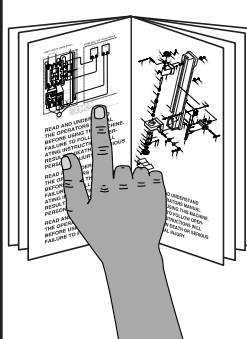

	<p><b>!WARNING</b></p> <p>Read the entire manual before making any cuts with your planer. Serious personal injury may result if safety or operational information is not understood or followed.</p>
--	--

# SECTION 6: OPERATIONS

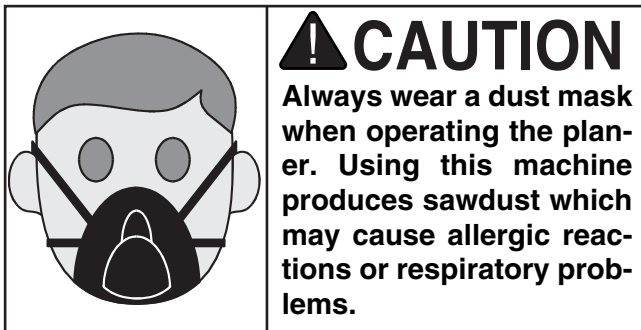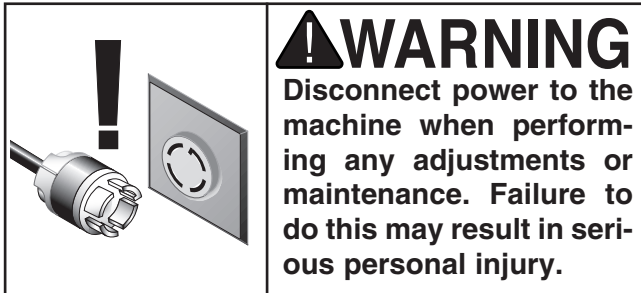

## NOTICE

The following section is designed to give instructions on the basic operations of this planer. However, it is in no way comprehensive of every planer application. WE STRONGLY RECOMMEND that you read books, trade magazines, or get formal training to maximize the potential of your planer.

## Operation Controls

Familiarize yourself with the planer controls before turning the machine *ON*. See **Figures 22 and 23**.

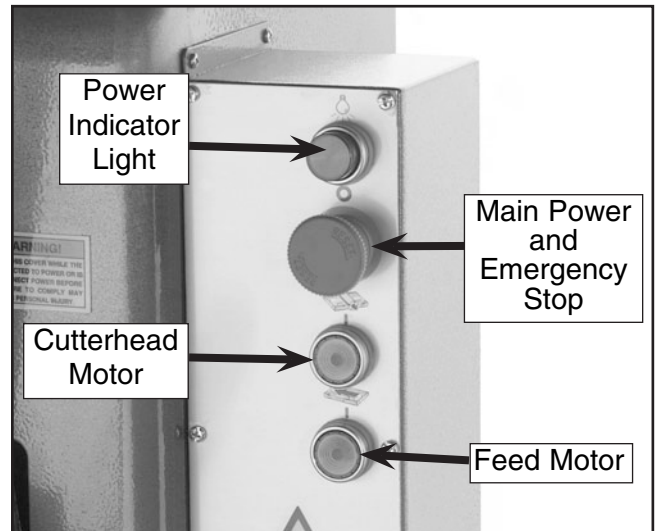


Figure 22. Control panel.

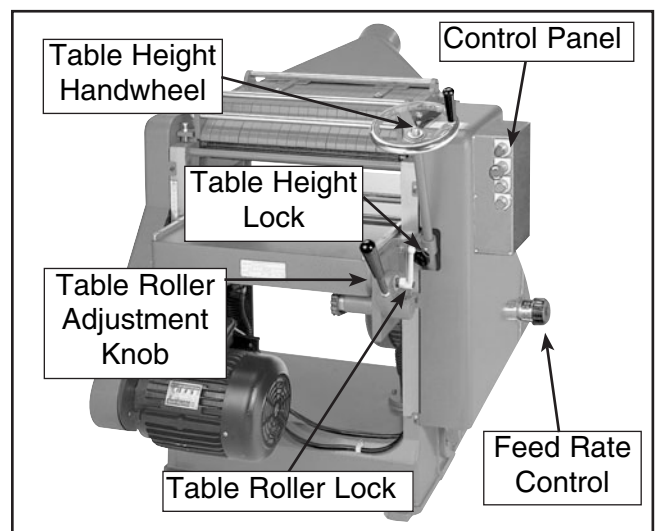


Figure 23. Planer controls.






---

---

# Feed Rate

The Professional Series Planers offer variable feed rates between 17 and 26 FPM. Turning the feed control knob (**Figure 24**) clockwise will increase the feed rate and turning counter-clockwise will decrease the feed rate.

**In order to assure maximum belt life, only adjust the feed rate while the feed motor is moving!**

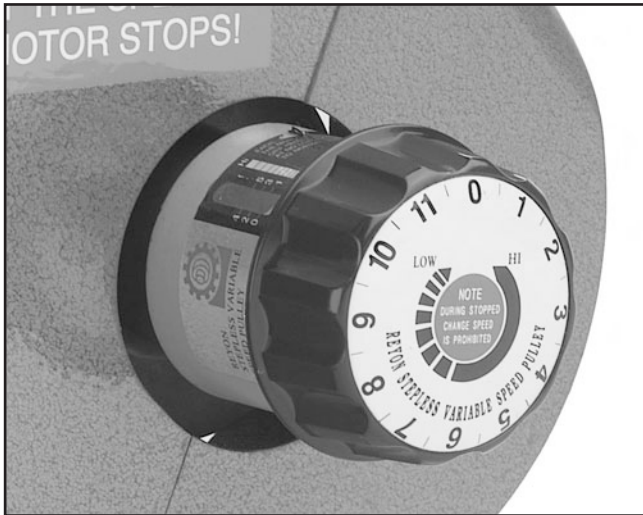

**Figure 24.** Variable speed control knob.



---

---

# Operational Tips

- Inspect lumber for defects, warping, cupping, twisting, and for foreign objects (nails, staples, imbedded gravel, etc.). If you have any question about the quality of your lumber, do not use it. Remember, wood stacked on a concrete floor can have small pieces of stone or concrete pressed into its surface.
- Use the full width of the planer. Alternate between the left, the right and the middle when feeding lumber into the planer. Your knives will remain sharp much longer.
- Scrape all glue off of joined boards before planing.
- Plane **ONLY** natural wood fiber. No wood composites.
- Surface wood with the grain. **NEVER** feed end-cut or end-grained lumber into your planer.
- Do not use boards with knots, splits, cross-grain or other obvious blemishes or defects. They can damage the machine and they pose the possibility of operator injury.
- Keep your work area clear.
- Avoid planing wood with a high water content. Wood with more than 20% moisture content or wood exposed to rain or snow will plane poorly and cause excessive wear to the knives and the motor. Excess moisture can also hasten rust and corrosion.
- During operation, always use the table height lock knob for consistent and accurate results.
- Always true any cupped or warped stock on a jointer before planing.



# Wood Characteristics

---

---

The species of wood, as well as condition, will affect planing ability—the harder the wood, the more difficult it will be to plane. We have included a list of wood characteristics you may encounter when planing. The following descriptions of defects will give you some possible answers to problems you may encounter while planing different materials.

**Chipped Grain (Tear Out)** — Usually a result of cutting against the grain, or planing wood with knots or excessive amount of crossgrain. Chipped grain can also be caused by dull knives or a misaligned chipbreaker. Often, chipped grain can be avoided by slowing down the feed rate and by taking shallow cuts. If those options do not work, inspect your lumber and determine if its grain pattern is causing the problem. If the wood does not show substantial crossgrain, unplug the planer and inspect your knives for sharpness and inspect the chipbreaker for proper alignment.

**Fuzzy Grain (Raised Grain)** — Usually caused by surfacing lumber with too high of a moisture content. Sometimes fuzzy grain is a characteristic of wood such as basswood. Fuzzy grain can also be caused by dull knives or an incorrect grinding bevel. Check with a moisture meter. If moisture is greater than 20%, sticker the wood and allow it to dry. Otherwise, inspect the knife condition.

**Glossy Surface** — Usually caused by dull knives taking shallow cuts at a slow feed speed. Surface gloss will usually be accompanied by overheating. Often lumber will be scorched, and eventually, damage to knives will occur. If knives are sharp upon inspection, increase feed speed or cutting depth.

**Snipe** — Occurs when board ends have more material removed than the rest of the board. Usually caused when one or both of the bed rollers are set too high. Can also be caused by the chipbreaker or pressure bar being set too high. However, a small amount of snipe is often inevitable.

Snipe can be minimized by proper adjustment of

the planer components, but complete removal of snipe is unlikely. More likely, you will be able to reduce it to a tolerance of .002". If snipe under that level is a problem, consider planing lumber longer than your intended work length and cut off the excess after planing is completed, or consider sanding.

**Uneven Knife Marks** — Uneven knife marks can occur when the chipbreaker is set too high. Inspect cutterhead bearings if re-adjustment of the chipbreaker fails to remedy the situation.

**Chatter Marks** — Usually caused by incorrect chipbreaker and pressure bar setting heights. Chatter marks can also be caused by running a narrow wood piece through the planer at either the right or left end of the cutterhead. Chatter, like uneven knife marks, will show in the form of a “washboard” look. Chatter marks are more likely to be inconsistent in appearance than uneven knife marks.

**Wavy Surface** — Caused by poor knife height adjustment, wavy surface appears when one knife is taking deeper cuts than the rest of the knives. Remedy by resetting the knives to a tolerance within .001" from one end to the other.

**Pitch & Glue Build-Up** — Glue and resin build-up on the rollers and cutterhead will cause overheating by decreasing cutting sharpness while increasing drag in the feed mechanism. The result can include scorched lumber as well as uneven knife marks and chatter.

**Chip Marks** — Occur when chips are not properly expelled from the cutterhead. The knives catch the chips and drag them across the lumber being planed. Chips tend to be random and non-uniform (compared to chipped grain). This problem can be caused by exhaust blockage or too much room between the cutterhead and the chip deflector. Inspect the chip deflector and re-adjust the spring tension. Also, using a dust collection system with the planer can help reduce chip marks.



# SECTION 7: MAINTENANCE



## General

Regular periodic maintenance on your Professional Series Planer ensures its optimum performance. Make a habit of inspecting your planer each time you use it.

Check for the following conditions and repair or replace when necessary.

- Loose mounting bolts.
- Worn switch.
- Worn or damaged cords and plugs.
- Damaged V-belt.
- Any other condition that could hamper the safe operation of this machine.



## Cleaning

**Regularly** blow out cabinet, feed rollers, chip breakers and cutterhead with compressed air (always wear a dust mask when doing this) and keep the dust port clear.



## Table

The table and other non-painted surfaces on the Professional Series Planer should be protected against rust and pitting. Wiping the table clean after every use ensures that wood dust is not allowed to trap moisture against bare metal surfaces.


Tables can be kept rust-free with regular applications of products like Boeshield® T-9. For long term storage you may want to consider products like Kleen Bore's Rust Guardit™.



## Lubrication

The Professional Series Planers have four lubrication points that need to be lubricated according to planer usage. Always lubricate more often under dusty/dirty conditions. As a general rule, lubricate as follows:


1. **Cutterhead Grease Fittings** — Once a week for heavy use; once a month for moderate use. See **Figure 25** for grease fitting location.

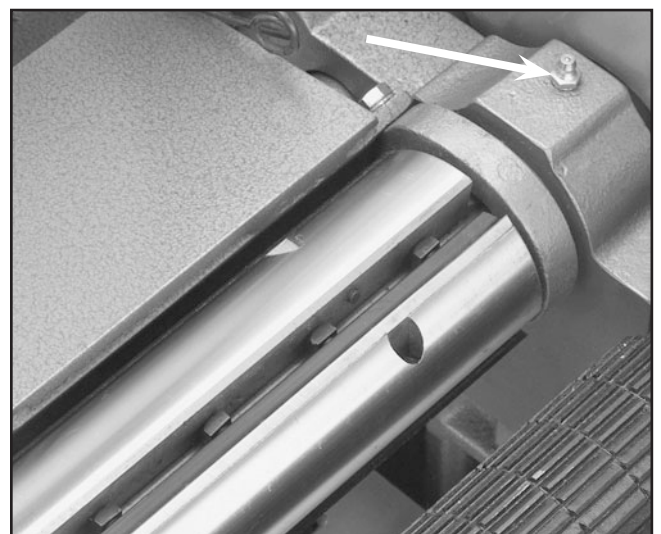


**Figure 25.** Grease fitting.

2. **Spur/Table Lifting Gears** — Clean and regrease as determined by visible inspection for dust or grime in the grease. See **Figures 26 and 27** for gear locations.

**Always wipe off excess grease from all locations after lubricating!**

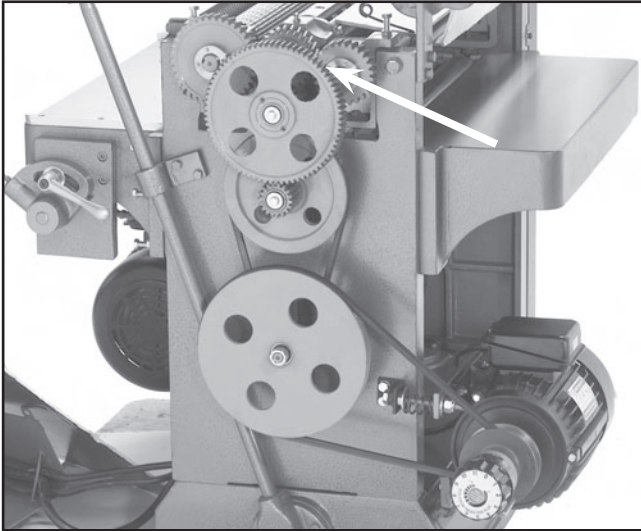

**Figure 26.** Location of spur gears.

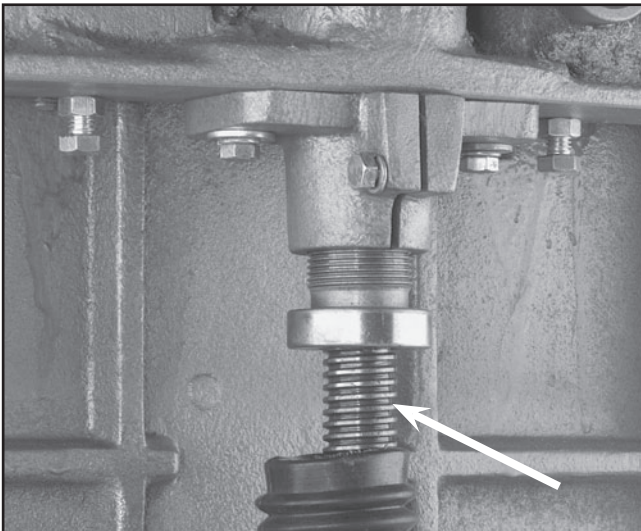

**Figure 27.** Pull down rubber boots under the table to expose the worm gears that raise and lower the table.

3. **Table Gibs** — Clean and grease gibs where they slide against the planer body as needed per visual inspection.




## V-Belt

Avoid getting grease or oil on the V-belts or pulleys. Check the V-belts, as part of a monthly inspection for proper tension and belt condition. Cracking and glazing could result in belt failure. Replace the belt if such conditions appear.

**Once a year**, under normal conditions, replace the V-belt.

To loosen/tighten belt tension, use the adjustment nuts shown in **Figure 28**.

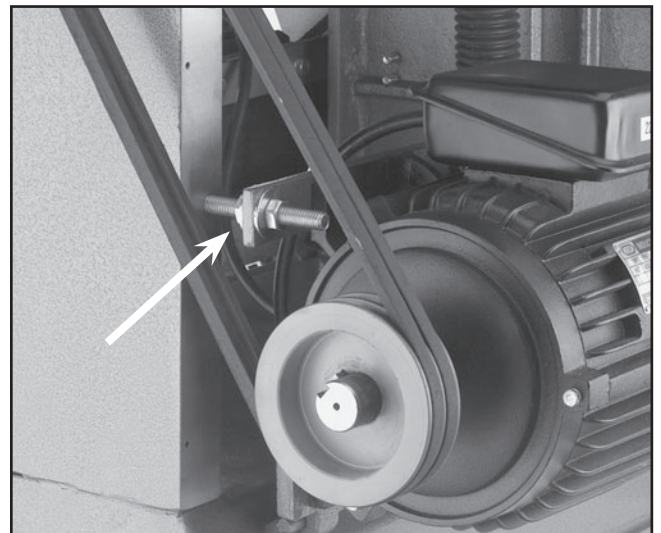

**Figure 28.** Adjust feed motor V-belt here.



# Indexable Inserts (G0544)

The G0544 has a spiral cutterhead with 96 indexable inserts. Each cutter can be rotated to reveal any one of its four cutting edges. Therefore, if one cutting edge becomes dull or damaged, simply rotate it 90° to reveal a fresh cutting edge (**Figure 29**).

In addition, each cutter has a reference dot on one corner. As the cutter is rotated, the reference dot location can be used as an indicator of which edges are used and which are new. When the reference dot revolves back around to its starting position, the cutter should be replaced.


### To rotate or change a carbide cutter:

1. DISCONNECT THE PLANER FROM THE POWER SOURCE!
2. Remove any sawdust from the head of the carbide cutter Torx screw.
3. Remove the Torx screw and carbide cutter.
4. Clean all dust and dirt off the cutter and the cutterhead pocket from which the cutter was removed, and replace the cutter so a fresh, sharp edge is facing outward.


**Note:** Proper cleaning is critical to achieving a smooth finish. Dirt or dust trapped between the cutter and cutterhead will slightly raise the cutter, and make a noticeable marks on your workpieces the next time you plane.

5. Lubricate the Torx screw threads with a light machine oil, wipe the excess oil off the threads, and torque the Torx screw to 48-50 inch/pounds.

**Note:** Excess oil may squeeze between the cutter and cutterhead, thereby lifting the cutter slightly and affecting workpiece finishes.

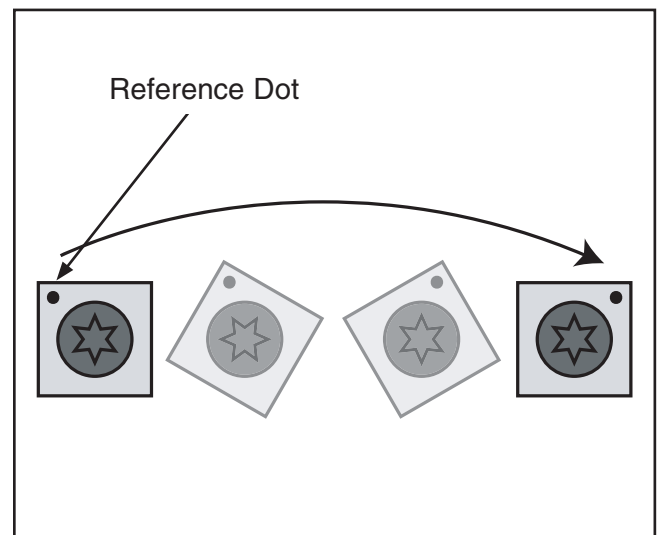

**Figure 29.** Cutter rotating sequence.

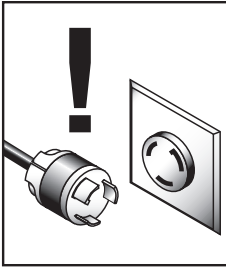



# WARNING

Keep power disconnected from machine when performing any wiring to the machine, or serious personal injury may result!

SINGLE-PHASE  
220V POWER SOURCE

G5850Z  
G5851Z  
G0544

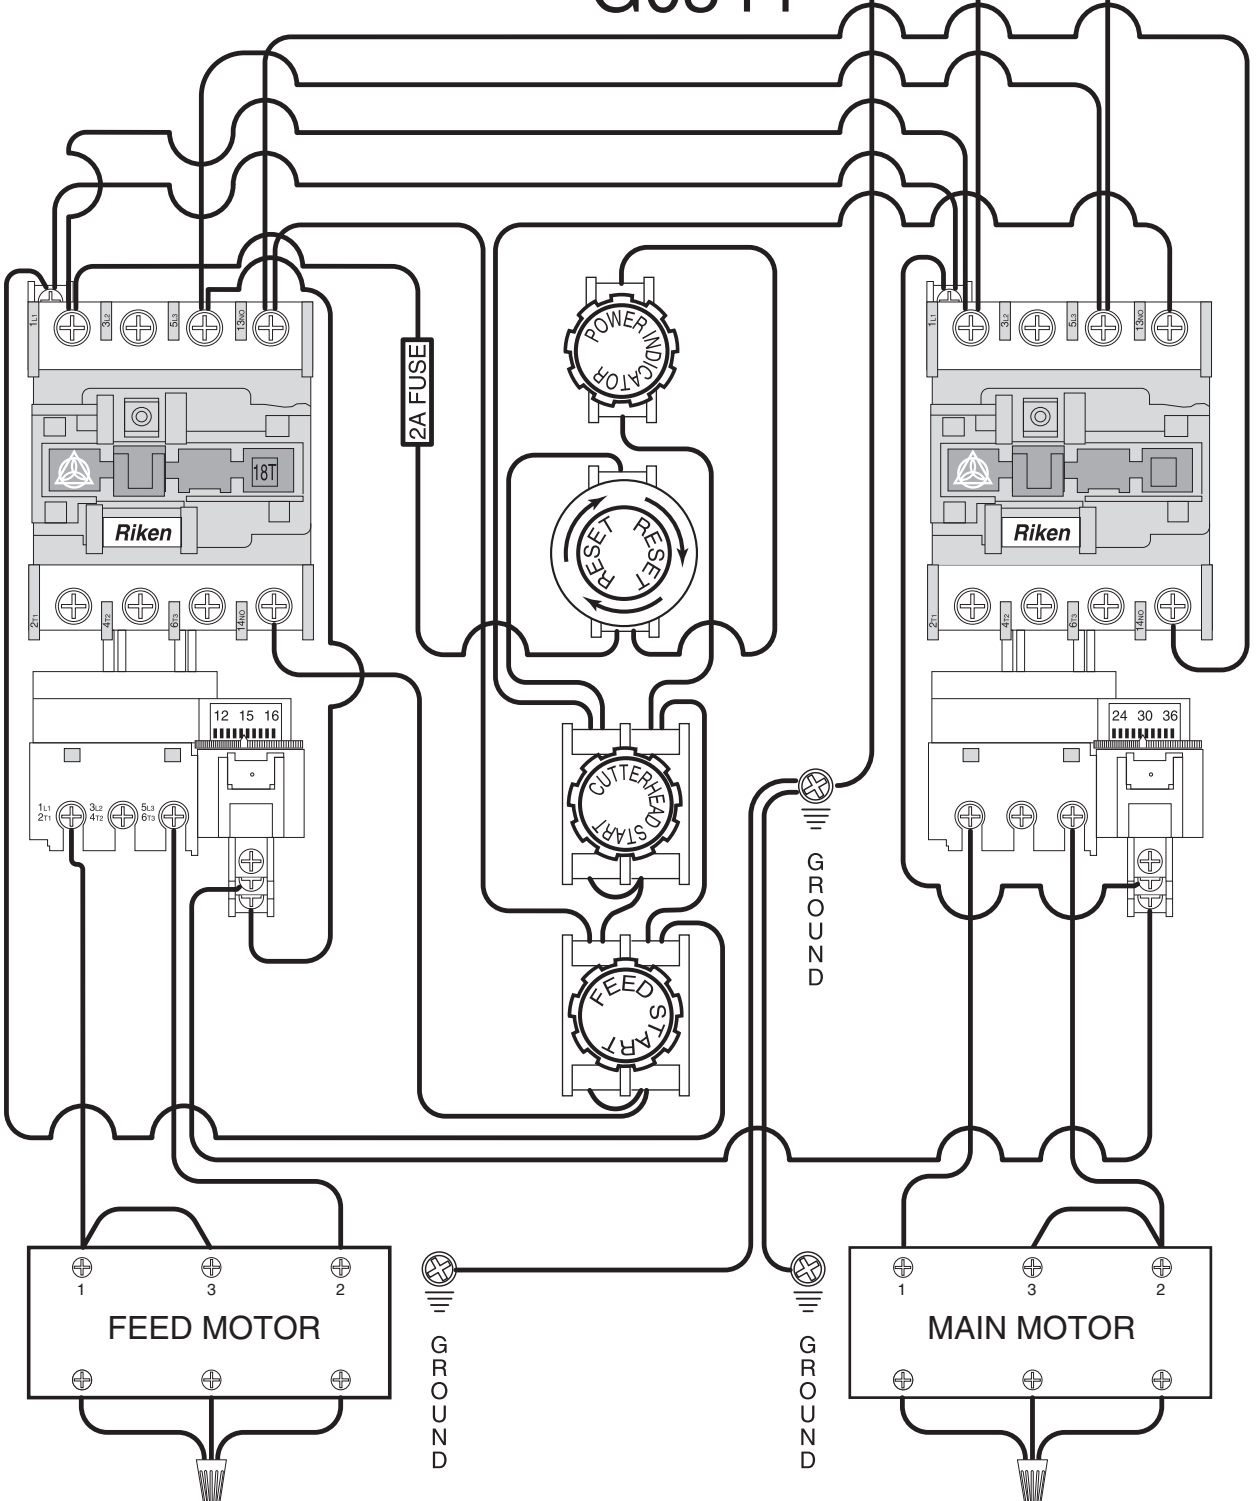


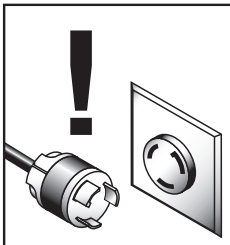

**⚠️ WARNING**  
 Keep power disconnected from machine when performing any wiring to the machine, or serious personal injury may result!

3-PHASE  
 220V POWER SOURCE

G7213Z

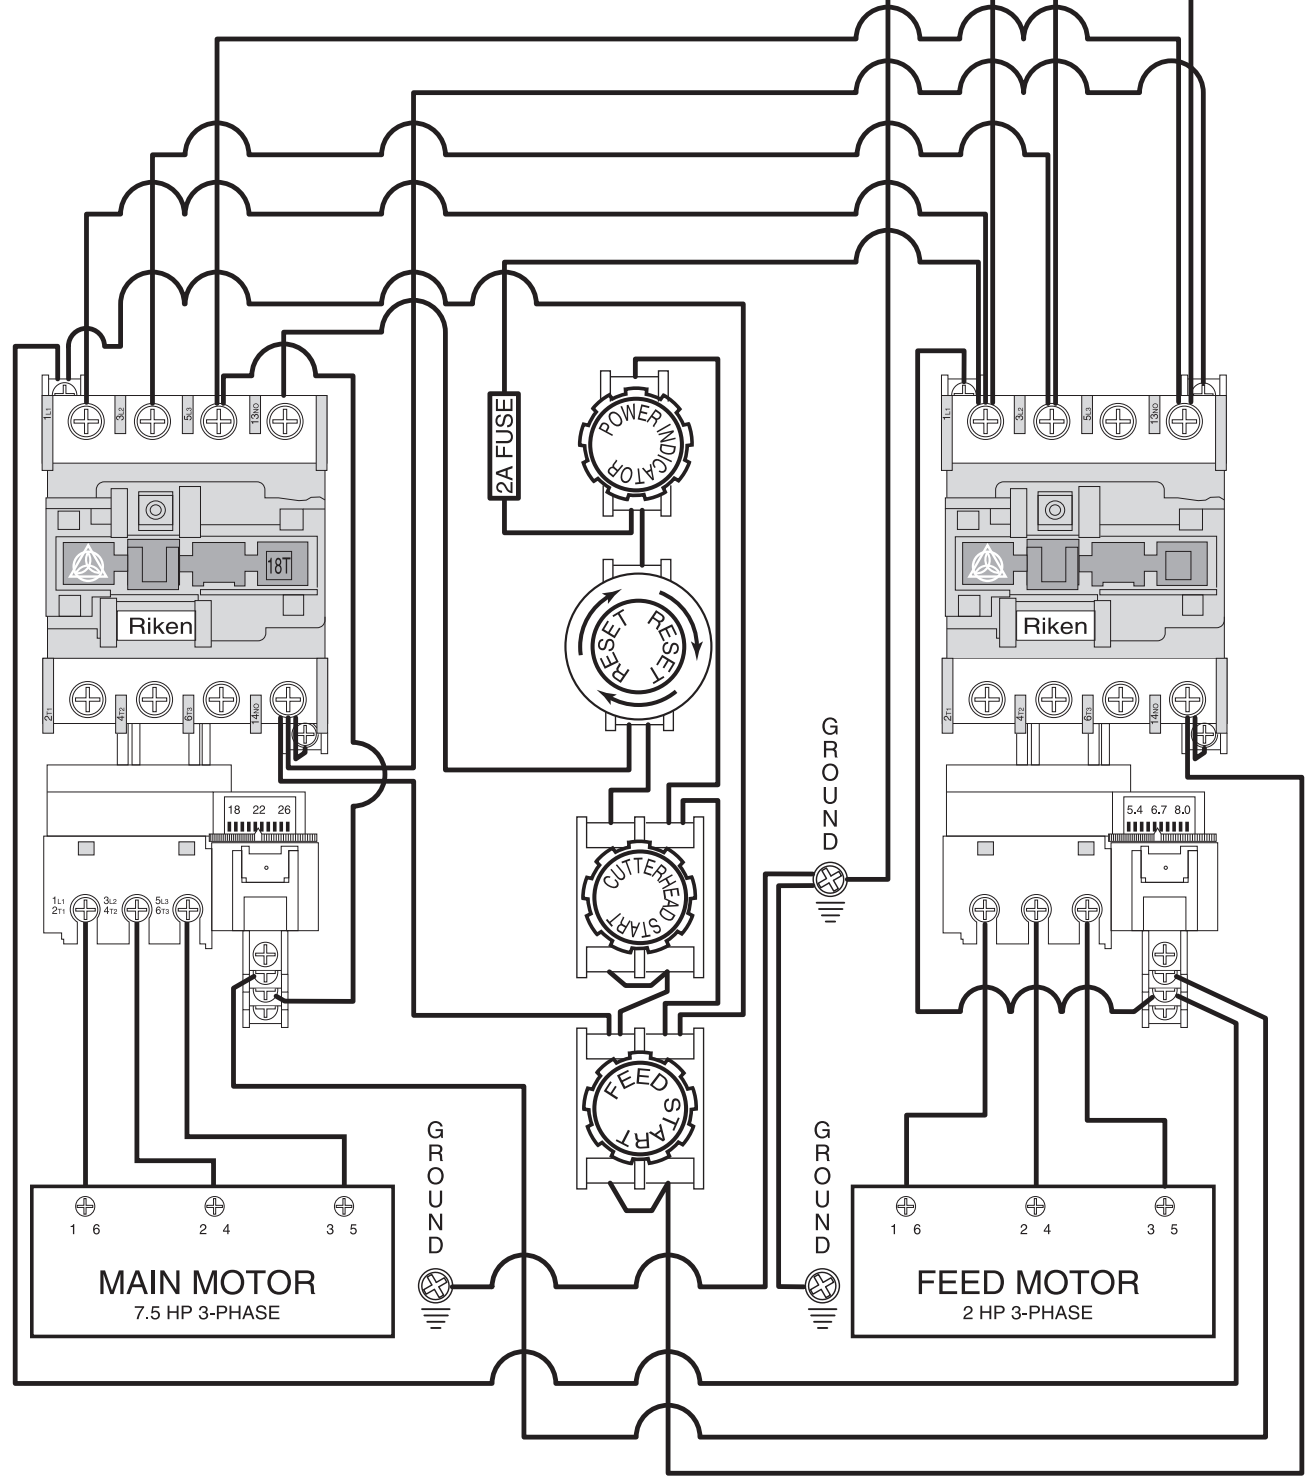

# SECTION 8: CLOSURE

---

The following pages contain general machine data, parts diagrams/lists, troubleshooting guide and Warranty/Return information for your Professional Series Planer.

If you need parts or help in assembling your machine, or if you need operational information, we encourage you to call our Service Department. Our trained service technicians will be glad to help you.

If you have comments dealing specifically with this manual, please write to our Bellingham, Washington location using the address in the *General Information* section. The specifications, drawings, and photographs illustrated in this manual represent the Professional Series Planer as supplied when the manual was prepared. However, due to Grizzly's policy of continuous improvement, changes may be made at any time with no obligation on the part of Grizzly. Whenever possible, though, we send manual updates to all owners of a particular tool or machine. Should you receive one, add the new information to this manual and keep it for reference.

We have included some important safety measures that are essential to the operation of this machine. While most safety measures are generally universal, Grizzly reminds you that each workshop is different and safety rules should be considered as they apply to your specific situation.

## WARNING


The Professional Series Planers were specifically designed for wood planing operations only. **DO NOT MODIFY AND/OR USE THIS MACHINE FOR ANY OTHER PURPOSE.** Modifications or improper use of this tool will void the warranty. If you are confused about any aspect of this machine, **DO NOT** use it until all your questions have been answered, or serious personal injury may occur.

We recommend you keep a copy of our current catalog for complete information regarding Grizzly's warranty and return policy. If you need additional technical information relating to this machine, or if you need general assistance or replacement parts, please contact the Service Department listed in the *Introduction* section.

Additional information sources are necessary to realize the full potential of this machine. Trade journals, woodworking magazines and your local library are good places to start.

## WARNING

Operating this equipment has the potential for flying debris to cause eye injury. Always wear safety glasses or goggles when operating equipment. Everyday glasses or reading glasses only have impact resistant lenses, they are not safety glasses. Be certain the safety glasses you wear meet the appropriate standards of the American National Standards Institute (ANSI).

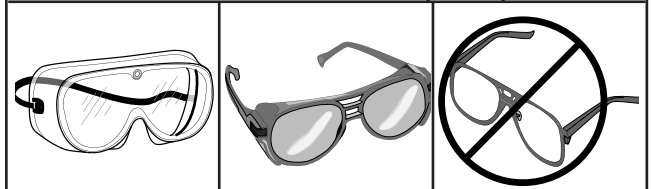

## WARNING

Like all power tools, there is danger associated with the Professional Series Planers. Accidents are frequently caused by lack of familiarity or failure to pay attention. Use your machine with respect and caution to lessen the possibility of operator injury. If normal safety precautions are overlooked or ignored, serious personal injury may occur.







# MACHINE DATA SHEET

Customer Service #: (570) 546-9663 • To Order Call: (800) 523-4777 • Fax #: (800) 438-5901

## MODEL G5850Z 20" PROFESSIONAL PLANER MODEL G0544 20" PLANER W/ SPIRAL CUTTERHEAD

Design Type ..... Floor Model

### Overall Dimensions:

Table Size .....21¼" x 28¼"  
 Overall Height .....42¼"  
 Overall Depth .....40½"  
 Overall Width.....38"  
 Shipping Weight..... 990 lbs.  
 Footprint .....24½" x 26½"  
 Crate Size .....46" H x 42½" W x 41⅝" D

### Capacities:

Maximum Depth of Cut ..... ⅛"  
 Maximum Width of Cut.....20"

Maximum Cutting Height.....7"  
 Minimum Stock Thickness .....¼"  
 Minimum Stock Length.....8"  
 Cutterhead Diameter.....3⅝"  
 Knives (G5850Z) ..... 4 High Speed Steel / 20" x 1" x ⅛"  
 Knives (G0544) ..... Indexable Carbide Inserts / 14 x 14 x 2mm  
 Cutterhead Speed ..... 5200 RPM  
 Cuts Per Minute ..... 20,800  
 Feed Rate ..... Variable 17-26 FPM  
 Cuts Per Inch ..... 66-101

### Construction:

Table ..... Precision-Ground Cast Iron  
 Power Feed Rollers.....Steel, Segmented Infeed, Polished Outfeed  
 Cutterhead (G5850Z) ..... 4 Knife Slots, Shielded Ball Bearings  
 Cutterhead (G0544) ..... Spiral Cutterhead w/ 96 pc. Inserts

### Planer Motor:

Type ..... TEFC Capacitor-Start Induction  
 Horsepower..... 5 HP  
 Phase / Voltage ..... Single-Phase / 220V  
 Amps .....25 A  
 Cycle / RPM.....60 Hertz / 3450 RPM  
 Switch.....Magnetic With Thermal Overload Protector  
 Power Transfer..... Twin V-Belt Drive  
 Bearings ..... Sealed & Lubricated Ball Bearings


### Feed Motor:

Type ..... TEFC Capacitor-Start Induction  
 Horsepower..... 2 HP  
 Phase / Voltage .....Single-Phase / 220V  
 Amps ..... 14  
 Cycle / RPM.....60 Hertz / 3450 RPM  
 Power Transfer..... Variable Split Pulley System  
 Phase / Voltage ..... Single-Phase, 220V

### Features:

..... Lever Controlled Bed Rollers  
 ..... Handwheel Depth Adjustment  
 .....5" Dust Port  
 .....Dust Covers Protect Vertical Support Columns and Leadscrews


**G5850Z**  
**G0544**

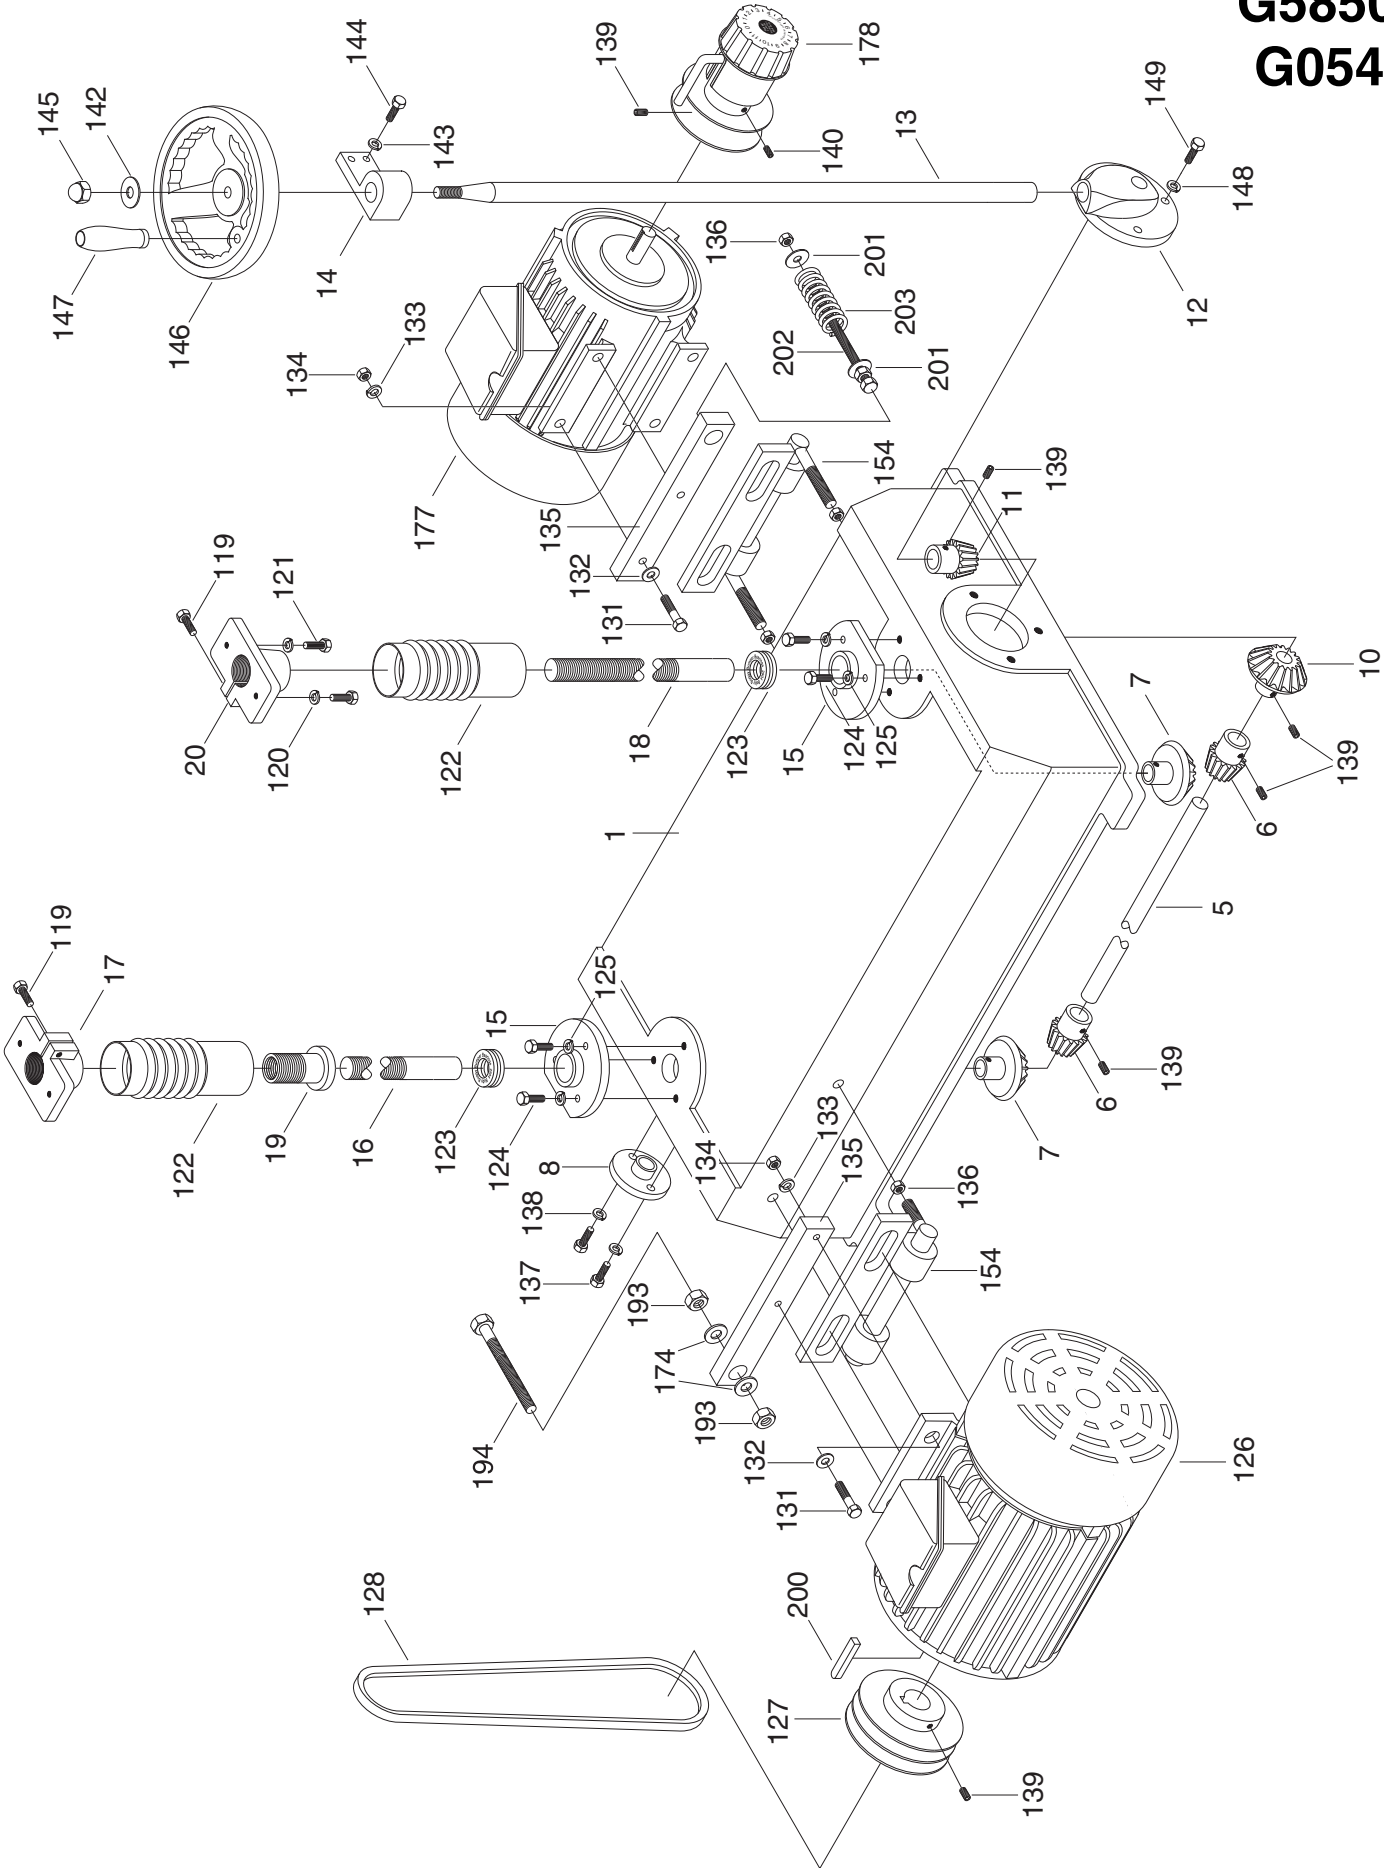





# G5850Z G0544

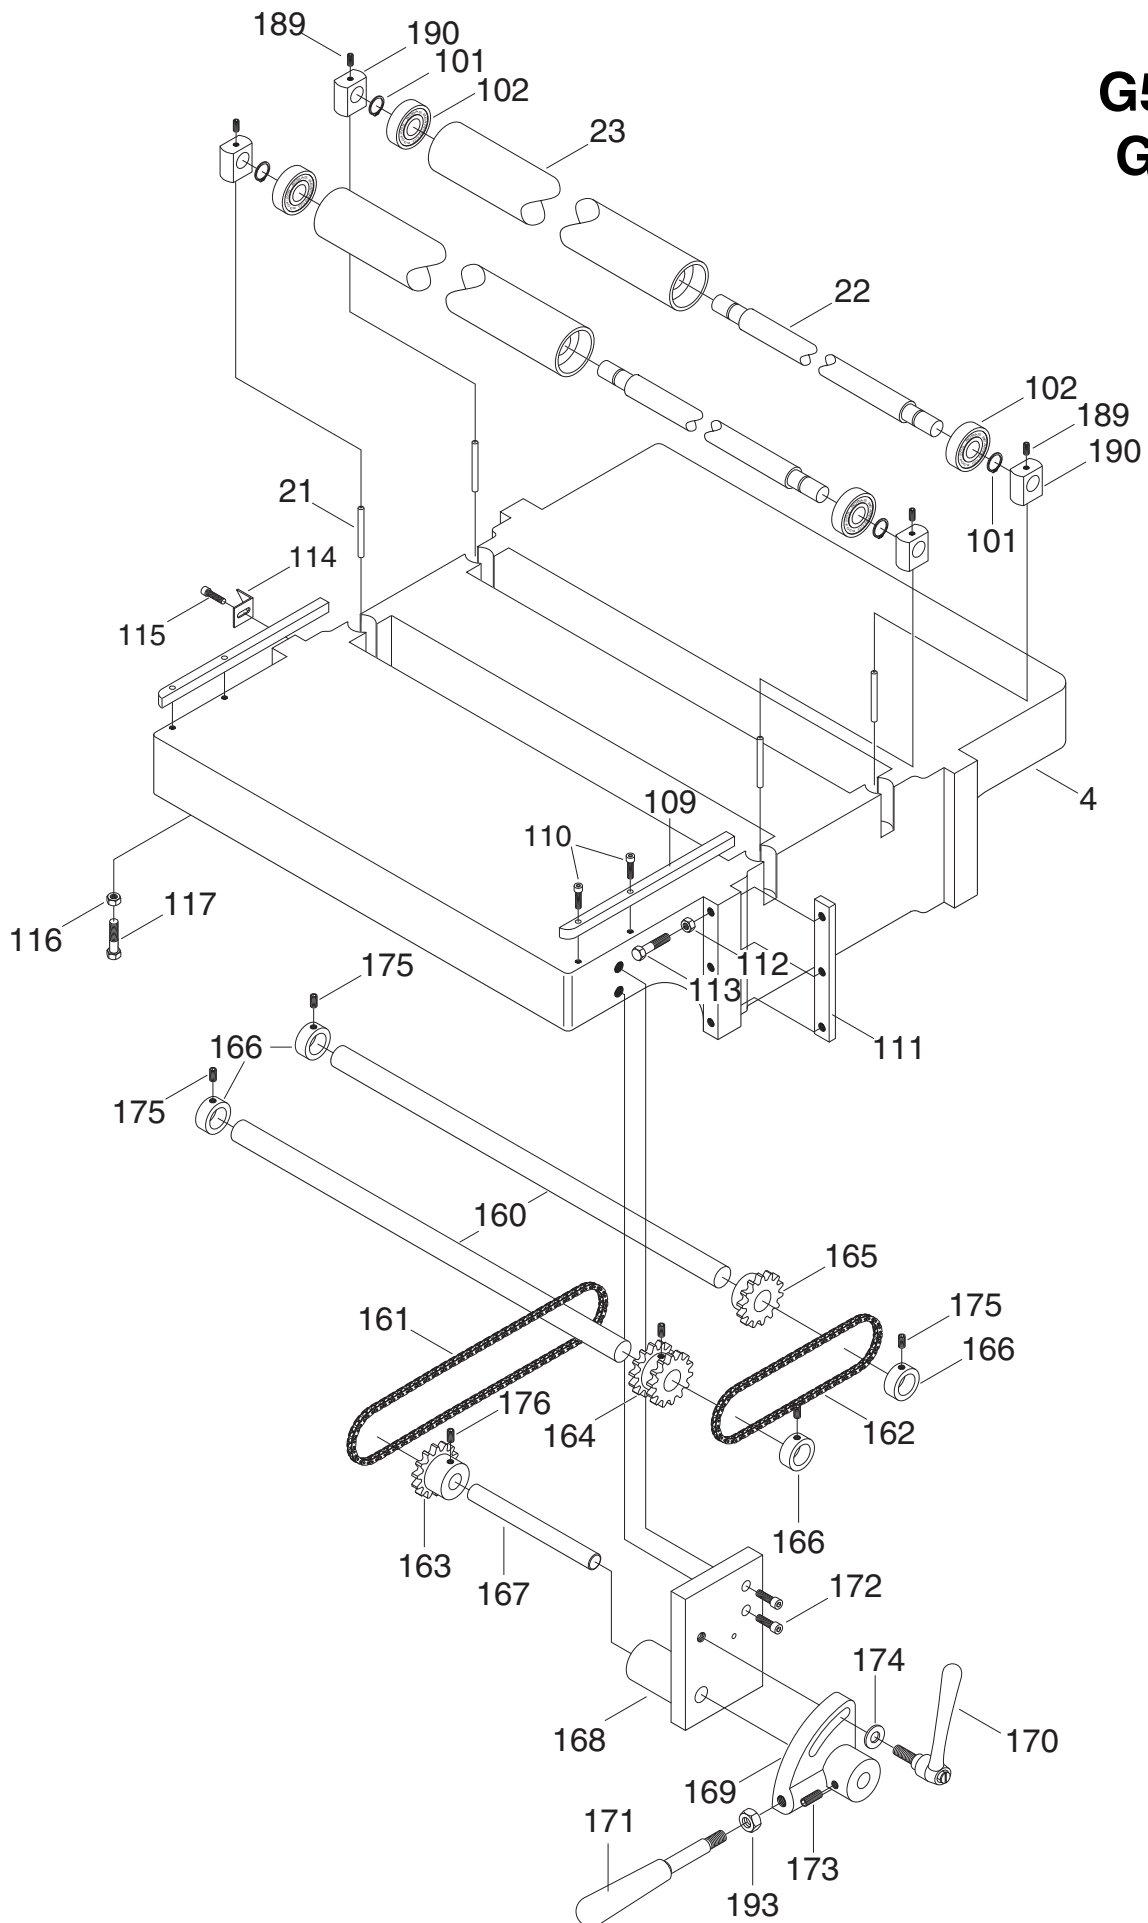

# G5850Z/G0544

REF	PART #	DESCRIPTION
1	P5850001	BASE
2	P5850002	COLUMN
3	P5850003	COLUMN
4	P5850004	TABLE
5	P5850005	GEAR SHAFT
6	P5850006	BEVEL GEAR 14T
7	P5850007	BEVEL GEAR 24T
8	P5850008	END BRACKET
10	P5850010	BEVEL GEAR 24T
11	P5850011	BEVEL GEAR 13T
12	P5850012	BEVEL GEAR HOUSING
13	P5850013	HANDWHEEL SHAFT
14	P5850014	SHAFT RING
15	P5850015	BEARING HOUSING
16	P5850016	ELEVATING SCR 1-6 X 17-1/2"
17	P5850017	ELEVATING SCR BRACKET
18	P5850018	ELEVATING SCR 1-6 X 17-1/2"
19	P5850019	ELVTNG SCR ADJ M36-2.0
20	P5850020	ELEVATING SCR BRACKET
21	P5850021	TABLE ROLLER ADJ PIN
22	P5850022	TABLE ROLLER SHAFT
23	P5850023	TABLE ROLLER
24	P5850024	OUTFEED ROLLER MOUNT LH
25	P5850025	BEARING LOCKING RING
26	P5850026	THREADED CAP
27	P5850027	INFEED ROLLER MOUNT LH
28	P5850028	BEARING LOCKING RING
29	P5850029	SPACER
30	P5850030	INFEED GEAR 38T
31	P5850031	OUTFEED GEAR 26T
32	P5850032	CUTTERHEAD MOUNT LH
33	P5850033	CUTTERHEAD MOUNT RH
34	P5850034	BEARING LOCKING RING
35	P5850035	PULLEY 23/4"
36	P5850036	NUT M30-P1.5 LH
37	P5850037	SPACER
38	P5850038	CUTTERHEAD GEAR 25T
39	P5850039	ADJUSTING BRACKET
40	P5850040	GEAR 14T
41	P5850041	GEAR 76T
42	P5850042	PULLEY 7"
43	P5850043	GEAR 18T
44	P5850044	ADJUSTING BRACKET
45	P5850045	PULLEY 10"
46	P5850Z046	SAFETY FENDER
47	P5850047	LOCK COLLAR LH
48	P5850048	INFEED ROLLER
50	P5850050	LOCK COLLAR RH
51	P5850Z051	CUTTERHEAD (20"X4 BLADES TYPE)
51A	P0544051	SPIRAL CUTTERHEAD (20")
52	P5850052	PRESSURE BAR BRACKET
53	P5850053	PRESSURE BAR
54	P5850054	PRESSURE SPRING LEFT
55	P5850055	PRESSURE SPRING RIGHT

REF	PART #	DESCRIPTION
56	P5850056	OUTFEED ROLLER
57	P5850057	COVER HINGE BRACKET LH
58	P5850058	COVER SIDE PLATE LH
59	P5850059	CHIPBREAKER SHAFT
60	P5850060	CHIPBREAKER
61	P5850061	CHIPBREAKER SPRING
62	P5850062	COVER SIDE PLATE RH
63	P5850063	RETURN ROLLERS
64	P5850Z064	GIB W/ GIB BOLTS
64-1	P5850Z064-1	GIB W/O GIB BOLTS
64-2	P5850Z064-2	GIB BOLT
65	P5850065	KNIFE
66	PB24	HEX BOLT 3/8"-16 X 1 1/4"
67	PLW04	LOCK WASHER 3/8"
68	PB58	HEX BOLT 3/8"-16 X 2"
69	PN08	HEX NUT 3/8"-16
70	PB02	HEX BOLT 1/4"-20 X 5/8"
71	PLW02	LOCK WASHER 1/4"
72	PN25	ACORN NUT 1/2"-12
73	PB03	HEX BOLT 5/16"-18 X 1"
74	PB32	HEX BOLT 5/16"-18 X 5/8"
75	PK09	KEY 1/4" X 1/4" X 3/4"
76	PB32	HEX BOLT 5/16"-18 X 5/8"
77	PLW01	LOCK WASHER 5/16"
79	PK09	KEY 1/4" X 1/4" X 3/4"
80	P6205	BEARING 6205ZZ
81	PB25	HEX BOLT 3/8"-16 X 1 3/4"
84	PLW04	LOCK WASHER 3/8"
85	P6206	BEARING 6206
86	PR46M	INT RETAINING RING 60MM
87	P5850087	BEARING LOCKING RING
88	PLW04	LOCK WASHER 3/8"
89	PB18	HEX BOLT 3/8"-16 X 1"
90	P6002	BEARING 6002
91	P6201	BEARING 6201ZZ
92	PW07	FLAT WASHER 5/16"
93	PLW01	LOCK WASHER 5/16"
94	PB15	HEX BOLT 5/16"-18 X 3/8"
95	PW02	FLAT WASHER 3/8"
96	PLW04	LOCK WASHER 3/8"
97	PB18	HEX BOLT 3/8"-16 X 1"
98	P6003	BEARING 6003ZZ
99	PN04	HEX NUT 5/8"-11
100	PVA32	BELT A32
101	PR08M	EXT RETAINING RING 19MM
102	P6304	BEARING 6304ZZ
103	P5850103	STUD 3/8"-16 X 6"
104	P5850104	SPRING
105	PW02	FLAT WASHER 3/8"
106	PN08	HEX NUT 3/8"-16
107	PB41	HEX BOLT 1/2"-12 X 1 1/2"
108	PLW07	LOCK WASHER 1/2"
109	P5850109	TABLE EDGE GUIDE
110	PSB04	CAP SCREW 1/4"-20 X 1/2"

# G5850Z/G0544

REF	PART #	DESCRIPTION
111	P5850111	TABLE GIB
112	PN08	HEX NUT 3/8"-16
113	PB25	HEX BOLT 3/8"-16 X 13/4"
114	P5850114	DEPTH INDICATOR
115	PSB17	CAP SCREW 1/4"-20 X 3/8"
116	PN08	HEX NUT 3/8"-16
117	PB58	HEX BOLT 3/8"-16 X 2"
119	PB12	HEX BOLT 5/16"-18 X 1 1/4"
120	PLW01	LOCK WASHER 5/16"
121	PB03	HEX BOLT 5/16"-18 X 1"
122	P5850122	DUST BOOT
123	P2904	THRUST BEARING 2904
124	PB03	HEX BOLT 5/16"-18 X 1"
125	PLW01	LOCK WASHER 5/16"
126	P5850126	CUTTERHEAD MOTOR 5 HP 220V
127	P5850127	PULLEY 4"
128	PVA60	BELT A60
129	P5850129	LEFT GUARD
131	PB16	HEX BOLT 3/8"-16 X 1 1/2"
132	PW02	FLAT WASHER 3/8"
133	PLW04	LOCK WASHER 3/8"
134	PN08	HEX NUT 3/8"-16
135	P5850135	MOTOR ADJ BRACKET
136	PN08	HEX NUT 3/8"-16
137	PB03	HEX BOLT 5/16"-18 X 1"
138	PLW01	LOCK WASHER 5/16"
139	PSS03	SET SCREW 1/4"-20 X 3/8"
140	PSS02	SET SCREW 5/16"-18 X 3/8"
142	PW01	FLAT WASHER 1/2"
143	PLW01	LOCK WASHER 5/16"
144	PB03	HEX BOLT 5/16"-18 X 1"
145	PN25	ACORN NUT 1/2"-12
146	P5850146	HAND WHEEL
147	P5850147	HANDLE
148	PLW01	LOCK WASHER 5/16"
149	PB03	HEX BOLT 5/16"-18 X 1"
150	P5850Z150	RIGHT GUARD
151	PW06	FLAT WASHER 1/4"
152	PSB04	CAP SCREW 1/4"-20 X 1/2"
153	P5850Z153	CONTROL BOX
154	P5850154	MOTOR SUPPORT
155	P5850155	MOUNTING BRACKET
156	P5850156	SHAFT
157	P5850157	FIXED SHAFT
158	P5850158	SPACER
159	P5850159	ANTI KICKBACK TOOTH
160	P5850160	CHAIN SHAFT
161	P5850161	CHAIN 1/2" X 26"
162	P5850162	CHAIN 1/2" X 21 1/2"
163	P5850163	SPROCKET 14T
164	P5850164	DOUBLE SPROCKET 14T
165	P5850165	SPROCKET 14T
166	P5850166	COLLAR

REF	PART #	DESCRIPTION
167	P5850167	SHAFT
168	P5850168	HUB MOUNTING PLATE
169	P5850169	ARC HUB
170	P5850170	LOCK HANDLE 1/2"-12
171	P5850171	HANDLE 1/2"-12
172	PSB03	CAP SCREW 5/16"-18 X 1"
173	PSS15	SET SCREW 3/8"-16 X 3/8"
174	PW01	FLAT WASHER 1/2"
175	PSS02	SET SCREW 5/16"-18 X 3/8"
177	P5850Z177	FEED MOTOR 2HP 220V
178	P5850Z178	VAR SPEED CONTROLLER
179	P5850Z179	CONTROL PANEL
180	P5850Z180	POWER INDICATOR LIGHT
181	P5850Z181	EMERGENCY STOP SWITCH
182	P5850Z182	ON SWITCH
183	P5850Z183	GRIZZLY NAME PLATE
184	P5850Z184	MACHINE ID LABEL
185	P5850Z185	GREASE FITTING
186	P5850Z186	DO NOT OPEN WARNING
187	PLABEL-11	SAFETY GLASSES LABEL
188	PLABEL-12	READ MANUAL LABEL
189	PSS11	SET SCREW 1/4"-20 X 1/4"
190	P5850Z190	BED ROLLER BASE
191	P5850Z191	DUST HOOD
192	P5850Z192	CHIPBREAKER SIDE PLATE
193	PN06	HEX NUT 1/2"-12
194	PB43	HEX BOLT 1/2"-12 X 4"
195	P5850Z195	FEED POWER SWITCH
197	P5850Z197	SUPPORT SHAFT
198	P5850Z198	COVER
199	P5850Z199	MOTOR ADJ BRACKET
200	PK58M	KEY 8 X 10 X 64MM
201	PW02	FLAT WASHER 3/8"
203	P5850Z203	SPRING
204	PVA46	BELT A46
205	P5850Z205	DEPTH GAUGE
206	P5850Z206	KNIFE SETTING JIG
207	PWR1719	17MM/19MM WRENCH
208	PWR1214	12MM/14MM WRENCH
209	PWR810	8MM/10MM WRENCH
210	PAW04M	4MM ALLEN WRENCH
211	P5850Z211	LOCKING NUT
212	P5850Z212	SPACER
213	P5850Z213	HEX BOLT 3/8"-16 X 6"
300	P5850Z300	MAGNETIC SWITCH
300-1	P5850Z300-1	CONTACTOR - FEED ROLLERS
300-2	P5850Z300-2	OVERLOAD RELAY - FEED ROLLERS
300-3	P5850Z300-3	CONTACTOR - CUTTERHEAD
300-4	P5850Z300-4	OVERLOAD RELAY - CUTTERHEAD
301	PH7653002	INDEXABLE INSERT 14 x 14 x 2
302	PFH35M	FLAT HD TORX SCR T20 M6-1 X 15
303	PH7653014	T-HANDLE DRIVER 1/4"
304	PH7653015	TORX BIT T20



# MACHINE DATA SHEET

Customer Service #: (570) 546-9663 • To Order Call: (800) 523-4777 • Fax #: (800) 438-5901

## MODEL G5851Z 24" PROFESSIONAL PLANER

Design Type ..... Floor Model

### Overall Dimensions:

Table Size ..... 24 $\frac{1}{8}$ " x 31 $\frac{1}{8}$ "  
 Height ..... 37"  
 Overall Depth ..... 40 $\frac{1}{2}$ "  
 Overall Width ..... 42"  
 Shipping Weight ..... 1240 lbs.  
 Crate Size ..... 46" H x 47 $\frac{1}{4}$ " W x 42 $\frac{1}{2}$ " D  
 Footprint ..... 24 $\frac{1}{2}$ " L x 20 $\frac{1}{2}$ " W

### Capacities:

Maximum Depth of Cut .....  $\frac{1}{8}$ "  
 Maximum Width of Cut ..... 24"

Maximum Cutting Height ..... 7"  
 Minimum Stock Thickness .....  $\frac{1}{4}$ "  
 Minimum Stock Length ..... 8"  
 Cutterhead Diameter ..... 3 $\frac{1}{8}$ "  
 Knives (#/Dimension) ..... 4 High Speed Steel / 24" x 1" x  $\frac{1}{8}$ "  
 Cutterhead Speed ..... 5200 RPM  
 Cuts Per Minute ..... 20,800  
 Feed Rate ..... Variable 17-26 FPM  
 Cuts Per Inch ..... 66-101

### Construction:

Table ..... Precision-Ground Cast Iron  
 Power Feed Rollers ..... Steel, Segmented Infeed  
 Out Feed Roller ..... Fine Finished Steel  
 Cutterhead ..... One Piece Machine Shaft; 4 Knife Slots; Shielded Ball Bearings

### Planer Motor:

Type ..... TEFC Capacitor-Start Induction  
 Horsepower ..... 5 HP  
 Phase / Voltage ..... Single-Phase / 220V  
 Amps ..... 25  
 Cycle / RPM ..... 60 Hertz / 3450 RPM  
 Switch ..... Magnetic With Thermal Overload Protector  
 Power Transfer ..... Twin V-Belt Drive  
 Bearings ..... Sealed & Lubricated Ball Bearings

### Feed Motor:

Type ..... TEFC Capacitor-Start Induction  
 Horsepower ..... 2 HP  
 Phase / Voltage ..... Single-Phase / 220V  
 Amps ..... 12  
 Cycle / RPM ..... 60 Hertz / 3450 RPM  
 Power Transfer ..... Variable Split Pulley System

### Features:

..... Lever Controlled Bed Rollers  
 ..... Handwheel Depth Adjustment  
 ..... Segmented Chip Breaker  
 ..... Table Locks  
 ..... 5" Dust Port  
 ..... Inch & Metric Measurement Scale  
 ..... Board Return Rollers  
 ..... Dust Covers Protect Vertical Support Columns and Leadscrews  
 ..... Grease Fittings on Cutterhead





# MACHINE DATA SHEET

Customer Service #: (570) 546-9663 • To Order Call: (800) 523-4777 • Fax #: (800) 438-5901

## MODEL G7213Z 24" PROFESSIONAL PLANER

Design Type ..... Floor Model

### Overall Dimensions:

Table Size ..... 31½" x 24"  
 Height ..... 37"  
 Overall Depth ..... 33"  
 Overall Width ..... 27½"  
 Shipping Weight ..... 1030 lbs.  
 Footprint ..... 30" L x 20½" W  
 Crate Size ..... 42½" L x 36" W x 45" H

### Capacities:

Maximum Depth of Cut ..... ⅛"  
 Maximum Width of Cut ..... 24"

Maximum Cutting Height ..... 7"  
 Minimum Stock Thickness ..... ¼"  
 Minimum Stock Length ..... 7½"  
 Cutterhead Speed ..... 5200 RPM  
 Cuts Per Inch ..... 66-101  
 Cuts Per Minute ..... 20,800  
 Feed Rate ..... 17-26 FPM

### Construction:

Table ..... Precision-Ground Cast Iron  
 Power Feed Rollers ..... Steel  
 Out Feed Roller ..... Fine Finished Steel  
 Cutterhead ..... 4 Knife Slots Sealed Ball Bearings with Grease Fitting

### Planer Motor:

Type ..... TEFC Induction  
 Horsepower ..... 7½ HP  
 Phase / Voltage ..... Three-Phase; 220 / 440V  
 Amps ..... 20 / 10  
 Cycle / RPM ..... 60 Hertz / 3450 RPM  
 Prewired ..... 220V  
 Switch ..... Magnetic With Thermal Overload Protector / 220V Only  
 Power Transfer ..... Two Belt Drive

### Feed Motor:


Type ..... TEFC Induction  
 Horsepower ..... 2 HP  
 Phase / Voltage ..... Three-Phase; 220 / 440V  
 Amps ..... 6 / 3  
 Prewired ..... 220V  
 Power Transfer ..... Variable Split Pulley System

### Features:


..... Lever Control Bed Rollers  
 ..... Segmented Chip Breaker and Infeed Roller  
 ..... Table Locks  
 ..... 5" Collar Chip Chute  
 ..... Inch & Metric Measurement Scale  
 ..... Variable speed feed

*Specifications, while deemed accurate, are not guaranteed.*


**G5851Z**  
**G7213Z**

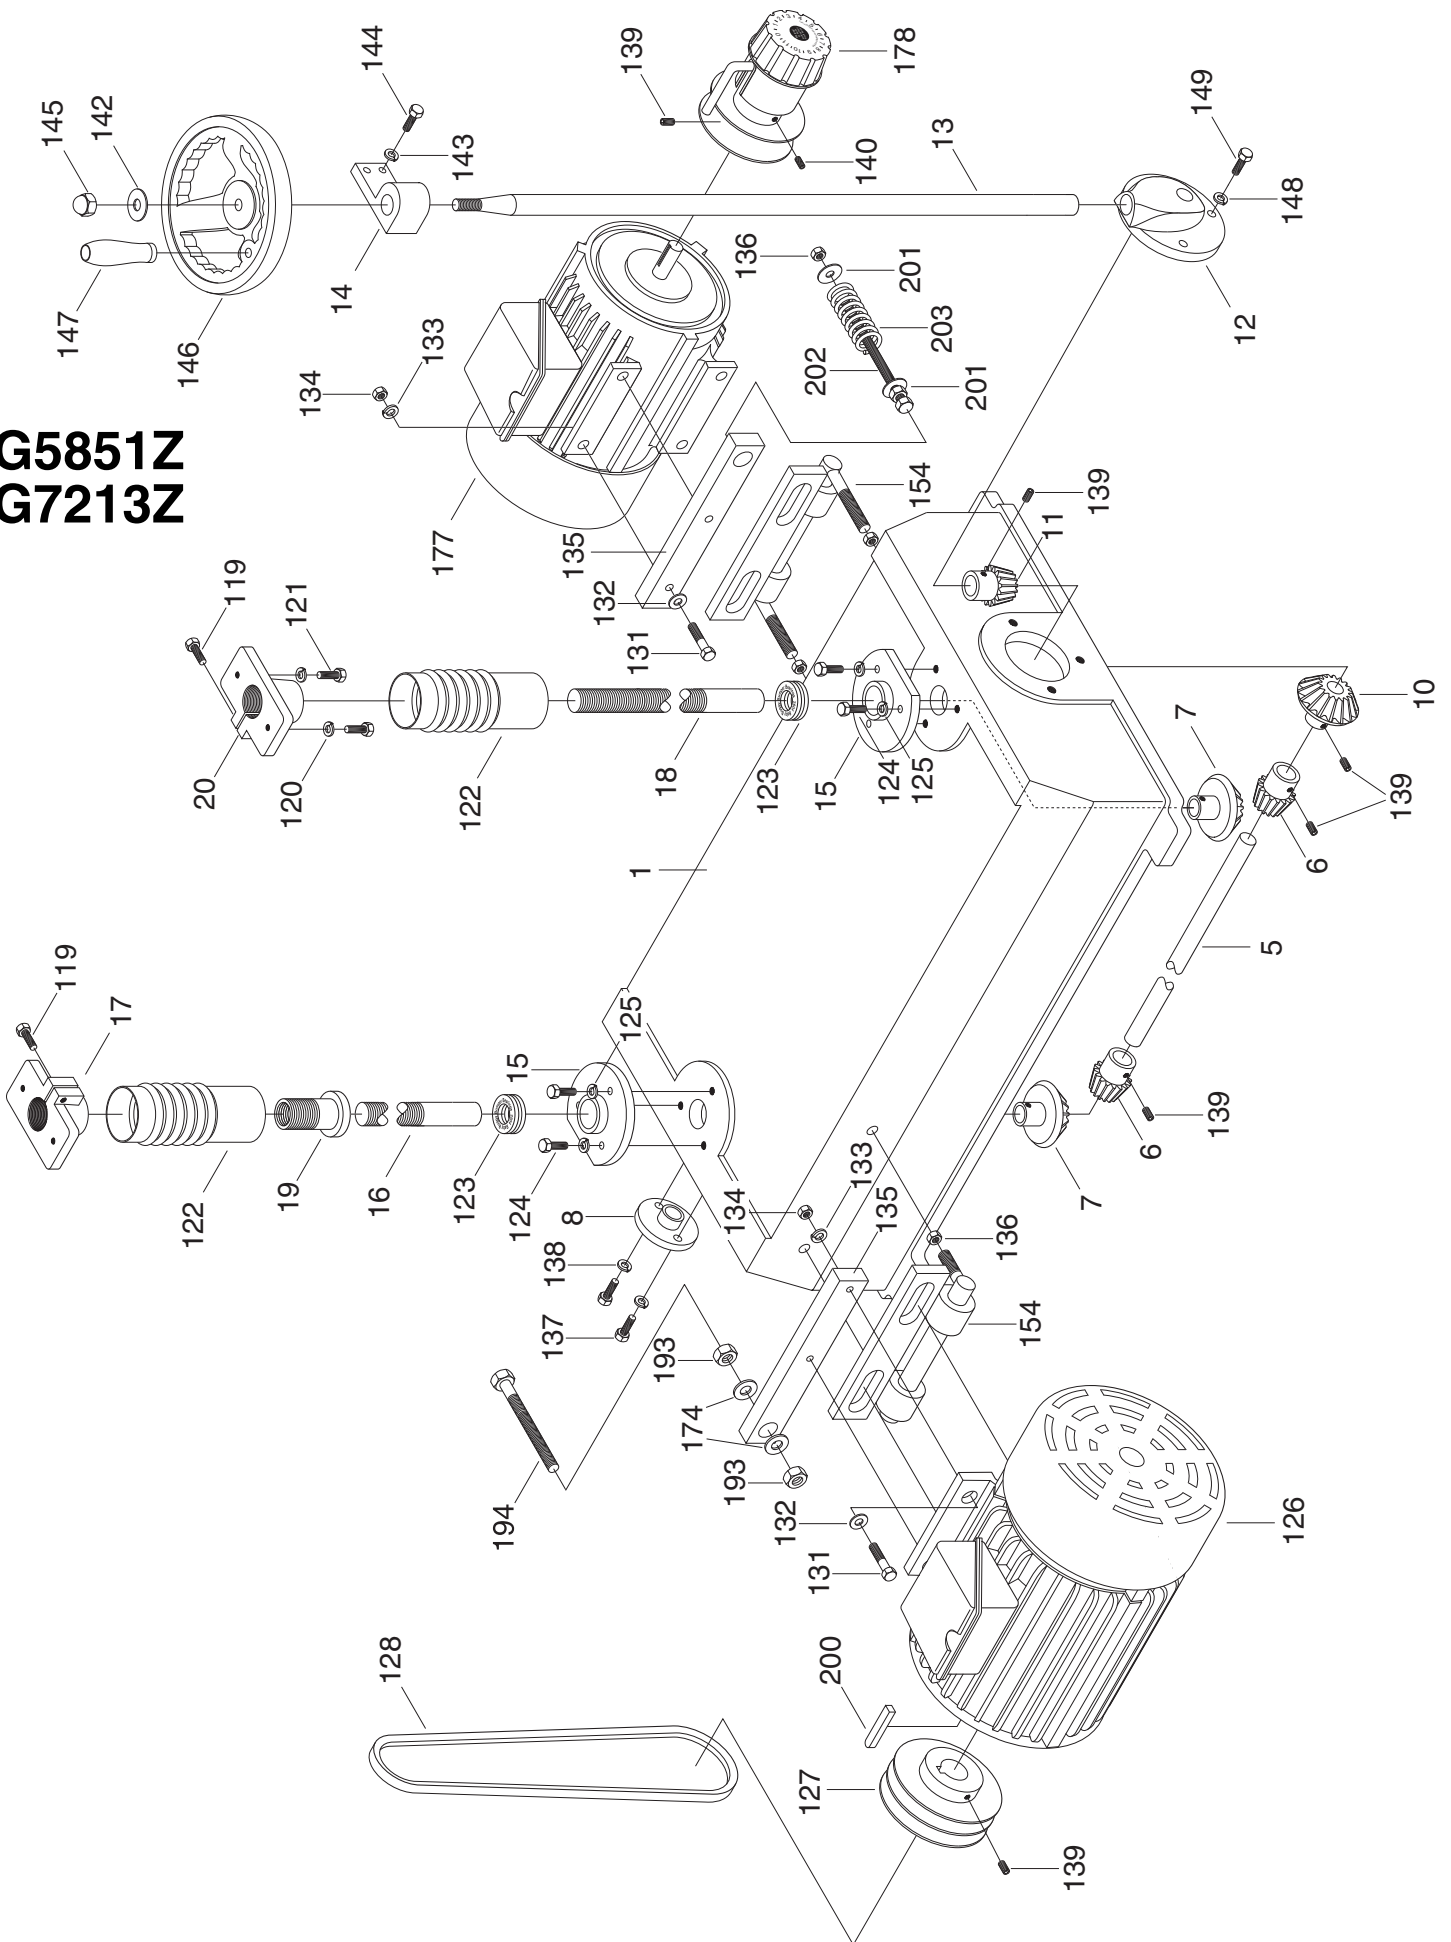


# G5851Z G7213Z

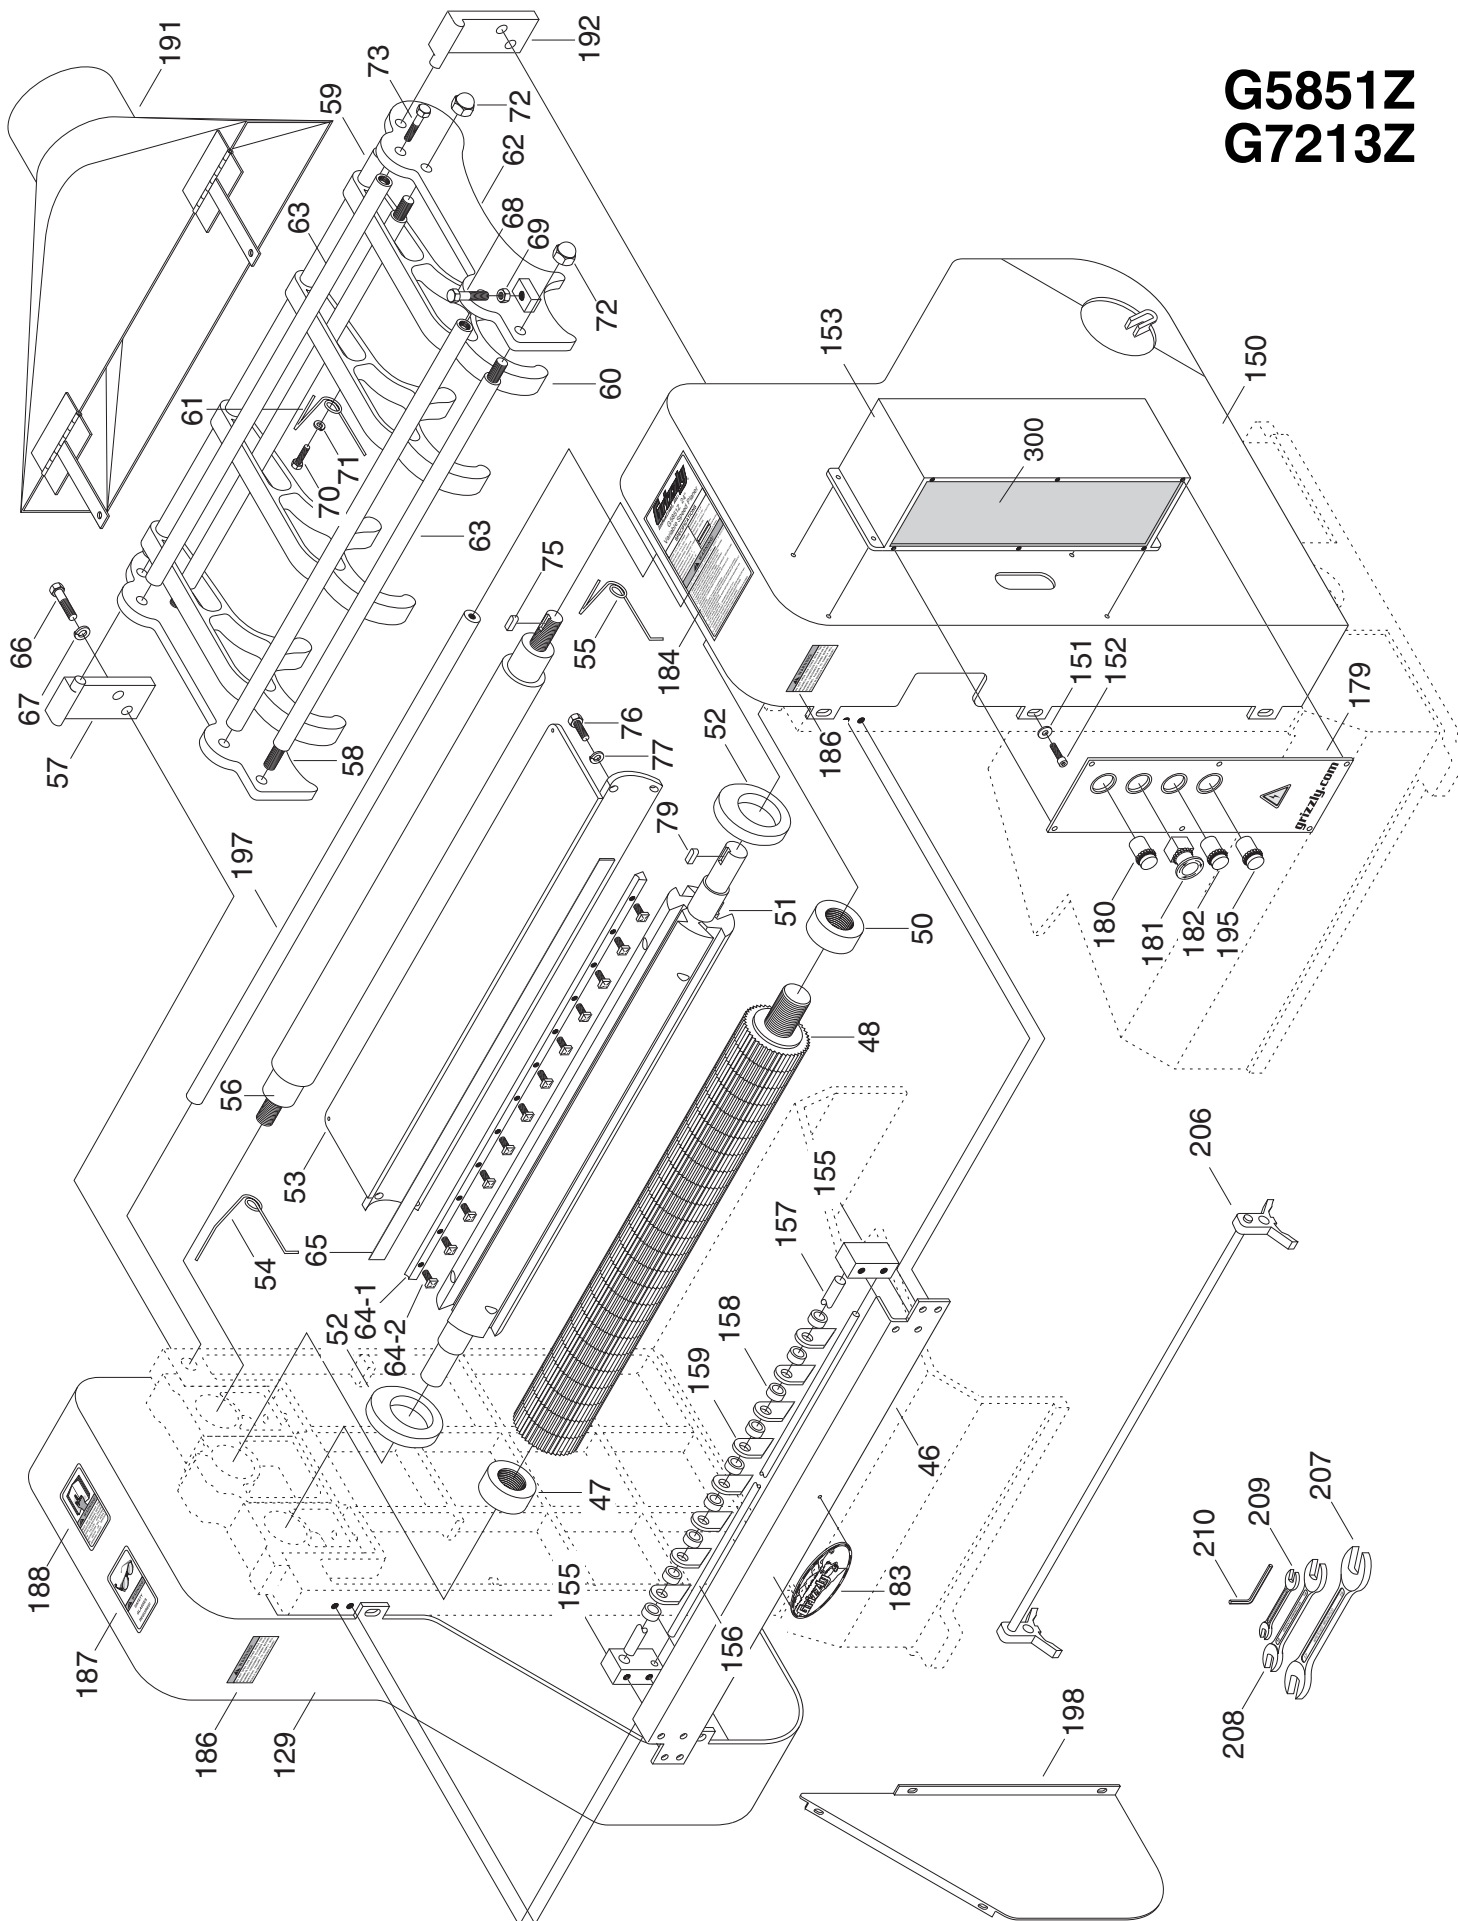

# G5851Z G7213Z

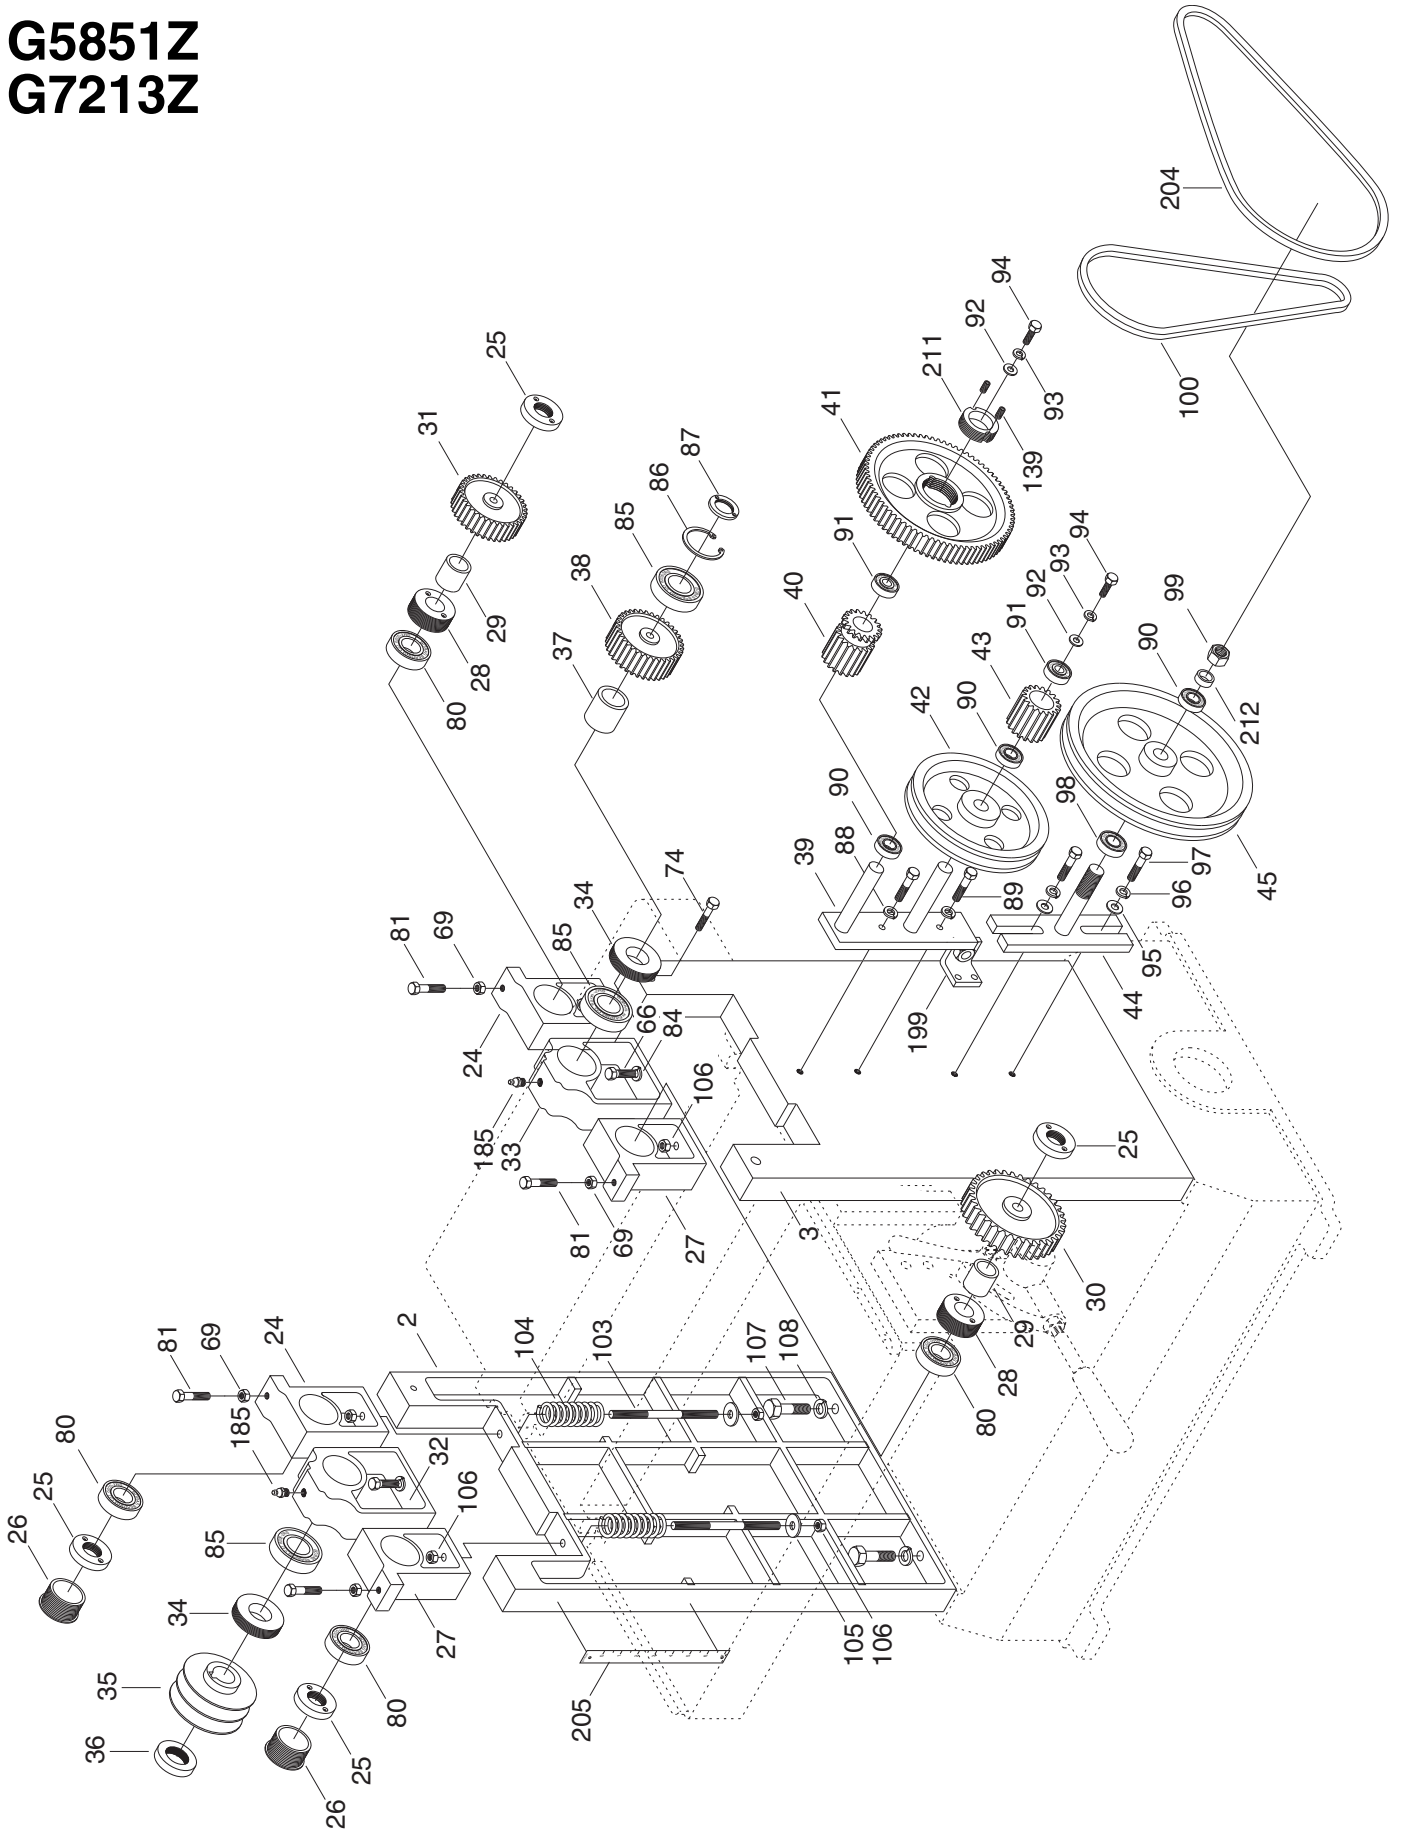

# G5851Z G7213Z

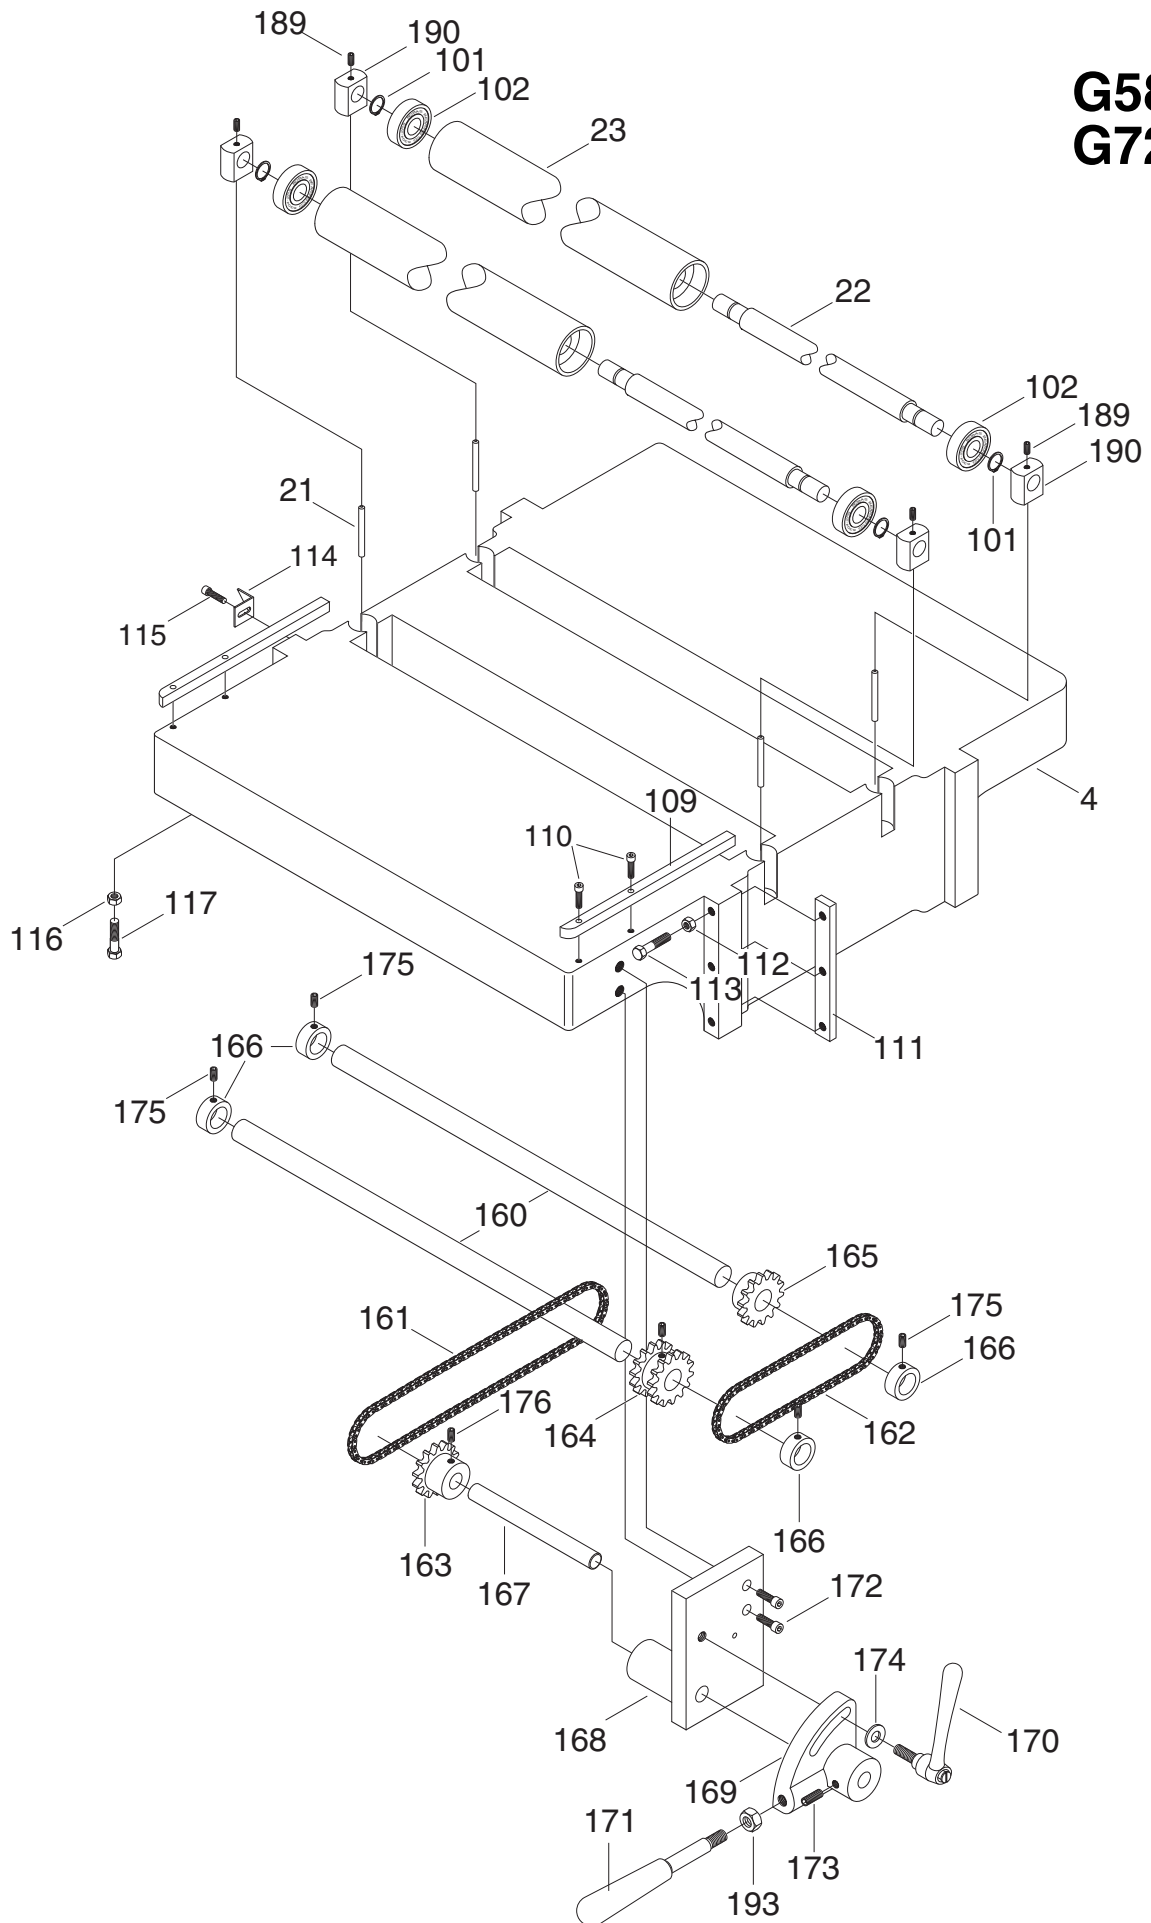

# G5851Z & G7213Z

REF	PART #	DESCRIPTION
1	P5851001	BASE
2	P5850002	COLUMN
3	P5850003	COLUMN
4	P5851004	TABLE
5	P5851005	GEAR SHAFT
6	P5850006	BEVEL GEAR 14T
7	P5850007	BEVEL GEAR 24T
8	P5850008	END BRACKET
10	P5850010	BEVEL GEAR 24T
11	P5850011	BEVEL GEAR 13T
12	P5850012	BEVEL GEAR HOUSING
13	P5850013	HANDWHEEL SHAFT
14	P5850014	SHAFT RING
15	P5850015	BEARING HOUSING
16	P5850016	ELEVATING SCR 1-6 X 17-1/2"
17	P5850017	ELEVATING SCR BRACKET
18	P5850018	ELEVATING SCR 1-6 X 17-1/2"
19	P5850019	ELVTNG SCR ADJ M36-2.0
20	P5850020	ELEVATING SCR BRACKET
21	P5850021	TABLE ROLLER ADJ PIN
22	P5851022	TABLE ROLLER SHAFT
23	P5851023	TABLE ROLLER
24	P5850024	OUTFEED ROLLER MOUNT LH
25	P5850025	BEARING LOCKING RING
26	P5850026	THREADED CAP
27	P5850027	INFEED ROLLER MOUNT LH
28	P5850028	BEARING LOCKING RING
29	P5850029	SPACER
30	P5850030	INFEED GEAR 38T
31	P5850031	OUTFEED GEAR 26T
32	P5850032	CUTTERHEAD MOUNT LH
33	P5850033	CUTTERHEAD MOUNT RH
34	P5850034	BEARING LOCKING RING
35	P5851035	PULLEY 23/4"
36	P5850036	NUT M30-P1.5 LH
37	P5850037	SPACER
38	P5850038	CUTTERHEAD GEAR 25T
39	P5850039	ADJUSTING BRACKET
40	P5850040	GEAR 14T
41	P5850041	GEAR 76T
42	P5850042	PULLEY 7"
43	P5850043	GEAR 18T
44	P5850044	ADJUSTING BRACKET
45	P5850045	PULLEY 10"
46	P5851Z046	SAFETY FENDER
47	P5850047	LOCK COLLAR LH
48	P5851048	INFEED ROLLER
50	P5850050	LOCK COLLAR RH
51	P5851051	CUTTERHEAD 24" 4 BLADE
52	P5850052	PRESSURE BAR BRACKET
53	P5851053	PRESSURE BAR
54	P5850054	PRESSURE SPRING LEFT
55	P5850055	PRESSURE SPRING RIGHT
56	P5851056	OUTFEED ROLLER

REF	PART #	DESCRIPTION
57	P5850057	COVER HINGE BRACKET LH
58	P5850058	COVER SIDE PLATE LH
59	P5851059	CHIPBREAKER SHAFT
60	P5850060	CHIPBREAKER
61	P5850061	CHIPBREAKER SPRING
62	P5850062	COVER SIDE PLATE RH
63	P5851063	RETURN ROLLERS
64	P5851Z064	GIB W/GIB BOLTS
64-1	P5851Z064-1	GIB W/O GIB BOLTS
64-2	P5851Z064-2	GIB BOLT
65	P5851Z065	KNIFE 4PC SET 24" X 1
66	PB24	HEX BOLT 3/8"-16 X 1 1/4"
67	PLW04	LOCK WASHER 3/8"
68	PB58	HEX BOLT 3/8"-16 X 2"
69	PN08	HEX NUT 3/8"-16
70	PB02	HEX BOLT 1/4"-20 X 5/8"
71	PLW02	LOCK WASHER 1/4"
72	PN25	ACORN NUT 1/2"-12
73	PB03	HEX BOLT 5/16"-18 X 1"
74	PB32	HEX BOLT 5/16"-18 X 5/8"
75	PK09	KEY 1/4" X 1/4" X 3/4"
76	PB32	HEX BOLT 5/16"-18 X 5/8"
77	PLW01	LOCK WASHER 5/16"
79	PK09	KEY 1/4" X 1/4" X 3/4"
80	P6205	BEARING 6205ZZ
81	PB25	HEX BOLT 3/8"-16 X 1 3/4"
84	PLW04	LOCK WASHER 3/8"
85	P6206	BEARING 6206
86	PR46M	INT RETAINING RING 60MM
87	P5850087	BEARING LOCKING RING
88	PLW04	LOCK WASHER 3/8"
89	PB18	HEX BOLT 3/8"-16 X 1"
90	P6002	BEARING 6002
91	P6201	BEARING 6201ZZ
92	PW07	FLAT WASHER 5/16"
93	PLW01	LOCK WASHER 5/16"
94	PB15	HEX BOLT 5/16"-18 X 3/8"
95	PW02	FLAT WASHER 3/8"
96	PLW04	LOCK WASHER 3/8"
97	PB18	HEX BOLT 3/8"-16 X 1"
98	P6003	BEARING 6003ZZ
99	PN04	HEX NUT 5/8"-11
100	PVA32	BELT A32
101	PR08M	EXT RETAINING RING 19MM
102	P6304	BEARING 6304ZZ
103	P5850103	STUD 3/8"-16 X 6"
104	P5850104	SPRING
105	PW02	FLAT WASHER 3/8"
106	PN08	HEX NUT 3/8"-16
107	PB41	HEX BOLT 1/2"-12 X 1 1/2"
108	PLW07	LOCK WASHER 1/2"
109	P5850109	TABLE EDGE GUIDE
110	PSB04	CAP SCREW 1/4"-20 X 1/2"
111	P5851111	TABLE GIB

# G5851Z & G7213Z

REF	PART #	DESCRIPTION
112	PN08	HEX NUT 3/8"-16
113	PB25	HEX BOLT 3/8"-16 X 13/4"
114	P5850114	SCALE POINTER
115	PSB17	CAP SCREW 1/4"-20 X 3/8"
116	PN08	HEX NUT 3/8"-16
117	PB35	HEX BOLT 3/8"-16 X 21/2"
119	PB12	HEX BOLT 5/16"-18 X 11/4"
120	PLW01	LOCK WASHER 5/16"
121	PB03	HEX BOLT 5/16"-18 X 1"
122	P5850122	DUST BOOT
123	P2904	THRUST BEARING 2904
124	PB03	HEX BOLT 5/16"-18 X 1"
125	PLW01	LOCK WASHER 5/16"
126	P5850126	CUTTERHEAD MOTOR 5HP 1-PH
126	P7213Z126	CUTTERHEAD MOTOR 7.5 HP 3-PH
127	P5851127	PULLEY 5"
128	PVA63	BELT A63
129	P5850129	LEFT GUARD
131	PB16	HEX BOLT 3/8"-16 X 11/2"
132	PW02	FLAT WASHER 3/8"
133	PLW04	LOCK WASHER 3/8"
134	PN08	HEX NUT 3/8"-16
135	P5850135	MOTOR ADJ BRACKET
136	PN08	HEX NUT 3/8"-16
137	PB03	HEX BOLT 5/16"-18 X 1"
138	PLW01	LOCK WASHER 5/16"
139	PSS03	SET SCREW 1/4"-20 X 3/8"
140	PSS02	SET SCREW 5/16"-18 X 3/8"
142	PW01	FLAT WASHER 1/2"
143	PLW01	LOCK WASHER 5/16"
144	PB03	HEX BOLT 5/16"-18 X 1"
145	PN25	ACORN NUT 1/2"-12
146	P5850146	HAND WHEEL
147	P5850147	HANDLE
148	PLW01	LOCK WASHER 5/16"
149	PB03	HEX BOLT 5/16"-18 X 1"
150	P5850150	RIGHT GUARD
151	PW06	FLAT WASHER 1/4"
152	PSB04	CAP SCREW 1/4"-20 X 1/2"
153	P5850153	CONTROL BOX
154	P5850154	MOTOR SUPPORT
155	P5850Z155	MOUNTING BRACKET
156	P5851Z156	SHAFT
157	P5851Z157	FIXED SHAFT
158	P5850Z158	SPACER
159	P5850159	ANTI KICKBACK TOOTH
160	P5851Z160	CHAIN SHAFT
161	P5851Z161	CHAIN 1/2" X 28"
162	P5850162	CHAIN 1/2" X 211/2"
163	P5850163	SPROCKET 14T
164	P5850164	DOUBLE SPROCKET 14T
165	P5850165	SPROCKET 14T
166	P5850166	COLLAR
167	P5850167	SHAFT

REF	PART #	DESCRIPTION
168	P5850168	HUB MOUNTING PLATE
169	P5850169	HUB
170	P5850Z170	LOCK HANDLE 1/2"-12
171	P5850Z171	HANDLE 1/2"-12
172	PSB03	CAP SCREW 5/16"-18 X 1"
173	PSS15	SET SCREW 3/8"-16 X 3/8"
174	PW01	FLAT WASHER 1/2"
175	PSS02	SET SCREW 5/16"-18 X 3/8"
177	P5850Z177	2 HP FEED MOTOR 220V 1-PH
177	P7213Z177	2 HP FEED MOTOR 220V 3-PH
178	P5850Z178	VAR SPEED CONTROLLER
179	P5850Z179	CONTROL PANEL
180	P5850Z180	POWER INDICATOR LIGHT
181	P5850Z181	EMERGENCY STOP SWITCH
182	P5850Z182	ON SWITCH
183	P5850Z183	GRIZZLY NAME PLATE
184	P5851Z184	MACHINE ID LABEL G5851Z
184	P7213Z184	MACHINE ID LABEL G7213Z
185	P5850Z185	GREASE FITTING
186	P5850Z186	DO NOT OPEN WARNING
187	PLABEL-11	SAFETY GLASSES LABEL
188	PLABEL-12	READ MANUAL LABEL
189	PSS11	SET SCREW 1/4"-20 X 1/4"
190	P5850Z190	BED ROLLER BASE
191	P5851153	DUST HOOD
192	P5850Z192	CHIPBREAKER SIDE PLATE
193	PN06	HEX NUT 1/2"-12
194	PB43	HEX BOLT 1/2"-12 X 4"
195	P5850Z195	FEED POWER SWITCH
197	P5851Z197	SUPPORT SHAFT
198	P5850Z198	COVER
199	P5850Z199	MOTOR ADJ BRACKET
200	PK58M	KEY 8 X 10 X 64MM
201	PW02	FLAT WASHER 3/8"
202	PB70	HEX BOLT 3/8"-16 X 6"
203	P5850Z203	SPRING
204	PVA46	BELT A46
205	P5850Z205	DEPTH GAUGE
206	P5851Z206	KNIFE SETTING JIG
207	PWR1719	17MM/19MM WRENCH
208	PWR1214	12MM/14MM WRENCH
209	PWR810	8MM/10MM WRENCH
210	PAW04M	4MM ALLEN WRENCH
211	P5850Z211	LOCKING NUT
212	P5850Z212	SPACER
300	P5850Z300	MAGNETIC SWITCH 1-PH
300	P7213Z300	MAGNETIC SWITCH 3-PH
300-1	P7213Z300-1	CONTACTOR - FEED MOTOR
300-2	P7213Z300-2	OVERLOAD RELAY - FEED MOTOR
300-3	P7213Z300-3	CONTACTOR - CUTTERHEAD
300-4	P7213Z300-4	OVERLOAD RELAY - CUTTERHEAD
301	P7213Z301	FUSE 2 AMP
302	P7213Z302	440V CONVERSION KIT

# WARRANTY AND RETURNS

---

---

Grizzly Industrial, Inc. warrants every product it sells for a period of **1 year** to the original purchaser from the date of purchase. This warranty does not apply to defects due directly or indirectly to misuse, abuse, negligence, accidents, repairs or alterations or lack of maintenance. This is Grizzly's sole written warranty and any and all warranties that may be implied by law, including any merchantability or fitness, for any particular purpose, are hereby limited to the duration of this written warranty. We do not warrant or represent that the merchandise complies with the provisions of any law or acts unless the manufacturer so warrants. In no event shall Grizzly's liability under this warranty exceed the purchase price paid for the product and any legal actions brought against Grizzly shall be tried in the State of Washington, County of Whatcom.

We shall in no event be liable for death, injuries to persons or property or for incidental, contingent, special, or consequential damages arising from the use of our products.

To take advantage of this warranty, contact us by mail or phone and give us all the details. We will then issue you a "Return Number," which must be clearly posted on the outside as well as the inside of the carton. We will not accept any item back without this number. Proof of purchase must accompany the merchandise.

The manufacturers reserve the right to change specifications at any time because they constantly strive to achieve better quality equipment. We make every effort to ensure that our products meet high quality and durability standards and we hope you never need to use this warranty.

Please feel free to write or call us if you have any questions about the machine or the manual.

Thank you again for your business and continued support. We hope to serve you again soon.



# WARRANTY CARD

Name \_\_\_\_\_  
 Street \_\_\_\_\_  
 City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_  
 Phone Number \_\_\_\_\_ E-Mail \_\_\_\_\_ FAX \_\_\_\_\_  
**MODEL #** \_\_\_\_\_ **Serial#** \_\_\_\_\_ **Order #** \_\_\_\_\_

The following information is given on a voluntary basis. It will be used for marketing purposes to help us develop better products and services. Of course, all information is strictly confidential.

1. How did you learn about us?  
 Advertisement                       Friend  
 Catalog                                       World Wide Web  
 Other \_\_\_\_\_
2. Which of the following magazines do you subscribe to.  
 American Woodworker                       Practical Homeowner  
 Cabinetmaker                                       Shop Notes  
 Family Handyman                                       Today's Homeowner  
 Fine Homebuilding                                       WOOD  
 Fine Woodworking                                       Wooden Boat  
 Home Handyman                                       Woodshop News  
 Journal of Light Construction                                       Woodsmith  
 Old House Journal                                       Woodwork  
 Popular Mechanics                                       Woodworker  
 Popular Science                                       Woodworker's Journal  
 Popular Woodworking                                       Workbench  
 Other \_\_\_\_\_
3. Which of the following woodworking/remodeling shows do you watch?  
 Backyard America                                       The New Yankee Workshop  
 Home Time     This Old House  
 The American Woodworker                                       Woodwright's Shop  
 Other \_\_\_\_\_
4. What is your annual household income?  
 \$20,000-\$29,999                                       \$60,000-\$69,999  
 \$30,000-\$39,999                                       \$70,000-\$79,999  
 \$40,000-\$49,999                                       \$80,000-\$89,999  
 \$50,000-\$59,999                                       \$90,000 +
5. What is your age group?  
 20-29     50-59  
 30-39     60-69  
 40-49     70 +
6. How long have you been a woodworker?  
 0 - 2 Years     8 - 20 Years  
 2 - 8 Years     20+ Years
7. How would you rank your woodworking skills?  
 Simple     Advanced  
 Intermediate     Master Craftsman
8. What stationary woodworking tools do you own? Check all that apply.  
 Air Compressor                                       Panel Saw  
 Band Saw     Shaper  
 Drill Press     Power Feeder  
 Drum Sander     Radial Arm Saw  
 Dust Collector     Planer  
 Horizontal Boring Machine                                       Spindle Sander  
 Jointer     Table Saw  
 Lathe     Vacuum Veneer Press  
 Mortiser     Wide Belt Sander  
 Other \_\_\_\_\_
9. How many of your woodworking machines are Grizzly? \_\_\_\_\_
10. Which benchtop tools do you own? Check all that apply.  
 1" x 42" Belt Sander                                       6" - 8" Grinder  
 5" - 8" Drill Press     Mini Lathe  
 8" Table Saw     10" - 12" Thickness Planer  
 8" - 10" Bandsaw     Scroll Saw  
 Disc/Belt Sander     Spindle/Belt Sander  
 Mini Jointer  
 Other \_\_\_\_\_
11. How many of the machines checked above are Grizzly? \_\_\_\_\_
12. Which portable/hand held power tools do you own? Check all that apply.  
 Belt Sander     Orbital Sander  
 Biscuit Joiner     Palm Sander  
 Circular Saw     Portable Planer  
 Detail Sander     Saber Saw  
 Drill/Driver     Reciprocating Saw  
 Miter Saw     Router  
 Other \_\_\_\_\_
13. What machines/supplies would you like Grizzly Industrial to carry?  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_
14. What new accessories would you like Grizzly Industrial to carry?  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_
15. What other companies do you purchase your tools and supplies from?  
 \_\_\_\_\_  
 \_\_\_\_\_
16. Do you think your purchase represents good value?  
 Yes     No
17. Would you recommend Grizzly Industrial to a friend?  
 Yes     No
18. Would you allow us to use your name as a reference for Grizzly customers in your area? **Note: We never use names more than three times.**  
 Yes     No
19. Comments: \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_

CUT ALONG DOTTED LINE

FOLD ALONG DOTTED LINE

---

---

---



Place  
Stamp  
Here



**GRIZZLY INDUSTRIAL, INC.**  
**P.O. BOX 2069**  
**BELLINGHAM, WA 98227-2069**



FOLD ALONG DOTTED LINE

Send a Grizzly Catalog to a friend:

Name _____
Street _____
City _____ State _____ Zip _____

TAPE ALONG EDGES--PLEASE DO NOT STAPLE



