

# User guide

## W995

**Thank you** for purchasing a Sony Ericsson W995 Walkman™. For additional phone content, go to [www.sonyericsson.com/tun](http://www.sonyericsson.com/tun). Register now to get free online storage and special offers at [www.sonyericsson.com/myphone](http://www.sonyericsson.com/myphone). For product support, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support). Please read the *Important information* before you use your phone.

### Instruction symbols

- These symbols may appear in the User guide.
- ! Note
  - 💡 Tip
  - ⚠ Warning
  - > Use a selection or navigation key to scroll and select. See *Navigation* on page 8.

## Getting started


**Assembly**  
Before you start using your phone, you need to insert a SIM card and the battery.

To insert the SIM card



- 1 Unlock the battery cover lock.
- 2 Remove the battery cover.
- 3 Slide the SIM card into its holder with the gold-coloured contacts facing down.

To insert the battery

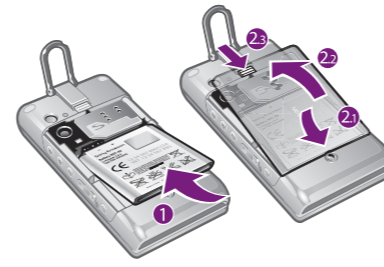

- 1 Insert the battery with the label side up and the connectors facing each other.
- 2 Attach the battery cover and lock it.

## Turning on the phone

To turn on the phone



- 1 Press and hold down **⏻**.
- 2 Enter your SIM card PIN, if requested, and select **OK**.
- 3 Select a language.
- 4 Follow the instructions to use the setup wizard for basic settings and useful tips.

💡 If you want to correct a mistake when you enter your PIN, press **⏻**.

### Help

In addition to this User guide, an extended User guide, Feature guides and more information are available at [www.sonyericsson.com/support](http://www.sonyericsson.com/support). Help and information are also available in your phone.

- To access the User guide
- Select **Menu** > **Settings** > **User help** > **User guide**.

## Phone overview



- 1 Ear speaker
- 2 Screen light sensor
- 3 Screen
- 4 Connector for charger, handsfree and USB cable
- 5 Selection keys
- 6 Navigation key
- 7 Call key
- 8 Activity menu key
- 9 Walkman™ key
- 10 Video call camera
- 11 End, On/off key
- 12 C key (Clear)
- 13 Silent key

To view tips and tricks

- Select **Menu** > **Settings** > **User help** > **Tips and tricks**.

To view information about functions

- Scroll to a function and select **Info**, if available. In some cases, **Info** appears under **Options**.

### Charging the battery

The phone battery is partly charged when you buy it. To charge the battery




- 1 Connect the charger to the phone. It takes approximately 2.5 hours to fully charge the battery. Press a key to view the screen.
- 2 Remove the charger by tilting the plug upwards.

💡 You can use your phone while it is charging. You can charge the battery at any time and for more or less than 2.5 hours. You can interrupt the charging without damaging the battery.



- 14 Audio jack for headphones
- 15 Integrated stand
- 16 Screen light sensor
- 17 Flash
- 18 Main camera
- 19 Media player key - previous/rewind
- 20 Media player key - play/pause
- 21 Media player key - next/fast forward
- 22 Volume, digital zoom
- 23 Camera key

To navigate the phone menus

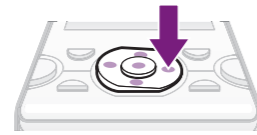

- Press the navigation key **⬅**, **⬇**, **⬆** or **➡** to move through the menus.

To end a function

- Press **⏻**.

To return to standby

- Press **⏻**.

To delete items

- Press **⏻** to delete items such as numbers, letters, pictures and sounds.

### Memory card

! You may have to purchase a memory card separately.

Your phone supports Memory Stick Micro™ (M2™) memory card adding more storage space to your phone. It can also be used as a portable memory card with other compatible devices.

You can move content between a memory card and the phone memory. See *Handling content in the phone* on page 22.

### Navigation

To access the main menu


- When **Menu** appears on the screen, press the center selection key to select **Menu**.
- If **Menu** does not appear on the screen, press **⏻**, and then press the center selection key to select **Menu**.

To insert a memory card



- Remove the battery cover and insert the memory card with the gold-coloured contacts facing up.

To remove a memory card

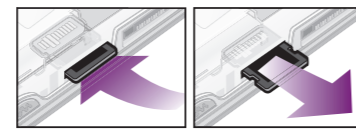

- Remove the battery cover and press the edge of the memory card to release and remove it.

### Entering Text

You can use multitap text input or T9™ Text Input **T9** to enter text. The T9 Text Input method uses a built-in dictionary.

To change text input method

- When you enter text, press and hold down **⌘**.

To shift between capitals and lower-case letters

- When you enter text, press **⌘**.

To enter numbers

- When you enter text, press and hold down **0** - **9**.

To enter periods and commas

- When you enter text, press **1**.

To enter a symbol

- 1 When you enter text, select **Options** > **Add symbol**.
- 2 Scroll to a symbol and select **Insert**.

To enter text using T9™ Text Input

- 1 Select, for example, **Menu** > **Messaging** > **Write new** > **Message**.
- 2 If **T9** is not displayed, press and hold down **⌘** to change to T9 Text Input.
- 3 Press each key only once, even if the letter you want is not the first letter on the key. For example, to write the word "Jane", press **5**, **2**, **6**, **3**. Write the whole word before looking at the suggestions.
- 4 Use **⬅** or **➡** to view suggestions.
- 5 Press **⏻** to accept a suggestion.

To enter text using multitap

- 1 From standby select, for example, **Menu** > **Messaging** > **Write new** > **Message**.
- 2 If **T9** is displayed, press and hold down **⌘** to change to multitap text input.
- 3 Press **⏻** - **9** repeatedly until the desired letter appears.

- 4 When a word is written, press **⏻** to add a space.

## Calling

### Making and Receiving Calls

You need to turn on your phone and be within range of a network.

To make a call

- 1 Enter a phone number (with international country code and area code, if applicable).
- 2 Press **⏻**.

💡 You can call numbers from your contacts and call list. See *Contacts* on page 14, and *Call List* on page 13.

To end a call

- Press **⏻**.

To make international calls

- 1 Press and hold down **0** until a "+" sign appears.
- 2 Enter the country code, area code (without the first zero) and phone number.
- 3 Press **⏻**.

To answer a call

- Press **⏻**.

To reject a call

- Press **⏻**.

To change the ear speaker volume during a call

- Press the volume key up or down.

## Media player keys



You can use the media player keys to control the Walkman™ player, video player and radio. The keys work even if the key lock is on when a handsfree is attached, and also when the Walkman™ player is minimized.

### Walkman™ player

You can use the media player keys to control the Walkman™ player. For more information, see *Media player keys* on page 16.

When listening to music through the loudspeaker you can use the integrated stand to place the phone on a table. For more information about the integrated stand, see *Integrated stand* on page 31.

To play music

- 1 Select **Menu** > **Media** > **Music**.
- 2 Browse by category using the navigation key.
- 3 Scroll to a title and press **▶**.

To stop playing music

- Press **⏻**.

To fast forward and rewind


- Press and hold down **⏩** or **⏪**.

To move between tracks

- Press **⏩** or **⏪**.

### Shake control

To switch tracks

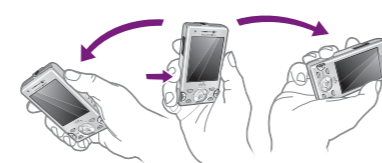

- 1 When music is playing, press and hold down **⏩** and move the phone to the right with a flick of your wrist to go to the next track.
- 2 To go to the previous track, use the same action to the left.

To shuffle tracks



- When music is playing, press and hold down **⏩** and shake your phone.

To change the volume



- 1 When music is playing, hold the phone out in front of you facing upwards.

- 2 Press and hold down **⏩** and bend your arm upwards towards you to increase the volume. To decrease the volume, repeat the action in the opposite direction.

### TrackID™

TrackID™ is a music recognition service. You can search for title, artist and album name for a track you hear playing through a loudspeaker or on the radio in your phone. If you cannot use TrackID™, see *I cannot use Internet-based services* on page 34.

To search for track information

- When you hear a track through a loudspeaker, select **Menu** > **Entertainment** > **TrackID™** > **Start**.
- When the radio in your phone is playing select **Options** > **TrackID™**.

💡 For best results, use TrackID™ in a quiet area.

### Radio

You can use the media player keys to control the radio. For more information, see *Media player keys* on page 16.

! Do not use your phone as a radio in places where this is prohibited.

To turn on the radio

- 1 Connect a handsfree to the phone.
- 2 Select **Menu** > **Entertainment** > **Radio**.

💡 You can use **⏻** to turn on the radio. **⏻** starts the last used music application, that is the radio or the Walkman™ player.

## Saving channels

You can save up to 20 preset channels.

To save channels automatically

- Select **Options** > **Auto save**.

To switch between saved channels

- Press **⬅** or **➡**.

## Imaging


You can take photos and record video clips to view, save or send. You find saved photos and video clips in **Media** and in **File manager**.

### Using the camera

To activate the camera

- From standby press and hold down **⏻**.

## Viewfinder and camera keys

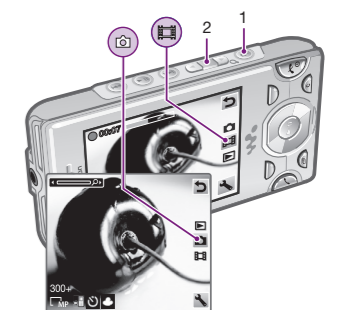

- 1 Activate the camera/Take photos/Record video
- 2 Zoom in or out

To take a photo

- 1 Activate the camera and press the navigation key to scroll to **⏻**.
- 2 Press **⏻** halfway down to use auto focus.
- 3 When the dot and focus frame are green, press **⏻** fully down to take a photo. The photo is automatically saved.

To record a video clip

- 1 Activate the camera and press the navigation key to scroll to **⏻**.
- 2 Press **⏻** fully down to start recording.

