

Digital Video Camcorder Instruction Manual

English

Caméscope numérique Manuel d'instruction

Français

Videocámara digital Manual de Instrucciones

Español

ZR700 / ZR600



Mini DV Digital
Video
Cassette


PictBridge

Please read also the following instruction manual (electronic version on PDF file). For further details refer to the installation guide.

Veuillez lire aussi le manuel d'instruction suivant (version électronique sur fichier PDF). Pour d'autres détails référez-vous au guide d'installation.

Lea también el siguiente manual de instrucciones (versión electrónica en archivo PDF). Para mayores detalles, refiérase a la guía de instalación.

• Digital Video Software



NTSC

Important Usage Instructions

WARNING!



TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING!



TO REDUCE THE RISK OF ELECTRIC SHOCK AND TO REDUCE ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

COPYRIGHT WARNING:

Unauthorized recording of copyrighted materials may infringe on the rights of copyright owners and be contrary to copyright laws.

Digital Video Camcorder, ZR700/ZR600 systems

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and use in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of shielded cable is required to comply with class B limits in Subpart B of Part 15 of FCC Rules. Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canon U.S.A. Inc.

One Canon Plaza, Lake Success, NY 11042, U.S.A.

Tel No. (516)328-5600

CAUTION:

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Important Warning



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure, that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

IMPORTANT SAFETY INSTRUCTIONS

In these safety instructions the word "product" refers to the Canon Digital Video Camcorder ZR700/ZR600 A and all its accessories.

1. **Read Instructions** — All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions** — The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** — All warnings on the product and in the operating instructions should be adhered to.
4. **Follow Instructions** — All operating and maintenance instructions should be followed.
5. **Cleaning** — Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. The product should be cleaned only as recommended in this manual.
6. **Accessories** — Do not use accessories not recommended in this manual as they may be hazardous.
7. **Avoid magnetic or electric fields** — Do not use the camera close to TV transmitters, portable communication devices or other sources of electric or magnetic radiation. They may cause picture interference, or permanently damage the camera.
8. **Water and Moisture** — Hazard of electric shock — Do not use this product near water or in rainy/moist situations.
9. **Placing or Moving** — Do not place on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product.


A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



10. **Power Sources** — The CA-570 Compact Power Adapter should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. Regarding other power sources such as battery power, refer to instructions in this manual.
11. **Polarization** — The CA-570 Compact Power Adapter is equipped with a polarized 2-prong plug (a plug having one blade wider than the other). The 2-prong polarized plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
12. **Power Cord Protection** — Power cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to plugs and the point from which the cords exit the product.
13. **Outdoor Antenna Grounding** — If an outside antenna is connected to the product, be sure the antenna is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI / NFPA No. 70—1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See figure 1.

Fig. 1

EXAMPLE OF ANTENNA GROUNDING
AS PER NATIONAL ELECTRICAL CODE

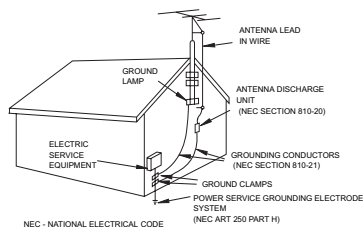

- 14. Lightning** — For added protection of this product during a lightning storm, or when it is left unattended and unused for long periods of time, disconnect it from the wall outlet and disconnect the antenna. This will prevent damage to the product due to lightning and power-line surges.
- 15. Overloading** — Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.
- 16. Objects and Liquid Entry** — Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Be careful not to spill liquid of any kind onto the product.
- 17. Servicing** — Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 18. Damage Requiring Service** — Disconnect this product from the wall outlet and all power sources including battery, and refer servicing to qualified service personnel under the following conditions:
- When the power-supply cord or plug is damaged.
 - If any liquid has been spilled onto, or objects have fallen into, the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally even if you follow the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - If the product has been dropped or the cabinet has been damaged.
 - When the product exhibits a distinct change in performance. This indicates a need for service.
- 19. Replacement Parts** — When replacement parts are required, be sure the service technician has used replacement parts that are specified by Canon or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
- 20. Safety Check** — Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in safe operating order.

When replacement of power supply is required, please return it to the responsible nearest Canon Service Center and please replace it with the same type number CA-570.

The Adapter can be used with a power supply between 100 and 240 V AC. For areas where 120 V AC power is not used, you will need a special plug adapter. Contact your nearest Canon Service Center for further information.

This Class B digital apparatus complies with Canadian ICES-003.




Using this Manual

Thank you for purchasing the Canon ZR700/ZR600. Please read this manual carefully before you use the camcorder and retain it for future reference. Should your camcorder fail to operate correctly, refer to the *Troubleshooting* table (□ 118).

Change the display language before you begin (□ 66).

E


Symbols and References Used in This Manual

-  : Precautions related to the camcorder operation.
-  : Additional topics that complement the basic operating procedures.
-  : Reference page number.
- **ZR700** : Option or feature that applies or is available only with this model.
- Capital letters are used to refer to buttons on the camcorder or the wireless controller.
- [] are used to refer to menu items displayed on the screen.
- "Screen" refers to the LCD and the viewfinder screen.
- Please note that the illustrations mainly refer to the ZR700.

Operating modes (see below)



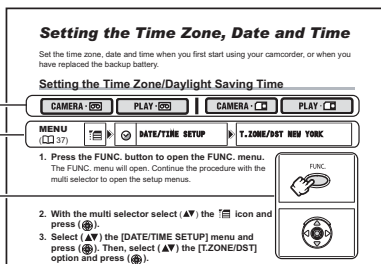

Menu item shown at its default position

Buttons and switches to be operated







About the Joystick and the Joystick Guide

The mini joystick allows you to control many of the camcorder's operations and to select and change setting options in menus.

		Push the joystick up, down, left or right (▲▼, ◀▶) to select an item or change settings.
		Press the joystick itself (⏏) to save the settings or confirm an action.











The functions assigned to the joystick change according to the operation mode. You can display the joystick guide to remind you of the joystick's functions in each operating mode.

Recording movies:	Playing back movies:	Recording still images:	Playing back still images:
			

Introduction

About the Operating Modes

The operating modes are determined by the position of the **POWER** switch and the TAPE/CARD switch.

Operating Modes	POWER Switch	TAPE/CARD Switch	Icon Display	Operation	
CAMERA · 	CAMERA	 (TAPE)		Recording movies on a tape	23
PLAY · 	PLAY			Playing movies from a tape	30
CAMERA · 	CAMERA	 (CARD)		Recording still images or movies on a card	84, 88
PLAY · 	PLAY			Playing movies or viewing still images from a card	91

CAMERA · 

: Function can be used in this mode.

CAMERA · 

: Function cannot be used in this mode.

Trademark Acknowledgments

- ^{Mini} **DX** is a trademark.
- **S** is a trademark.
- Windows[®] is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- Macintosh and Mac OS are trademarks of Apple Computer, Inc., registered in the United States and other countries.
- Other names and products not mentioned above may be registered trademarks or trademarks of their respective companies.

Table of contents

Introduction

Using this Manual	5
Checking the Supplied Accessories	9
Components Guide	10

Basic Functions

Preparations

Preparing the Power Supply	14
Loading/Unloading a Cassette	17
Preparing the Camcorder	18
Using the Wireless Controller	19
Adjusting the LCD Screen	20
Setting the Time Zone, Date and Time	21

Recording

Recording Movies on a Tape	23
Zooming	27
Tips for Making Better Videos	29

Playback

Playing Back a Tape	30
Adjusting the Volume	32
Playing Back on a TV Screen	33

Advanced Functions

Menus and Settings	36
--------------------------	----

Recording

Using the Recording Programs	41
Adjusting the Exposure Manually	45
Adjusting the Focus Manually	46
Setting the White Balance	48
Selecting an Image Effect	49
Setting the Shutter Speed	50
22700 Using the LED Light	52
Using the Self-Timer	53
Changing the Recording Mode (SP/LP)	54
Audio Recording	55
Using Digital Effects	56
Widescreen TV Recording (16:9)	60

Playback

Magnifying the Image	61
Displaying the Data Code	62
End Search	63
Returning to a Pre-marked Position	64
Date Search	65

Other Functions

Changing the Display Language	66
Other Camcorder Settings	67

Editing

Recording to a VCR or Digital Video Device	70
22700 Recording from Analog Video Devices (VCR, TV or Camcorder)	72

Recording from Digital Video Devices (DV Dubbing)	73
22700 Converting Analog Signals into Digital Signals (Analog-Digital Converter)	74
Audio Dubbing	76
Transferring Video Recordings to a Computer	79

Using a Memory Card

Inserting and Removing a Memory Card	80
Selecting the Image Quality/Size	81
File Numbers	83
Recording Still Images on a Memory Card	84
Recording Movies on a Memory Card	88
Selecting the Focusing Point	90
Playing Back a Memory Card	91
Protecting Images	93
Erasing Images	94
Initializing a Memory Card	95

Direct Printing

Printing Still Images	96
Selecting the Print Settings	98
Printing with Print Order Settings	100

Transferring Images

Transferring Memory Card Images to a Computer	102
Direct Transfer	103
Selecting Images for Transfer (Transfer Order)	105










Additional Information

Screen Displays	106
List of Messages	109
Maintenance/Others	112
Troubleshooting	118
System Diagram	121
Optional Accessories	122
Specifications	124
Item Codes	126
Index	127

Checking the Supplied Accessories

E

Introduction

<p>CA-570 Compact Power Adapter (incl. power cord)</p> 	<p>ZR700 NB-2LH Battery Pack</p> 	<p>ZR600 BP-2L5 Battery Pack</p> 	<p>Lithium Button Battery CR1616</p> 
<p>WL-D85 Wireless Controller</p> 	<p>Lithium Button Battery CR2025 for Wireless Controller</p> 	<p>STV-250N Stereo Video Cable</p> 	<p>IFC-300PCU USB Cable</p> 
<p>DIGITAL VIDEO SOLUTION DISK</p> 			

The serial number of this product can be found at the battery attachment unit of the camcorder. Write down the number and other information here and retain this book as a permanent record of your purchase to aid identification in case of theft.

Date of Purchase:

Model Name: ZR700/ZR600 A

Purchased From:

Serial No.:

Dealer Address:

Dealer Phone No.:




LAMP(S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE OR FEDERAL LAWS.


Components Guide

ZR700/ZR600

Left side view

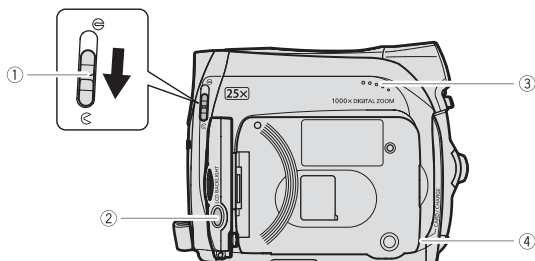

Right side view

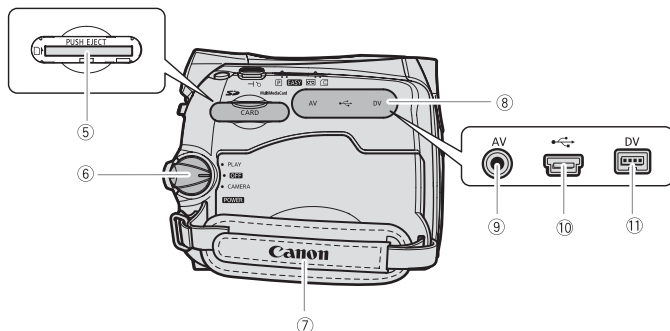

① Lens cover switch (23, 84)

(O open, C closed)

② LCD BACKLIGHT button (20)

③ Speaker (32)

④ CHARGE indicator (14) /

CARD access indicator (84, 88)

⑤ Memory card slot (80)

⑥ **POWER** switch (6)

⑦ Grip belt (18)


⑧ Terminal cover

⑨ AV terminal (33, 72, 74, 76)


⑩ USB terminal (96, 102)

⑪ DV terminal (70, 73, 74, 79)

Front view

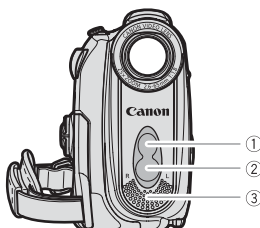

Rear view

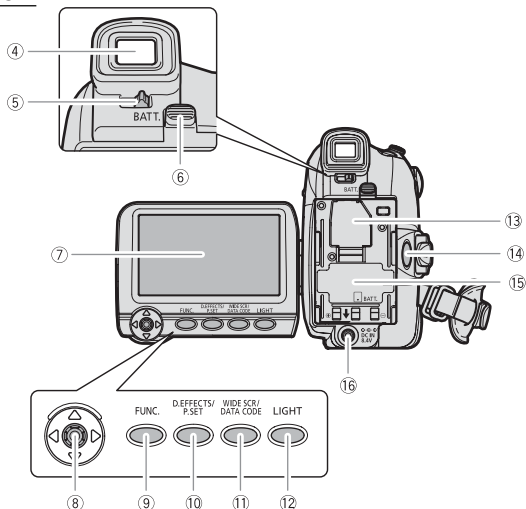

① Remote sensor (19)

② **ZR100** White LED light (assist lamp)
(52)

③ Stereo microphone

④ Viewfinder (18)

⑤ Dioptic adjustment lever (18)

⑥ BATT. (battery release) button (14)

⑦ LCD screen (20)

⑧ Joystick (5)

⑨ FUNC. button (36)

⑩ D.EFFECTS button (56) /
P.SET button (96)

⑪ WIDE SCR button (60) /
DATA CODE button (62)

⑫ **ZR100** LIGHT button (52)


⑬ Backup battery compartment (16)

⑭ Start/stop button (23, 88)



⑮ Battery attachment unit (14) /
Serial number

⑯ DC IN terminal (14)

Top view

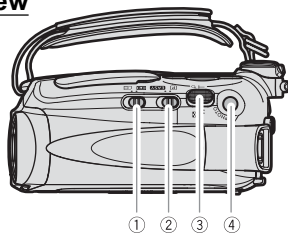

Bottom view

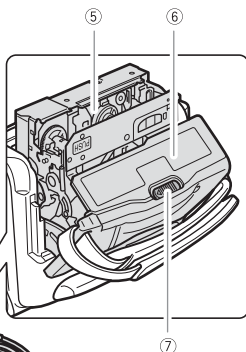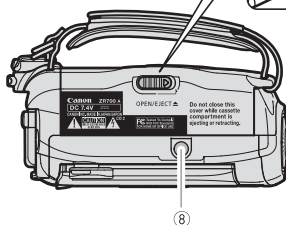

① TAPE/CARD switch (6)

② Program selector (41)

EASY Easy recording

P Recording programs

③ Zoom lever (27)


④ PHOTO button (84)

⑤ Cassette compartment (17)

⑥ Cassette compartment cover (17)

⑦ OPEN/EJECT  switch (17)

⑧ Tripod socket (29)

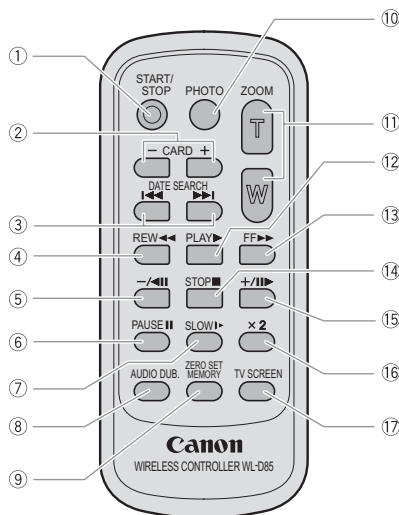


- ① START/STOP button (23, 88)
- ② CARD -/+ buttons (91)
- ③ DATE SEARCH ◀◀/▶▶ buttons (65)
- ④ REW ◀◀ button (30)
- ⑤ -/◀◀ button (31)
- ⑥ PAUSE || button (31)
- ⑦ SLOW ▶▶ button (31)
- ⑧ AUDIO DUB. button (76)
- ⑨ ZERO SET MEMORY button (64)

- ⑩ PHOTO button (84)
- ⑪ Zoom buttons (27)
- ⑫ PLAY ▶ button (30)
- ⑬ FF ▶▶ button (30)
- ⑭ STOP ■ button (30)
- ⑮ +/||▶ button (31)
- ⑯ ×2 button (31)
- ⑰ TV SCREEN button (106)

Preparing the Power Supply

Attaching the Battery Pack

1. Turn the **POWER** switch to **OFF**.
2. Attach the battery pack to the camcorder.
 - Remove the terminal cover of the battery pack.
 - Press lightly and slide the battery pack in the direction of the arrow until it clicks.

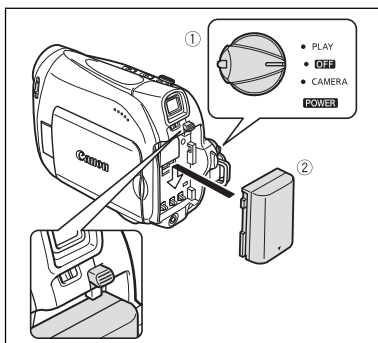


Charging the Battery Pack

1. Connect the power cord to the adapter.
2. Plug the power cord into a power outlet.
3. Connect the power adapter to the camcorder's DC IN terminal.

The CHARGE indicator starts flashing.
The indicator will stay on when the charging is completed.
4. When the charging is completed, disconnect the power adapter from the camcorder. Unplug the power cord from the power outlet and disconnect it from the adapter.
5. Remove the battery pack after use.


Press the BATT. button to remove the battery.

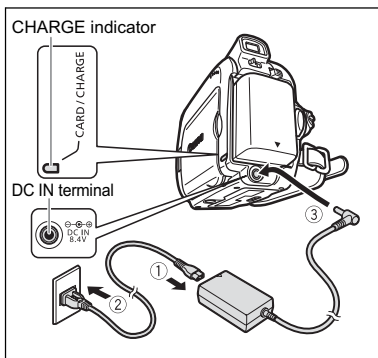

Using a Household Power Source

Connect to a household power source to use the camcorder without worrying about the battery power. You can keep the battery pack attached; the battery power will not be consumed.

1. Turn the **POWER** switch to **OFF**.
2. Connect the power cord to the power adapter.
3. Plug the power cord into a power outlet.
4. Connect the power adapter to the camcorder's DC IN terminal.

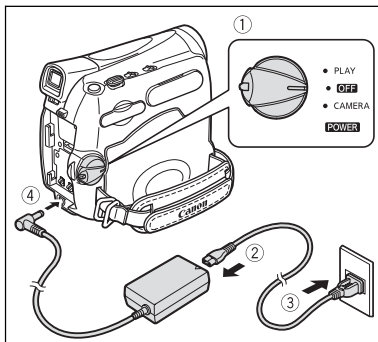

- Turn off the camcorder before connecting or disconnecting the power adapter.
- If the adapter is used close to a TV, it may cause picture interference. Move the adapter away from the TV or the antenna cable.
- Do not connect any products that are not expressly recommended to the camcorder's DC IN terminal or to the power adapter.
- You may hear some noise from the power adapter during use. This is not a malfunction.
- Do not disconnect and reconnect the power cord while charging a battery pack. Charging may stop. The battery pack may not be charged correctly even if the CHARGE indicator is continuously on. The battery pack may also not be charged correctly when a power outage occurs during charging. Remove the battery pack and attach it back to the camcorder.



- When the power adapter or the battery pack is defective, the CHARGE indicator flashes rapidly (at about 2 flashes/second) and charging stops.
- The CHARGE indicator informs you about the charge status.
 - 0-50%: Flashes once every second
 - More than 50%: Flashes twice every second
 - 100%: Continuously on
- We recommend charging the battery pack in temperatures between 10 °C and 30 °C (50 °F and 86 °F). Outside the temperature range of 0 °C to 40 °C (32 °F to 104 °F), the charging will not start. If the battery temperature goes outside this temperature range while charging, the CHARGE indicator will start flashing rapidly and the charging will stop.
- A lithium ion battery pack can be charged at any charge state. Unlike conventional battery packs, you do not need to completely use or discharge it before charging.
- We recommend that you prepare battery packs 2 to 3 times longer than you think you might need.
- To conserve battery power, turn off the camcorder instead of leaving it in record pause mode.

○ Charging, Recording and Playback Times


The following times are approximate and vary according to the charging, recording or playback conditions.

Battery Pack		BP-2L5	NB-2L	NB-2LH	BP-2L12	BP-2L14
Charging Time		95 min.	110 min.	125 min.	195 min.	220 min.
Max. Recording Time						
Viewfinder		90 min.	105 min.	125 min.	220 min.	270 min.
LCD	normal	85 min.	100 min.	120 min.	215 min.	260 min.
	bright	80 min.	90 min.	110 min.	200 min.	240 min.
Typical RecordingTime*						
Viewfinder		50 min.	55 min.	65 min.	120 min.	150 min.
LCD	normal	50 min.	55 min.	65 min.	120 min.	145 min.
	bright	45 min.	50 min.	60 min.	110 min.	140 min.
Playback Time		90 min.	105 min.	125 min.	225 min.	275 min.


* Approximate times for recording with repeated operations such as start/stop, zooming, power on/off. Actual time may be shorter.


Installing the Backup Battery

The backup battery (lithium button battery CR1616) allows the camcorder to retain the date, time (📅 21) and other camcorder settings while the power source is disconnected. Connect a power source to the camcorder when replacing the backup battery to retain the settings.

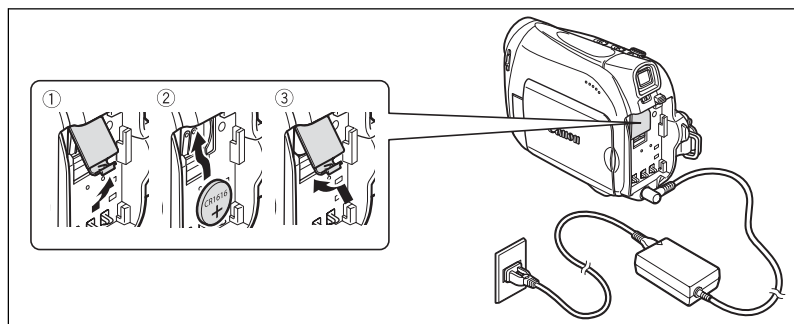


1. Open the backup battery cover.
2. Insert the backup battery with the + side facing out.
3. Close the cover.

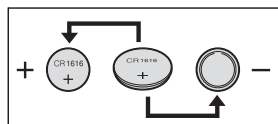

The backup battery has a life span of about a year. “” flashes in red to inform you that it needs to be replaced.

Loading/Unloading a Cassette

Use only videocassettes marked with the Mini DV logo.

1. Slide the **OPEN/EJECT**  switch and open the cassette compartment cover.



The cassette compartment opens automatically.

2. Load/unload the cassette.

- Load the cassette with the window facing the grip belt.
- Unload the cassette by pulling it straight out.

3. Press the **(PUSH)** mark on the cassette compartment until it clicks.

4. Wait for the cassette compartment to retract automatically and close the cassette compartment cover.

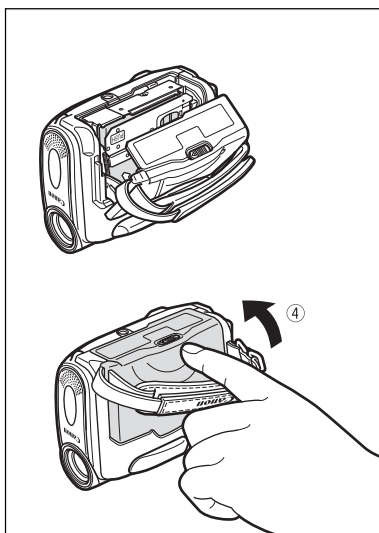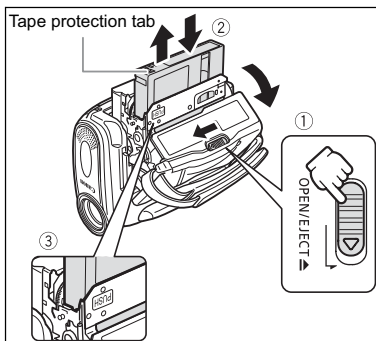

○ Do not interfere with the cassette compartment while it is opening or closing automatically, or attempt to close the cover before the cassette compartment has fully retracted.

○ Be careful not to get your fingers caught in the cassette compartment cover.




If the camcorder is connected to a power source, cassettes can be loaded/unloaded even if the **POWER** switch is set to **OFF**.

Preparing the Camcorder


Adjusting the Viewfinder (Dioptric Adjustment)

1. Turn on the camcorder and keep the LCD panel closed.
2. Adjust the dioptic adjustment lever.

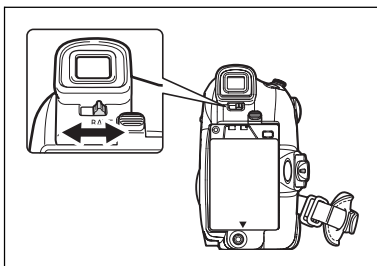


Fastening the Grip Belt

Adjust the grip belt so that you can reach the zoom lever with your index finger, and the start/stop button with your thumb.

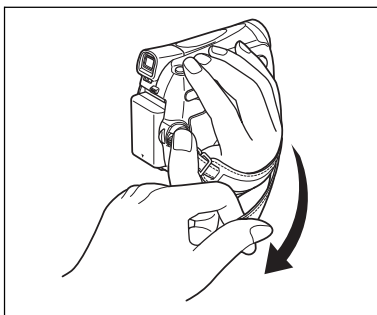

Using the Wireless Controller

Point it at the camcorder's remote sensor when you press the buttons.

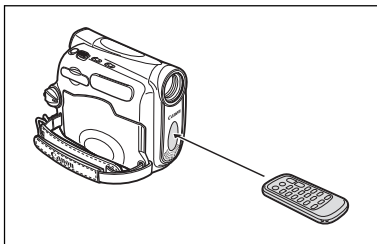


E

Inserting the Battery

The wireless controller operates with a lithium button battery CR2025.

1. Pull out the battery holder.
2. Place the lithium button battery with the + side facing up.
3. Insert the battery holder.

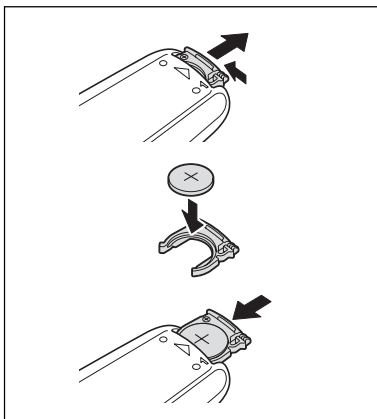

Basic Functions
Preparations




- The wireless controller may not work properly when the remote sensor is subjected to strong light sources or direct sunlight.
- If the wireless controller does not work, check if the remote sensor is set to [OFF] (OFF) (p. 67).
- When the camcorder cannot be operated with the wireless controller, or when it can only be operated at a very close range, replace the battery.

Adjusting the LCD Screen


Rotating the LCD Screen

Open the LCD panel 90 degrees.

- You can rotate the panel by 90 degrees outward.
- You can rotate the panel by 180 degrees inward.

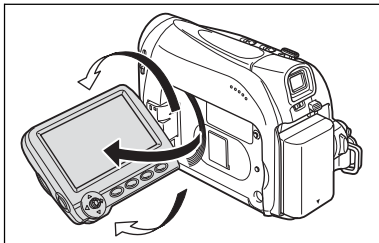

LCD Backlight

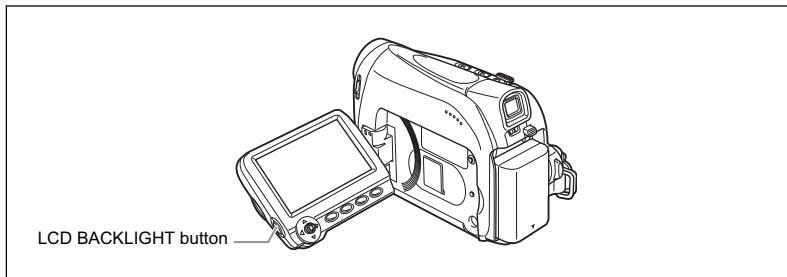

You can switch the brightness of the LCD screen between normal and bright by pressing the LCD BACKLIGHT button. This is useful for outdoor recordings.

Press the LCD BACKLIGHT button.




- This setting does not affect the brightness of the recording or the viewfinder screen.
- When using a battery pack, the camcorder retains the setting even if you change the position of the **POWER** switch.
- The battery usage time shortens when the LCD screen is set brighter (16).

Setting the Time Zone, Date and Time

Set the time zone, date and time when you first start using your camcorder, or when you have replaced the backup battery.


E

Setting the Time Zone/Daylight Saving Time

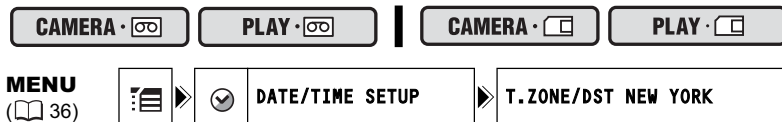

1. Press the FUNC. button to open the FUNC. menu.


The FUNC. menu will open. Continue the procedure with the joystick to open the setup menus.

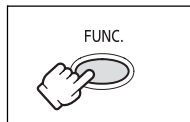

2. With the joystick select (▲▼) the [FUNC.] icon and press (⊙).

3. Select (▲▼) the [DATE/TIME SETUP] menu and press (⊙). Then, select (▲▼) the [T.ZONE/DST] option and press (⊙).


The time zone setting appears (see table on the next page). The default setting is New York or Singapore depending on the region.

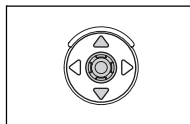

4. Select (▲▼) your time zone and press (⊙).


To adjust for daylight saving time, select the time zone with the “⌘” next to the area.

Setting the Date and Time

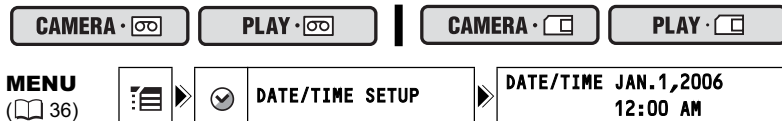

5. Select (▲▼) the [DATE/TIME] option and press (⊙).

A selection frame will be displayed around the date and the selection arrows around the month will flash.

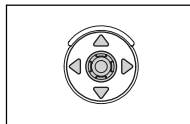


6. With the joystick change (▲▼) the month as required and move (▶) to the next field.

- The selection arrows will flash around the next field of the date/time.
- Set the day, year, hours and minutes in the same way.
- If you do not need to change all settings, you can use the joystick to move (◀▶) to the specific setting you want to change.

7. Press (⊙) to start the clock.

8. Press the FUNC. button to close the menu.

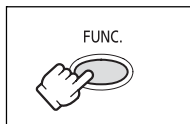

Time Zones and Difference from GMT/UTC.

London	GMT/UTC	Wellington (WELLGTON)	+12
Paris	+1	Samoa	-11
Cairo	+2	Honolulu	-10
Moscow	+3	Anchorage	-9
Dubai	+4	Los Angeles (L.A.)	-8
Karachi	+5	Denver	-7
Dacca	+6	Chicago	-6
Bankok	+7	New York	-5
Singapore	+8	Caracas	-4
Tokyo	+9	Rio de Janeiro (RIO)	-3
Sydney	+10	Fernando de Noronha (FERNANDO)	-2
Solomon	+11	Azores	-1



Once you have set time zone, date and time, you do not need to reset the clock each time you travel to another time zone. Just set the time zone to the one of your destination, and the camcorder automatically adjusts the clock.

Recording Movies on a Tape

E

Before You Begin Recording


Make a test recording first to check if the camcorder operates correctly. If necessary, clean the video heads (📖 113).

Recording

1. Open the lens cover (move the lens cover switch down to ☞).

2. Set the camcorder to **CAMERA** mode.


Set the **POWER** switch to **CAMERA** and the **TAPE/CARD** switch to 📀.

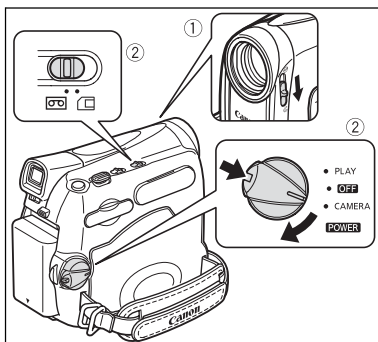

3. Open the LCD panel.

4. Press the start/stop button to begin recording.

Press the start/stop button again to pause the recording.

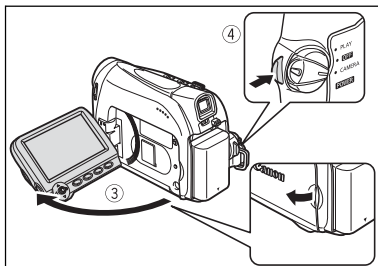

When You Have Finished Recording

1. Turn the **POWER** switch to **OFF**.
2. Close the LCD panel.
3. Close the lens cover (move the lens cover switch to ☐).
4. Unload the cassette.
5. Disconnect the power source.






- **About the LCD and viewfinder screen:** The screens are produced with extremely high-precision manufacturing techniques, with more than 99.99% of the pixels operating to specification. Less than 0.01% of the pixels may occasionally misfire or appear as black or green dots. This has no effect on the recorded image and does not constitute a malfunction.
- **When powered by a battery pack, the camcorder shuts off to save power if left without any operation for 5 minutes. Approximately 30 seconds before the camcorder shuts off the message “⚠ AUTO POWER OFF” will appear. To continue recording, turn the **POWER** switch to **OFF** and then back to **CAMERA**.**
- Wait until the tape counter stops completely before you start recording.
- When you do not remove the cassette, you can record the next scene without producing any noise or blank sections between the recordings even if you turn the camcorder off.
- Bright light may make it difficult to use the LCD screen. In such case, use the viewfinder instead.
- When recording near loud sounds (such as fireworks, drums or concerts), sound may become distorted or may be recorded not in the actual sound level. This is not a malfunction.

Allowing the Subject to Monitor the LCD Screen

You can rotate the LCD panel so that the screen faces in the same direction as the lens. The viewfinder switches on allowing you to use the viewfinder while the subject can monitor the screen.

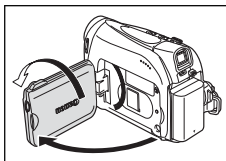

Displaying the Level Marker


Use the level marker as a horizontal guideline to frame subjects more accurately.



1. Press the **FUNC.** button to open the **FUNC.** menu.
2. With the joystick select (▲▼) the icon and press (⊗).
3. Select (▲▼) the **[DISPLAY SETUP/⊗]** menu and press (⊗). Then, select (▲▼) the **[LEVEL MARKER]** option and press (⊗).
4. Set it to **[ON]** and press (⊗) to save the changes.
5. Press the **FUNC.** button to close the menu.

The level marker will appear.

Reviewing and Searching when Recording

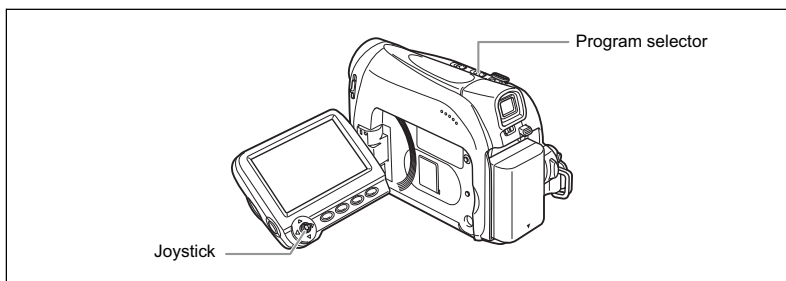

E

Basic Functions
Recording

CAMERA ·

PLAY ·


CAMERA ·

PLAY ·


Record Review

In record pause mode, this function allows you to review the last few seconds of your recording to check if it has been recorded properly.

1. Set the program selector to **P**.
2. If the joystick guide does not appear on screen, press () to display it.
3. Push the joystick () momentarily towards and release it.

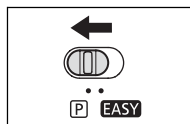



The camcorder rewinds the tape, plays back the last few seconds, and returns to record pause mode.



Record Search

In record pause mode, this function allows you to play back the tape (forward or reverse) to locate the point where you wish to begin recording.

1. Set the program selector to **P**.
2. If the joystick guide does not appear on screen, press () to display it.
3. Hold the joystick pushed () towards to search back towards the beginning of the recording or pushed () towards to search forward towards the end of the recording.

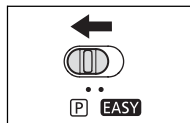


- Release the joystick at the point where you wish to begin recording.
- The camcorder returns to record pause mode.



When the camcorder shuts off automatically, the record review and record search functions will not work. To resume normal operation turn the **POWER** switch to **OFF** and then back to **CAMERA**.

Screen Displays during Recording

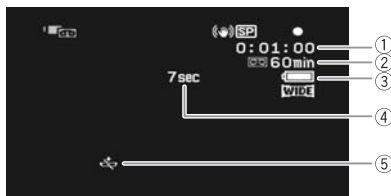

① Time Code

Indicates the recording time in hours, minutes and seconds.

② Remaining tape

Indicates the remaining time of the tape in minutes. "END" moves during recording. "END" flashes when the tape reaches the end.

- When the time left is less than 15 seconds, the remaining tape time may not appear.
- Depending on the type of the tape, the indication may not be displayed correctly.

③ Remaining battery charge

The battery symbol indicates the charge status of the battery pack.



- " " starts flashing in red when the battery pack is empty.
- When you attach an empty battery pack, the power may turn off without displaying " ".
- The actual battery charge may not be indicated accurately depending on the conditions under which the battery pack and the camcorder are used.

④ Recording reminder



The camcorder counts from 1 to 10 seconds when you start recording. This is helpful to avoid scenes that are too short.

⑤ When " " flashes

" " flashes in red when the lithium button battery is not installed, or when it needs replacing.

Zooming

The zoom is available in the **CAMERA** •  and **CAMERA** •  modes. When recording on the tape, in addition to the 25x optical zoom you can also use the digital zoom.

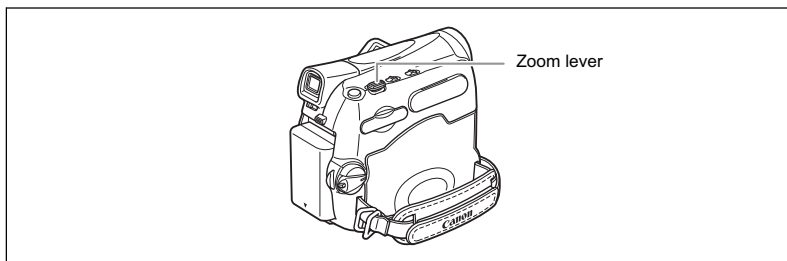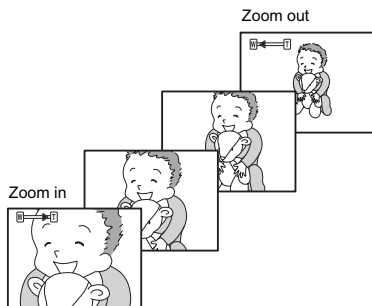


25x Optical Zoom



Move the zoom lever toward **W** to zoom out (wide-angle). Move it toward **T** to zoom in (telephoto).

You can also change the zoom speed ( 28).

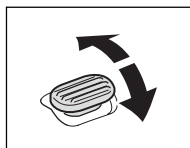

- You can also use the **T** and **W** buttons on the wireless controller. The zoom speed with the wireless controller will be the same as with the camcorder (when one of the fixed zoom speed levels is selected) or fixed at [SPEED 3] (when [VARIABLE] is selected).
- Keep at least 1 m (3.3 ft.) to the subject. At wide-angle, you can focus on a subject as close as 1 cm (0.39 in.).
- The zoom speed is slightly faster in record pause mode.


Digital Zoom

When the digital zoom is activated, the camcorder automatically switches between optical and digital zoom. With digital zoom, image resolution becomes lower the more you zoom in.

ZR700	ZR600
100x/1000x digital zoom	100x/800x digital zoom



1. Press the **FUNC.** button to open the **FUNC.** menu.
2. With the joystick select (**▲▼**) the **FUNC.** icon and press (**⊙**).
3. Select (**▲▼**) the **[CAMERA SETUP]** menu and press (**⊙**). Then, select (**▲▼**) the **[D.ZOOM]** option and press (**⊙**).
4. Select **[100x]** or **[1000x]** (**ZR700**) or **[800x]** (**ZR600**) and press (**⊙**) to save the changes.
5. Press the **FUNC.** button to close the menu.




- Digital zoom cannot be used in the **■** Night recording program.
- A zoom indicator appears for 4 seconds. It extends in light blue when the digital zoom is set to 100x, and extends further in dark blue when set to 1000x (**ZR700**) or 800x (**ZR600**).

Selecting the Zoom Speed

You can set the zoom speed to variable or to one of 3 levels of fixed zoom speeds. When set to **[VARIABLE]**, the zoom speed depends on how you activate the zoom lever. Press softly for a slower zoom or press more strongly for a faster zoom.



1. Press the **FUNC.** button to open the **FUNC.** menu.
2. With the joystick select (**▲▼**) the **FUNC.** icon and press (**⊙**).
3. Select (**▲▼**) the **[CAMERA SETUP]** menu and press (**⊙**). Then, select (**▲▼**) the **[ZOOM SPEED]** option and press (**⊙**).
4. Select a setting option and press (**⊙**) to save the changes.
5. Press the **FUNC.** button to close the menu.



The fastest zoom speed can be achieved with the **[VARIABLE]** setting. Among the fixed zoom speeds **[SPEED 3]** is the fastest, and **[SPEED 1]** the slowest.

Tips for Making Better Videos

Holding the Camcorder

For maximum stability, grip the camcorder in your right hand and keep your right elbow pressed against your body. If necessary, support the camcorder with your left hand. Be careful that your fingers do not touch the microphone or lens.



For More Stability

Lean against a wall



Put the camcorder on a table



Kneel on one knee



Use a tripod



Lie on your elbow


Lighting

When recording outdoors, we recommend recording with the sun at your back.



- When using a tripod, do not leave the viewfinder exposed to direct sunlight as it may melt (due to concentration of the light by the lens).
- Do not use tripods with fastening screws longer than 5.5 mm (0.2 in.) as it may damage the camcorder. The camcorder cannot be mounted on tripods with fixed (non-retractable) camera positioning pins.


Camera positioning pin

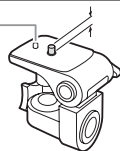


Playing Back a Tape

If the playback picture is distorted, clean the video heads using a Canon Head Cleaning Cassette or a commercially available digital video head-cleaning cassette (□ 113).

1. Set the camcorder to **PLAY** mode.

Set the **POWER** switch to **PLAY** and the **TAPE/CARD** switch to .

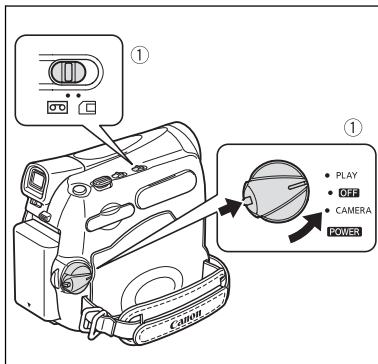


2. Open the LCD panel.

You can also close the LCD panel with the screen facing out.


3. If the joystick guide does not appear on screen, press to display it.

4. Push the joystick () towards to rewind the tape.

5. Push the joystick () towards to play back the tape.

Push () again to pause the playback.


6. Push the joystick () towards to stop the playback.

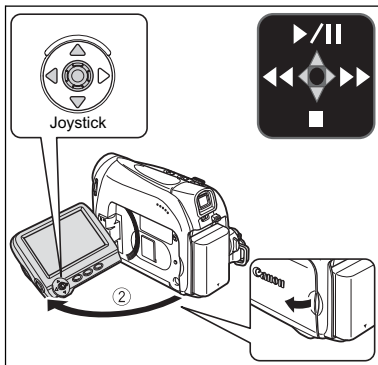

○ To use the viewfinder, close the LCD panel.

○ About the screen display: During playback, the time code gives the hours, minutes, seconds and frames. The remaining tape time may not appear when the time left is less than 15 seconds.

Special Playback Modes

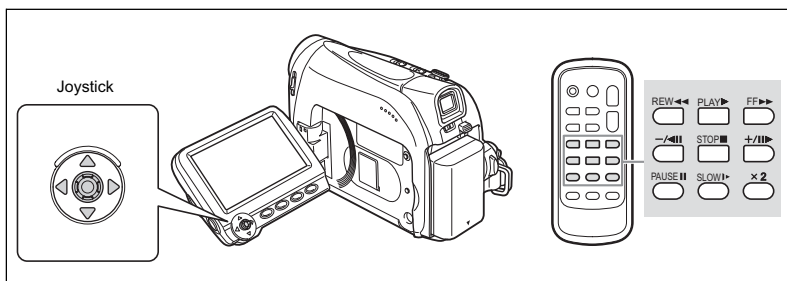

E

Basic Functions
Playback

►/II (Playback Pause)

During normal playback, push the joystick (▲) towards ►/II or press the PAUSE II button on the wireless controller.

►► (Fast Forward Playback) / ◀◀ (Rewind Playback)

Plays back the tape at 9.5 times normal speed (forward or reverse). During normal playback, hold the joystick pushed (►) towards ►► or pushed (◀) towards ◀◀. You can also press and hold the FF ►► or REW ◀◀ button on the wireless controller instead. Release the joystick or wireless controller button to return to normal playback.

-/◀II (Reverse Playback)

During normal playback, press the -/◀II button on the wireless controller. Press the PLAY ► button on the wireless controller or push the joystick (▲) towards ►/II to return to normal playback.

+/II► (Frame Advance) / -/◀II (Frame Reverse)

Plays back frame-by-frame. During playback pause, repeatedly press the +/II► or -/◀II button on the wireless controller. Hold the button pressed down to play back in continuous frame advance/reverse. Press the PLAY ► button on the wireless controller or push the joystick (▲) towards ►/II to return to normal playback.

SLOW I► (Slow Forward)/(Slow Reverse)

Plays back at about 1/3 normal speed. During normal or reverse playback, press the SLOW I► button on the wireless controller. Press the PLAY ► button on the wireless controller or push the joystick (▲) towards ►/II to return to normal playback.

x2 (Forward x2 Playback)/(Reverse x2 Playback)



Plays back at 2 times the normal speed. During normal or reverse playback, press the x2 button on the wireless controller. Press the PLAY ► button on the wireless controller or push the joystick (▲) towards ►/II to return to normal playback.




- There is no sound during special playback.
- The picture may become distorted during some special playback modes.
- The camcorder stops the tape automatically after 5 minutes in playback pause to protect the tape and video heads.

Adjusting the Volume

When you use the LCD screen for playback, the camcorder plays back the sound using the built-in speaker. The sound will be muted when the LCD panel is closed or when there is a video input from the AV terminal (**ZR700** only).

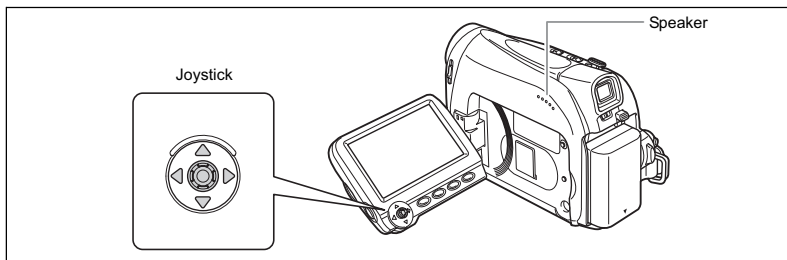


1. Press the FUNC. button to open the FUNC. menu.

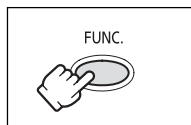

2. With the joystick select (▲▼) the speaker volume icon.

3. Adjust (◀▶) the volume as required.

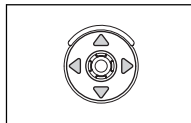


4. Press the FUNC. button to save the setting and close the menu.

If you turn off the volume completely the volume display will change to "000".

Playing Back on a TV Screen

Refer also to the TV or VCR instruction manual.

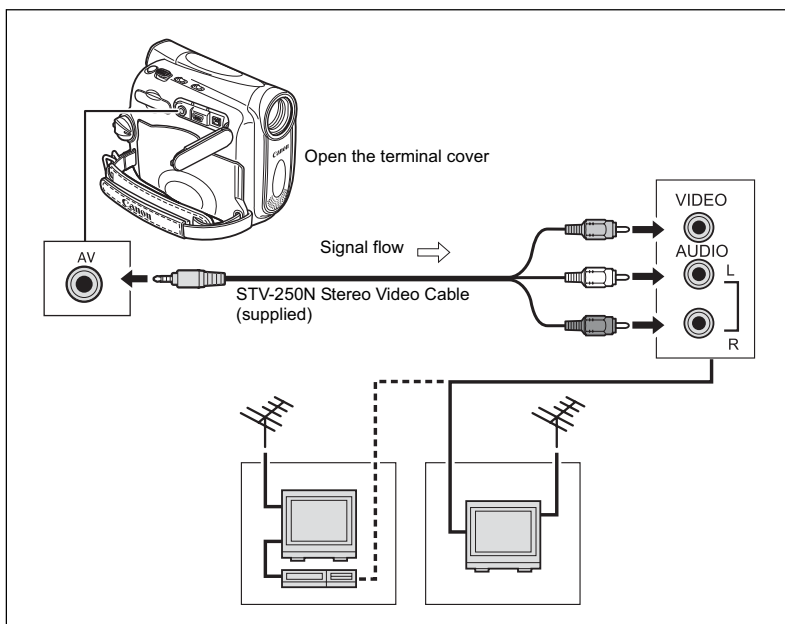

1. Turn off all the devices before starting the connections.

2. Connect the STV-250N Stereo Video Cable to the camcorder's AV terminal and the audio/video terminals on the TV/VCR.

Connect the white plug to the white audio terminal L (left), the red plug to the red audio terminal R (right) and the yellow plug to the yellow video terminal VIDEO.

3. If connecting to a TV, set the input selector to VIDEO. If connecting to a VCR, set the input selector to LINE.








○ We recommend powering the camcorder from a household power source.


○ TVs with Video ID-1 system: Recordings made in the widescreen mode will be automatically played back in widescreen mode.

Selecting the Type of TV

During playback set the [TV TYPE] option according to the TV set to which you connect the camcorder.




1. Press the **FUNC.** button to open the **FUNC.** menu.
2. With the joystick select (\blacktriangle) the  icon and press ().
3. Select (\blacktriangle) the [VCR SETUP] menu and press (). Then, select (\blacktriangle) the [TV TYPE] option and press ().
4. Select a setting option and press () to save the changes.
 - WIDE TV: TV sets with 16:9 aspect ratio.
 - NORMAL TV: TV sets with 4:3 aspect ratio
5. Press the **FUNC.** button to close the menu.

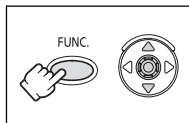


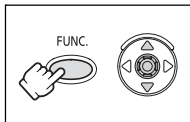
- Playing back recordings made in the widescreen mode on a normal TV: If the TV type is set to [NORMAL TV] the recording will be played back in "letterbox" display. If the TV type is set to [WIDE TV] the image will appear horizontally squeezed.
- If you connect the camcorder to a TV with Video ID-1 system, recordings made in the widescreen mode will be automatically played back in widescreen mode.
- When the TV type is set to [NORMAL TV] the digital effects are not available in **PLAY** mode.

Selecting the Audio Output Channel

You can select the output channels when playing back a tape with audio recorded on two channels.

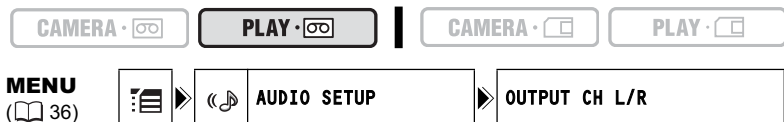


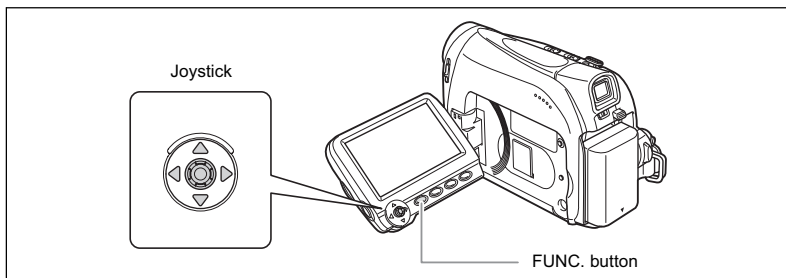
1. Press the FUNC. button to open the FUNC. menu.
2. With the joystick select (▲▼) the  icon and press (⊙).
3. Select (▲▼) the [AUDIO SETUP] menu and press (⊙). Then, select (▲▼) the [OUTPUT CH] option and press (⊙).
4. Select (▲▼) a setting option and press (⊙) to save the changes.
 - L/R: Stereo: L+R channels, Bilingual: Main+Sub.
 - L/L: Stereo: L channel, Bilingual: Main.
 - R/R: Stereo: R channel, Bilingual: Sub.
5. Press the FUNC. button to close the menu.



The setting resets to the [L/R] setting when you turn the camcorder off.



Menus and Settings


The camcorder's functions and settings are controlled from a series of menus that appear when you press the FUNC. button. Most basic functions appear on the first menu screen - the FUNC. menu. For more advanced settings you have to open the setup menu by selecting the  [MENU] option from the FUNC. menu.




Selecting Menus and Settings

FUNC. menu:



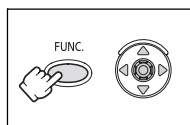






1. Press the FUNC. button to open the FUNC. menu.
2. With the joystick select () the icon of the function you want to change.
3. Select () a setting option from the bottom bar.



With some settings, you will need to press () or make further selections with the joystick. In such cases, a joystick icon (next to the bottom bar) or small arrows (around the setting option) will be displayed as an additional operation guide.

4. Press the FUNC. button to save the setting and close the menu.

Setup menus:

1. Press the FUNC. button to open the FUNC. menu.
2. With the joystick select () the  icon and press () .
3. Select () a setup menu and press () .
4. Select () a menu item and press () .
5. Select () a setting option and press () to save the changes.
6. Press the FUNC. button to close the menu.



- Pressing the FUNC. button at any time closes the menu.
- Items that are not available appear grayed out.
- The menu will not appear when you press the FUNC. button while recording movies.
- You can open the menu directly on the setup menu screen by holding the FUNC. button pressed for more than 2 seconds.


Menu and Default Settings

Default settings are shown in boldface.

E



































CAMERA 

















* The item will not appear in **EASY** mode.

Submenu	Menu Item	Setting Options	
FUNC. menu	Recording Programs*	PROGRAM AE , PORTRAIT , SPORTS , NIGHT , SNOW , BEACH , SUNSET , SPOTLIGHT , FIREWORKS	41
	White Balance	AUTO , DAYLIGHT , TUNGSTEN , SET	48
	Image Effect	IMAGE EFFECT OFF , VIVID , NEUTRAL , SOFT SKIN DETAIL	49
	Self Timer	SELF TIMER OFF , SELF TIMER ON	53
	Digital Effects	D.EFFECT OFF , FADER , EFFECT , CARD MIX	56
	Still Image Recording	STILL IMG REC OFF , FINE / 640x480, NORMAL /640x480	85
CAMERA SETUP	SHUTTR SPEED*	AUTO , 1/60, 1/100, 1/250, 1/500, 1/1000, 1/2000	50
	A.SL SHUTTER	ON , OFF	51
	D.ZOOM	ZR700	28
		OFF , 100X, 1000X	
	ZOOM SPEED	ZR600 OFF , 100X, 800X	28
	IMG STAB*	VARIABLE , SPEED 3 , SPEED 2 , SPEED 1	68
VCR SETUP	REC MODE	STD PLAY , LONG PLAY	54
AUDIO SETUP	WIND SCREEN*	AUTO , OFF	55
	AUDIO MODE	16bit, 12bit	55
DISPLAY SETUP/ 	BRIGHTNESS	+	67
	TV SCREEN	ON , OFF	106
	LEVEL MARKER	ON , OFF	24
	LANGUAGE	See list of languages.	66
	DEMO MODE	ON , OFF	69
SYSTEM SETUP	WL.REMOTE	ON , OFF	67
	BEEP	HIGH VOLUME , LOW VOLUME , OFF	67
	START-UP IMG	ON , OFF	68
	POWER SAVE	ON , OFF	24
	FILE NOS.	RESET , CONTINUOUS	83
DATE/TIME SETUP	T.ZONE/DST	See list of time zones.	21
	DATE/TIME	-	21
	DATE FORMAT	Y.M.D : 2006.1.1 AM12:00 M.D,Y : JAN.1,2006 12:00AM D.M.Y : 1.JAN.2006 12:00AM	66

Submenu	Menu Item	Setting Options	
FUNC. menu	Speaker Volume		32
	Recording Pause	-	72, 73
	End Search	-	63
	Digital Effects	D.EFFECT OFF , FADER , EFFECT	56
	Card Movie Size	320x240 , 160x120	82
	Still Image Quality	S.FINE/640x480 , S.NORMAL/640x480	81
VCR SETUP	REC MODE	STD PLAY , LONG PLAY	54
	AV \Rightarrow DV ¹	ON , OFF	75
	TV TYPE	NORMAL TV , WIDE TV	34
AUDIO SETUP	OUTPUT CH	L/R , L/L , R/R	35
	AUDIO DUB.	AUDIO IN , MIC. IN	76
	WIND SCREEN	AUTO , OFF	55
	12bit AUDIO	STEREO1 , STEREO2 , MIX/FIXED , MIX/VAR.	78
	MIX BALANCE	ST-1 ST-2	78
	AUDIO MODE	16bit , 12bit	55
DISPLAY SETUP/	BRIGHTNESS		67
	TV SCREEN	ON , OFF	106
	DISPLAYS	ON , OFF <PLAYBK>	106
	6SEC.DATE	ON , OFF	62
	DATA CODE	DATE , TIME , DATE & TIME	62
	LANGUAGE	See list of languages.	66
SYSTEM SETUP	WL.REMOTE	ON , OFF	67
	BEEP	HIGH VOLUME , LOW VOLUME , OFF	67
	START-UP IMG	ON , OFF	68
	FILE NOS.	RESET , CONTINUOUS	83
DATE/TIME SETUP	T.ZONE/DST	See list of time zones.	21
	DATE/TIME	-	21
	DATE FORMAT	Y.M.D : 2006.1.1 AM12:00 M.D.Y : JAN.1,2006 12:00AM D.M.Y : 1.JAN.2006 12:00AM	66

¹ **ZR700** only.

Submenu	Menu Item	Setting Options	
FUNC. menu	Recording Programs*	 PROGRAM AE ,  PORTRAIT ,  SPORTS ,  NIGHT ,  SNOW ,  BEACH ,  SUNSET ,  SPOTLIGHT ,  FIREWORKS	41
	White Balance	 AUTO ,  DAYLIGHT ,  TUNGSTEN ,  SET	48
	Image Effect	 IMAGE EFFECT OFF ,  VIVID ,  NEUTRAL ,  SOFT SKIN DETAIL	49
	Self Timer	 SELF TIMER OFF ,  SELF TIMER ON	53
	Digital Effects	 D.EFFECT OFF ,  BLK&WHT	56
	Movie Recording	 MOVIE REC OFF ,  320x240 ,  160x120	88
	Still Image Size/ Quality	L  1024x768 , S  640x480  SUPER FINE ,  FINE ,  NORMAL	81
CAMERA SETUP	SHUTTR SPEED*	AUTO , 1/60, 1/100, 1/250	50
	A.SL SHUTTER	ON , OFF	51
	ZOOM SPEED	VARIABLE , SPEED 3 , SPEED 2 , SPEED 1	28
	FOCUS PRI.*	ON: AiAF , ON: CENTER , OFF	90
	REVIEW	OFF , 2sec , 4sec , 6sec , 8sec , 10sec	87
AUDIO SETUP*	WIND SCREEN*	AUTO , OFF 	55
DISPLAY SETUP/ 	BRIGHTNESS		67
	TV SCREEN	ON , OFF	106
	LANGUAGE	See list of languages.	66
	DEMO MODE	ON , OFF	69
SYSTEM SETUP	WL.REMOTE	ON , OFF 	67
	BEEP	HIGH VOLUME , LOW VOLUME , OFF	67
	START-UP IMG	ON , OFF	68
	POWER SAVE	ON , OFF	24
	FILE NOS.	RESET , CONTINUOUS	83
DATE/TIME SETUP	T.ZONE/DST	See list of time zones.	21
	DATE/TIME	-	21
	DATE FORMAT	Y.M.D : 2006.1.1 AM12:00 M.D.Y : JAN.1,2006 12:00AM D.M.Y : 1.JAN.2006 12:00AM	66

Submenu	Menu Item	Setting Options	
FUNC. menu	Speaker Volume		32
	Slideshow	-	92
	Still Image Protection	 PROTECT OFF ,  PROTECT ON	93
	Print Order	0-99 COPIES	100
	Transfer Order	 TRANS.ORDER OFF ,  TRANS.ORDER ON	105
CARD OPERATIONS (Single Image Display)	 PRINT ORD. ALL ERASE	NO , YES	101
	 TRANS.ORD. ALL ERASE	NO , YES	105
	ERASE ALL IMAGES	NO , YES	94
	INITIALIZE	NO , YES	95
CARD OPERATIONS (Index Screen)	 PROTECT	-	93
	 PRINT ORDER	-	100
	 TRANSFER ORDER	-	105
DISPLAY SETUP/ 	BRIGHTNESS		67
	TV SCREEN	ON , OFF	106
	DISPLAYS	ON , OFF <PLAYBK>	106
	DATA CODE	DATE, TIME, DATE & TIME	62
	LANGUAGE	See list of languages.	66
SYSTEM SETUP	WL.REMOTE	ON , OFF (	67
	BEEP	HIGH VOLUME , LOW VOLUME , OFF	67
	START-UP IMG	ON , OFF	68
DATE/TIME SETUP	T.ZONE/DST	See list of time zones.	21
	DATE/TIME	-	21
	DATE FORMAT	Y.M.D : 2006.1.1 AM12:00 M.D.Y : JAN.1,2006 12:00AM D.M.Y : 1.JAN.2006 12:00AM	66
  PRINT	Appears when connecting a PictBridge compatible printer.		101

Using the Recording Programs

E

EASY Easy Recording Program

The camcorder adjusts focus, exposure and other settings automatically, allowing you to just point and shoot.



P Recording Programs

P Program AE

The camcorder adjusts focus, exposure and other settings automatically. However, you have the option of adjusting the settings manually.



Portrait

Use this mode to give accent to your subject by blurring the background or foreground. The blur effect increases the more you zoom to telephoto.



Sports

Use this mode to record sports scenes (such as tennis or golf) or moving objects (such as roller coasters).



Night

Use this mode to record in dimly lit places.



Snow

Use this mode to record in bright ski resorts. It prevents the subject from being underexposed.



Beach

Use this mode to record on a sunny beach. It prevents the subject from being underexposed.



Advanced Functions
Recording

Sunset

Use this mode to record sunsets in vibrant colors.



Spotlight


Use this mode to record spotlight scenes.



Fireworks

Use this mode to record fireworks.



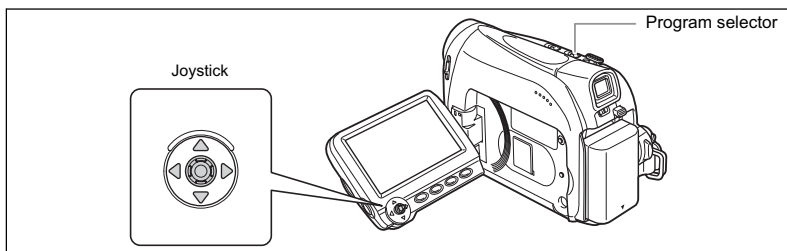

E

Availability of Functions in Each Mode:

Program Selector	EASY	P										
Recording Program		P										
Image Stabilizer	× (on)	○										
Focus	× (A)	○										
White Balance	× (A)	○	×									
Wind Screen	× (A)	○										
Shutter Speed	× (A)	○	× (A)									
Exposure Adjustment	× (A)	○										×
Digital Effects	×	○										
Card Mix	×	○										

○: Available ×: Not available A: Auto setting


Shaded area: Can be used only in **CAMERA** mode.

Selecting the Easy Recording Program



Set the program selector to **EASY**.

“” appears.

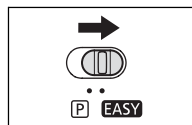

Advanced Functions
Recording

Selecting a Recording Program

CAMERA 

PLAY 

CAMERA 

PLAY 


MENU

( 36)



PROGRAM AE


1. Set the program selector to .

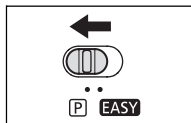

2. Press the FUNC. button to open the FUNC. menu.

3. With the joystick select () the recording programs icon.


4. Select () the recording program from the options on the bottom bar.

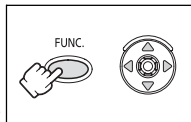

5. Press the FUNC. button to save the setting and close the menu.

The symbol of the recording program selected appears.




- Do not change the recording program while recording as the brightness of the image may change abruptly.
- Portrait/Sports mode:
The picture may not appear smooth when played back.
- Snow/Beach mode:
 - The subject may become overexposed in dark surroundings. Check the image on the screen.
 - The picture may not appear smooth when played back.
- Night mode:
 - Moving subjects may leave a trailing afterimage.
 - Picture quality may not be as good as in other modes.
 - White points may appear on the screen.
 - Autofocus may not work as well as in other modes. In such case, adjust the focus manually.
 - The digital zoom cannot be used with this recording program.
- Fireworks mode:
To avoid camcorder shake, we recommend using a tripod. Use a tripod when recording in  mode as the shutter speed slows down.

Adjusting the Exposure Manually

Adjust the exposure when a backlit subject becomes underexposed, or overexposed due to bright light.

E

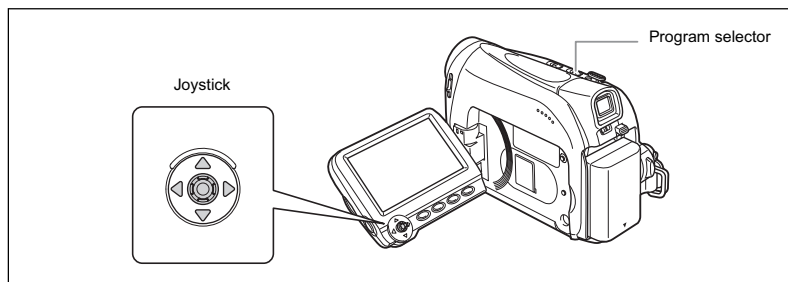


CAMERA •

PLAY •

CAMERA •

PLAY •

1. Set the program selector to .

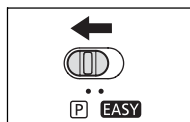

2. If the joystick guide does not appear on screen, press to display it.
3. Push the joystick () towards [EXP] to enter the exposure lock mode.



[EXP] on the joystick guide will be displayed in light blue and the exposure adjustment indicator and the neutral value " ± 0 " appear on the screen.

4. Adjust () the brightness of the image as necessary.

To return to the automatic exposure, push the joystick () towards [EXP] once more. The exposure adjustment indicator will disappear and [EXP] will turn white again.

5. Push the joystick () towards [BACK] to save the exposure setting.

- When you operate the zoom during exposure lock, the brightness of the image may change.
- The adjustment range depends on the brightness at the time you locked the exposure.

6. If necessary, press again to hide the joystick guide.



The manual exposure setting will reset to auto exposure when you turn the camcorder off or change the recording program.

Adjusting the Focus Manually

Autofocus may not work well on the following subjects. In such case, focus manually.

Reflective surfaces



Subjects with low contrast or without vertical lines




Fast Moving Subjects



Through dirty or wet windows



Night Scenes

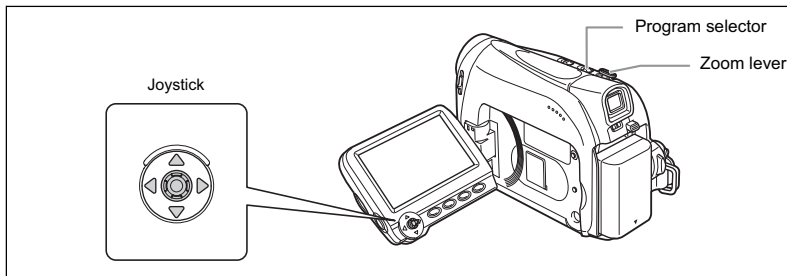


CAMERA •

PLAY •

CAMERA •


PLAY •

1. Set the program selector to **P**.

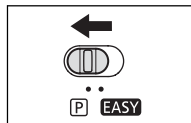

2. Adjust the zoom.

When you operate the zoom after adjusting the focus, the subject may not stay in focus. Adjust the zoom before the focus.

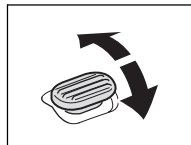

3. If the joystick guide does not appear on screen, press to display it.



4. Push the joystick () towards **[FOCUS]** to activate the manual focus.

[FOCUS] on the joystick guide will be displayed in light blue and "MF" appears on the screen.

5. Adjust () the focus as necessary.

- Push the joystick () towards for a farther focal distance or push it () towards for a closer focal distance.

- To return to autofocus, push the joystick (▼) towards [FOCUS] once more. “MF” will disappear and [FOCUS] will turn white again.

6. Push the joystick (▲) towards [BACK] to save the focus adjustment.

7. If necessary, press (⊗) again to hide the joystick guide.

E



The manual focus will reset to autofocus when you set the program selector to **EASY**.

Infinity Focus

Use this function when you wish to focus on faraway subjects such as mountains or fireworks.

1. In the manual focus mode press (⊗) to display the joystick guide.

2. Keep the joystick pushed (▼) towards [FOCUS] for more than 2 seconds.

- At first, “MF” will appear on the screen and then it will be replaced by the “∞” symbol.
- In the infinity focus mode: If you operate the zoom or the joystick (◀▶) or if you turn the camcorder off, the infinity focus will be canceled and the camcorder will return to manual focus.


3. Push the joystick (▲) towards [BACK] to save the focus adjustment.

4. If necessary, press (⊗) again to hide the joystick guide.

Setting the White Balance

You can use the preset modes to reproduce colors more accurately, or set a custom white balance to obtain the optimal setting.

AWB AUTO	Settings are automatically set by the camcorder.
☀ DAYLIGHT	For recording outdoors on a bright day.
💡 TUNGSTEN	For recording under tungsten and tungsten type (3-wavelength) fluorescent lighting.
🎨 SET	Use the custom white balance setting to make white subjects appear white under colored lighting.

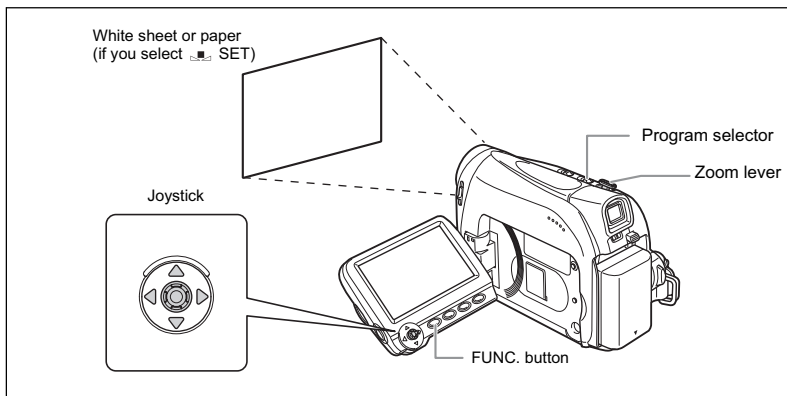

MENU
(36)



1. Set the program selector to **P**.
2. Press the **FUNC.** button to open the **FUNC.** menu.
3. With the joystick select (**▲▼**) the white balance icon.
4. Select (**◀▶**) the white balance setting from the options on the bottom bar.

If you select a white balance setting other than **🎨 [SET]**, continue to directly to step 6.

To set the custom white balance when you select **🎨 [SET]**:

5. Point the camcorder at a white object, zoom in until it fills the whole screen and press (**⊗**).
 - Keep the camcorder zoomed in at the white object until step 6 is completed.
 - The “**🎨**” icon flashes and stops flashing when the adjustment is completed.
6. Press the **FUNC.** button to save the setting and close the menu.



- Use the auto setting for normal outdoor scenes.
- When the program selector is set to **EASY** the white balance is preset to [AUTO].
- The camcorder retains the custom white balance setting even if you turn it off.
- When you have set the custom white balance:
 - Depending on the light source, " " may keep flashing. The result will still be better than with the auto setting.
 - Reset the white balance when the lighting condition changes.
 - Turn off the digital zoom.
- Custom white balance may provide better results in the following cases:
 - Changing lighting conditions
 - Close-ups
 - Subjects in a single color (sky, sea or forest)
 - Under mercury lamps or certain types of fluorescent lights

Selecting an Image Effect

You can record with different color saturation and contrast effects.

IMAGE EFFECT OFF	Records with no image enhancing effects.
VIVID	Emphasizes the contrast and color saturation.
NEUTRAL	Tones down the contrast and color saturation.
SOFT SKIN DETAIL	Softens the details in the skin tone area for a more complimentary appearance.



MENU

(36)



1. Press the FUNC. button to open the FUNC. menu.
2. With the joystick select () the image effects icon.
3. Select () the image effect from the options on the bottom bar.
4. Press the FUNC. button to save the setting and close the menu.



- The image effects cannot be used when the program selector is set to **EASY**.
- [SOFT SKIN DETAIL]: To obtain the best effect, use this function when recording a person in close-up. Note that areas similar to the skin color may lack in detail.

Setting the Shutter Speed

You can adjust the shutter speed manually to make stable shots of fast moving subjects.
Available shutter speed settings:

CAMERA AUTO, 1/60, 1/100, 1/250, 1/500, 1/1000, 1/2000

CAMERA AUTO, 1/60, 1/100, 1/250

CAMERA

PLAY

CAMERA

PLAY

MENU
(36)



CAMERA SETUP





SHUTTR SPEED AUTO

1. Set the program selector to **P**.
2. Press the **FUNC.** button to open the **FUNC.** menu.
3. With the joystick select (**▲▼**) the recording program icon and select (**◀▶**) the **P** [PROGRAM AE] program.
4. With the joystick select (**▲▼**) the icon and press ().
5. Select (**▲▼**) the [CAMERA SETUP] menu and press (). Then, select (**▲▼**) the [SHUTTR SPEED] option and press ().
6. Select (**▲▼**) a setting option and press () to save the changes.
7. Press the **FUNC.** button to close the menu.




- If the shutter speed is set to 1/500 or higher in **CAMERA** mode and you switch to **CAMERA** mode, it automatically changes to 1/250.
- Do not point the camcorder directly at the sun when the shutter speed is set to 1/1000 or higher.
- The image may flicker when recording with high shutter speeds.
- Recording under fluorescent lights (**CAMERA**): In the Easy Recording, **P** Program AE or Night recording programs, the camcorder automatically detects the flicker of fluorescent lighting and adjusts the shutter speed accordingly. However, if the screen starts to flicker, select the **P** Program AE recording program and set the shutter speed to 1/100.
- The shutter speed resets to [AUTO] when you set the program selector to **EASY** or when you change the recording program.
- Guidelines for Recording with High Shutter Speeds:
 - Outdoor sports such as golf or tennis: 1/2000
 - Moving objects such as cars or roller coasters: 1/1000, 1/500 or 1/250
 - Indoor sports such as basketball: 1/100





Auto Slow Shutter

In the ☐ Easy Recording mode or when the shutter speed is set to [AUTO] in the **P** Program AE recording program, the camcorder uses shutter speeds down to 1/30 (**CAMERA** · ) and 1/15 (**CAMERA** · ). This allows you to obtain a brighter recording in places with insufficient lighting. However, you can set the camcorder not to use a slow shutter speed.




1. Open the FUNC. menu, select (**▲▼**) the  icon and press (**⊗**).
2. Select (**▲▼**) the [CAMERA SETUP] menu and press (**⊗**). Then, select (**▲▼**) the [A.SL SHUTTER] option and press (**⊗**).
3. Set (**▲▼**) it to [OFF] and press (**⊗**) to save the changes, then close the menu.



- When set to [ON], moving subjects may leave a trailing afterimage.
- The camcorder retains the setting separately in **CAMERA** ·  and **CAMERA** ·  mode.
- If “” (camcorder shake warning) appears in **CAMERA** ·  mode, stabilize the camcorder, for example, by mounting it on a tripod or placing it on a table.

ZR700 Using the **LED Light**

You can turn on the LED light at any time regardless of the recording program.

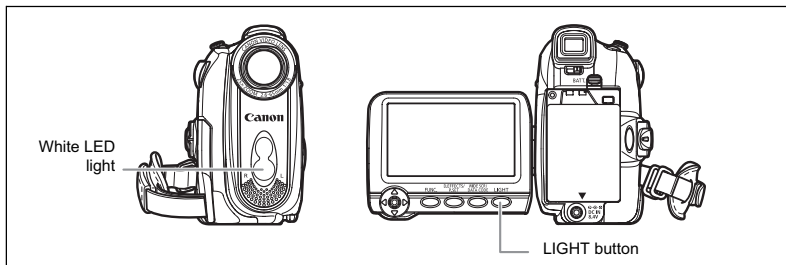


CAMERA · 

PLAY · 

CAMERA · 

PLAY · 

Press the LIGHT button.

- “” appears on the screen.
- The LED light turns on and off with each press of the button.




- Do not point the LED light at persons while they are driving.
- Do not look at the LED light for a long time.
- Do not use the LED light close to people's eyes.

Using the Self-Timer

The self-timer can be used for recording movies or still images.

E

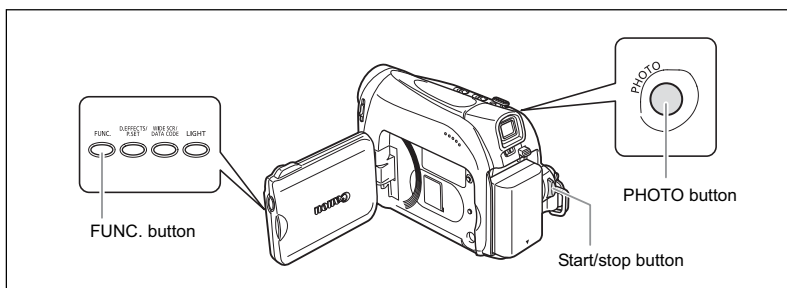

MENU
(36)



1. Open the **FUNC.** menu and select (▲▼) the self timer icon.
2. Set (◀▶) it to [SELF TIMER ON] and close the menu.

When recording movies:

3. **Press the start/stop button.**

The camcorder starts recording after a 10-second countdown (2 seconds when using the START/STOP button of the wireless controller). The countdown appears on the screen.

When recording still images:

3. **Press the PHOTO button, first halfway to activate the autofocus and then fully.**


The camcorder will record the image after a 10-second countdown (2 seconds when using the PHOTO button of the wireless controller). The countdown appears on the screen.



- To cancel the self timer, select (◀▶) [SELF TIMER OFF] in step 2 above. Once the countdown has begun, you can also press the start/stop button (when recording movies) or the PHOTO button (when recording still images) to cancel the self-timer.
- The self-timer will be canceled when you turn off the camcorder.

Changing the Recording Mode (SP/LP)

You can choose between SP (standard play) and LP (long play). LP extends the tape usage by 1.5 times.

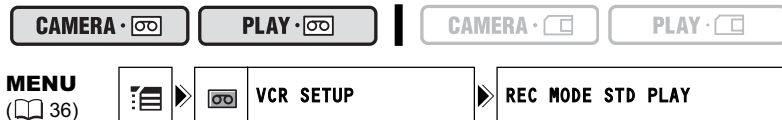

1. Open the FUNC. menu, select (▲▼) the icon and press (⊗).
2. Select (▲▼) the [VCR SETUP] menu and press (⊗). Then, select (▲▼) the [REC MODE] option and press (⊗).
3. Set (▲▼) it to [STD PLAY] or [LONG PLAY] and press (⊗) to save the changes, then close the menu.



- Tapes recorded in LP mode cannot be used for audio dubbing.
- Depending on the nature and usage condition of the tape, picture and sound recorded in LP mode may be distorted. We recommend using the SP mode for important recordings.



- If you record in both SP and LP modes on the same tape, the playback picture may become distorted and the time code may not be written correctly.
- If you play back a tape that has been recorded in LP mode with another digital device on this camcorder, or vice versa, picture and sound may become distorted.


Audio Recording

E

Changing the Audio Mode

You can record sound in two audio modes—16-bit and 12-bit. The 12-bit mode records sound on two channels (stereo 1), leaving 2 channels free (stereo 2) for adding new sound later. Select the 16-bit mode for higher sound quality.





1. Open the FUNC. menu, select (▲▼) the  icon and press (⊗).
2. Select (▲▼) the [AUDIO SETUP] menu and press (⊗). Then, select (▲▼) the [AUDIO MODE] option and press (⊗).
3. Set (▲▼) it to [16bit] or [12bit] and press (⊗) to save the changes, then close the menu.


The selected audio mode is displayed for approximately 4 seconds.

Wind Screen

The camcorder reduces the wind noise automatically. However, you can turn off the wind screen when recording indoors, or when you want the microphone to be as sensitive as possible.

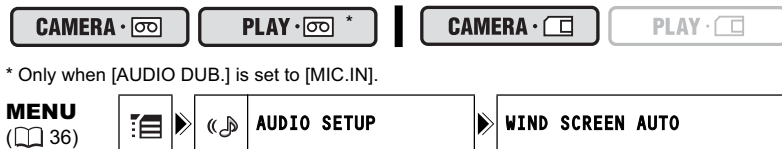

1. Open the FUNC. menu, select (▲▼) the  icon and press (⊗).
2. Select (▲▼) the [AUDIO SETUP] menu and press (⊗). Then, select (▲▼) the [WIND SCREEN] option and press (⊗).
3. Set (▲▼) it to [OFF] and press (⊗) to save the changes, then close the menu.

 appears when you turn the wind screen off.

Using Digital Effects

Faders (📖 58)

Begin or end scenes with a fade to or from black.

Fade Trigger (FADE-T)



Wipe (WIPE)



Corner Wipe (CORNER)



Jump (JUMP)



Flip (FLIP)




Puzzle (PUZZLE)




Zigzag (ZIGZAG)



Beam (BEAM)












Tide (TIDE)



Effects (58)

Add flavor to your recordings.





Black and White (BLK&WHT) 	Sepia (SEPIA) 	Art (ART) 
Mosaic (MOSAIC) 	Ball (BALL) 	Cube (CUBE) 
Wave (WAVE) 	Color Mask (COLOR M.) 	Mirror (MIRROR) 

Card Mix (59)

You can choose one of the sample images from the collection on the supplied disk (picture frames and backgrounds) and combine it with the live video recording. The live video recording will appear in place of the light area of the card mix image.



Availability of Digital Effects by Operating Modes:

	CAMERA 		PLAY 	CAMERA 	PLAY 
	Movies	Still Images			
Faders	○	×	○ ¹	×	×
Effects	○	×	○ ¹	○ ²	×
Card Mix	○	×	×	×	×

○: Available ×: Not available

¹: Not available if the TV type is set to [NORMAL TV].

²: Black and White only.

Selecting a Fader

In **CAMERA** mode, set the program selector to **P**.




MENU

(36)



1. Open the **FUNC.** menu and select () the digital effects icon.
2. Select () the **[FADER]** option and press () .
3. Select () a setting option, press () and close the menu.


The symbol of the selected fader will appear on screen.

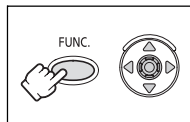

CAMERA mode :

4. **Fade in:** In record pause mode, press the **D.EFFECTS** button and begin recording by pressing the start/stop button.
Fade out: During recording, press the **D.EFFECTS** button and pause recording by pressing the start/stop button.


The fader can be activated/deactivated by pressing the **D.EFFECTS** button.

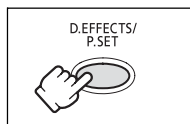

PLAY mode :

4. **Fade in:** In playback pause mode, press the **D.EFFECTS** button and begin playback by pushing the joystick () towards /III.
Fade out: During playback, press the **D.EFFECTS** button and pause playback by pushing the joystick () towards /III.

The fader can be activated/deactivated by pressing the **D.EFFECTS** button.

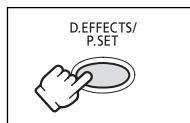

Selecting an Effect

In **CAMERA** mode, set the program selector to **P**.




MENU

(36)




1. Open the **FUNC.** menu and select () the digital effects icon.
2. Select () the **[EFFECT]** option and press () .
3. Select () a setting option, press () and close the menu.

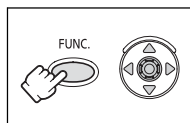

The symbol of the selected effect will appear on screen.

4. Press the D.EFFECTS button.

- The symbol of the selected effect will turn green.
- The effect can be activated/deactivated by pressing the D.EFFECTS button.

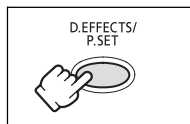

E

Selecting an Effect in **CAMERA** Mode

When recording still images, only the [BLK&WHT] effect is available. Select it with the following procedure and activate it as described in step 4 above.



1. Open the FUNC. menu and select (▲▼) the digital effects icon.
2. Select (◀▶) the [BLK&WHT] option and close the menu.
“ ” will appear on screen.

Selecting the Card Mix Effect



MENU

(36)



1. Upload a sample image from the supplied disk to the memory card.
Refer to *Adding Still Images from Your Computer to the Memory Card* in the *Digital Video Software* instruction manual (PDF file).
2. Set the program selector to **P**.
3. Open the FUNC. menu and select (▲▼) the digital effects icon.
4. Select (◀▶) the [CARD MIX] option and press ().
5. Select (◀▶) the still image to mix with the recording and push the joystick (▼) to adjust the mix level.
6. Adjust (◀▶) the mix level, press () and close the menu.
“ ” will appear on screen.
7. Press the D.EFFECTS button.
“ ” will turn green.


The effect can be activated/deactivated by pressing the D.EFFECTS button.



- Turn off the digital effect when you do not use it.
- The camcorder retains the setting even if you turn it off or change the recording program. However, you need to select again the still image to be used with the Card Mix effect.
- The image quality may be slightly lower with digital effects.
- Digital effects cannot be used in the following cases:
 - When the program selector is set to **EASY**.
 - During DV dubbing.
- Faders cannot be used when Card Mix is activated.

Widescreen TV Recording (16:9)

The camcorder uses the full width of the CCD providing high-resolution 16:9 recording.

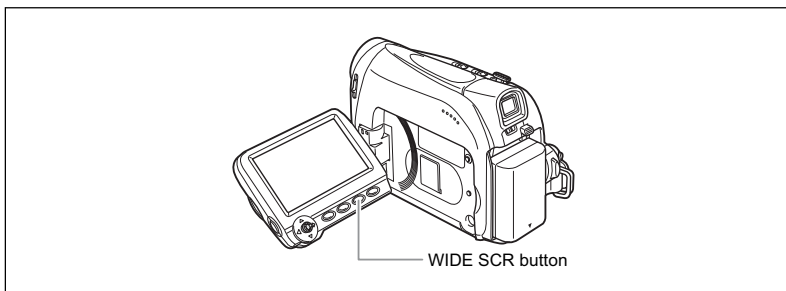

Press the WIDE SCR button.


- “WIDE” disappears and the picture changes to 4:3 aspect ratio.
- On the LCD screen: Widescreen video will display normally; video in 4:3 aspect ratio will appear with black side bars.
- On the viewfinder screen: Widescreen video will appear in “letterbox” display; video in 4:3 aspect ratio will display normally.



- Simultaneous recording on a memory card cannot be used when the widescreen mode is selected.
- Playing back recordings made in the widescreen mode on a normal TV: If the TV type is set to [NORMAL TV] the recording will be played back in “letterbox” display. If the TV type is set to [WIDE TV] the image will appear horizontally squeezed (□ 34).
- If you connect the camcorder to a TV with Video ID-1 system, recordings made in the widescreen mode will be automatically played back in widescreen mode.

Magnifying the Image

The playback image can be magnified up to 5 times.

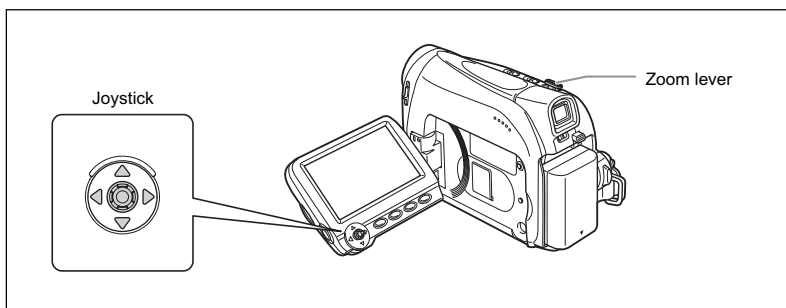

CAMERA •


PLAY •

CAMERA •

PLAY •


1. Move the zoom lever toward **T**.

- The image is magnified by 2 times.
- A frame appears indicating the position of the magnified area.
- To further enlarge the image, move the zoom lever toward **T**.
To shrink the image below 2 times magnification, move the zoom lever toward **W**.

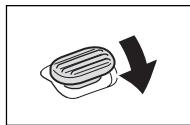

2. Select (▲▼, ◀▶) the magnified area with the joystick.

To cancel the magnification, move the zoom lever toward **W** until the frame disappears.

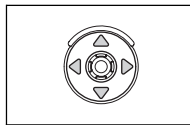


Advanced Functions
Playback



- Movies played back from a memory card cannot be magnified.
- While the magnification position frame is displayed it will replace the joystick guide. Cancel the magnification to return to normal playback of movies or still images.

Displaying the Data Code

The camcorder maintains a data code containing the recording date and time. You can select the data code combination and display it during playback.

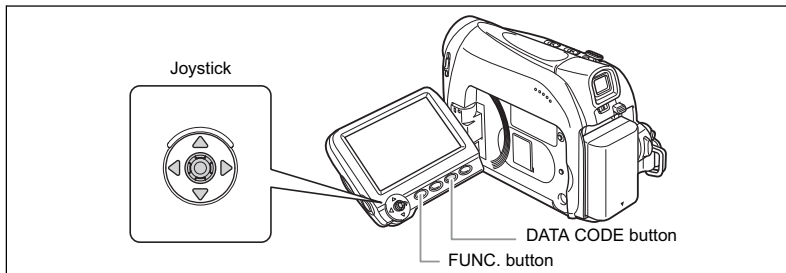

1. Open the FUNC. menu, select (▲▼) the icon and press (⊗).
2. Select (▲▼) the [DISPLAY SETUP/🗨️] menu and press (⊗). Then, select (▲▼) the [DATA CODE] option and press (⊗).
3. Select a setting option and press (⊗) to save the changes, then close the menu.
4. To display the data code during playback: Press the DATA CODE button.



The data code will not display the next time you turn on the camcorder.

Six-Second Auto Date

Date and time appear for 6 seconds when you begin playback, or to indicate that date or time zone has changed.




1. Open the FUNC. menu, select (▲▼) the icon and press (⊗).
2. Select (▲▼) the [DISPLAY SETUP/🗨️] menu and press (⊗). Then, select (▲▼) the [6SEC.DATE] option and press (⊗).
3. Select a setting option and press (⊗) to save the changes, then close the menu.

End Search

When you have played back a tape, you can use this function to locate the end of the last recorded scene.

E

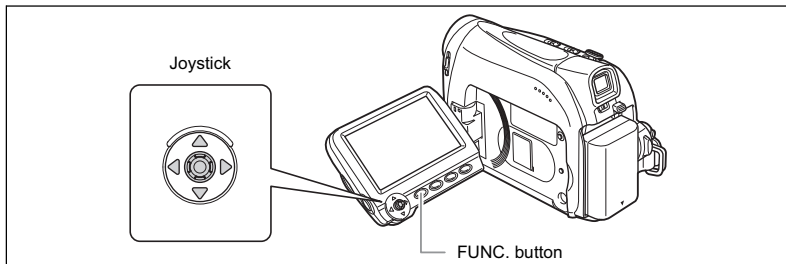

In stop mode:

1. **Open the FUNC. menu, select (▲▼) the end search icon ➡| and press (⊗).**
2. **Select (◀▶) [EXECUTE] and press (⊗) to start the search.**
 - "END SEARCH" appears.
 - The camcorder rewinds/fast forwards the tape, plays back the last few seconds of the recording and stops the tape.
 - Operating the joystick (▲▼, ▶▶) will cancel the search.




- End search cannot be used once you unload the cassette.
- End search may not work properly if a blank section exists on the tape.
- You cannot use end search to locate the editing end of audio dubbing.

Returning to a Pre-marked Position

If you wish to return to a particular scene later, mark the point with the zero set memory and the tape will stop at that point when you rewind/fast forward the tape.

This function is operated with the wireless controller.

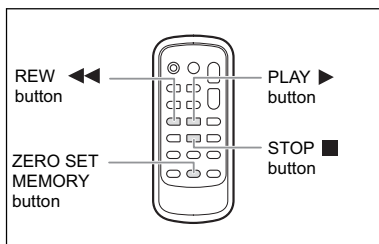


1. Press the ZERO SET MEMORY button at the point you wish to return to later.

- "0:00:00 M" appears.
- To cancel, press the ZERO SET MEMORY button again.

2. When you have finished playback, rewind the tape.

- "◀◀" or "▶▶" is displayed with a blue background.
- The tape stops automatically at "0:00:00".
- The tape counter changes to time code.

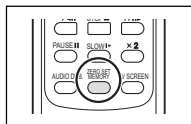


The zero set memory may not function correctly when the time code has not been recorded consecutively.

Date Search

You can locate the change of the date/time zone with the date search function.

This function is operated with the wireless controller.

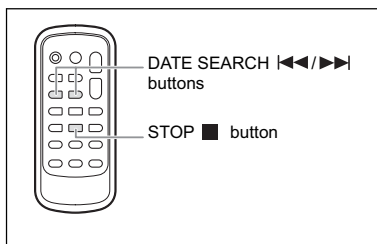


E



Press the ◀◀ or ▶▶ button to begin searching.

- Press more than once to search for further date changes (up to 10 times).
- Press the STOP ■ button to stop searching.

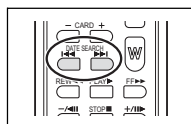


- A recording of longer than a minute per date/area is required.
- Date search may not function if the data code is not correctly displayed.

Changing the Display Language

The language used for screen display and menu items can be changed. The available set of languages varies depending on the region. Follow the procedure below to check which set of languages are provided with your camcorder.

Language Set A	English, German, Spanish, French, Italian, Polish, Russian, Simplified Chinese, Japanese
Language Set B	English, Simplified Chinese, Traditional Chinese, Korean

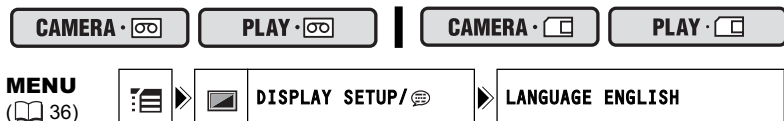


1. Open the FUNC. menu, select (▲▼) the icon and press (⊗).
2. Select (▲▼) the [DISPLAY SETUP/] menu and press (⊗). Then, select (▲▼) the [LANGUAGE] option and press (⊗).
3. Select a language and press (⊗) to save the changes, then close the menu.



- If you have mistakenly changed the language, follow the mark next to the menu item to change the setting.
- The displays "FUNC." and "P.SET" at the bottom of the screen refer to the button names on the camcorder and will not change when you change the language.

Changing the Date Format

You can select between three date formats. For example, [JAN. 1, 2006], [1. JAN. 2006] and [2006. 1. 1].

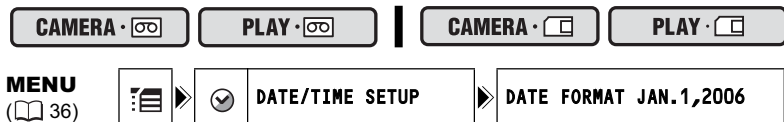


1. Open the FUNC. menu, select (▲▼) the icon and press (⊗).
2. Select (▲▼) the [DATE/TIME SETUP] menu and press (⊗). Then, select (▲▼) the [DATE FORMAT] option and press (⊗).
3. Select a setting option and press (⊗) to save the changes, then close the menu.

Other Camcorder Settings

E

Beep


You will hear a beep upon camcorder operations such as power on/off, start/stop, self-timer countdown, and unusual conditions of the camcorder. If you turn off the beep, all camcorder sounds will be turned off.

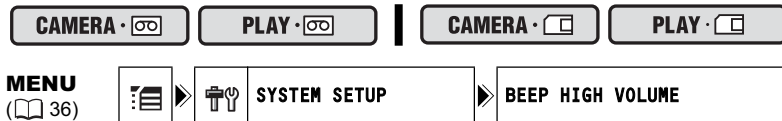

To turn off the beep:

1. Open the FUNC. menu, select (▲▼) the icon and press (⊗).
2. Select (▲▼) the [SYSTEM SETUP] menu and press (⊗). Then, select (▲▼) the [BEEP] option and press (⊗).
3. Set it to [OFF] and press (⊗) to save the changes, then close the menu.

Adjusting the Brightness of the LCD Screen

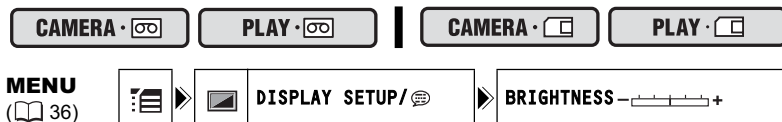


1. Open the FUNC. menu, select (▲▼) the icon and press (⊗).
2. Select (▲▼) the [DISPLAY SETUP/] menu and press (⊗). Then, select (▲▼) the [BRIGHTNESS] option and press (⊗).
3. Adjust (◀▶) the brightness level and press (⊗) to save the changes, then close the menu.



Changing the brightness of the LCD screen does not affect that of the viewfinder or the recordings.

Turning the Remote Sensor Off

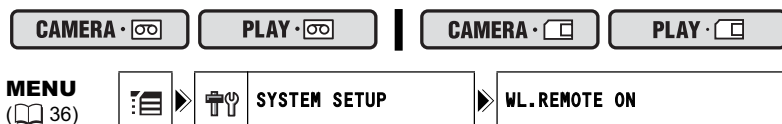

1. Open the FUNC. menu, select (▲▼) the icon and press (⊗).
2. Select (▲▼) the [SYSTEM SETUP] menu and press (⊗). Then, select (▲▼) the [WL.REMOTE] option and press (⊗).
3. Set it to [OFF] and press (⊗) to save the changes, then close the menu.

"" appears.

Turning Off the Image Stabilizer

The image stabilizer compensates for camcorder shake even at full telephoto. It tries to compensate for horizontal movements; therefore, you may decide to turn it off when you mount the camcorder on a tripod.



1. Open the FUNC. menu, select (▲▼) the icon and press (⊗).
2. Select (▲▼) the [CAMERA SETUP] menu and press (⊗). Then, select (▲▼) the [IMG STAB] option and press (⊗).
3. Set it to [OFF] and press (⊗) to save the changes, then close the menu.


“(⏻)” disappears.



- The image stabilizer cannot be turned off when the program selector is set to **EASY**.
- The image stabilizer is designed to compensate a normal degree of camcorder shake.
- The image stabilizer might not be as effective when using the Night recording program.

Changing the Display of the Start-Up Image

You can set whether the Canon logo will be displayed or not when you turn on the camcorder.

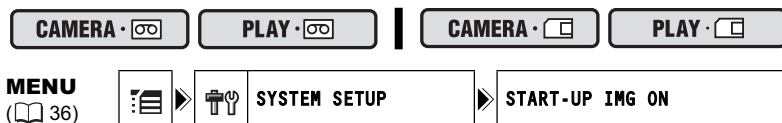

To turn off the start-up image:

1. Open the FUNC. menu, select (▲▼) the icon and press (⊗).
2. Select (▲▼) the [SYSTEM SETUP] menu and press (⊗). Then, select (▲▼) the [START-UP IMG] option and press (⊗).
3. Set it to [OFF] and press (⊗) to save the changes, then close the menu.

Demonstration Mode

The demonstration mode displays the camcorder's main features. It starts automatically when you leave the camcorder turned on (using the power adapter) without loading a recording media for more than 5 minutes. However, you can set the camcorder not to start the demonstration mode.



To deactivate the demonstration mode:

1. Open the **FUNC.** menu, select (**▲▼**) the icon and press ().
2. Select (**▲▼**) the **[DISPLAY SETUP/**] menu and press (). Then, select (**▲▼**) the **[DEMO MODE]** option and press ().
3. Set it to **[OFF]** and press () to save the changes, then close the menu.



To cancel the demo mode once it has begun, press any button, turn off the camcorder or load a recording media.

Recording to a VCR or Digital Video Device

You can copy your recordings by connecting the camcorder to a VCR or a digital video device. If you connect a digital video device, you can copy recordings with virtually no generation loss in image and sound quality.


Connecting the Devices

① Connecting a VCR

See *Playing Back on a TV Screen* (33).

② Connecting a Digital Video Device

Refer also to the instruction manual of the digital video device.

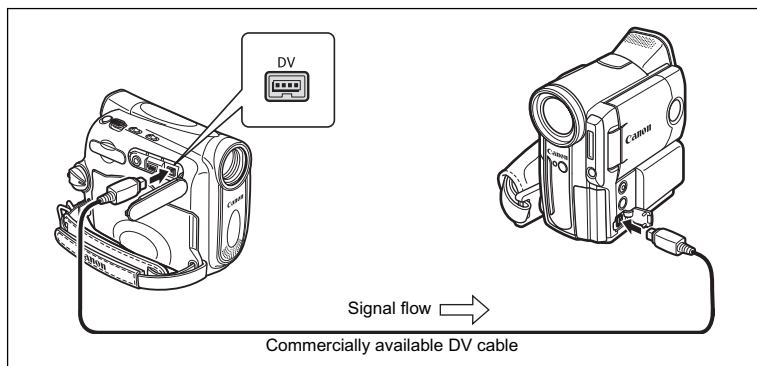

Recording



1. Set the camcorder to **PLAY** mode and load a recorded cassette.
2. Connected device: Load a blank cassette and set the device to record pause mode.
3. Locate the scene you wish to copy and pause playback shortly before the scene.
4. Play back the tape.
5. Connected device: Begin recording when the scene you wish to copy appears. Stop recording when copying is complete.
6. Stop playback.



- We recommend powering the camcorder from a household power source.
- When connecting a VCR, the quality of the edited tape will be slightly lower than that of the original.
- When connecting a digital video device:
 - If the picture does not appear, reconnect the DV cable or turn the camcorder off and back on again.
 - Proper operation cannot be guaranteed for all digital video devices equipped with a DV terminal. If operation does not work, use the AV terminal.

ZR700 Recording from Analog Video Devices (VCR, TV or Camcorder)


You can record videos or TV programs from a VCR or analog camcorder on the tape in the camcorder.

CAMERA 


PLAY 

CAMERA 


PLAY 

1. Connect the camcorder to the analog video device.
See *Playing Back on a TV Screen* (□ 33).
2. Set the camcorder to **PLAY**  mode and load a blank cassette.
3. Connected device: Load the recorded cassette.
4. Open the FUNC. menu, select (▲▼) the record pause icon ● || and press (⊗).
5. Select (◀▶) [EXECUTE] and press (⊗).

In record pause and during recording, you can check the picture on the screen.



6. Connected device: Play back the tape.
7. If the joystick guide does not appear on screen, press (⊗) to display it.
8. Push the joystick (▲) towards ● || when the scene you wish to record appears.
 - Recording starts.
 - Push the joystick (▲) towards ● || again to pause/resume the recording.
9. Push the joystick (▼) towards ■ to stop recording.
10. Connected device: Stop playback.

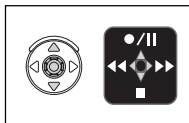

Depending on the signal sent from the connected device, dubbing may not work properly (e.g. signals that include copyright protective signals or anomalous signals such as ghost signals).



We recommend powering the camcorder from a household power source.

Recording from Digital Video Devices (DV Dubbing)

E

You can record from other digital video devices equipped with a DV terminal with virtually no loss in picture and sound quality.

CAMERA · 

PLAY · 


CAMERA · 

PLAY · 

1. Connect the camcorder to the digital video device.

See *Connecting a Digital Video Device* ( 70).

2. Set the camcorder to **PLAY** mode and load a blank cassette.


2700 Make sure that [AV → DV] is set to [OFF] ( 75).

3. Connected device: Load the recorded cassette or disc.

4. Open the FUNC. menu, select (▲▼) the recording pause icon ●|| and press (⊗).

5. Select (◀▶) [EXECUTE] and press (⊗).

In record pause and during recording, you can check the picture on the screen.




6. Connected device: Play back the tape or disc.

7. If the joystick guide does not appear on screen, press (⊗) to display it.

8. Push the joystick (▲) towards ●|| when the scene you wish to record appears.

- Recording starts.
- Push the joystick (▲) towards ●|| again to pause/resume the recording.

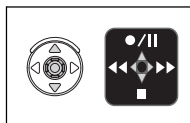

9. Push the joystick (▼) towards ■ to stop recording.

10. Connected device: Stop playback.



- Blank sections may be recorded as anomalous picture.
- If the picture does not appear, reconnect the DV cable or turn the camcorder off and back on again.
- You can only record video signals from devices with the **DV** logo from recordings in SD (standard definition) standard, in SP or LP recording mode. Note that signals from identically shaped DV (IEEE1394) terminals may be in different video standards.



We recommend powering the camcorder from a household power source.

Copyright Signal

Certain software tapes are copyright protected. If you attempt to play back such tape, "COPYRIGHT PROTECTED PLAYBACK IS RESTRICTED" appears and you will not be able to view the contents of the tape. If you attempt to record from such tape via the DV terminal, "COPYRIGHT PROTECTED DUBBING RESTRICTED" appears and you will not be able to record the contents of the tape.


Editing

ZR700 Converting Analog Signals into Digital Signals (Analog-Digital Converter)


By connecting the camcorder to a VCR or 8mm video camcorder, you can convert analog video/audio signals to digital signals and output the digital signals via the DV terminal. The DV terminal serves as output terminal only.

Connecting the Devices

Turn off all the devices before starting the connections. Unload the tape from the camcorder. Refer also to the instruction manual of the connected device.

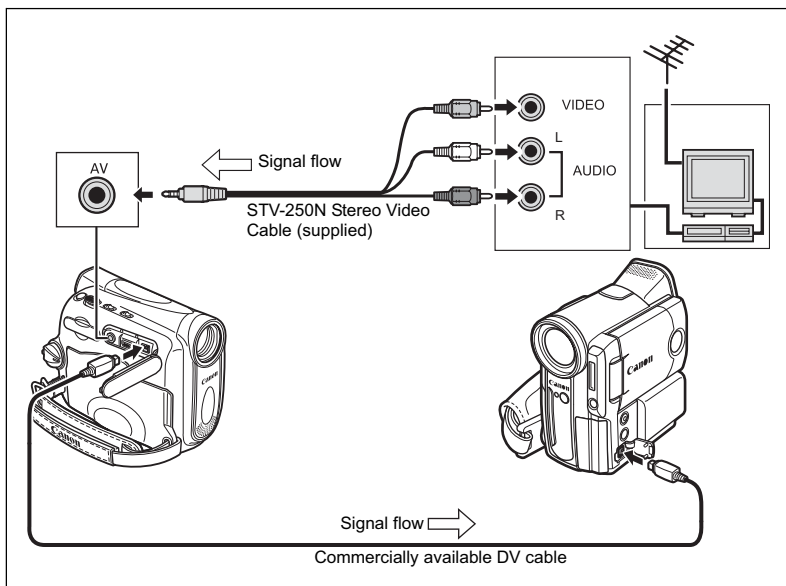

Turning On the Analog-Digital Converter

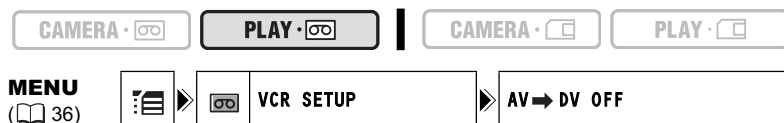

1. Open the FUNC. menu, select (▲▼) the icon and press (⏻).
2. Select (▲▼) the [VCR SETUP] menu and press (⏻). Then, select (▲▼) the [AV -> DV] option and press (⏻).
3. Set it to [ON] and press (⏻) to save the changes, then close the menu.



- Depending on the signal sent from the connected device, the conversion from analog to digital signals might not work properly (e.g., signals that include copyright protective signals or anomalous signals such as ghost signals).
- For normal use, set [AV -> DV] to [OFF]. If it is set to [ON], digital signals cannot be input via the camcorder's DV terminal.
- Depending on the software and the specifications of your computer, you may not be able to transfer converted signals via the DV terminal.




We recommend powering the camcorder from a household power source.

Audio Dubbing

You can add sound to a recording using the built-in microphone (MIC.IN). **ZR700** only: You can also record additional sound from external audio devices (AUDIO IN). This function is operated with the wireless controller.

ZR700 Connecting an External Audio Device


Refer also to the instruction manual of the connected device.

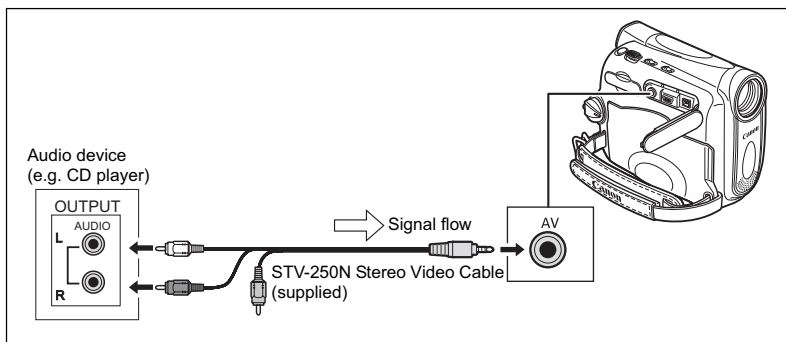

Dubbing




1. Set the camcorder to **PLAY** mode and load a recorded cassette.
Use a tape recorded in SP, 12-bit mode with this camcorder.
2. Open the FUNC. menu, select (▲▼) the [icon] icon and press (⊗).
3. Select (▲▼) the [AUDIO SETUP] menu and press (⊗). Then, select (▲▼) the [AUDIO DUB.] option and press (⊗).
4. Set it to [AUDIO IN] or [MIC.IN] and press (⊗) to save the changes, then close the menu.
ZR600 : Make sure the [MIC.IN] setting is selected.
5. Locate the scene you wish to start audio dubbing.
6. Press the PAUSE II button on the wireless controller.

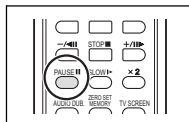

7. Press the AUDIO DUB. button on the wireless controller.


"AUDIO DUB." and "● ||" appear.

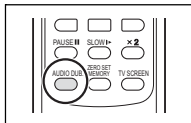

E


8. Press the PAUSE II button on the wireless controller to begin dubbing.

- **ZR700** Audio device: Begin playback.
- Microphone: Speak into the microphone.

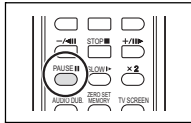

9. Press the STOP ■ button on the wireless controller to stop dubbing.

- **ZR700** Audio device: Stop playback.

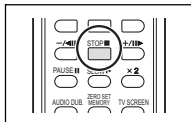


- Use only tapes recorded in SP mode 12-bit audio sound with this camcorder. Audio dubbing will stop if the tape has a blank section or a section recorded in LP mode or 16-bit mode.
- You cannot use the DV terminal for audio dubbing.
- If you add sound to a tape not recorded with this camcorder, sound quality may decrease.
- Sound quality may decrease when you add sound to the same scene for more than 3 times.




- When you connect an audio device, check the picture on the LCD screen and the sound via built-in speaker or audio device.
- When you use the microphone, you can check the picture on a TV connected via the AV terminal and the sound via headphones connected to the TV.
- Set the zero set memory at the end of the scene you wish to audio dub. The camcorder will automatically stop audio dubbing at that point.

Playing Back the Added Sound

You can select to play back Stereo 1 (original sound), Stereo 2 (added sound), or adjust the balance of both sounds.

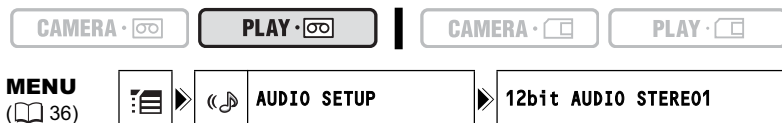

1. Open the FUNC. menu, select (▲▼) the  icon and press (⊗).
2. Select (▲▼) the [AUDIO SETUP] menu and press (⊗). Then, select (▲▼) the [12bit AUDIO] option and press (⊗).
3. Select a setting option and press (⊗) to save the changes.
 - STEREO1: Plays back the original sound.
 - STEREO2: Plays back the added sound.
 - MIX/FIXED: Plays back Stereo 1 and Stereo 2 in the same level.
 - MIX/VAR.: Plays back Stereo 1 and Stereo 2. The mix balance can be adjusted.
 - If you select an audio setting other than [MIX/VAR.], close the menu.

To adjust the mix level when you select [MIX/VAR.]:

4. From the [AUDIO SETUP] menu select (▲▼) the [MIX BALANCE] option and press (⊗).
5. Adjust (◀▶) the mix level between ST-1 and ST-2 and press (⊗) to save the changes, then close the menu.




The camcorder resets to [STEREO1] when you turn the camcorder off. However, the mix balance is memorized by the camcorder.

Transferring Video Recordings to a Computer

E

Transferring Using a DV Cable

You can transfer recordings to a computer equipped with a IEEE1394 (DV) terminal or IEEE1394 capture board. Use the editing software supplied with your computer/capture board to transfer video recording from tape to computer. Refer to the instruction manual of the software. A driver is preinstalled on Windows operating systems later than Windows 98 Second Edition and Mac operating systems later than Mac OS 9, and will be installed automatically.

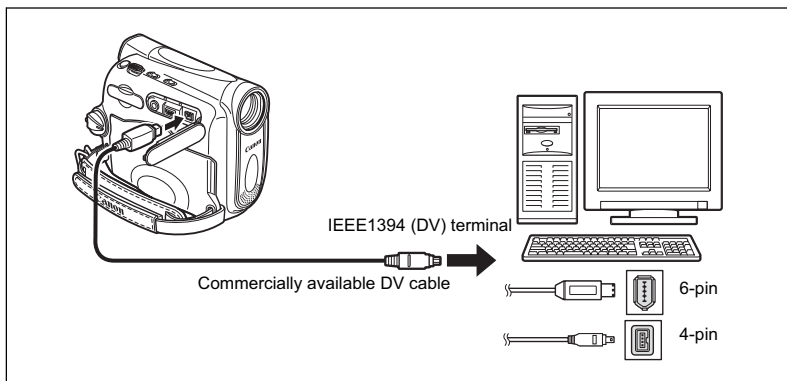

Editing




- Operation may not work correctly depending on the software and the specifications/settings of your computer.
- If the computer freezes while you have connected the camcorder, disconnect and reconnect the DV cable. If the problem persists, disconnect the interface cable, turn off camcorder and computer, turn camcorder and computer back on and reconnect them.
- Make sure that camcorder and computer are not connected with a USB cable before connecting the camcorder to the computer using the DV cable. Otherwise, the computer may not operate properly.



- We recommend powering the camcorder from a household power source while it is connected to the computer.
- Refer also to the instruction manual of the computer.

Inserting and Removing a Memory Card

You can use commercially available **SD** SD Memory Cards or MultiMediaCards (MMC) with this camcorder. The SD Memory Card has a protect switch to prevent accidental erasure. Memory cards have front and back sides that are not interchangeable. Inserting a memory card facing the wrong direction can cause a malfunction of the camcorder.

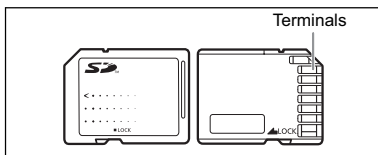


Inserting the Card

1. Turn off the camcorder.
2. Open the cover.
3. Insert the memory card all the way into the memory card slot.
4. Close the cover.

If the memory card is not correctly inserted the cover will not close - do not forcefully close the cover. Verify that the memory card is inserted in the correct direction.


5. Turn on the camcorder.

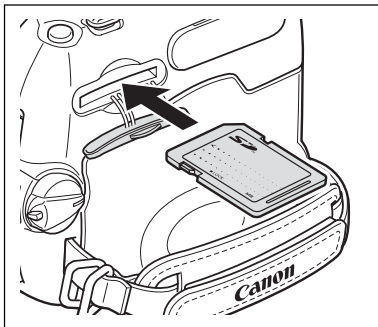

Removing the Card

Do not forcefully remove the memory card without first pushing it in.

1. Turn off the camcorder.
Make sure that the CARD access indicator is not flashing before you turn off the camcorder.
2. Open the cover.
3. Push the memory card to release it. Remove the memory card.
4. Close the cover.

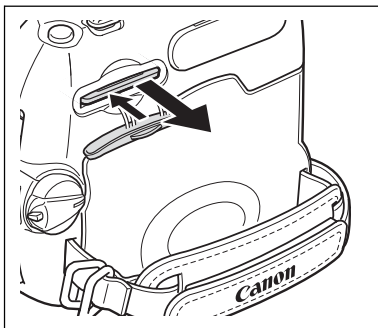

- This camcorder is compatible with SD Memory Cards or MultiMediaCards only. Do not use any other types of memory cards.
- Proper operation cannot be guaranteed for all memory cards.
- Turn off the camcorder before inserting or removing the memory card. Otherwise, it may result in data damage.
- Initialize new memory cards with the camcorder (95).

Selecting the Image Quality/Size

You can select the still image size from **L** 1024 x 768 or **S** 640 x 480 and the still image quality from Super Fine, Fine and Normal.



1. Open the FUNC. menu and select (▲▼) the image size/quality icon.
2. Select (◀▶) the desired image size.

The number on the right indicates the approximate number of images that can be recorded on the memory card at the current image size/quality setting.

3. If you want to change also the image quality: Press (⊗) and select (◀▶) the desired image quality.

- The number on the right indicates the approximate number of images that can be recorded on the memory card at the current image size/quality setting.
- You can press (⊗) again to go back to select the image size (step 2).

4. Close the menu.



○ Still images are recorded with JPEG compression.









○ Number of still images  that can be recorded on a memory card:

Image Size	Image Quality	Number of Images			File Size per Image
		16MB	128MB	512MB	
L 1024 x 768	 Super Fine	30	270	1075	440KB
	 Fine	40	400	1585	304KB
	 Normal	85	760	3015	160KB
S 640 x 480	 Super Fine	75	690	2740	176KB
	 Fine	105	955	3770	120KB
	 Normal	170	1525	6035	72KB

These figures are approximate. They vary according to the recording condition and the subject.

Changing the Still Image Quality during a Tape's Playback


While playing back a tape you can capture a scene as a still image on the memory card. In **PLAY**  the still image size will be **S 640 x 480**, but you can select the still image quality.



1. Open the **FUNC.** menu and select (**▲▼**) the image quality icon.
2. Select (**◀▶**) the desired image quality.
 - The still image size is **S 640 x 480** and cannot be changed.
 - The number on the right indicates the approximate number of images that can be recorded on the memory card at the current image quality setting.
3. Close the menu.

Changing the Movie Size

You can choose between 320 x 240 pixels and 160 x 120 pixels.

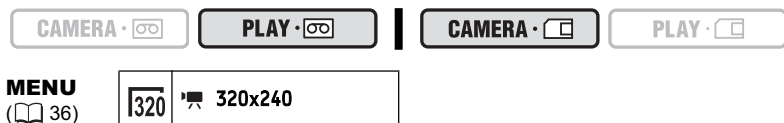

1. Open the **FUNC.** menu and select (**▲▼**) the movie size icon.
2. Select (**◀▶**) a setting option and close the menu.






- Movies are recorded with Motion JPEG compression.
- Maximum recording time of a movie  on a memory card:

Image Size	Recording Time			File Size per Second
	16MB	128MB	512MB	
 320 x 240	50 sec.	8 min.	32 min.	250KB
 160 x 120	1 min.	17 min.	67 min.	120KB



File Numbers

Images are automatically assigned file numbers from 0101 to 9900 and stored in folders containing up to 100 images. Folders are assigned numbers from 101 to 998.

You can choose to use consecutive file numbers (CONTINUOUS) or to reset the file number each time a different memory card is inserted (RESET). We recommend setting the file numbers to CONTINUOUS.

RESET	The file number will be reset each time a new memory card is inserted, starting with 101-0101. If the memory card already contains image files, the consecutive file number will be assigned.
CONTINUOUS	The camcorder memorizes the file number of the last image and assigns the consecutive file number to the next image, even when a new memory card is inserted. (If a higher file number already exists on the memory card, the consecutive number will be assigned.) There will be no duplication of file numbers. This is useful for organizing images on a computer.


Example:

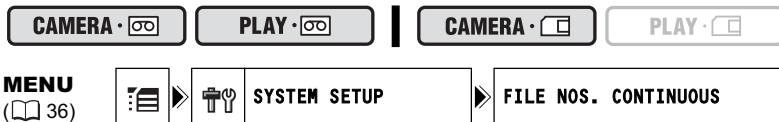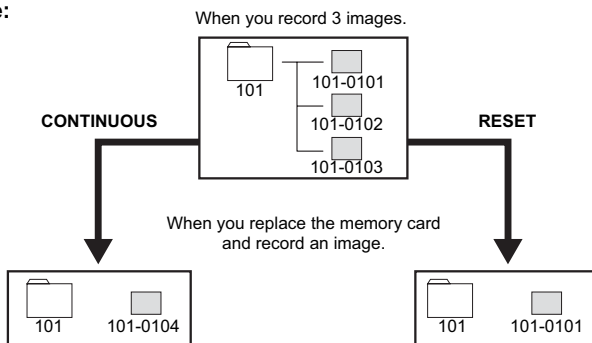

1. Open the FUNC. menu, select (▲▼) the [MENU] icon and press (⊗).
2. Select (▲▼) the [SYSTEM SETUP] menu and press (⊗). Then, select (▲▼) the [FILE NOS.] option and press (⊗).
3. Select a setting option and press (⊗) to save the changes, then close the menu.

Recording Still Images on a Memory Card

You can record still images with the camcorder or record as still images scenes from a video recording on the tape or from an external video signal from the DV terminal (**ZR700** only; also from the AV terminal). You can also record a still image on the memory card while you record a movie on the tape.

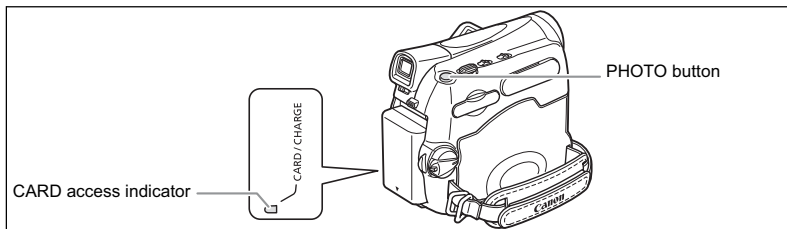



CAMERA •

PLAY •

CAMERA •




PLAY •

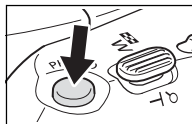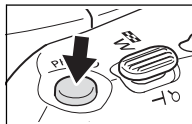1. Set the camcorder to **CAMERA •** mode.
2. Open the lens cover (move the lens cover switch down to).
3. Press the PHOTO button halfway.
 - turns green when focus is adjusted and a green frame appears. The beep sounds.
 - When you press the PHOTO button on the wireless controller, recording starts immediately.
4. Press the PHOTO button fully.
 - and the focusing frame disappear and you hear a shutter sound.
 - The CARD access indicator flashes and the card access display appears.
 - The still image shown on the screen will be recorded on the memory card.



- Do not turn off the camcorder, change the position of the TAPE/CARD switch, disconnect the power source, open the memory card cover or remove the memory card while the CARD access indicator is flashing. Doing so could result in data damage.
- When you are using an SD Memory Card, make sure that the protect switch is set to allow recording.



- Connection to a computer or PictBridge compliant printer will not work when the memory card contains more than 1800 images. For best performance, we recommend not recording more than 100 images on the memory card when you plan to connect the camcorder to a computer or printer.
When you are using a Macintosh computer, you may not be able to download image with ImageBrowser or with OS standard software when the memory card contains more than 1000 images. In such case, use a card reader for downloading the images.
- **When the Focus-Priority mode is set to [ON: AiAF] or [ON: CENTER]:**
When you press the PHOTO button fully before  and the focusing frame turn green, it may take up to 2* seconds until focus is adjusted and the still image can be recorded to the memory card.
* Up to 4 seconds in the  Night recording program.
If the subject is not suitable for autofocus, the focusing frame turns yellow and locks the focus. Adjust the focus manually with the joystick.
- When powered by a battery pack, the camcorder shuts off to save power if left without any operation for 5 minutes. Approximately 30 seconds before the camcorder shuts off the message " AUTO POWER OFF" will appear. To continue recording, turn the **POWER** switch to **OFF** and then back to CAMERA.


Recording a Still Image on a Memory Card While Recording Movies on a Tape

When you are recording a movie on a tape, you can record the same picture as a still image on the memory card. Select the image quality from normal or fine.


CAMERA · PLAY · CAMERA · PLAY · **MENU**

(36)

OFF **STILL IMG REC OFF**

1. Open the FUNC. menu and select () the still image recording icon.
2. Select a setting option other than [**OFF** STILL IMG REC OFF] and close the menu.
3. While you are recording a movie, press the PHOTO button.



- The size of the still image will be **S** 640 x 480.
- The quality of the still image is slightly lower than a still image recorded in **CAMERA** ·  mode.
- The still image cannot be recorded on the memory card if a digital effect is activated or while recording in widescreen mode.
- "**OFF**" appears when you press the PHOTO button when the still image recording is set to [**OFF** STILL IMG REC OFF].

Recording from a Tape in the Camcorder

CAMERA · 

PLAY · 

CAMERA · 

PLAY · 

1. **Play back the tape.**
2. **Press the PHOTO button halfway when the scene you wish to record appears.**
 - The camcorder pauses playback. The remaining image capacity and other information appear.
 - When you press the PHOTO button on the wireless controller, recording starts immediately.
3. **Press the PHOTO button fully.**
 - The CARD access indicator flashes.
 - You can also record a still image by pressing the PHOTO button fully when the tape is in playback pause mode.

Recording from Other Video Devices



You can record as still images on the memory card scenes captured from external video devices connected through the DV terminal. **ZR100** only: you can also use the analog to digital conversion to input video through the AV terminal. For connecting instructions, refer to pages 33 and 70.

CAMERA · 

PLAY · 

CAMERA · 

PLAY · 

1. **Set the camcorder to  mode.**
 - If a cassette is loaded, make sure that the tape is stopped.
 - **ZR100** When recording via the AV terminal, make sure that "AV → DV" is displayed on the screen. When recording via the DV terminal, make sure that "AV → DV" is not displayed. Change the setting as necessary ( 75).
2. **Connected device: Load a recorded cassette and play back the tape.**
3. **Press the PHOTO button halfway when the scene you wish to record appears.**
 - The still image, remaining image capacity and other information appear.
 - When you press the PHOTO button on the wireless controller, recording starts immediately.
4. **Press the PHOTO button fully.**

The CARD access indicator flashes.



- When recording from a tape in the camcorder or other video devices:
 - A still image recorded from an image in widescreen mode will be vertically compressed.
 - The data code of the still image will reflect the date and time it has been recorded on the memory card.
 - The size of the still image will be **S** 640 x 480.
- When connecting with a DV cable, make sure that no USB cable is connected to the camcorder.

Reviewing a Still Image Right after Recording

You can select to display a still image for 2, 4, 6, 8 or 10 seconds after it has been recorded.



1. Open the FUNC. menu, select (▲▼) the icon and press (⊗).
2. Select (▲▼) the [CAMERA SETUP] menu and press (⊗). Then, select (▲▼) the [REVIEW] option and press (⊗).
3. Select a setting option and press (⊗) to save the changes, then close the menu.



- A still image is displayed as long as you hold the PHOTO button after recording.
- If you press the FUNC. button while you are reviewing the still image immediately after recording it, a menu appears where you have the option to protect (📖 93) or erase (📖 94) the image you just recorded.

Screen Displays during Still Image Recording



① Remaining Card Capacity for Still Images

- flashing in red: No card
- in green: 6 or more images
- in yellow: 1 to 5 images
- in red: No more images
- The indication may not decrease even though a recording has been made, or may decrease by 2 images at once.
- All indicators are displayed in green when a memory card is played back.

“▶” Card Access Display

Indicates that the camcorder is writing on the memory card.

② Still Image Size and Quality

Indicates the size and quality of the still image.

Recording Movies on a Memory Card


You can record Motion JPEG movies with the camcorder, from a tape in the camcorder or from devices connected via the DV terminal or the AV terminal. The sound of a movie recorded on a memory card will be monaural.

CAMERA 

PLAY 

CAMERA 

PLAY 

1. Select the movie size for recording on the card: Open the FUNC. menu and select (▲▼) the movie size icon. Select (◀▶) a setting option other than the default  [MOVIE REC OFF] and close the menu.

2. Press the start/stop button to begin recording.

With SD Memory Cards up to 2 GB, you can record until "CARD FULL" appears (approx. 32 minutes with a 512 MB SD Memory Card). With MultiMediaCards, the recording time is limited to 10 sec. in 320 x 240 pixels or 30 sec. in 160 x 120 pixels.

3. Press the start/stop button to stop recording.



- Do not turn off the camcorder, change the position of the TAPE/CARD switch, disconnect the power source, open the memory card cover or remove the memory card while the CARD access indicator is flashing. Doing so could result in data damage.
- When you are using an SD Memory Card, make sure that the protect switch is set to allow recording.
- Do not load/unload a cassette during recording.



- We recommend using a Canon SD Memory Card, or an SD Memory Card with a transfer rate of more than 2 MB/sec., right after initializing it with this camcorder. With memory cards not initialized with this camcorder, or when recording/erasing has been repeatedly performed, the writing speed may be lower and recording may stop.
- You can select the focusing point when recording a movie on the memory card.
- Users of Windows XP: When you plan to connect the camcorder to a computer, keep the length of one movie shorter than approx. 12 min. in 320 x 240 or 35 min. in 160 x 120.

Recording from a Tape in the Camcorder

CAMERA 

PLAY 

CAMERA 

PLAY 

1. Play back the tape.

2. Press the start/stop button when the scene you wish to record appears.

3. Press the start/stop button to stop recording.

Recording from Other Video Devices

You can record as movies on the memory card scenes captured from external video devices connected through the DV terminal. **ZR700** only: you can also use the analog to digital conversion to input video through the AV terminal.

For connecting instructions, refer to pages 33 and 70.

E


CAMERA 

PLAY 

CAMERA 

PLAY 

1. Set the camcorder to **PLAY** mode.

- If a cassette is loaded, make sure the tape is stopped.
- **ZR700** When recording via the AV terminal, make sure that "AV⇒DV" is displayed on the screen. When recording via the DV terminal, make sure that "AV⇒DV" is not displayed. Change the setting as necessary ( 75).

2. Connected device: Load a recorded cassette and play back the tape.

3. Press the start/stop button when the scene you wish to record appears.


4. Press the start/stop button to stop recording.




When recording from a tape in the camcorder or other video devices:

- A movie recorded from an image in widescreen mode will be vertically compressed.
- The data code of the movie will reflect the date and time it has been recorded on the memory card.
- Recording stops at blank sections or recordings in different audio mode (12bit/16bit).

Screen Displays during Movie Recording

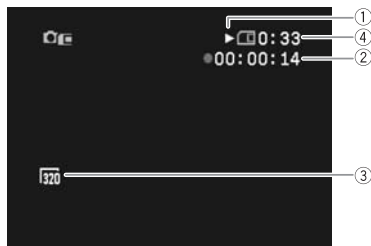

① Card Access Display

"▶" appears and " " moves to indicate that the camcorder is writing on the memory card.

② Movie recording time

Indicates the recording time of the movie.

③ Image Size

Indicates the movie size.

④ Remaining Card Capacity for Movies

Indicates the remaining time in hours and minutes. At less than 1 minute, the remaining time will be displayed in 10 second-steps, at less than 10 seconds in 1 second-steps.






- The indication varies depending on the recording condition. The actual remaining time may be longer or shorter than indicated.

Selecting the Focusing Point

You can change the AF (autofocus) frame selection mode. When the program selector is set to **EASY**, the focusing point will automatically be set to [ON: AiAF].




9 Point AiAF	Depending on the shooting conditions, one or more AF frames out of the 9 frames available are automatically selected and focused on.
Center point	Out of the 9 frames available, the center AF frame is selected to focus. This is convenient for making sure the focus is exactly where you want it.




1. Set the program selector to **P**.
2. Open the FUNC. menu, select (**▲▼**) the  icon and press (.
3. Select (**▲▼**) the [CAMERA SETUP] menu and press (). Then, select (**▲▼**) the [FOCUS PRI.] option and press (.
4. Select a setting option and press ( to save the changes, then close the menu.

[OFF]: Turn off the focus priority mode when you wish to record a still image as soon as you press the PHOTO button. When set to [OFF], no focusing frame appears.

Playing Back a Memory Card

You can display a single image, 6 at one time (index screen  92), or one after another (slide show  92). Use the Card Jump function to quickly locate an image without displaying them one by one ( 92).

E

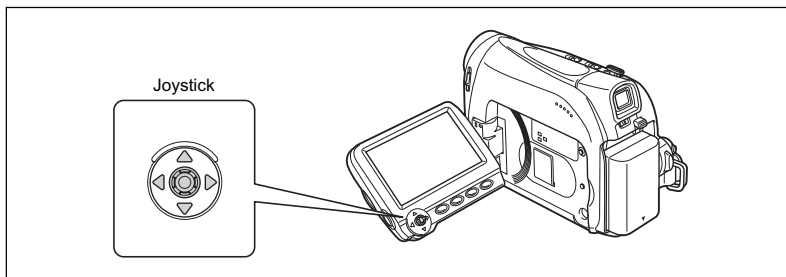


CAMERA 


PLAY 


CAMERA 

PLAY 

1. Set the camcorder to **PLAY**  mode.










2. If the joystick guide does not appear on screen, press () to display it.


3. Push the joystick () to move between images.




To play back a movie on the memory card:

4. Push the joystick () towards .

- Push the joystick () towards  again to pause/resume the playback.
- Push the joystick () towards  to stop the playback.
- When the movie playback ends or is stopped, the first frame of the movie appears as a still image.
- Push the joystick () towards  or  or press the REW /FF  button on the wireless controller for 8x fast forward/fast rewind playback.

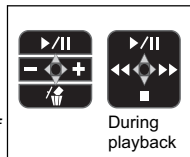

- Images not recorded with this camcorder, uploaded from a computer (except the sample images  57), edited on a computer and images whose file names have been changed may not be played back correctly.
- Do not turn off the camcorder, change the position of the TAPE/CARD switch, disconnect the power source, open the memory card cover or remove the memory card while the CARD access indicator is flashing. Doing so could result in data damage.




Slide Show

MENU




( 36)






SLIDESHOW

1. Open the FUNC. menu and select () the slide show icon.
2. Press () to start the slide show.
 - Images and movies are played back one after another.
 - Press () again to stop the slide show.




Index Screen

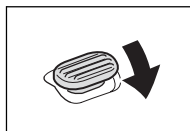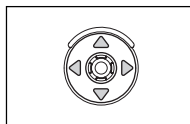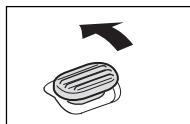
1. Move the zoom lever toward **W**.
 - Up to 6 images appear.
 - With movies, the index screen can only be started when the first scene is displayed as a still image.
2. Use the joystick (, ) to move between the images.
Move the "" to the image you wish to view.
3. Move the zoom lever toward **T**.
The index screen is cancelled and the selected image is displayed.



Card Jump Function

You can locate images without displaying them one by one. The number in the upper right of the screen indicates the image number of the current image out of the total number of images.

1. If the joystick guide does not appear on screen, press () to display it.
2. Hold the joystick pushed towards () or () to run through the image numbers.



- When you release the button, the image corresponding to the displayed image number appears.
- With movies, the card jump function can only be started when the first scene is displayed as a still image.

Protecting Images

You can protect important images from accidental erasure when displaying a single image or index screen.



If a memory card is initialized, all still images and movies, even protected ones, will be erased permanently.




Movies can only be protected when the first scene is displayed as a still image.



MENU

(36)



1. Select the image you wish to protect.
2. Open the FUNC. menu and select () the image protection icon.
In **CAMERA** mode: The image protect menu appears only when you press the FUNC. button while reviewing a still image immediately after recording it.
3. Set () it to **[PROTECT ON]**, press () and close the menu.
 - “ ” appears and now the image cannot be erased.
 - To cancel the protection, repeat the operation and select **[PROTECT OFF]**.

Protecting in Index Screen Display



MENU

(36)



1. Move the zoom lever toward **W**.
 - Up to 6 images appear.
 - Select the image you wish to protect.
2. Open the setup menus, select the **[CARD OPERATIONS]** menu and press () .
Pressing the FUNC. button from the index screen will open the menu directly in the setup menu screen.
3. Select () the **[⇒ PROTECT]** option and press () .
4. Select (,) the image you want to protect and press () .
 - “ ” appears on the image.
 - To cancel the protection, press () again.
5. Close the menu.

Erasing Images

You can erase images one at a time or all at once.



Be careful when erasing images. Erased images cannot be recovered.



○ Protected images cannot be erased.

○ Movies can only be erased when the first scene is displayed as a still image.

Erasing a Single Image

CAMERA

PLAY

CAMERA

PLAY

1. If the joystick guide does not appear on screen, press () to display it.
2. Use the joystick to select () the image you want to erase.
3. Push the joystick () towards to erase the image.
In **CAMERA** mode: The image erase menu appears only when you press the FUNC. button while reviewing a still image immediately after recording it.
4. Select () [ERASE] and press () to erase the image and close the menu.

Erasing All Images

CAMERA

PLAY

CAMERA

PLAY

MENU

(36)



CARD OPERATIONS



ERASE ALL IMAGES

1. Open the FUNC. menu, select () the icon and press ()
 2. Select () the [CARD OPERATIONS] menu and press ()
 3. Select () the [ERASE ALL IMAGES] option and press ()
- Select () [YES] and press () to erase the images, then close the menu.

All still images or movies with exception of the protected ones are erased.

Initializing a Memory Card

Initialize new memory cards, or when you get the message "CARD ERROR". You can also initialize a memory card to erase all data recorded on it.



- Initializing a memory card erases all data, including protected images.
- Images erased by initializing cannot be recovered.
- Initialize all memory cards before using them with this camcorder.



MENU


(book 36)



CARD OPERATIONS



INITIALIZE


1. Open the FUNC. menu, select (▲▼) the  icon and press (⊗).
2. Select (▲▼) the [CARD OPERATIONS] menu and press (⊗). Then, select (▲▼) the [INITIALIZE] option and press (⊗).
3. Select (▲▼) [YES] and press (⊗).
4. In the confirmation screen, select (▲▼) [YES] to initialize the memory card.
 - The card initialization will take a moment. When the card initialization is completed the camcorder will return to the [CARD OPERATIONS] menu.
 - Select [NO] to go back to step 3.
5. Close the menu.

Printing Still Images



The camcorder can be connected to any PictBridge compatible printer. You can use the print order settings for direct printing of still images recorded on the memory card (100).
Canon printers: SELPHY CP, SELPHY DS and PIXMA printers.

Connecting the Printer to the Camcorder

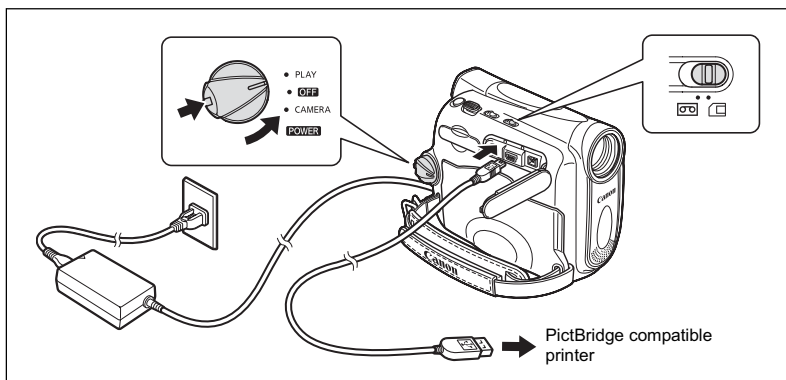

CAMERA ·

PLAY ·

CAMERA ·

PLAY ·

1. Turn off the camcorder and insert a memory card that contains still images.
2. Turn on the printer.
3. Set the camcorder to **PLAY ·** mode.
4. Connect the camcorder to the printer using the USB cable.

"

" appears and changes to "" when the printer is properly connected to the camcorder. (Does not appear with movies, or still images that cannot be played back with the camcorder.)

If "

" continues to flash (for more than 1 minute) or if "" does not appear, the camcorder is not correctly connected to the printer. In such case, disconnect the cable from camcorder and printer, turn off camcorder and printer, turn both back on and reconnect the camcorder to the printer.

- Refer also to the printer's instruction manual.
- We recommend powering the camcorder from a household power source.
- The print setting menu may differ slightly depending on the connected printer.

Printing after Selecting the Print Settings

You can select the number of copies and other settings for printing. The setting options vary depending on your printer model.

E

CAMERA 


PLAY 

CAMERA 

PLAY 


1. Press the P.SET button.

- The print setting menu appears.
- Depending on the printer, the message "BUSY." may appear before the camcorder displays the print setting menu.

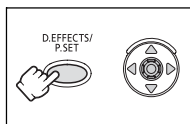

2. Select the print settings (98).

3. Select (,) the [PRINT] option and press ().



- Printing starts. The print setting menu disappears when printing is complete.
- To continue printing, select () another still image.




- Observe the following precautions during printing, otherwise printing may not be performed correctly.
 - Do not turn off the camcorder or the printer.
 - Do not change the position of the TAPE/CARD switch.
 - Do not detach the cable.
 - Do not open the memory card cover or remove the memory card.
- Images not recorded with this camcorder, uploaded from a computer, edited on a computer and images whose file names have been changed may not be printed correctly.
- If the message "BUSY." does not disappear, disconnect the cable from camcorder and printer and reconnect the camcorder to the printer.





○ Cancel Printing

Press () during printing. A confirmation dialog appears. Select [OK] and press (). With Canon's PictBridge compatible printers, the printing will stop immediately (even if not completed) and the paper will be fed through.

○ Printing Errors

If an error occurs during the printing process, an error message appears ( 110).

- Canon's PictBridge compatible printers: Resolve the error. When printing does not resume automatically, select [CONTINUE] and press (). If [CONTINUE] cannot be selected, select [STOP], press () and retry printing. Refer also to the printer manual for details.
- If the error still persists and printing does not restart:
 1. Disconnect the USB cable.
 2. Turn the **POWER** switch of the camcorder to **OFF** and back to **PLAY**.
 3. Reconnect the cable.


○ When you have finished printing:


1. Disconnect the cable from the camcorder and printer.
2. Turn off the camcorder.

Selecting the Print Settings

Selecting the Number of Copies

A maximum of 99 copies can be selected for one still image.

1. In the print setting menu, select (▲▼, ◀▶) the  (number of copies) icon and press (⊕).
2. Select (▲▼) the number of copies and press (⊕).

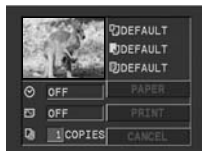

Setting the Print Style


PAPER	PAPER SIZE	Available paper sizes vary depending on the printer model.
	PAPER TYPE	PHOTO, FAST PHOTO, DEFAULT
	PAGE LAYOUT	BORDERLESS, BORDERED, DEFAULT, 8-UP
☑ (date print)		ON, OFF, DEFAULT
🖨 (print effect)		ON, OFF, VIVID, NR, VIVID+NR, DEFAULT



- The settings in the table are given as an indication. Available setting options will differ depending on the printer model.
- Print setting options and [DEFAULT] settings vary depending on the printer model. For details, refer to the instruction manual of your printer.
- [BORDERED]: The image area remains relatively unchanged from the recorded image when it is printed. [BORDERLESS]: The center portion of the recorded image is printed at an enlarged size. The image's top, bottom and sides may be cropped slightly.
- [VIVID], [VIVID+NR] and [NR] can be selected with Canon PIXMA/SELPHY DS Printers.
- **Canon printers:**
 - The [PAGE LAYOUT] setting depends on the paper size selected. When [PAPER SIZE] is set to [10 x 14.8 cm], select as the layout 2-, 4-, 9- or [16-UP]; when [PAPER SIZE] is set to [A4], select as the layout [4-UP]. Canon PIXMA/SELPHY DS printers: you can also print on the specially designed Photo Stickers sheets.
 - When selecting [8-UP], set the [PAPER SIZE] to [CREDITCARD]. Canon SELPHY CP printers: you can also print on the specially designed Photo Stickers sheets.

Paper Settings


1. In the print setting menu, select (▲▼, ◀▶) the [PAPER] option and press (⊗).
2. Select (▲▼) the paper size and press (⊗).
Select the paper size of the paper set in your printer.
3. Select (▲▼) the paper type and press (⊗).
Select the paper type of the paper set in your printer.
4. Select (▲▼) a layout option and press (⊗).

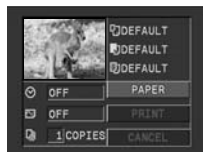

E

Including the Date in the Print


1. In the print setting menu, select (▲▼, ◀▶) the ☺ (date) icon and press (⊗).
2. Select (▲▼) a date print option and press (⊗).

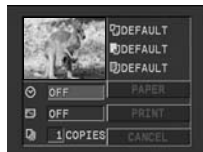

Setting the Print Effect (Image Optimize)

This function uses the camcorder's recording information to optimize the image data, yielding high quality prints.

1. In the print setting menu, select (▲▼, ◀▶) the ☒ (print effect) icon and press (⊗).
2. Select (▲▼) a setting and press (⊗).

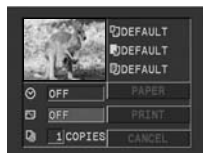

Printing with Print Order Settings

You can select still images for printing and set the number of copies. These print order settings are compatible with the Digital Print Order Format (DPOF) standards and can be used for printing on DPOF compatible printers (□ 96). A maximum of 998 still images can be selected.

Selecting Still Images for Printing (Print Order)

Do not connect a USB or DV cable to the camcorder while setting the print orders.



MENU

(□ 36)



1. Select the still image you wish to print.
2. Open the FUNC. menu and select (▲▼) the print order icon.
3. Set (◀▶) the number of copies, press (⊗) and close the menu.

To cancel the print order, set the number of copies to 0.

Selecting in Index Screen Display



MENU

(□ 36)



1. Move the zoom lever toward **W**.
 - Up to 6 images appear.
 - Select the image you wish to print.
2. Open the setup menus, select the [CARD OPERATIONS] menu and press (⊗).

Pressing the FUNC. button from the index screen will open the menu directly in the setup menu screen.
3. Select (▲▼) the [⇒ PRINT ORDER] option and press (⊗).
4. Select (▲▼, ▶◀) the image you want to print and press (⊗).
 - "□" appears on the image.
 - To cancel the print order, set the number of copies to 0.
5. Close the menu.


Erasing All Print Orders



1. Open the FUNC. menu, select (**▲▼**) the icon and press ().
2. Select (**▲▼**) the [CARD OPERATIONS] menu and press (). Then, select (**▲▼**) the [PRINT ORD. ALL ERASE] option and press ().
3. Select (**▲▼**) [YES] and press () to erase all the print orders, then close the menu.

All "" disappear.

Printing

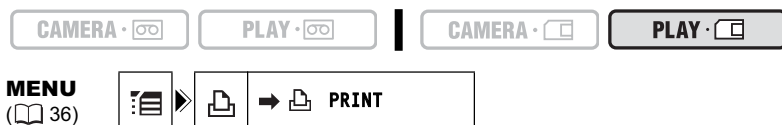

1. Connect the printer to the camcorder (96).
2. Open the FUNC. menu, select (**▲▼**) the icon and press ().
3. Select (**▲▼**) the [**PRINT**] menu and press ().
 - The print setting menu appears.
 - "SET PRINT ORDER" appears, when you connect a printer with direct print function and select [**PRINT**] without having set the print order.
4. Make sure that [**PRINT**] is selected and press ().

Printing starts. The print setting menu disappears when printing is complete.



- Depending on the connected printer, you can select style or paper settings before step 4.

○ Cancel Printing/Printing Errors (97)

○ Restarting Printing


In **PLAY** mode open the FUNC. menu, select and press (), then select the [**PRINT**] menu and press (). Select [RESUME] in the print setting menu and press (). The remaining images will be printed.

Printing cannot be restarted in the following cases:

- When you change the print order settings.
- When you delete a still image with print order settings.

Transferring Memory Card Images to a Computer

With the supplied USB cable and Digital Video Software, you can browse and archive images or arrange still images for printout. For details, refer to the *Digital Video Software* instruction manual (PDF file).

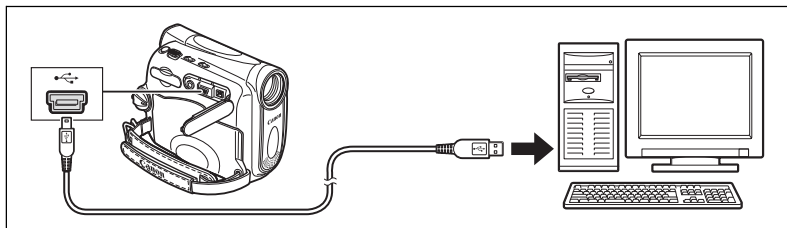






- Do not disconnect the USB cable, open the memory card cover, remove the memory card, change the position of the TAPE/CARD switch or turn off the camcorder and computer while data is being transferred to the computer (while the camcorder's CARD access indicator is flashing). Doing so may damage the memory card's data.
- Operation may not work correctly depending on the software and the specifications/settings of your computer.
- The image files on your memory card and the image files saved on the hard disk drive of your computer are valuable, original data files. If you wish to use image files on your computer, make copies of them first, and use the copied file, retaining the original.
- Make sure that camcorder and computer are not connected with a DV cable before connecting the camcorder to the computer using the USB cable. Otherwise, the computer may not operate properly.



- We recommend powering the camcorder from a household power source while it is connected to the computer.
- Refer also to the computer instruction manual.
- Users of Windows XP and Mac OS X:
Your camcorder is equipped with the standard Picture Transfer Protocol (PTP) allowing you to download still images (JPEG only) by simply connecting the camcorder to a computer via USB cable without installing the software from the DIGITAL VIDEO SOLUTION DISK.

Direct Transfer

You can transfer images to a computer by operating the camcorder.

 ALL IMAGES...	Transfers all images to the computer.
 NEW IMAGES...	Transfers only those images that have not yet been transferred to the computer.
 TRANSFER ORDERS...	Transfers images with transfer orders to the computer.
 SELECT & TRANSFER...	Allows you to select an image and transfers the selected image to the computer.
 WALLPAPER...	Allows you to select a still image and transfers the selected image to the computer as wallpaper.

Preparations

The first time you connect the camcorder to the computer, you need to install the software and set the auto-launch setting.



1. Install the supplied Digital Video Software.

See *Installing the Software* in the *Digital Video Software* instruction manual (PDF file).

2. Set the camcorder to **PLAY** mode.

3. Connect the camcorder to the computer using the USB cable.

See *Connecting the Camcorder to a Computer* in the *Digital Video Software* instruction manual (PDF file).

4. Set the auto-launch setting.

- See *Starting CameraWindow* in the *Digital Video Software* instruction manual (PDF file).
- The direct transfer menu appears on the camcorder screen.



From the second time on, you only need to connect the camcorder to the computer to transfer images.


Transferring All Images, New Images or Images with Transfer Orders

To transfer images with transfer order, you need to set the transfer orders (105).



1. Select (▲▼) [ALL IMAGES], [NEW IMAGES] or [TRANSFER ORDERS] and press (⊗).

A confirmation message appears.

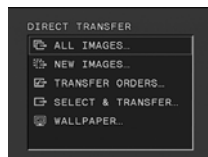

2. Select (◀▶) [OK] and press (⊗).

- The images are transferred to the computer and displayed in the Main Window of ZoomBrowser EX.
- The camcorder displays the transfer menu when transfer is complete.
- To cancel transfer, select (◀▶) [CANCEL] and press (⊗), or press the FUNC. button.


Transferring a Selected Image



1. Select (▲▼) [SELECT & TRANSFER] and press (⊗).

2. Select (◀▶) the image you wish to transfer and press (⊗).

- The selected image is transferred to the computer and displayed in the Main Window of ZoomBrowser EX or ImageBrowser EX.
- To continue transferring, select (◀▶) another image.
- Pressing the FUNC. button brings you back to the transfer menu.

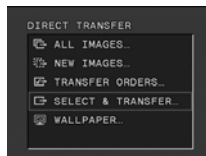


Transferring a Still Image as Wallpaper



1. Select (▲▼) [WALLPAPER] and press (⊗).

2. Select (◀▶) the still image you wish to transfer as wallpaper and press (⊗).

- The selected image is transferred to the computer and displayed on the desktop.
- Pressing the FUNC. button brings you back to the transfer menu.

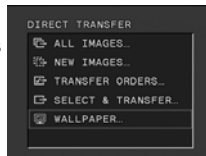

When the protect switch of the SD Memory Card is activated during image transfer, the images will not be marked as “already transferred”, and will be transferred again when you select [NEW IMAGES] later.

Selecting Images for Transfer (Transfer Order)


You can select images for transfer to the computer. These transfer settings are compatible with the Digital Print Order Format (DPOF) standards. A maximum of 998 images can be selected.

Do not connect a USB or DV cable to the camcorder while setting the transfer orders.



MENU

(36)




1. Select the image you wish to transfer.
2. Open the FUNC. menu and select () the transfer order icon.
3. Set () it to [TRANS.ORDER ON], press () and close the menu.

To cancel the transfer order, set it to [TRANS.ORDER OFF] again.

Selecting in Index Screen Display

MENU

(36)



1. Move the zoom lever toward **W**.
Up to 6 images appear.
2. Open the setup menus, select the [CARD OPERATIONS] menu and press ().
Pressing the FUNC. button from the index screen will open the menu directly in the setup menus screen.
3. Select () the [TRANSFER ORDER] option and press ()
4. Select (,) the image you want to transfer and press ().
 - " " appears on the image.
 - To cancel the transfer order, press () again.
5. Close the menu.

Erasing All Transfer Orders

MENU

(36)



1. Open the FUNC. menu, select () the icon and press ()
2. Select () the [CARD OPERATIONS] menu and press ()
3. Select () the [TRANS.ORD. ALL ERASE] option and press ()
3. Select () [YES] and press () to erase all the transfer orders, then close the menu.

All " " disappear.

Screen Displays

Hiding the Displays on the LCD Screen


You can hide the displays on the LCD screen to have a clear screen for playback.



1. Open the FUNC. menu, select (▲▼) the icon and press ().
2. Select (▲▼) the [DISPLAY SETUP/] menu and press (). Then, select (▲▼) the [DISPLAYS] option and press ().
3. Set it to [OFF <PLAYBK>] and press () to save the changes, then close the menu.
 - Warning messages still appear, and the data code appears if turned on.
 - The displays appear while a playback image is magnified or a digital effect is activated.
 - Tape operation displays appear for 2 seconds.
 - Displays cannot be hidden on the index screen.

Hiding/Showing the Displays on the TV Screen

When you connect a TV for recording, you can select to hide the camcorder displays on the TV screen. For playback, you can show the camcorder displays on the TV screen.

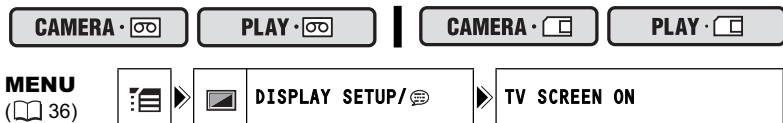


1. Open the FUNC. menu, select (▲▼) the icon and press ().
2. Select (▲▼) the [DISPLAY SETUP/] menu and press (). Then, select (▲▼) the [TV SCREEN] option and press ().
3. Set it to [ON] or [OFF] and press () to save the changes, then close the menu.

Screen Displays during Recording/Playback

E


CAMERA (see also 26)

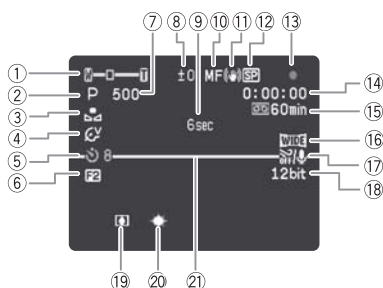

- ① Operating mode (6), Zoom (27), Exposure adjustment (46)
- ② Recording program (41)
- ③ White balance (48)
- ④ Image effects (49)
- ⑤ Self-timer (53)

- ⑥ Digital effects (56)
- ⑦ Shutter speed (50)
- ⑧ Exposure lock (45)
- ⑨ Recording reminder (26)
- ⑩ Manual focus (46)
- ⑪ Image stabilizer (68)
- ⑫ Recording mode (54)
- ⑬ Tape operation
- ⑭ Time code (26)
- ⑮ Remaining tape (26)
- ⑯ Widescreen mode (60)
- ⑰ Wind screen (55)
- ⑱ Audio mode (55)
- ⑲ Condensation warning (113)
- ⑳ **ZR700** White LED light (assist lamp) (52)
- ㉑ Level marker (24)

PLAY (66)

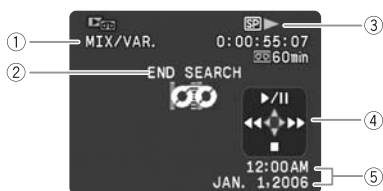


- ③ ● : Recording
- II : Record pause
- : Stop
- ▲ : Eject
- ▶ : Playback
- ▶▶ : Fast forward
- ◀◀ : Rewind

- ▶▶ / ◀◀ : Fast forward playback / Rewind playback (31)
- x2 ▶▶ / ◀◀ x2 : x2 playback (31)
- x1 ▶▶ / ◀◀ x1 : x1 playback (31)
- ▶▶ / ◀◀ : Slow playback (31)
- ▶▶ / ◀◀ : Frame advance playback / frame reverse playback (31)

- ▶▶ / ◀◀ : Playback pause (31)
- ▶▶ / ◀◀ : Date search (65)
- ▶▶ / ◀◀ : Zero set memory (64)
- / ● II : Audio dubbing (76)

CAMERA (see also 89)

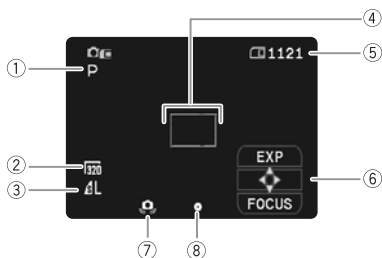


- ① Recording program (41)
- ② Movie size (88)
- ③ Still image size/quality (81)
- ④ Focusing frame (90)
- ⑤ Remaining card capacity for still images (87)
- ⑥ Joystick guide (5)
- ⑦ Camcorder shake warning (51)
- ⑧ AF/AE locked (90)

PLAY








- ① Slide show (92)
- ② Protect mark (93)
- ③ File number (83)
- ④ Current image/Total number of images
- ⑤ Still image size (81)
- ⑥ Joystick guide (5)
- ⑦ Data code (62)

List of Messages

Message	Explanation	
SET THE TIME ZONE, DATE AND TIME	You have not set the time zone, date and time. This message appears each time you turn the power on until you set the time zone, date and time.	21
CHANGE THE BATTERY PACK	Battery pack is exhausted. Replace or charge the battery pack.	14
THE TAPE IS SET FOR ERASURE PREVENTION	Cassette is protected. Replace the cassette or change the position of the protect switch.	116
REMOVE THE CASSETTE	Camcorder stopped operating to protect the tape. Unload and reload the cassette.	17
CHECK THE INPUT	DV cable is not connected, or the connected digital device is turned off.	73
CONDENSATION HAS BEEN DETECTED	Condensation has been detected in the camcorder.	113
CONDENSATION HAS BEEN DETECTED REMOVE THE CASSETTE	Condensation has been detected in the camcorder. Unload the cassette.	113
TAPE END	Tape reached the end. Rewind the tape or replace the cassette.	–
CHECK THE CASSETTE [REC MODE]	You attempted to perform audio dubbing on a tape recorded in a mode other than the SP mode.	76
CHECK THE CASSETTE [AUDIO MODE]	You attempted to perform audio dubbing on a tape recorded in 16-bit or 12-bit 4-channel sound.	76
CHECK THE CASSETTE [BLANK]	You attempted to perform audio dubbing on a tape with a blank section.	76
CHECK THE CASSETTE [INCORRECT TAPE SPECIFICATION]	You attempted to perform audio dubbing on a tape recorded in HD standard.	–
INCORRECT TAPE SPECIFICATION PLAYBACK IS RESTRICTED	You attempted to play back a tape recorded in HD standard.	–
INPUT SIGNAL NOT SUPPORTED	You attempted to input video signal in HD standard through the DV terminal.	73
HEADS DIRTY, USE CLEANING CASSETTE	Video heads are dirty. Clean the video heads.	113
COPYRIGHT PROTECTED PLAYBACK IS RESTRICTED	You attempted to play back a copyright protected tape.	73
COPYRIGHT PROTECTED DUBBING RESTRICTED	You attempted to dub a copyright protected tape. May also appear when an anomalous signal is received during analog line-in recording, or during analog-digital conversion of a copyright protected tape.	73






Memory Card Related Messages

Message	Explanation	
NO CARD	Memory card not is inserted into the camcorder.	80
THE CARD IS SET FOR ERASURE PREVENTION	SD Memory Card is set for erasure prevention. Replace the card or change the position of the protect switch.	80
NO IMAGES	No images are recorded on the memory card.	–

Message	Explanation	
CARD ERROR	A memory card error occurred. The camcorder cannot record or play back the image. The error may be temporary. If the message disappears after 4 seconds and "  " flashes red, turn the camcorder off, remove the card and reinsert the card. If "  " changes to green, you can continue recording/playback.	–
CARD FULL	No remaining capacity on the memory card. Replace with another card or erase images.	–
NAMING ERROR	File or folder number has reached the maximum value.	83
UNIDENTIFIABLE IMAGE	Image is not recorded with JPEG compression, or with a compression not compatible with the camcorder, or the image file is corrupted.	–
 TRANSFER ORDER ERROR	You attempted to set more than 998 transfer orders.	105
CANNOT TRANSFER!	You attempted to transfer a movie file as wallpaper.	104
THIS IMAGE CANNOT BE RECORDED	Some analog images cannot be recorded on the memory card depending on the signal.	–
TOO MANY STILL IMAGES DISCONNECT USB CABLE	Disconnect the USB cable and decrease the number of still images on the memory card to less than 1800. If a dialog appeared on the computer screen, close it. Reconnect the USB cable.	–

Direct Print Related Messages

Following messages may appear on the camcorder screen. On printers equipped with an operation panel, an error number or message displays on the panel. Refer to the printer's manual for the remedies corresponding to the error numbers or messages.

Message	Explanation
PAPER ERROR	There is a problem with the paper. The paper is not correctly inserted, the wrong paper size is inserted, or the ink cannot be used with the selected paper.
NO PAPER	There is no paper.
PAPER JAM	The paper jammed during printing.
INK ERROR	Refer to the printer's manual to solve the problem.
NO INK	The ink cartridge is not inserted or is out of ink. Refer to the printer's manual to solve the problem.
LOW INK LEVEL	The ink cartridge needs to be replaced soon.
WASTE TANK FULL	Waste tank is full. Refer to the instruction manual of your printer.
FILE ERROR	You attempted to print an image that was recorded with another camcorder, with a different compression, or was edited on a computer.
CANNOT PRINT!	You attempted to print an image that was recorded with another camcorder, with a different compression, or was edited on a computer.
COULD NOT PRINT X IMAGES	You attempted to use the print order settings to print X images that were recorded with another camcorder, with a different compression or were edited on a computer.
SET  PRINT ORDER	You attempted to print an image from the PLAY  menu [  PRINT] without having set the print order.
 PRINT ORDER ERROR	You attempted to set more than 998 still images in the print order.
PRINTER ERROR	Cancel printing. Turn off the printer and turn it back on. Check the printer status.

Message	Explanation
PRINT ERROR	Cancel printing, disconnect the USB cable and turn off the printer. After a while, turn the printer back on and reconnect the USB cable. Check the printer status.
HARDWARE ERROR	Refer to the printer's manual to solve the problem.
COMMUNICATION ERROR	The printer is experiencing a data transmission error. Cancel printing, disconnect the USB cable and turn off the printer. After a while, turn the printer back on and reconnect the USB cable. Or, you attempted to print from a memory card that contains a large number of images. Reduce the number of images.
PRINTER IN USE	The printer is in use. Check the printer status.
PAPER LEVER ERROR	Paper lever error occurred. Adjust the paper selection lever to the proper position.
PRINTER COVER OPEN	Close the printer cover securely.
NO PRINthead	No print head is installed in the printer or print head is defect. Refer to the instruction manual of your printer.

Camcorder Handling Precautions

- Do not carry the camcorder by the LCD panel.
- Do not leave the camcorder in places subject to high temperatures, such as a sun-heated car, and high humidity.
- Do not use the camcorder near strong electric or magnetic fields such as above TVs, near plasma TVs or mobile phones.
- Do not point the lens or viewfinder at strong light sources. Do not leave the camcorder pointed at a bright subject.
- Do not use the camcorder in dusty or sandy places. Dust or sand getting inside the cassette or camcorder may cause damage. Dust and sand can also damage the lens. Attach the lens cap after use.
- The camcorder is not waterproof. Water, mud or salt getting inside the cassette or camcorder may cause damage.
- Be careful of heat generated by lighting equipment.
- Do not disassemble the camcorder. If the camcorder does not function properly, consult qualified service personnel.
- Handle the camcorder with care. Do not subject the camcorder to shocks or vibration as this may cause damage.
- Avoid sudden changes in temperature. Moving the camcorder rapidly between hot and cold temperatures may cause condensation to form on its internal surfaces (113).

Storage

- If you do not intend to use the camcorder for a long time, store it in a place free of dust, in low humidity, and at temperatures not higher than 30 °C (86 °F).
- After storage, check the functions of your camcorder to make sure that the camcorder is still working properly.

Cleaning

Camcorder Body and Lens

- Use a soft, dry cloth to clean the camcorder body and lens. Never use chemically treated cloth or volatile solvents such as paint thinner.

LCD Screen

- Clean the LCD screen using a commercially available cleaning cloth for glasses.
- Condensation may form on the surface of the screen when the temperature changes suddenly. Wipe it with a soft dry cloth.
- At cold temperatures, the screen may be darker than usual. This is not a malfunction. The screen returns to normal when the camcorder warms up.

Viewfinder

- Clean the viewfinder screen using a blower brush or a commercially available cleaning cloth for glasses.

Video Heads

- When the playback picture becomes distorted, the video heads need to be cleaned.
- To maintain the best picture quality, we recommend cleaning the video heads frequently with the Canon DVM-CL Digital Video Head Cleaning Cassette or a commercially available dry cleaning cassette.
- Tapes already recorded with dirty video heads may not be played back correctly even when you clean the video heads.
- Do not use wet type cleaning cassettes as this may damage the camcorder.




Condensation

Moving the camcorder rapidly between hot and cold temperature may cause condensation (water droplets) to form on its internal surfaces. Stop using the camcorder if condensation is detected. Continued use may damage the camcorder.

Condensation may form in the following cases:


When the camcorder is moved from an air-conditioned room to warm, humid place

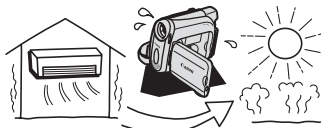

When the camcorder is left in a humid room



When the camcorder is moved from a cold place to a warm room

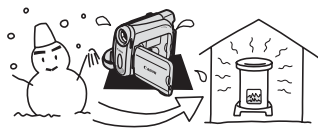

When a cold room is heated rapidly



How to avoid condensation:

- Unload the cassette, place the camcorder in an airtight plastic bag and let it adjust to temperature changes slowly before removing it from the bag.

When condensation is detected:

- The camcorder stops operating and the warning message "CONDENSATION HAS BEEN DETECTED" appears for approx. 4 seconds and "▲" starts flashing.
- If a cassette is loaded, the warning message "REMOVE THE CASSETTE" appears and "▲" starts flashing. Remove the cassette immediately and leave the cassette compartment open. Leaving the cassette in the camcorder may damage the tape.
- A cassette cannot be loaded when condensation is detected.

Resuming use:

- It takes about 1 hour until the water droplets evaporate. After the condensation warning stops flashing, wait for 1 more hour before resuming use.

Battery Pack Handling Precautions

DANGER!


Treat the battery pack with care.

- Keep it away from fire (or it might explode).
 - Do not expose the battery pack to temperatures higher than 60 °C (140 °F). Do not leave it near a heater or inside a car in hot weather.
 - Do not try to disassemble or modify it.
 - Do not drop or knock it.
 - Do not get it wet.
- Charged battery packs continue to discharge naturally. Therefore, charge them on the day of use, or the day before, to ensure a full charge.
 - Attach the terminal cover whenever a battery pack is not in use. Contact with metallic objects may cause a short circuit and damage the battery pack.
 - Dirty terminals may cause a poor contact between the battery pack and the camcorder. Wipe the terminals with a soft cloth.
 - Since storing a charged battery pack for a long time (about 1 year) can shorten its lifecycle or affect performance, we recommend to discharge the battery pack fully and to store it in a dry place at temperatures no higher than 30 °C (86 °F). If you do not use the battery pack for long periods, charge and discharge it fully at least once a year. If you have more than 1 battery pack, perform these precautions at the same time for all battery packs.
 - Although the battery pack's operating temperature range is from 0 °C to 40 °C (32 °F to 104 °F), the optimal range is from 10 °C to 30 °C (50 °F to 86 °F). At cold temperatures, performance will temporarily decline. Warm it in your pocket before use.
 - Replace the battery pack if the usable time after full charge diminishes substantially at normal temperatures.


About the battery terminal cover

The battery terminal cover has a []-shaped hole. This is useful when you wish to differentiate between charged and uncharged battery packs. For example, with charged battery packs, attach the terminal cover so that the []-shaped hole shows the blue label.


Back side of the battery pack

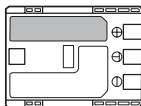

Terminal cover attached
Charged



Uncharged



Lithium Button Battery Handling Precautions

WARNING!

- The battery used in this device may present a fire or chemical burn hazard if mishandled. Do not recharge, disassemble, heat above 100 °C (212 °F) or incinerate the battery.

CR1616:

- Replace the battery with a CR1616 made by Panasonic, Hitachi Maxell, Sony, Toshiba, Varta or Renata. Use of other batteries may present a risk of fire or explosion.

CR2025:

- Replace the battery with a CR2025 made by Panasonic, Hitachi Maxell, Sony, Sanyo, or with Duracell2025. Use of other batteries may present a risk of fire or explosion.

- Do not pick up the battery using tweezers or other metal tools as this will cause a short circuit.
- Wipe the battery with a clean dry cloth to ensure proper contact.
- Keep the battery out of reach of children. If it is swallowed, seek medical assistance immediately. The battery case may break and the battery fluids may damage stomach and intestines.
- Do not disassemble, heat or immerse the battery in water to avoid the risk of explosion.

Cassette Handling Precautions

- Rewind tapes after use. If the tape becomes slack and damaged, it may cause picture and sound distortion.
- Return cassettes in the case and store them upright.
- Do not leave the cassette in the camcorder after use.
- Do not use spliced tapes or nonstandard cassettes as they may damage the camcorder.
- Do not use tapes that have been jammed as video heads may become dirty.
- Do not insert anything into the small holes of the cassette, or cover them with cellophane tape.
- Handle cassettes with care. Do not drop or subject them to severe impact as this may damage the cassettes.
- Rewind tapes from time to time if they are stored for a long time.


- With cassettes equipped with a memory function, metal plated terminals may become dirty with use. Clean the terminals with a cotton swab after about 10 times of loading/unloading. The memory function is not supported by the camcorder.

Protecting Tapes from Accidental Erasure

To protect your recordings from accidental erasure, slide the tab on the cassette to the left. (This switch position is usually labeled SAVE or ERASE OFF.)

If you load a protected cassette in CAMERA mode, the message "THE TAPE IS SET FOR ERASURE PREVENTION" appears for approx. 4 seconds and "⏏" starts flashing. If

you wish to record on that cassette, slide the tab back to the right.

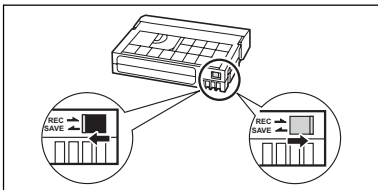

Memory Card Handling Precautions

- Initialize new memory cards with the camcorder. Memory cards initialized with other devices such as a computer may not operate correctly.
- We recommend saving backups of memory card images on your computer's hard drive or other external memory device. Image data may be corrupted or lost due to memory card defects or exposure to static electricity. Canon Inc. makes no warranties for corrupted or lost data.
- Do not turn off the camcorder, disconnect the power source, open the memory card cover or remove the memory card while the CARD access indicator is flashing.
- Do not use memory cards in places subject to strong magnetic fields.
- Do not leave memory cards in places subject to high humidity and high temperature.
- Do not disassemble memory cards.
- Do not bend, drop, or subject memory cards to shocks and do not expose them to water.
- Moving a memory card rapidly between hot and cold temperatures may cause condensation to form on its external and internal surfaces. If condensation forms on the card, put it aside until the droplets have evaporated completely.
- Do not touch or expose the terminals to dust or dirt.
- Check the direction before inserting the memory card. Forcing a memory card backwards into the slot may damage the memory card or the camcorder.
- Do not remove the label from the memory card, or affix other labels on the memory card.

Using the Camcorder Abroad

Power Sources

You can use the compact power adapter to operate the camcorder and to charge battery packs in any country with power supply between 100 and 240 V AC, 50/60 Hz. Consult the Canon Service Center for information on plug adapters for overseas use.

E

Playback on a TV Screen


You can only play back your recordings on TVs with NTSC system. The NTSC system is used in the following countries/areas:

American Samoa, Antigua, Aruba, Bahamas, Barbados, Bermuda, Bolivia, Canada, Chile, Colombia, Costa Rica, Cuba, Ecuador, El Salvador, Guam, Guatemala, Greenland, Haiti, Honduras, Jamaica, Japan, Korea, Mexico, Micronesia, Myanmar, Nicaragua, Panama, Peru, Philippines, Puerto Rico, Saint Kitts and Nevis, Saint Lucia, Saint Vincent and the Grenadines, Surinam, Taiwan, Trinidad and Tobago, USA, Venezuela, Virgin Islands.






Troubleshooting

If you have a problem with your camcorder, refer to this checklist. Consult your dealer or a Canon Service Center if the problem persists.








Power Source

Problem	Cause	Solution	
Camcorder will not turn on.	Battery pack is exhausted.	Replace or charge the battery pack.	14
	Battery pack is not correctly attached.	Attach the battery pack correctly.	14
The camcorder switches off by itself.	Battery pack is exhausted.	Replace or charge the battery pack.	14
	Power save function has been activated.	Turn on the camcorder.	24
Cassette compartment will not open.	Battery pack is exhausted.	Replace or charge the battery pack.	14
	Cassette compartment cover is not fully open.	Open the cassette compartment cover fully.	17
Cassette compartment stopped during loading/unloading.	Battery pack is exhausted.	Replace or charge the battery pack.	14
	The camcorder malfunctions.	Consult a Canon Service Center.	–
LCD/viewfinder switches on and off.	Battery pack is exhausted.	Replace or charge the battery pack.	14
Battery pack will not charge.	Battery packs will not charge outside the temperature range of 0 °C and 40°C (32 °F and 104 °F).	Charge the battery pack in temperatures between 0 °C and 40 °C (32 °F and 104 °F).	–
	Battery packs become hot with use and may not charge.	Wait until the battery pack temperature is below 40 °C (104 °F) and retry charging.	–
	The battery pack is damaged.	Use a different battery pack.	–





Recording/Playback

Problem	Cause	Solution	
Buttons will not work.	Camcorder is not turned on.	Turn on the camcorder.	23
	Cassette is not loaded.	Load a cassette.	17
"  " flashes on the screen.	Cassette is not loaded.	Load a cassette.	17
"  " flashes on the screen.	Battery pack is exhausted.	Replace or charge the battery pack.	14
"  " flashes on the screen.	Condensation is detected.	See reference page.	113
"REMOVE THE CASSETTE" appears on the screen.	Camcorder stopped operating to protect the tape.	Unload and reload the cassette.	17
The wireless controller will not work.	[WL.REMOTE] is set to [OFF ].	Set [WL.REMOTE] to [ON].	67
	The battery of the wireless controller is exhausted.	Replace the battery.	19





Recording

Problem	Cause	Solution	
Image will not appear on the screen.	Camcorder is not set to  mode.	Set the camcorder to  mode.	23
"SET THE TIME ZONE, DATE AND TIME" appears on the screen.	Time zone, date and time are not set.	Set the time zone, date and time.	21
	Backup battery is exhausted.	Replace the backup battery and reset the time zone, date and time.	16
	Backup battery is inserted the wrong way.	Insert the backup battery with the + side facing outward and set the time zone, date and time.	16
Pressing the start/stop button will not start recording.	Camcorder is turned off.	Turn on the power.	23
	Cassette is not loaded.	Load a cassette.	17
	Tape reached the end ("  END" flashes on the screen).	Rewind the tape or replace the cassette.	17
	Cassette is protected ("  " flashes on the screen).	Change the position of the protect switch.	116
	Camcorder is set to a mode other than the  mode.	Set the camcorder to  mode.	23
Camcorder will not focus.	Autofocus does not work on that subject.	Focus manually.	46
	Viewfinder is not adjusted.	Adjust the viewfinder with the dioptic adjustment lever.	18
	Lens is dirty.	Clean the lens.	112
A vertical light bar appears on the screen.	Bright light in a dark scene may cause a vertical light bar (smear) to appear. This is not a malfunction.	---	—
Viewfinder picture is blurred.	Viewfinder is not adjusted.	Adjust the viewfinder with the dioptic adjustment lever.	18
Sound is distorted or recorded in a lower volume than the actual volume.	When recording near loud sound (such as fireworks, drums or concerts), sound may become distorted or may not be recorded in the actual sound level. This is not a malfunction.	---	—

Playback


Problem	Cause	Solution	
Pressing the playback button does not start playback.	Camcorder is turned off, or is not set to PLAY  mode.	Set the camcorder to PLAY  mode.	30
	The TAPE/CARD switch is set to CARD.	Set the TAPE/CARD switch to TAPE.	30
	Cassette is not loaded.	Load a cassette.	17
	Tape reached the end ("  END" flashes on the screen).	Rewind the tape.	30
Image will not appear on the TV screen.	ZR700 [AV \Rightarrow DV] is set to [ON].	Set [AV \Rightarrow DV] to [OFF].	75
Tape is running, but image will not appear on the TV screen.	TV/VIDEO selector on the TV is not set to VIDEO.	Set the selector to VIDEO.	33
	Video heads are dirty.	Clean the video heads.	113
	You attempted to play back or dub copyright protected tape.	Stop playback/dubbing.	—
No sound from the built-in speaker.	Speaker volume is turned off.	Adjust the volume with the [SPEAKER VOLUME] option.	32

Memory Card Operation

Problem	Cause	Solution	
Memory card cannot be inserted.	Memory card was not facing the correct direction.	Turn the memory card over and reinsert it.	80
Memory card cannot be recorded.	Memory card is full.	Replace the memory card or erase images.	80, 94
	Memory card is not initialized.	Initialize the memory card.	95
	Memory card is not inserted.	Insert a memory card.	80
	File number reached maximum value.	Set [FILE NOS.] to [RESET] and insert a new memory card.	83
	SD Memory Card is protected.	Change the position of the protect switch.	80
Memory card cannot be played back.	Camcorder is not set to PLAY  mode.	Set the camcorder to PLAY  mode.	91
	Memory card is not inserted.	Insert a memory card.	80
Image cannot be erased.	Image is protected.	Cancel the protection.	93
	SD memory card is protected.	Change the position of the protect switch.	80
"  " flashes red.	Card error occurred.	Turn off the camcorder. Remove and reinsert the memory card. Initialize the memory card if flashing persists.	95

System Diagram (Availability differs from area to area)

E

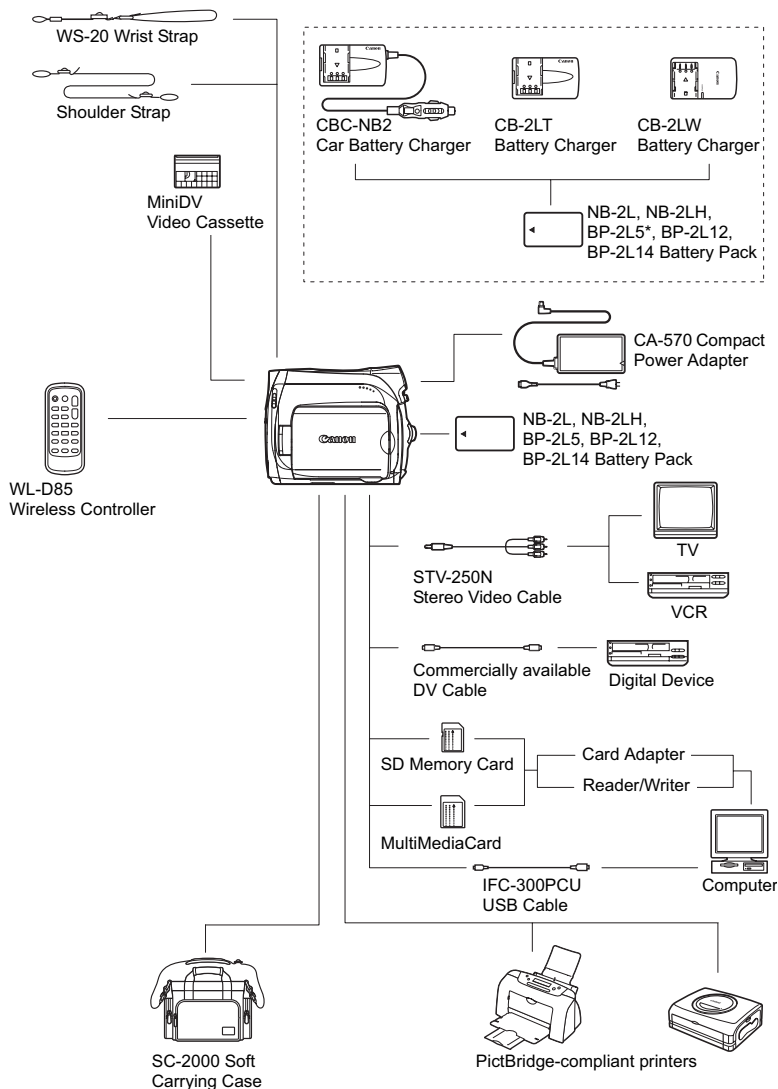

* The BP-2L5 is not available as a separate optional accessory.

Additional
Information

Optional Accessories


Call or visit your local retailer/dealer for genuine Canon video accessories. You can also obtain genuine accessories for your Canon camcorder by calling: 1-800-828-4040, Canon U.S.A. Information Center.

Use of genuine Canon accessories is recommended.

This product is designed to achieve excellent performance when used with genuine Canon accessories. Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.


Battery Packs

When you need extra battery packs, select from the following: NB-2L, NB-2LH, BP-2L12, BP-2L14.



CB-2LT/CB-2LW Battery Charger

Use the battery charger for charging the battery packs. It plugs directly into a power outlet without a cable.

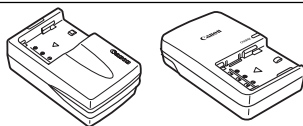


Battery Pack	Charging Time
BP-2L5	70 min.
NB-2L	80 min.
NB-2LH	90 min.
BP-2L12	150 min.
BP-2L14	170 min.

Charging time varies according to the charging condition.


CBC-NB2 Car Battery Charger

Use the car battery charger to charge battery packs on the move. The car battery cable plugs into your car's cigarette lighter and runs off a 12-24 V DC negative ground battery.

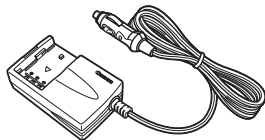


WS-20 Wrist Strap

Use this for extra additional protection for active shooting.



Shoulder Strap


You can attach a shoulder strap for more security and portability. Pass the ends through the strap mount and adjust the length of the strap.

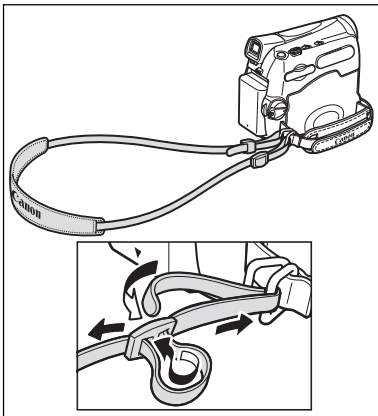

E

SC-2000 Soft Carrying Case

A handy camcorder bag with padded compartments and plenty of space for accessories.

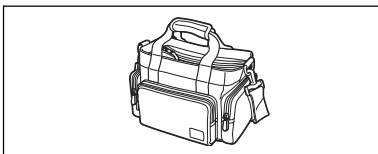

This mark identifies genuine Canon video accessories. When you use Canon video equipment, we recommend Canon-brand accessories or products bearing the same mark.



Specifications

ZR700/ZR600

System

Video Recording System	2 rotary heads, helical scanning DV system (consumer digital VCR SD system), digital component recording
Audio Recording System	PCM digital sound: 16 bit (48 kHz/2 ch); 12 bit (32 kHz/4 ch)
Television System	EIA standard (525 lines, 60 fields) NTSC color signal
Image Sensor	1/6-inch CCD, approx. 680,000 pixels Effective pixels: Tape: 16:9 (with image stabilizer): approx. 400,000 16:9 (no image stabilizer): approx. 450,000 4:3 recording: approx. 340,000 Card (still images): approx. 450,000
Tape Format	Videocassettes bearing the "MiniDV" mark.
Tape Speed	SP: 18.81 mm/s (0.74 ips), LP: 12.56 mm/s (0.49 ips)
Maximum Recording Time (80 min. cassette)	SP: 80 min., LP: 120 min.
Fast Forward/Rewind Time	Approx. 2 min. 20 sec. (with a 60 min. cassette)
LCD Screen	2.7-inch. wide, TFT color, approx. 112,000 pixels
Viewfinder	0.3-inch. TFT color, approx. 123,000 pixels
Microphone	Stereo electret condenser microphone
Lens	f=2.6-65 mm, F/1.8-4.4, 25x power zoom 35 mm equivalent: Tape: 16:9 (with image stabilizer): 43.8-1095 mm 16:9 (no image stabilizer): 41.0-1025 mm 4:3 recording: 49.8-1245 mm Card (still images): approx. 43.6-1090 mm
Lens Configuration	10 elements in 8 groups
AF System	TTL autofocus, manual focusing possible
Minimum Focusing Distance	1 m (3.3 ft.); 1 cm (0.39 in.) on maximum wide angle
White Balance	Auto white balance, pre-set white balance (DAYLIGHT, TUNGSTEN) or custom white balance
Minimum Illumination	2.0 lx (Night recording program, shutter speed at 1/8)
Recommended Illumination	More than 100 lx
Image Stabilization	Electronic

Memory Card

Recording Media	SD Memory Card, MultiMediaCard*
Size of Images on the Card	Still image: 1024 x 768, 640 x 480 pixels Movie: 320 x 240, 160 x 120 pixels, 15 frames/sec.
File Format	Design rule for Camera File System (DCF), Exif 2.2** compliant, DPOF compliant
Image Compression Method	Still image: JPEG (compression: Super Fine, Fine, Normal) Movie: Video data: Motion JPEG, audio data: WAVE (monaural)

* The camcorder's operations have been tested with SD memory cards up to 2GB. Performance cannot be guaranteed for all memory cards.

**This camcorder supports Exif 2.2 (also called "Exif Print"). Exif Print is a standard for enhancing the communication between camcorders and printers. By connecting to an Exif Print-compliant printer, the camcorder's image data at the time of shooting is used and optimized, yielding extremely high quality prints.

Input/Output Terminals

AV Terminal	Ø3.5 mm minijack, output only (ZR700 : input/output) Video: 1 Vp-p/75 ohms unbalanced Audio output: -10 dBV (47 kohm load)/3 kohms or less ZR700 Audio input: -10 dBV/40 kohms or more
DV Terminal	Special 4-pin connector (IEEE 1394 compliant)
USB Terminal	mini-B

Power/Others

Power supply (rated)	7.4 V DC
Power consumption (AF on)	2.4W (using viewfinder), 2.5W (using LCD screen in normal brightness)
Operating temperature	0 – 40 °C (32 – 104 °F)
Dimensions (W x H x D)	49 x 92 x 115 mm (1.9 x 3.6 x 4.5 in.) excluding protrusions
Weight (camcorder body only)	380 g (13.4 oz.)

CA-570 Compact Power Adapter

Power supply	100 – 240 V AC, 50/60 Hz
Power consumption	17W
Rated output	8.4 V DC, 1.5 A
Operating temperature	0 – 40 °C (32 – 104 °F)
Dimensions	52 x 90 x 29 mm (2.1 x 3.5 x 1.1 in.)
Weight	135 g (4.8 oz.)

ZR700 NB-2LH Battery Pack

Battery type	Rechargeable Lithium Ion Battery
Rated voltage	7.4 V DC
Operating temperature	0 – 40 °C (32 – 104 °F)
Battery capacity	720 mAh
Dimensions	33.3 x 16.2 x 45.2 mm (1.3 x 0.64 x 1.8 in.)
Weight	43 g (1.5 oz.)

ZR600 BP-2L5 Battery Pack

Battery type	Rechargeable Lithium Ion Battery
Rated voltage	7.4 V DC
Operating temperature	0 – 40 °C (32 – 104 °F)
Battery capacity	530 mAh
Dimensions	33.3 x 16.2 x 45.2 mm (1.3 x 0.64 x 1.8 in.)
Weight	40 g (1.4 oz.)

Weight and dimensions are approximate. Errors and omissions excepted. Subject to change without notice.

Item Codes

Provided Accessories

CA-570 Compact Power Adapter	8468A002AA
22700 NB-2LH Battery Pack	9612A001AA
STV-250N Stereo Video Cable	3067A002AA (D82-0590-201)
WL-D85 Wireless Controller	D83-0712-000
IFC-300PCU USB Cable	6906A001AA

Optional Accessories

BP-2L12 Battery Pack	7871A002AA
BP-2L14 Battery Pack	9582A002AA
NB-2L Battery Pack	7302A001AA
CB-2LT Battery Charger	7303A001AA
CBC-NB2 Car Battery Charger	7873A002AA
WS-20 Wrist Strap	3118A002AA (D81-0190-202)
SC-2000 Soft Carrying Case	9389A001AA
SC-1000 Soft Carrying Case	3083A002AA (D81-1200-201)
SC-A50 Soft Carrying Case	D81-1302-201
DVM-CL DV Cleaning Cassette	3134A002AA (D36-0032-201)

16:9 (Widescreen)	60
6-second auto date	62

A

Abroad, using the camcorder	117
Accessories	122
Analog line-in recording*	72
Analog/digital (A/D) converter*	74
Assist lamp*	52
Audio dubbing	76
Audio mode	55
Audio output channel	35
Auto slow shutter	51
Autofocus	46
AV terminal	33

B

Backup battery	16
Battery pack	14
Beach (recording program)	41
Beep	67

C

Card jump	92
Card mix	57
Condensation	113
Connection to a computer	79, 102
Connection to a digital recording device	70
Connection to a TV or VCR	33
Copyright signals	73

D

Data code	62
Date and time	21
Date format	66
Date search	65
Demo mode	69
Digital effects	56
Digital zoom	28
Direct print function	96
Direct transfer	103
DV dubbing	73
DV terminal	70, 79

E

Easy mode	41
Effects	57
End search	63
Erasing still images	94
Exposure	45

F

Faders	56
File numbers	83
Fireworks (recording program)	42
Focus	46
Focus priority	90
Focusing mode	90

G

Grip belt	18
-----------------	----

H

Handling precautions	112
----------------------------	-----

I

Image effects	49
Image stabilizer	68
Infinity focus	47
Initialization (memory card)	95

L

Language	66
LCD backlight	20
LCD brightness	67
LCD screen	20
LP mode	54

M

Magnification of playback image	61
Maintenance	112
Manual focus	46
Memory card	80
Menus	36
Messages	109
Movie size (memory card)	82
MultiMediaCard	80

N	
Night (recording program)	41

O	
On-screen displays	106
Operating modes	6

P	
Playback - Memory card	91
Playback - Tape	30
Portrait (recording program)	41
Power adapter	14
Print order	100
Printing still images	96
Program AE (recording program)	41
Protecting still images	93
Protecting tapes	116

R	
Record review	25
Record search	25
Recording - Movies (memory card)	88
Recording - Movies (tape)	23
Recording - Still images (memory card)	84
Recording mode	54
Recording programs	41
Remote sensor	67

S	
SD Memory Card	80
Self timer	53
Shutter speed	50
Slide show	92
Snow (recording program)	41
SP mode	54
Speaker volume	32
Sports (recording program)	41
Spotlight (recording program)	42
Start-up image	68
Still image quality/size	82
Still image review	87
Sunset (recording program)	42

T	
Time zone	21
Transfer order	105

Transferring still images to a computer	102
Transferring video to a computer	79
Tripod	29
Troubleshooting	118

U	
USB terminal	96, 102

V	
Video heads	113
Videocassettes	17
Viewfinder, dioptic adjustment	18
Volume	32

W	
White balance	48
White LED light*	52
Widescreen	60
Wind screen	55
Wireless controller	19

Z	
Zero set memory	64
Zoom	27
Zoom speed	28

CANON CONSUMER DIGITAL VIDEO EQUIPMENT LIMITED WARRANTY FOR THE UNITED STATES

The warranty set forward below is given by Canon U.S.A., Inc. with respect to equipment purchased in the United States. The limited warranty is only effective upon presentation of your Bill of Sale or other proof of purchase.

Canon consumer digital video equipment is warranted under normal, non-commercial, personal use, against defective materials or workmanship as follows:

Parts: Defective parts will be exchanged for new parts or comparable rebuilt parts for a period of ONE YEAR from the date of original purchase, except for a defective Video Head, which will be exchanged for a period of three months from the date of purchase.

Labor: For a period of ONE YEAR from the date of original purchase, labor will be provided free of charge by our factory service centers or designated service facilities located in the United States.

When returning equipment under this warranty, you must pre-pay the shipping charges, and you must enclose the Bill of Sale or other proof of purchase with a complete explanation of the problem. During your ONE-YEAR warranty period, repairs will be made and the equipment return-shipped to you free of charge. After your warranty period is over, you will be given an estimate of the cost of repair and an opportunity to approve or disapprove of the repair expense before it is incurred. If you approve, repairs will be made and the equipment return-shipped to you. (shipping charges apply). If you disapprove, we will return-ship the equipment at no charge to you.

Non-Canon brand peripheral equipment and software which may be distributed with Canon DV camcorders are sold "AS IS" without warranty of any kind by CUSA, including any implied warranty regarding merchantability or fitness for a particular purpose. The sole warranty with respect to such non-Canon brand items is given by the manufacturer or producer thereof.

CUSA shall have no responsibility under this limited warranty for use of Canon DV Camcorders in conjunction with incompatible peripheral equipment and incompatible software.

In order to obtain warranty service, contact the authorized Canon retail dealer from whom you purchased the DV Camcorder or call the CANON INFORMATION CENTER AT 1-800-828-4040. You will be directed to the nearest service facility for your product.

This Limited Warranty covers all defects encountered in normal use of the equipment and does not apply in the following cases:

- A) Loss or damage to the equipment due to abuse, mishandling, accident, improper maintenance, or failure to follow operating instructions;
- B) If the equipment is defective as a result of leaking batteries, sand, dirt or water damage;
- C) If defects or damages are caused by the use of unauthorized parts or by service other than our authorized agent;
- D) If the equipment is used for commercial or industrial use.

This Limited Warranty does not cover cabinet (exterior finish), video cassette tape, head cleanings, nor does it apply to equipment purchased outside the United States. This warranty does not cover units sold to rental firms, military operations, hotels, schools, hospitals or for other commercial, industrial, or institutional applications. These uses are covered only by such specific warranty as Canon may issue with such sales.

This Limited Warranty does not apply to accessories or consumables for the DV Camcorder, which are sold "AS IS", without warranty of any kind by CUSA.

Please retain this warranty card and your Bill of Sale as a permanent record of your purchase. This card is most important in order to be sure you are contacted right away should there be a safety inspection, modification or product recall under applicable laws or regulations.

NO IMPLIED WARRANTY, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE APPLIES TO THIS EQUIPMENT AFTER THE APPLICABLE PERIOD OF EXPRESS WARRANTY OR GUARANTY, EXCEPT AS MENTIONED ABOVE, GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS EQUIPMENT SHALL BIND THE UNDERSIGNED. (SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU). CUSA SHALL NOT BE LIABLE FOR LOSS OF REVENUES OR PROFITS, EXPENSE FOR SUBSTITUTE EQUIPMENT OR SERVICE, STORAGE CHARGES, LOSS OF DATA, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE DV CAMCORDER, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF CUSA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST CUSA BE GREATER THAN THE PURCHASE PRICE OF THE DV CAMCORDER SOLD BY CUSA AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF USE, MISUSE OR INABILITY TO USE THE DV CAMCORDER NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF CUSA. (SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU). THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS EQUIPMENT OR THE PERSON FOR WHOM IT WAS PURCHASED AS A GIFT.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. CANON U.S.A., INC.

CANON CONSUMER DIGITAL VIDEO EQUIPMENT LIMITED WARRANTY

The limited warranty set forth below is given by Canon Canada Inc. ("Canon Canada") with respect to Canon digital video equipment purchased in Canada. This limited warranty is only effective upon presentation of a bill of sale or other proof of purchase for this Canon digital video equipment to a Canon Service Facility when repairs are required.

Canon consumer video digital equipment is warranted under normal, non-commercial, personal use, against defective materials or workmanship as follows:

Parts: Defective parts will be exchanged for new parts or, at Canon Canada's option, comparable rebuilt parts for a period of one year from the date of original purchase, except Video Heads which will be exchanged for a period of 3 months from the date of purchase.

Labour: For a period of one year from the date of original purchase, labour will be provided free of charge by our Canon Service Facilities in Canada.

This limited warranty covers all defects except where:

(a) The loss or damage to the product results from:

- i) accident, natural disaster, mishandling, abuse, neglect, unauthorized product modification or failure to follow instructions contained in the instruction manual;
- ii) the use of accessories, attachments, products, supplies, parts or devices with this Canon product that do not conform to Canon specifications or that cause abnormally frequent service problems;
- iii) repairs or services performed by any party other than a Canon Service Facility;
- iv) defective batteries or any exposure to water, sand or dirt;
- v) shipping (claim must be presented to the shipper);

(b) Any serial number on the video equipment is altered or removed.

(c) The digital video equipment is used for commercial, professional or industrial purposes.

This limited warranty does not cover the cabinet (exterior finish) of the digital video equipment, video cassette tapes, head cleaners, nor does it apply to digital video equipment purchased outside Canada.

TO OBTAIN WARRANTY SERVICE

Ship your Canon digital video equipment in its original carton, box or equivalent, properly packed, fully insured with shipping charges prepaid, together with a copy of your bill of sale or other proof of purchase and a description of the problem to any of the Canon Service Facilities in Canada.

LIMITATIONS

Except as otherwise required by applicable legislation, this warranty is in lieu of all other warranties, conditions, guarantees or representations, express or implied, statutory or otherwise, relative to this Canon product, including implied warranties or conditions of merchantability or fitness for a particular purpose.

Canon Canada assumes no liability for special, consequential or incidental damages or loss that may arise, whether on account of negligence or otherwise, from the use, misuse or inability to use this Canon product (including loss of profit, revenue, video tapes or enjoyment) or from failure to conform to any express or implied warranties, conditions, guarantees or representations. Any recovery under this limited warranty shall not exceed the purchase price of the product. Canon Canada does not assume or authorize any other person to assume for Canon Canada any other liability with respect to this Canon product.

This warranty does not extend to any person other than the original purchaser of this Canon product or the person for whom it was purchased as a gift and states your exclusive remedy.

NOTICE TO CONSUMER

If you plan to take important videos or if the product has not been used for some time, please check all functions with the instruction book before using it.



CANON INC.

U.S.A.

CANON U.S.A., INC. NEW JERSEY OFFICE

100 Jamesburg Road, Jamesburg, NJ 08831 USA

CANON U.S.A., INC. CHICAGO OFFICE

100 Park Blvd., Itasca, IL 60143 USA

CANON U.S.A., INC. LOS ANGELES OFFICE

15955 Alton Parkway, Irvine, CA 92618 USA

CANON U.S.A., INC. HONOLULU OFFICE

210 Ward Avenue, Suite 200, Honolulu, HI 96814 USA

- If you have any questions, call the Canon U.S.A. Information Center toll-free at 1-800-828-4040 (U.S.A. only).

CANADA

CANON CANADA INC. NATIONAL HEADQUARTERS

6390 Dixie Road, Mississauga, Ontario L5T 1P7

CANON CANADA INC. CALGARY

2828, 16th Street, N.E. Calgary, Alberta T2E 7K7

CANON CANADA INC. MONTREAL

5990 Côte de Liesse, Quebec H4T 1V7

- If you have any questions, call the Canon Canada Information Center toll-free at 1-800-828-4040 (CANADA only).

- Si vous avez des questions, veuillez téléphoner sans frais au Canada 1-800-828-4040 (CANADA seulement).

MEXICO

CANON MEXICANA, S. DE R.L. DE C.V.

Periferico Sur No. 4124 Col. Ex-Rancho de Anzaldo C.P. 01900

México, D.F., México

CANON U.S.A., INC. NEW JERSEY OFFICE

100 Jamesburg Road, Jamesburg, NJ 08831 USA

**CENTRO Y
SURAMÉRICA**

CANON LATIN AMERICA, INC.

703 Waterford Way Suite 400 Miami, FL 33126 USA

ASIA

CANON HONGKONG COMPANY LTD.

19/F, The Metropolis Tower, 10 Metropolis Drive, Hunghom, Kowloon, Hong Kong



Printed on 100% reused paper.
Document réalisé avec du papier recyclé à 100%.
El papel aquí utilizado es 100% reciclado.

