

# SHARP®

## ELECTRONIC ORGANIZER *WIZARD*®

### OPERATION MANUAL

Instrucciones abreviadas en español



#### CONTENTS

Part Names and Key Assignments .....	1	Memo Mode .....	17
Using the Organizer for the First Time .....	2	Expense Mode .....	18
Auto Power Off Function .....	3	Editing Listings .....	20
Backlight .....	3	Deleting Listings .....	20
Adjusting the LCD Contrast .....	3	Word Translator Mode .....	21
Turning the key sound On and Off .....	3	Spell Checker Mode .....	22
Memory Check .....	3	Diet Function Mode .....	22
Display Symbols .....	4	Calculator Mode .....	27
Entering Characters .....	5	Conversion Mode .....	28
Built-in Calendar and Clock .....	6	Secret Function .....	30
Clock Mode .....	6	Game Mode .....	31
Alarm .....	8	Managing the Organizer's Memory .....	33
Telephone Mode .....	9	Using the Included PC Software .....	33
Calendar Mode .....	11	Battery Replacement .....	38
Schedule Mode .....	12	Specifications .....	39
Anniversary Mode .....	14	Appendix .....	42
To Do Mode .....	15	Instrucciones abreviadas en español .....	S-1

---

## **NOTICE**

- SHARP strongly recommends that separate permanent written records be kept of all important data. Data may be lost or altered in virtually any electronic memory product under certain circumstances. Therefore, SHARP assumes no responsibility for data lost or otherwise rendered unusable whether as a result of improper use, repairs, defects, battery replacement, use after the specified battery life has expired, or any other cause.
- SHARP assumes no responsibility, directly or indirectly, for financial losses or claims from third persons resulting from the use of this product and any of its functions, such as stolen credit card numbers, the loss of or alteration of stored data, etc.
- The information provided in this manual is subject to change without notice.

---

## **CAUTIONS**


- Do not carry the Organizer in the back pocket of slacks or trousers.
- Do not drop the Organizer or apply excessive force to it.
- Do not subject the Organizer to extreme temperatures.
- Since this product is not waterproof, do not use it or store it where fluids can splash onto it. Raindrops, water spray, juice, coffee, steam, perspiration, etc. will also cause malfunction.
- Clean only with a soft, dry cloth.
- Use only a SHARP approved service facility.

---

## **NOTES**

- All company and/or product names are trademarks and/or registered trademarks of their respective manufactures.


## Part Names

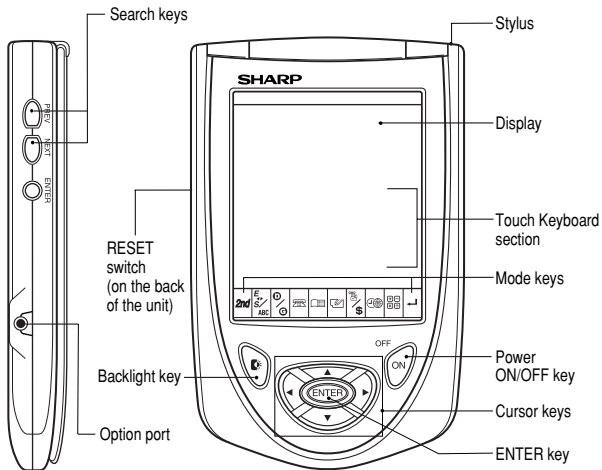

## Key Assignments


**2nd** : 2nd Function key

Activates the second function specifically assigned to the next key tapped.


 (**E** **S** **ABC**): English-Spanish word translator/Spell Checker mode key

 (**DIET** **GAME**): Diet Function/Game mode key

 (**TEL**): Telephone mode key

 (**SCHEDULE/CALENDAR**): Schedule/Calendar mode key

 (**MEMO/ANN**): Memo/Anniversary mode key

 (**TO DO/EXPENSE**): To Do/Expense mode key

 (**CLOCK/ALARM**): Home Clock/World Clock/Alarm mode key

 (**CALC/CONV**): Calculation/Conversion mode key

• In this manual, these Mode keys are represented with icons in parentheses.

## Using the Organizer for the First Time

Be sure to perform the following operations before using the Organizer for the first time.



1. Pull out the battery insulation sheets from the battery compartment on the back of the unit.

The Organizer starts operation.

(The battery insulation sheets were inserted at the factory to prevent battery wear.)

2. Press the **RESET** switch.

A message, "RESET?" is displayed.

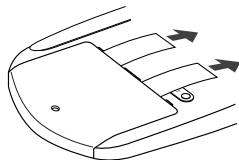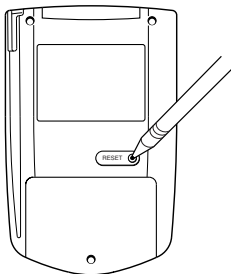

3. Tap **[2nd]**, then **[ENTER]**.

To tap the touch keys, use the stylus (included in the package).

The message will appear as "RESET!".

The Organizer is now initialized. Proceed to set the date and time of the clock (see page 6).

### Note:

- Press the **RESET** switch using the stylus or similar object. Do not use an object with a breakable or sharp tip.

### If a malfunction occurs under abnormal conditions

If the Organizer is subjected to strong extraneous electrical noise or shock during use, on rare occasions, all the functions will not work properly and data may be displayed incorrectly. In such cases, follow the procedures as shown below.

1. Press the **RESET** switch.
2. When a message, "RESET?" is displayed, press any key EXCEPT FOR **[2nd]** or **[ENTER]**.

If the first procedure doesn't work, follow the next procedure to initialize the Organizer's memory. In this case, all the stored data will be deleted.

1. Press the **RESET** switch.
2. When a message, "RESET?" is displayed, tap **[2nd]**, then press **[ENTER]**.

## Auto Power Off Function

When none of the keys has been pressed or tapped for approximately 7 minutes, the Organizer automatically turns the power off to save the batteries.

## Backlight

The Backlight allows you to view the display and use the Organizer even in low-light conditions. Pressing **BackLight** once illuminates the display for as long as you continue to use the Organizer; if no key activities are detected within the specified interval, it will be turned off automatically.

- To turn the Backlight off, press **BackLight** again.
- The Backlight may remain on for less than the preset interval or it may not function if the battery level is low.
- The Backlight does not function in the PC Link mode.

### Do not use the Backlight unnecessarily.

- Since the Backlight drains power, excessive use of the Backlight will significantly reduce the life of your batteries.

### Setting up the Backlight

- The Backlight can be set to turn off at a specified interval.
1. Tap **CLOCK/ALARM** **MENU**, select "BL TIME SET" by using **▲** or **▼**, and press **ENTER**.
  2. By using **▲** or **▼**, select a desired interval (10, 20, or 30 seconds) and press **ENTER**.

## Adjusting the LCD Contrast

1. Tap **CLOCK/ALARM** **MENU**, select "LCD CONTRAST" by using **▲** or **▼**, and press **ENTER**.
2. Press **▲** or **▼** to darken/lighten the display (within 1 through 8).
3. When done, press **ENTER**.

## Turning the key sound On and Off

1. Tap **CLOCK/ALARM** **MENU**, select "KEY TONE" by using **▲** or **▼**, and press **ENTER**.
2. Select the key sound function on/off by using **▲** or **▼**.
3. When done, press **ENTER**.










## Memory Check


Tap **CLOCK/ALARM** **MENU**, select "MEMORY CHECK" by using **▲** or **▼**, and press **ENTER**.


The memory check display will appear and indicate the remaining memory space.

The previous screen will appear after 2 seconds.


### Display Symbols

-  Hourly Alarm: The Hourly Alarm is ON and will sound every hour.
-  Schedule sign: Appears when the Home clock time reaches a Reminder time or a Start time of a schedule listing. Disappears when the time reaches the End time of the listing.
-  Anniversary sign: Appears when a special day will arrive within days as set in Anniversary Reminder.
-  UP sign: More information exists above the current display. (Press )
-  DOWN sign: More information exists below the current display. (Press )
- CAPS** CAPS LOCK sign: Capital (uppercase) letters will be entered. To enter small (lowercase) letters, tap  to turn "CAPS" off.
-  Beep sound: Key touch sound (beep) is ON.
- EDIT** EDIT mode: The listing on the display can be edited.

**2nd** 2<sup>nd</sup> function: Indicates that  has been activated.

 Daily Alarm: The Daily Alarm is ON and is set to go off at the specified time every day.

**BATT** Low Battery sign: Indicates that the battery level is extremely low. (Replace the battery with a new one immediately.)

 Secret sign: Secret function is in effect.  
(Listings cannot be recalled without a password.)

- The display examples in this manual show only the symbols required for each explanation.

## Entering Characters

### Moving the Cursor

Move the cursor by pressing , , , or .

### Entering Characters

#### Entering letters and numbers


The initial setting for entering letters is small (lowercase) letters. To enter capital (uppercase) letters, turn “CAPS” on by tapping .

#### Touch Keyboard

Alphabet entry mode



Number entry mode



- Each time is tapped, the touch keyboard switches between the Alphabet entry mode and the Number entry mode.  
To tap the touch keys, use the stylus (included in the package).
- Tap towards the center of each key.
- Numbers, alphanumeric letters, symbols, and “+ – x ÷ .” can be entered.

#### Other characters

Tap to display the symbol entry mode, allowing a total of 32 symbols and characters to be selected. To select the desired symbol/special character, tap the appropriate number of times at the position where you would like to insert it.

Characters assigned to :

@ . # \$ % & ' ( ) ~ ^ \_ &lt; > ß ! ? ¡ ¨ \* Æ æ Ø ø Þ þ Ð ð

### Making Corrections

#### 1. Inserting or Overwriting characters

Tap , once or twice, to insert or overwrite characters.

#### 2. Deleting characters

can be used for deletion of data in Calculator mode and Rate figure in Conversion mode.

can be used for deletion of characters.

can also be used to delete listings.

## Built-in Calendar and Clock

### Precautions


- Calendar, Schedule, Expense, and Clock modes allow you to enter the desired date and time between Jan. 1, 1950 and Dec. 31, 2150.
- If an attempt is made to store an invalid time or date, you will not be able to move the cursor to date entering, or store the time and date by pressing **[ENTER]**. Enter the correct value and press **[ENTER]** again.
- The Organizer has 43 cities according to the time zones (see page 42).

### Clock Mode

The Organizer has both Home Clock and World Clock modes. The display switches between Home and World clock each time **[CLOCK/ALARM]** is tapped.



Home Clock Mode

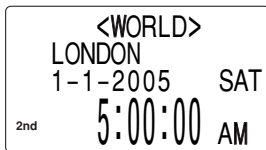

World Clock Mode

### Setting the Home Clock

1. If the display is in other mode or World Clock mode, tap **[CLOCK/ALARM]** to enter the Home Clock mode.

#### Note:


- During the period of the Daylight Saving Time (summer time), set the DST ON beforehand as described on page 7, "Setting Daylight Saving Time ON/OFF".

2. Tap **[EDIT]**.

The Organizer will enter the clock setting mode.

3. Select your Home city using **[NEXT]** or **[PREV]**.


City names can be edited, if necessary.

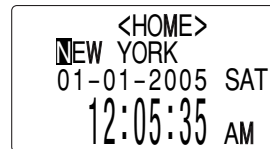

4. Press **[▼]** to move the cursor to the Month position.


5. Enter the appropriate month.

Enter the day and then year in the same way.

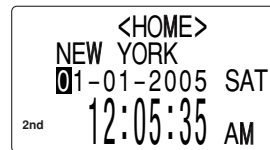

6. Press **[▼]** to move the cursor to the Hour position.

7. Enter the appropriate hour.

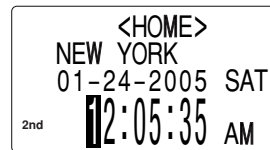


8. Enter the minutes and seconds in the same manner.

9. Select AM or PM using **[AM/PM]**.



10. Press **ENTER** to set the Clock.

The clock starts from exactly the set time.

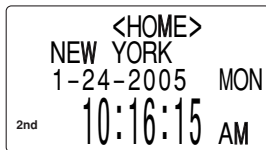

### Selecting the date format (Default: Month-Day-Year)

1. Tap **MENU**, select "DATE FORMAT" by using **▲** or **▼**, and press **ENTER**.
2. Select the desired date format by using **▲** or **▼**, and press **ENTER**.

Mode	Month-Day-Year (MM-DD-YYYY)	Year-Month-Day (YYYY-MM-DD)	Day-Month-Year (DD-MM-YYYY)
Jan 24,2005	01-24-2005	2005-01-24	24-01-2005


#### Note:

- The selected date format affects each mode in the Organizer.

### Selecting the 12- or 24-hour time system (Default: 12 hour)

1. Tap **12/24** the appropriate number of times to select the 12 hour or 24 hour system.

12 hour

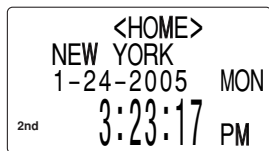


24 hour



In the 12-hour system, 12:00 AM: midnight, 12:00 PM: noon.

### Setting Daylight Saving Time (DST: Summer time) ON/OFF

1. Tap **DST** once to switch the DST setting. When the DST is ON, "\*" appears.

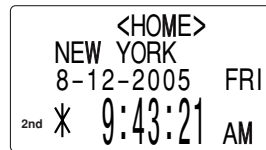

### Changing the World Clock city to the Home Clock city

A different city in another time zone can be set as the home city at will, without adjusting the stored correct time.

1. Tap **CLOCK/ALARM** once or twice to display the World clock.
2. To set the new home city, select the desired city by using **NEXT** or **PREV**.
3. Tap **EDIT** to change the cities between the Home and the World clocks.
  - The previous home city is now set as the world city.
4. Tap **CLOCK/ALARM** to check the home city.
  - The selected city in step 2 is now set as the home city.

## Alarm

The Organizer has 3 kinds of alarm:


1. Daily Alarm..... Sounds every day at the specified time(for approx. 1 minute), when "🔔" is displayed.  
Up to 3 alarms can be set separately (Alarm1, Alarm2, and Alarm3).
2. Hourly Alarm..... Sounds every hour precisely (every time minutes reach "00"), when "🕒" is displayed.
3. Schedule Alarm... Sounds at the specified times of schedule listings (see page 12).

**Press any key to stop the Alarm sounding.**

### Turning the Daily and Hourly Alarms ON/OFF

The Daily and Hourly Alarms can sound when the respective symbols ("🔔" and "🕒") are displayed.

1. Tap **CLOCK/ALARM** once twice, or three times.  
The Alarm display will appear.

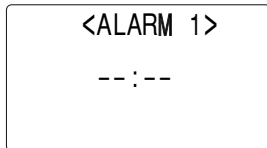

2. Tap "🕒" appropriate times. Each time you tap "🕒", the combination of symbols switches.

#### Note:

- Alarms will sound even when the Organizer is turned off.


### Setting the Daily Alarm time

Set up the Daily Alarm to go off at a specified time.

1. Tap **CLOCK/ALARM** once, twice, or three times.

The Alarm display will appear.


2. Press **NEXT** or **PREV** to select the Alarm1, Alarm2, or Alarm3.

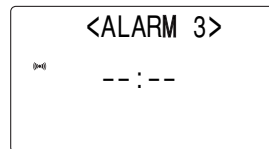

(Alarm3 is OFF)

3. Press **◀** or **▶** to turn on the Alarm.

(The display differs between the 12 hour and 24 hour systems.)

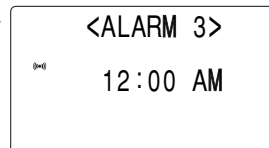

(Alarm3 is ON)

4. Tap **EDIT** to specify the time.
5. Enter the desired time.
6. Press **ENTER**.

#### Note:

- You can turn the respective alarms (Alarms 1 to 3) ON/OFF. Display the desired Alarm following the above steps 1 and 2, then press **◀** or **▶** to display the time (ON) or to hide the time (OFF). When turned off, the Alarm will not sound even when the "🔔" is displayed.

## Telephone Mode

There are three telephone listing categories, Unfiled, Personal, and Business. Each listing can be simply classified for easy access to the data.

Tap **TEL**, select the desired category by using **▲** or **▼**, and press **ENTER**.

<UNFILED>  
SEARCH NAME?

<PERSONAL>  
SEARCH NAME?

<BUSINESS>  
SEARCH NAME?

Each entry has the following 14 fields.

	Field Name	Maximum number of alphanumeric characters
1	Last name:	48
2	First name:	48
3	Company:	96
4	Home#:	48
5	Office#:	48
6	Fax#:	48
7	Mobile#:	48
8	E-mail:	48
9	Address:	96
10	City:	48
11	State:	48
12	Zip code:	48
13	Country:	48
14	Note:	96

- Numbers, spaces, and hyphens ("-") can be entered in the Home#, Office#, Fax#, and Mobile# fields.

## Entry

### <Example>

1. Tap **TEL**, and select "BUSINESS", then press **ENTER**.

The Business search display will appear.

<BUSINESS>  
SEARCH NAME?

2. Tap **EDIT**.

The display will change to the record input mode.

<BUSINESS>  
LAST NAME: ■  
FIRST NAME:  
COMPANY:

3. Enter the Last name.

For example, "Smith".

4. Press **▼**, then enter the First name. For example, "John".

5. Press **▼** to move the cursor to the Company field and enter "ABC International Co."

6. Press **▼** to move the cursor to the Home # field.

7. Enter "585-4280".

8. Press **▼** to move the cursor to the Office # field and enter "619-542-7320".

9. Enter each field in the same manner.

10. At the Note field, press **ENTER** to store the telephone listing.

The Business search display will appear.

## Search

### Last Name Alphabetical Search

1. Tap **[TEL]** and select the Category by using **[▲]** or **[▼]** key, then press **[ENTER]**.

The search display will appear.

2. Press **[NEXT]** or **[PREV]** to search for the target listing in alphabetical order.

### Last Name Direct Search

1. Tap **[TEL]** and select the Category (Business, in this example) by using **[▲]** or **[▼]** key, then press **[ENTER]**.


The search display will appear.

2. Enter some of the last name letters in order.

Up to 10 letters can be entered.

3. Press **[ENTER]** to search for the target listing.

If there is no data matched, "NOT FOUND!" will appear, and then the screen will return to the initial display.

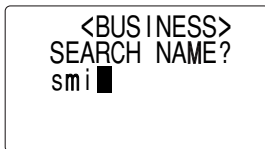

### See also

Entering Characters .....	5
Editing Listings .....	20
Deleting Listings .....	20

## Calendar Mode

### Navigating the Monthly Calendar Display

1. Tap **[CALENDAR/SCHEDULE]** once or twice to enter the Calendar mode.

The monthly calendar of the current month will appear.

The current day will be flashing.

Navigate the calendar using the following keys:

**[NEXT]** **[PREV]** : displays the following or previous month.

**[◀]**: Go to previous day

**[▶]**: Go to next day

**[▲]**: Go to the previous week

**[▼]**: Go to the next week

A screenshot of a monthly calendar for August 2005. The title is "8-2005". The days of the week are listed at the top: 1, 2, 3, 4, 5, 6. The dates are arranged in a grid: 7, 8, 9, 10, 11, 12, 13; 14, 15, 16, 17, 18, 19, 20; 21, 22, 23, 24, 25, 26, 27. A "2nd" label with a downward arrow is positioned to the left of the date 21.

- **[◀]**, **[▶]**, **[▲]** and **[▼]** cursors can move only within the month displayed.

## Directly go to the target month


1. At the Calendar mode, tap .

Date input screen will appear.

2. Enter the target date.

3. Press .

The monthly calendar of the target date will appear.

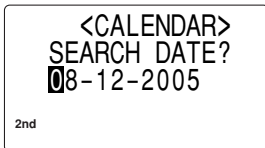


### Note:

- In the Calendar mode, monthly calendars from January 1950 to December 2150 are available.

## Confirmation of the Schedule, To Do, and Anniversary Mode entries

You can see the dates to which you assigned a Schedule, To Do or Anniversary on the monthly calendar display.

The indication marks are displayed as follows:

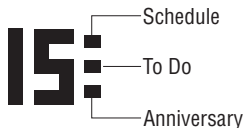


## Schedule Mode


### Entry

#### <Example>

A project meeting will be held from 10:00 AM to 11:00 AM on September 11, 2005


1. Tap  once or twice to enter the Schedule mode.


The Schedule search display will appear.

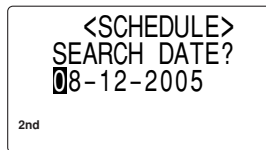


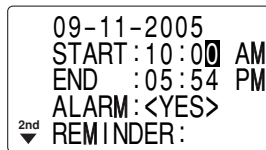
The current date will be displayed and the cursor at the first number flashes.

The first number depends on your Date Format selection. These examples are in the MM-DD-YYYY format.

2. Tap . The Schedule entry display will appear. Enter 09 for month.

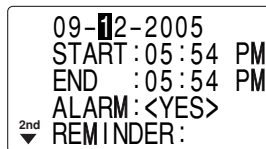




3. Enter the target day/year in the same manner.
4. Press , and enter 10:00AM for Start time.



5. Press .

The End time will automatically change to 30 minutes after the Start time. (However, the End time will remain within the specified day.)


6. Enter 11:00AM for the End time, and press .

7. Press  or  to select "Yes" or "No" for Alarm setting, and press .


If you select "Yes", the Schedule Alarm will sound at the time set in Reminder minutes before the Start time. If you select "No", Schedule Alarm will not sound.

**Note:**


- If you select "No" in step 7, "PLAN" will appear instead. Go step 9 to continue.

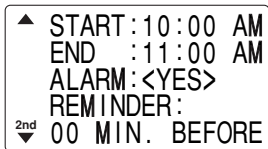


▲ START: 10:00 AM  
END : 11:00 AM  
ALARM: <YES>  
REMINDER:  
2nd ▼ 00 MIN. BEFORE

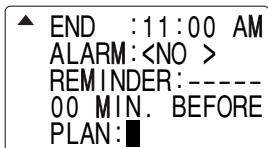

▲ END : 11:00 AM  
ALARM: <NO >  
REMINDER: -----  
00 MIN. BEFORE  
PLAN: ■

8. Enter the appropriate time for Reminder and press .

Schedule Alarm will sound at the entered time before the Start time. You can select any number from 00 to 99.

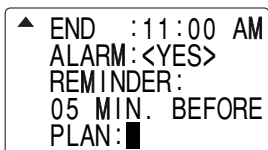

▲ END : 11:00 AM  
ALARM: <YES>  
REMINDER:  
05 MIN. BEFORE  
PLAN: ■

**Note:**


- Enter the number in two-digit format.

9. Enter the name of the scheduled item into the PLAN field. (Project meeting).

Up to 96 alphanumeric characters can be entered.




10. Press  to store the schedule listing.


**Note:**

- When the Home clock time reaches a Reminder time, the Schedule Alarm will sound for approx. 30 seconds even while the power is turned off. Press any key to stop the Alarm sounding. When  is pressed, the listing can be seen in detail in the Schedule mode.

## Search

### Search today's schedule

1. Tap  once or twice to enter the Schedule mode.
2. Tap  or  to search for the target schedule listing. The listings stored in the Organizer will be displayed in chronological order.

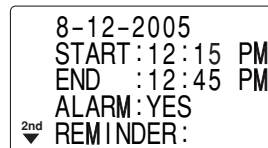

8-12-2005  
START: 12:15 PM  
END : 12:45 PM  
ALARM: YES  
2nd ▼ REMINDER:

## Date search

1. Tap [CALENDAR/SCHEDULE] once or twice to enter the Schedule mode.
2. Set the desired date.

Select the month, day and year field, and enter the desired number.

```
<SCHEDULE>
SEARCH DATE?
09-11-2005
2nd
```

3. Press [ENTER] to search for the target schedule listing of the specific date.

Pressing [NEXT] or [PREV] can display the listings on that day.

```
9-11-2005
START:10:00 AM
END :11:00 AM
ALARM: YES
REMINDER:
2nd
```

## See also

Entering Characters .....	5
Editing Listings .....	20
Deleting Listings .....	20

## Anniversary Mode

In Anniversary mode, you can specify the month and day (such as wedding anniversaries and birthdays).

Once data is stored as an anniversary, a flag appears on the date set in the calendar (see page 12). And when within the specified period, the anniversary sign will appear.

The maximum number of characters for each description is 96 alphanumeric characters.

## Entry

### <Example>

"Nancy's Birthday" is on February 12th.

1. Tap [MEMO/ANN] once or twice to enter the Anniversary mode.
2. Tap [EDIT].

The Anniversary entry display will be displayed and Date will appear.

3. Enter the date, 02 for month and 12 for day.
4. Press [▼].

Reminder date will be flashing.

```
<ANNIVERSARY>
SEARCH DATE?
08-12
2nd
```

```
DATE:02-12
REMINDER:
5 DAYS BEFORE
DESCRIPTION:
2nd
```



- Enter the Reminder date from 0 to 9.
- Press **▼**.
- Enter "Nancy's Birthday".
- Press **ENTER** to store the anniversary listing.  
The anniversary sign (🎂) will not appear until the day is set in Reminder.

## Search

### Sequential search

- Tap **MEMO/ANN** once or twice to enter the Anniversary mode.
- Press **NEXT** or **PREV** to search for the listing.

### Date search

Enter the date to go to the target date in the above step 2 and then press **ENTER**.

### See also

Entering Characters .....	5
Editing Listings .....	20
Deleting Listings .....	20

## To Do Mode


In the To Do mode, you can store your important To Do items with a priority index.

### Entry

#### <Example>


You have to visit the HK Exhibition by December 10, 2005.

- Tap **TO DO/EXPENSE** once or twice to enter the To Do mode.

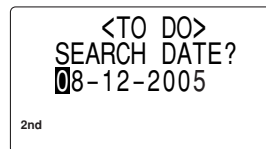

- Tap **EDIT**.

The To Do entry display will appear.

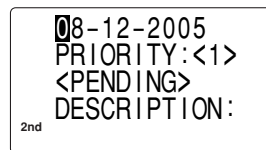

- Enter 12 into the month field and enter 10 and 2005 respectively.
- Press **▼** and select the Priority number from 1 (High) to 9 (Low) using **NEXT** or **PREV** (or enter the number), then press **▼**.

5. Press **▼** to let the status as "PENDING".
6. In the description field, enter what you have to do by the target day.  
Enter **"Visit HK Exhibition"**.  
Up to 96 alphanumeric characters can be entered.
7. Press **ENTER** to store the To Do listing.

## Search

---


### Sequential search

1. Tap **TO DO/EXPENSE** once or twice to enter the To Do mode.
2. Press **NEXT** or **PREV** to search for the target To Do listing.

The To Do listings are stored in order of their date, pending/done status, and priorities.

### Date search

1. Tap **TO DO/EXPENSE** once or twice to enter the To Do mode.
2. Select the month, day or year field, and enter the desired date.

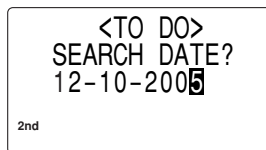

3. Press **ENTER** to search for the target To Do listing of the specific date.

### DONE Completed Items

1. Tap **TO DO/EXPENSE** once or twice to enter the To Do mode.
2. Press **NEXT** or **PREV** to select the To Do items.
3. Tap **EDIT ▼ ▼** to enter the status field.
4. Press **NEXT** or **PREV** to select "DONE", then press **ENTER**.

### See also

---

Entering Characters .....	5
Editing Listings .....	20
Deleting Listings .....	20

## Memo Mode

You can store memos using the Memo mode. Up to 96 alphanumeric characters can be entered per one listing.

### Entry

#### <Example>


Enter your passport number: 12AB34567

1. Tap **[MEMO/ANN]** once or twice to enter the Memo mode.



<MEMO>  
SEARCH?  
█

2. Tap **[EDIT]** and enter as follows.  
**Passport No. 12AB34567**

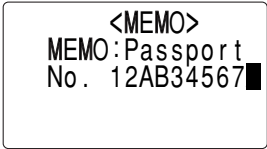

<MEMO>  
MEMO: Passport  
No. 12AB34567█

3. Press **[ENTER]** to store the memo listing.


## Search

### Sequential Search

1. Tap **[MEMO/ANN]** once or twice to enter the Memo mode.  
The Memo mode search display will appear.
2. Press **[NEXT]** or **[PREV]** to search for the listing.

### Direct Search

1. Tap **[MEMO/ANN]** once or twice to enter the Memo mode.  
The search display will appear.
2. Enter the first letter(s) of the desired memo (ex. "pass").  
Up to 10 letters can be entered.
3. Press **[ENTER]** to search for the target listing.

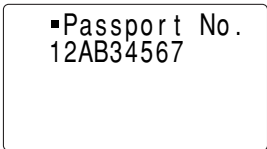

Passport No.  
12AB34567

### See also

Entering Characters .....	5
Editing Listings .....	20
Deleting Listings .....	20

## Expense Mode

The Expense record function is an easy-to-use method of tracking personal and business expense information. The Expense Report allows you to see the total expenses for a single day or for a certain period.


- 1 Expense:** Item-by-item expense entry and view mode
- 2 Report:** Display the total expenses for a single day or a certain period
- 3 Category:** Assign a new category name (up to 7 characters for each)

## Entry

### <Example>

The date is August 18, 2005.  
You bought flight tickets for a business trip costing \$1200.

1. Tap **TO DO/EXPENSE** once or twice to enter the Expense mode.

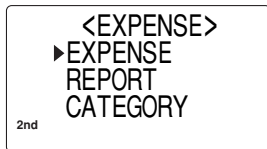


2. Press **▲** or **▼** to select "EXPENSE", then press **ENTER**.

The Expense search display will appear.

3. Tap **EDIT**.

The Expense record entry display will appear. The current date will be displayed.

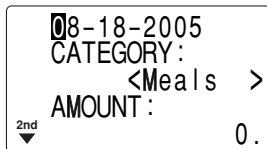

The first number depends on your Date Format selection. These examples are in the MM-DD-YYYY format.

4. Enter the date, if necessary.
5. Press **▼**.
6. Select the expense category using **NEXT** or **PREV**.

There are 8 preset categories to select.

Meals ➡ Hotel ➡ Car ➡ Phone ➡ Fares ➡  
(Enter't ) Entertainment ➡ Tips ➡ (Misc) Miscellaneous ➡...


7. Press **▼**, and enter 1200.  
Up to 12 digits can be entered.

8. Press **▼**.

9. Select the payment using **NEXT** or **PREV**.

There are 4 preset payment systems to select.

Cash ➡ Check ➡ Card ➡ Others ➡...

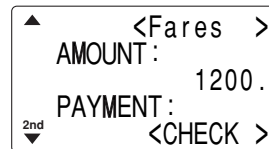

10. Press **▼**, and select "YES" or "NO" using **NEXT** or **PREV** in the "RECEIPT" field.

```

▲ AMOUNT :
      1200.
PAYMENT :
      <CHECK >
2nd ▼ RECEIPT : <YES>
  
```

11. Press **▼**, and enter "Flight ticket" in the "MEMO" field.  
 12. Press **ENTER** to store the data.

## Recall

### Sequential Search

1. Tap **TO DO/EXPENSE** once or twice to enter the Expense mode.
2. Press **▲** or **▼** to select "EXPENSE", then press **ENTER**.  
The Expense search display will appear.
3. Press **NEXT** to view the next record, **PREV** to view the previous record.

### Date Search

1. Tap **TO DO/EXPENSE** once or twice to enter the Expense mode.
2. Press **▲** or **▼** to select "EXPENSE", then press **ENTER**.  
The Expense search display will appear.
3. Enter the date you wish to search.
4. Press **ENTER**.  
Scroll the page using **▲** or **▼**.

## Summary Report

1. Tap **TO DO/EXPENSE** once or twice to enter the Expense mode.

```

<EXPENSE>
▶ EXPENSE
  REPORT
  CATEGORY
2nd
  
```

2. Press **▲** or **▼** to select "REPORT", then press **ENTER**.
3. Enter the first date from you wish to summarize the expense. (July 10, 2005)

```

<EXPENSE>
--REPORT--
FM: 08-18-2005
TO: 08-18-2005
2nd
  
```

4. Press **▼** to move the cursor to the last date.
5. Enter the last date at you wish to summarize the expense. (August 10, 2005)
6. Press **ENTER**.

Total amount report during the period will be displayed.  
 Scroll the page using **▲** or **▼**.

```

TOTAL
      443.5
Meals
      53.5
2nd ▼ Hotel
  
```

## Edit the Category

You can change the category name for your convenience.

1. Tap **[TO DO/EXPENSE]** once or twice to enter the Expense mode.
2. Press **[▲]** or **[▼]** to select "CATEGORY", then press **[ENTER]**.  
The edit category display will appear.
3. Select the category you wish to change using **[▲]** or **[▼]**.



4. Tap **[EDIT]**.
5. Delete the preset category name using **[DEL]**.
6. Enter the new category name. (e.g. Books)  
Up to 7 characters can be entered for the category name.
7. Press **[ENTER]**. Repeat the steps 3 to 7, if necessary.
8. Press **[ENTER]**.

All the revisions are stored.

### Note:

- Entries previously stored under the former category will appear under the new category after the revisions are made.

### See also

Entering Characters .....	5
Editing Listings .....	20
Deleting Listings .....	20

## Editing Listings

### Edit

1. Recall a listing in the desired mode.
2. Tap **[EDIT]**.  
The display will change to the edit mode.
3. Edit the data.  
**[◀]** **[▶]** **[▲]** **[▼]**: move the cursor to left, right, up or down, respectively  
**[DEL]**: can be used to delete characters  
**[INS]**: changes between the INSERT mode and the OVERWRITE mode
4. Press **[ENTER]** to store.

## Deleting Listings


### Delete

1. Recall a listing in the desired mode.
2. Tap **[DEL]**.  
The confirmation display will appear.
  - To cancel deleting, tap **[2nd]**.
3. Press **[ENTER]** to delete the listing.

## Word Translator Mode

The Organizer offers an English-Spanish bi-directional word translator function. Each time **[E↔S]** is tapped, the mode switches between the Word Translator mode and the Spell Checker mode.

1. Tap **[E↔S]** once or twice to enter the English → Spanish translation mode; Tap **[◀]** or **[▶]** to enter the Spanish → English mode.

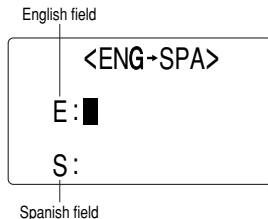

2. Enter the desired source word and press **[ENTER]**.

The matching English or Spanish word will then be displayed.

- When the small symbol “◀” or “▶” is turned on, more letters exist. To view the remaining letters of long words that cannot be accommodated on the screen, use **[◀]** or **[▶]** to scroll.
- If there is no matching word, “NOT FOUND!” is displayed. The word next in alphabetical order will then be displayed.
- Press **[NEXT]** or **[PREV]** to scroll through the word list, or enter a new word using the keyboard, and press **[ENTER]** for another search.

### Notes:

- Indications are set as follows:

(Am): American English

(Br): British English

(adj): Adjective

(adv): Adverb

(n): Noun

(pron): Pronoun

(v): Verb

(f.): Feminine form

(m.): Masculine form

- Sometimes, two identical words may appear in the word list.
- Enter European characters and spaces correctly. Otherwise, the unit may not be able to complete the search.
- In the Spanish field, you can enter the following letters. Press respective letter key repeatedly after tapping **[SMBL]**.

Key	Letters	Key	Letters
A	á à â ã	N	ñ
C	ç	O	ó ò ô õ
E	é è ê ë	U	ú ù û ü
I	í ì î ï	Y	ý ÿ


- Activate “CAPS” ON to enter capitalized letters.

## Spell Checker Mode

The Spell Checker Mode can be helpful when the exact spelling of a query word is not known. Each time **[ABC]** is tapped, the mode switches between the Spell Checker mode and the Word Translator mode.


### Searching a word with ambiguous spelling

1. Tap **[ABC]** once or twice to enter the Spell Checker Mode.
2. To check spelling, enter the word and press **[ENTER]** to start checking. Maximum length of the entry word is 36 characters.
  - If the word is correctly spelled, a message "CORRECT!" appears briefly, then returns to the entry screen.
  - If the spelling of the entry word is found incorrect, then a number of related words appears; use **[▲]** or **[▼]** to browse the words. If the installed Spell Checker is unable to find any related word, then "0" appears, followed by the initial entry screen.
  - The Spell Checker Mode looks for a match of a given word against the installed database containing approximately 12000 words.
  - Variants of a given word, or the root of a given variant, may not always be specifically suggested.

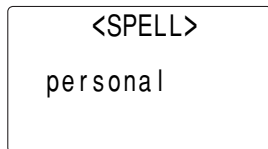

## Diet Function Mode

The Diet Function can organize your daily calories burned by walking, as well as managing your daily caloric intake. Tap **[DIET]** several times to display the Diet Function mode screen and the Game mode screen (Diet Function → BLACKJACK → ALPHA ATTACK → Diet Function ...).

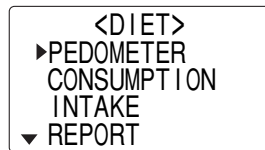

The Diet Function calculates the estimated calories burned by using the built-in pedometer, and compares the value with the entered target value. \* The consumption by basal metabolism is not counted as part of this calculation.

Food items can be selected from the Food Database, or programmed as desired. Have the Organizer compare the value with the entered target intake value.

- \* Basal metabolism is the energy required to maintain your body's vital functions such as breathing, your heart beating, and maintaining your body temperature.
- Follow the guidance of your physician when using this unit to organize your diet.
- Prior to using this function, you will need to measure your stride length and weight.



## Measuring your stride length

In order for the Diet function to work properly, you must first measure your stride length.

### Note:


- A "stride length" in this manual refers to the distance from the tip of your toe of one foot to the tip of your toe on the other when taking a step.

- Walk 10 normal steps, as shown in the illustration.
- Measure the distance you have traveled.
- Divide the distance by 10. Record the result as your stride length.

Example:

Distance traveled = 320 inches

Stride length =  $320 \div 10 = 32$  inches



## User Profile Mode

Enter information such as your previously measured Stride length and Weight.

- Tap **[DIET]** once, twice, or three times to enter the Diet Function Mode.
- Select "USER PROFILE" using **[▲]** or **[▼]**, and press **[ENTER]**.

Note:

- When using the Diet Function Mode for the first time, or after the Organizer has been reset, you will automatically be guided to the User Profile Mode.

- Fill the STRIDE entry field with your stride length value obtained from the above method, and tap **[▼]**.

<USER PROFILE>	
STRIDE inch	32.
WEIGHT lb	0.
<sup>2nd</sup> [▼]	


- Enter your body weight value in the WEIGHT field, and tap **[▼]**.
- If necessary, follow the above steps to enter the target values for your daily calorie and nutrient intake. Enter the following ten parameters:
  - Value of Calories for Intake
  - Value of Total Fat for Intake
  - Value of Saturated Fat for Intake
  - Value of Cholesterol for Intake
  - Value of Sodium for Intake
  - Value of Carbohydrate for Intake
  - Value of Dietary Fiber for Intake
  - Value of Sugars for Intake
  - Value of Protein for Intake
  - Value of Calories for Consumption
- Then press **[ENTER]** to store the setting.

### Notes:

- It is recommended that you refer to the appropriate documentation, or consult your physician before setting all target values such as your Daily target value of caloric intake.
- Units such as STRIDE and WEIGHT can be changed in the MENU mode. Select "UNIT SET" in the MENU mode, press **[ENTER]**, then select a desired UNIT (inch/cm, lb/kg) using **[NEXT]** or **[PREV.]**.
- To edit, tap **[EDIT]** before proceeding to step 3.


## Positioning the unit

Close the cover, and insert the unit into the carrying case as shown in the illustration, then make sure that the top flap is fastened.

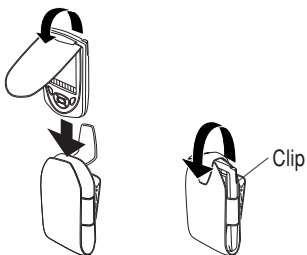

Secure the carrying case clip to your belt or to the top of your shorts or pants.

The unit must be attached in vertical position to the ground in order to count steps correctly.

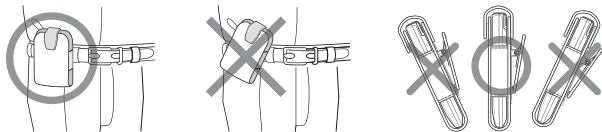

- Make sure that the holder's clip is secured firmly in place. If worn improperly, the unit may be detached or may result in incorrect measurements.
- The belt clip is designed to hold the unit while walking. The clip may not hold the unit or may break if it is exposed to a high-impact condition such as running, or playing basketball.

## The unit may not count steps correctly if you:

- Walk at an irregular pace, or in a crowded place.
- Shuffle legs excessively.
- Wear sandals when walking.
- Vary your movement (play sports, for example).
- Move up/down excessively.
- Are in a vehicle with vertical and horizontal motions.
- Attach the unit improperly (tilted, for example).

## Pedometer Mode

Set the pedometer to ON/OFF. To count steps, set it to ON.

Tap **[CLOCK]**, tap **[MENU]**, and select "PEDOMETER SET" in the MENU mode, then press **[ENTER]**, use **[▲]** or **[▼]** to select "ON", then press **[ENTER]** and start walking. To turn off the pedometer, select "OFF".

## Viewing the step count and calorie values

1. Tap the **[DIET]** once, twice, or three times to enter the Diet Function Mode.
2. Select "PEDOMETER" using **[▲]** or **[▼]**, and press **[ENTER]** twice to display the interim report of calories burned and total step count.

3-21-2005
CALORIE Kcal
80.213
STEP
150.

Tap **[C•CE]** to return to the previous screen.

- Step count of the day will be registered automatically when the time is at "23:59:59".
- This unit calculates the calorie consumption with the following formula\*:

$$\text{Calorie consumption [Kcal]} = (\text{step} \times \text{stride [inch]} \times 2.54 \times 0.001 + 3.5) \times \text{weight [lb]} \times 0.45359237 \times 0.005$$

- The calculation runs once every minute to accumulate values.
- \* Based on “ACSM’s Guidelines for Exercise Testing and Prescription”, © American College of Sports Medicine, 2000. Published by Lippincott Williams & Wilkins, 2000.
- The displayed calorie value is rounded off to three decimal places.

**Note:**

- Check the memory on a regular basis.
- When the memory is full, an alert message is displayed, and the pedometer will not record your data. You will need to delete unnecessary data, or invoke the Memory management. To clear the alert display, press [ENTER].
- Under the low battery condition, step count function of the pedometer, and the calorie calculation may not be available.

**Consumption Mode**

The daily calorie consumption and step count for the day can be viewed.

1. Tap [DIET] once, twice, or three times to enter the Diet Function Mode.
2. Select “CONSUMPTION” using [▲] or [▼], and press [ENTER].
3. Use [NEXT] and [PREV] to select a day you wish to display. To display step count and calorie consumption.
  - If no data is stored, a message “NOT FOUND!” is displayed.

**Food Database Mode**

Download the Food Database from the CD-ROM. (see page 37.)  
 The Food database contains 10 item categories of 800 foods.

You can add to or edit the database, and these changes can be exchanged to/from the PC as an export/import item.

Categories:

- Value of Calories
- Value of Saturated Fats (FA SAT)
- Value of Monounsaturated Fats (FA MONO)
- Value of Polyunsaturated Fats (FA POLY)
- Value of Cholesterol
- Value of Sodium
- Value of Carbohydrates
- Value of Dietary Fiber (DIET. FIBER)
- Value of Sugars
- Value of Proteins

In the Intake mode and the Report mode, the Total Fat value is calculated as follows:

$$\text{Total Fat Value} = \text{FA SAT} + \text{FA MONO} + \text{FA POLY}$$

**Notes:**

- The food list contained in the CD-ROM is based on the Food Database Release 16 (Abbreviated Version) issued by the United States Department of Food and Agriculture. Word ordering of items, as well as the ( " ) symbol within some items, may have been modified.
- All companies and/or product names are trademarks and/or registered trademarks of their respective holders.

## Intake Mode

Enter your daily food intake by selecting items from the FOOD DATABASE. Download the Food Database from the CD-ROM. (see page 37.)

1. Tap **[DIET]** once, twice, or three times to enter the Diet Function Mode.
2. Select "INTAKE" using **[▲]** or **[▼]**, and press **[ENTER]**.
3. Tap **[EDIT]**, then use **[▲]** and **[▼]** to select "FOOD" in the selection field.

You can enter the first few letters of the desired food name, then browse the items using **[NEXT]** or **[PREV]**.

When no match is found, then a message "NOT FOUND!" is displayed.

4. Use **[▲]** and **[▼]** to select the entry field for each AMOUNT and the DATE of the intake to enter values.
5. Press **[ENTER]** to write the entry.
  - Tap **[C-CE]** to return to the initial display.

03-25-2005  
FOOD : BUTTER, SA  
LTED 717.  
**2nd** ▼ AMOUNT :

### Adding items to the Database

1. Tap **[DIET]** once, twice, or three times to enter the Diet Function Mode.
2. Select "FOOD DATABASE" using **[▲]** or **[▼]**, and press **[ENTER]**.
3. Tap **[EDIT]**, enter a desired food name of up to 96 characters.
4. Use **[▼]** to jump the field to the next, then enter values for 10 categories, followed by **[ENTER]**.
  - Tap **[C-CE]** to return to the initial screen.

## Searching and Editing

1. Tap **[DIET]** once, twice, or three times to enter the Diet Function Mode.
2. Select "FOOD DATABASE" using **[▲]** or **[▼]**, and press **[ENTER]**.
3. Press **[NEXT]** or **[PREV]** to select a desired food name.
  - You can enter the first few letters of the desired food name, then browse the items using **[NEXT]** or **[PREV]**. When no match is found, then a message "NOT FOUND!" is displayed.
4. Use **[▲]** or **[▼]** to display the calorie value and other information.
  - Tap **[C-CE]** to return to the initial screen.
5. To edit the selected item, tap **[EDIT]**. Move between the entry fields using **[▲]** or **[▼]** as you enter food names, calorie, and other values.
6. Press **[ENTER]** to register the entries.

CHEESE, COLBY  
CALORIE Kcal 394.  
FA SAT g 20.218  
▼

### Note:

- The displayed calorie value is rounded off to three decimal places.


## Report Mode

The intake/consumption report for a specified period can be viewed.


1. Tap **[DIET]** once, twice, or three times to enter the Diet Function Mode.
2. Select "REPORT" using **[▲]** or **[▼]**, and press **[ENTER]**.
3. Select "INTAKE" or "CONSUMPTION" using **[▲]** or **[▼]**, and press **[ENTER]**.

Use **NEXT** or **PREV** to select an item to be displayed in the REPORT. If "INTAKE" is selected, one of the following ten items can be selected: ALL, CALORIE, TOTAL FAT, SATURATED FAT, CHOLESTEROL, SODIUM, CARBOHYDRATE, DIETARY FIBER, SUGARS, or PROTEIN. For "CONSUMPTION", select one of three items: ALL, CALORIE, or STEP.

4. Tap **▼**, and input values for START DATE and END DATE, followed by **ENTER**.

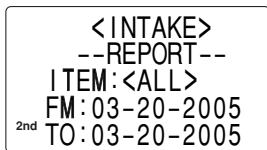

5. A report is displayed.
- INTAKE : Use **▲** or **▼** to switch display the selected item report.
  - CONSUMPTION : The report of the selected item is displayed.

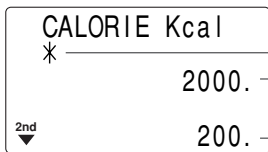

The icon is displayed when a result exceeds the target value.

The present calorie

A comparison against the day's target (more/less) is indicated.


**Note:**

- The displayed calorie value is rounded off to three decimal places.

## Calculator Mode

The Organizer's built-in calculator can perform arithmetic calculations in up to 12 digits.

Calculator mode is selected by tapping **CALC/CONV** the appropriate number of times.

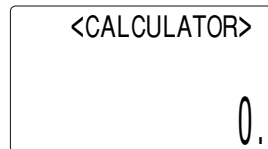

Each time you press the key, the display switches as follows:

Calculation mode  $\Rightarrow$  Currency Conversion mode  $\Rightarrow$  Metric Conversion mode  $\Rightarrow$  ...

Before performing any calculations, tap **C•CE** twice to clear the display.

- An error occurs if the integer section of the calculation result exceeds 12 digits, if the memory exceeds 12 digits, or a number is divided by zero. ("E" is displayed.) Tap **C•CE** to clear the error message.

Example	Operation	Display
$(-24+2) \div 4 =$	Mixed calculation [-] 24 [+] 2 [=] 4 [=]	-5.5
$34 + 57 =$ $45 + 57 =$	Constant/repeat calculation The second figure is a constant value ([+] addition, [-] subtraction, [=] division) 34 [+] 57 [=] 45 [=]	91. 102.
$68 \times 25 =$ $68 \times 40 =$	The first figure is a constant value ([x] multiplication) 68 [x] 25 [=] 40 [=]	1700. 2720.
10% of 200 Percentage 9 of 36 10% mark-up 20% discount	Percentage 200 [x] 10 [%] 9 [=] 36 [%] 200 [+] 10 [%] 200 [-] 20 [%]	20. 25. 220. 160.
$\sqrt{25 - 9}$	Root 25 [-] 9 [=] [√]	4.
$4^3$	$A^n$ 4 [x] [=] [=]	64.
$1/8$	Unit division 8 [=] [=]	0.125
$25 \times 5 =$ $-) 84 \div 3 =$ $+ ) 68 + 17$ (Total) =	Memory function [CM] 25 [x] 5 [M+] 84 [=] 3 [M-] 68 [+] 17 [M+] [RM]	M 125. M 28. M 85. M 182.
123456789098 x 145 = 17901234419210	123456789098 [x] 145 [=]  (17.9012344192 x 10 <sup>12</sup> = 17901234419200)	€17.9012344192

## Conversion Mode

Each time you tap **[CALC/CONV]**, the display switches as follows:

Calculation mode  $\Rightarrow$  Currency Conversion mode  $\Rightarrow$

Metric Conversion mode  $\Rightarrow$ ...

### Conversion Table

Conversion Pattern		
Unit 1		Unit 2
5 currency conversions are available.		
Metric Conversion Patterns		
inch	$\leftrightarrow$	centimeter (cm)
yard	$\leftrightarrow$	meter (m)
mile	$\leftrightarrow$	kilometer (km)
Fahrenheit (°F)	$\leftrightarrow$	Celsius (°C)
feet	$\leftrightarrow$	meter (m)
ounce (oz)	$\leftrightarrow$	gram (g)
pound (lb)	$\leftrightarrow$	kilogram (kg)
US gallon (gal)	$\leftrightarrow$	liter (l US)
UK gallon (gal)	$\leftrightarrow$	liter (l UK)

#### Note:

- The conversion result may have a slight calculation error as a result of rounding off the number. Use the result for reference only.

## Currency Conversion Mode

Currency conversion has 5 stages of programmable conversion.  
Each stage is capable of 12-digit calculation.

### Setting a new currency conversion rate

**<Example>** Set the following rate: £1 = \$1.45

1. Tap **[CALC/CONV]** the appropriate number of times to select the Currency Conversion mode.
2. Press **[NEXT]** or **[PREV]** to select the appropriate currency conversion stage.
3. Tap **[EDIT]**.

The setting mode will appear.


The preset currency names can be renamed here.

4. Rename the left currency if necessary, then press **[▶]**.

#### Note:

- Up to 4 characters can be entered for the name of the currency unit.

5. Rename the right currency if necessary, then press **[▼]**.

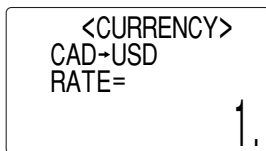


<CURRENCY>  
CAD->USD  
RATE= 1.

6. Enter the rate; 1.45.

Up to 12 numeric characters can be entered for the rate.

If you need to clear the rate number, tap **[C•CE]**.

7. Press **[ENTER]** to store the setting.

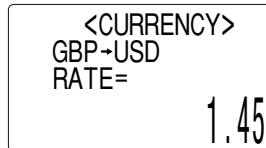

<CURRENCY>  
GBP->USD  
RATE= 1.45

### Currency conversion

Be sure to set the rate before starting a conversion.

**<e.g. £ ⇌ \$>**

1. Tap **[CALC/CONV]** the appropriate number of times to select the Currency Conversion mode.
2. Press **[NEXT]** or **[PREV]** to select the appropriate currency conversion stage.
3. Enter the amount. (e.g. £50)
4. Press **[▶]**.  
(£50=approx. \$72.5)

**<e.g. \$ ⇌ £>**

5. Enter the amount. (e.g. \$120)
6. Press **[◀]**.  
(£120=approx. \$82.76)  
Use **[◀]** or **[▶]** to change the conversion direction.

Tap **[C•CE]** to clear the calculation result.



<CURRENCY>  
GBP->USD  
50.  
72.5



<CURRENCY>  
GBP->USD  
120.  
82.7586206896

## Metric Conversion Mode


Metric conversion is capable of 12-digit calculation.

### Convert metric unit

#### <Example>


Calculate 68°F to °C

1. Tap **CALC/CONV** the appropriate number of times to select the Metric Conversion mode.
2. Tap **NEXT** or **PREV** to select the appropriate conversion stage.

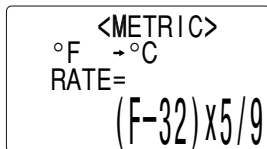

**<METRIC>**  
°F → °C  
RATE=  
(F-32) x 5/9

3. Enter the amount, "68".
4. Press **▶**.  
(68°F=approx. 20°C)  
Tap **C•CE** to clear the calculation result.

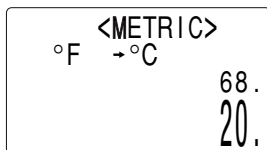

**<METRIC>**  
°F → °C  
68.  
20.

## Secret Function

The Secret function allows you to protect listings with a password, so that no unauthorized person can reach them.


You can use up to a 6 characters as its password.

### Registering a Password

As a safeguard, make a written record of the password. Also, be aware that the password is case-sensitive.

1. Tap **🔒** (secret) in the Home Clock mode.

The password entry display will appear.

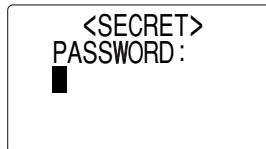

2. Enter the characters you wish to use.
3. Press **ENTER**.
4. When the display "RECONFIRM!" appears, reenter the password, then press **ENTER**. The Secret function will be turned on.




### Accessing listings


If the Secret function is on, when you press **TEL**, **MEMO/ANN**, **TO DO/EXPENSE** or you enter the Schedule mode etc., the password entry display will appear.

1. Enter the password, then press **ENTER**.  
Be aware that the password is case-sensitive.  
The screen of the target mode will be displayed.






## Changing the Password

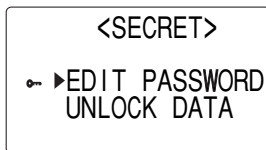1. In the Home Clock mode, tap  (secret).  
The password entry display will appear.
2. Enter the current password.
3. Press **[ENTER]**. The Secret function setting display will appear.
4. Select "EDIT PASSWORD" by using  or , then press **[ENTER]**.
5. Enter a new password.
6. Press **[ENTER]**.
7. When the screen "RECONFIRM!" appears, reenter the password, then press **[ENTER]**.



## Turning the Secret Function Off

1. In the Home Clock mode, tap  (secret).  
The password entry display will appear.
2. Enter the current password, then press **[ENTER]**.
3. Select "UNLOCK DATA" by using  or , then press **[ENTER]**.  
"UNLOCK DATA?" will be displayed.
4. Press **[ENTER]** to delete the password and to turn the Secret function off.


## Game Mode

Tap **[GAME]** several times to display the Game mode screen and the Diet Function mode screen (Diet Function → BLACKJACK → ALPHA ATTACK → Diet Function → ...).

### BLACKJACK (Twenty-one)

Make your "hand" (the total of the numbers on the cards) close to 21, without going over 21.

1. Tap **[GAME]** once, twice, or three times to display the following Game mode screen.
2. Press **[ENTER]** to start a game.  
The left 2 cards are dealt for you. (One is faced up and the other is faced down.)
3. Agree the left-displayed flashing maximum bet (up to 10) or enter the fewer bet.
4. Tap **[SPACE]** to see your hand. Each time you tap **[SPACE]**, a new card is dealt.

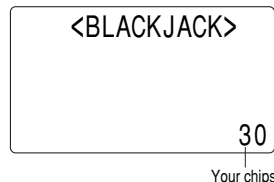

- “J”, “Q”, and “K” are counted as 10.
- “A” can be counted as 1 or 11.
- When first 2 cards are “A” and a face card (“J”, “Q”, or “K”), your hand is “BLACKJACK”.

5. Press **ENTER** to stop being dealt and hold your hand. The dealer’s hand and the results are displayed.

Your hand	The dealer's hand
<BLACKJACK>	
J28	4
10	20
Your bet	Your chips

- When you win, your total flashes and your bet is doubled.
- When you win with “BLACKJACK”, your bet is tripled.

6. Press **ENTER** and display the Game mode screen.

Your total	The dealer's total
<BLACKJACK>	
J28	32K4
20	19
20	20
Your bet	Your chips

- When you have no more chips to bet, the game is over.
- To quit the game, tap any mode key. Your chips are stored for the next time.

## ALPHA ATTACK

Type in characters (A to Z) displayed on the bottom line to clear them. The game is divided into 20 levels in speed.

1. Tap **GAME** once, twice, or three times to display the following Game mode screen.
2. Press **NEXT** / **PREV** to select the level.
  - 01: slow, 20: fast
3. Press **ENTER** to start a game.

<ALPHA ATTACK>

LEVEL : 01

<ALPHA ATTACK>

LEVEL : 03

CAPS

EYKW

4. Tap the same key as the first character at the left end of the bottom line. (In this case, tap keys in the order: E → Y → K → W.)
  - Tapping the correct keys in the correct order deletes the characters.
  - When 12 characters are displayed in each level, the game continues in the faster level (up to 20).
  - When no more characters can be displayed, the game is over. The Game mode screen with the level when the game is over is displayed.
  - To quit the game, tap any mode key.

## Managing the Organizer's Memory

Use the memory management function to utilize the Organizer's memory more efficiently.

### Note:

- Before performing memory management, back up your data.
  - While the memory management is in progress, do not press the RESET switch. Doing so may result in losing all the data stored in the Organizer.
1. Tap **CLOCK/ALARM** **MENU**, select "MANAGE MEMORY" by using **▲** or **▼**, and press **ENTER**.
  2. A dialog "MANAGE MEMORY YES/NO" appears.  
Select "Yes" using **▲** or **▼**, then press **ENTER** to continue, or select "No" using **▲** or **▼**, then press **ENTER** to go back to the list of Menu items.
  3. When "Yes" is selected, a message "PLEASE WAIT..." appears to indicate that the memory management is in progress.  
When done, the display will return to indicate the clock mode.

### Note:

- By performing memory management, the amount of reusable memory (indicated in "MEMORY CHECK" under MENU) will be utilized.

## Using the Included PC Software

The CD-ROM contains software to enable exchange of data with a PC.

The software consists of:

### Synchronization Software:

Can be used to synchronize Microsoft® Outlook® data, such as Contacts, Calendar, Tasks, and Notes, with the Organizer.

### Desktop Utilities:

Can be used to backup/restore data in the Organizer, and export/import data to different file formats.

## Minimum System Requirements:

- IBM PC or 100% compatible
- Microsoft® Windows® 98/98SE/2000 Professional/Me/XP Home/XP Professional
- Pentium®300MHz or higher
- 50MB free hard disk space
- 64MB RAM for Microsoft® Windows® 98/98SE/2000 Professional/Me
- 128MB RAM for Microsoft® Windows® XP Home/XP Professional
- One available USB 1.1 / 2.0 compliant port
- CD-ROM drive
- Mouse or compatible pointing device

### Additional System Requirements:

- Microsoft® Outlook® 98/2000/2002/2003 must be installed to utilize the Synchronization Software between the Organizer and your PC.

**Note:**

Proper operation cannot be guaranteed on the following types of PCs:

- Self-built PCs
- PCs upgraded from Windows® 95
- PCs with retrofit USB ports that are not factory installed
- \* This software is not guaranteed to operate on all PCs with recommended hardware/software environment.

**About USB Ports**

- Activating the power saving mode (such as suspend, resume, or sleep function) of some PCs may result in the USB port malfunctioning. If such case is observed, disable the power saving mode.
- The software may not operate properly with a commercially available USB card installed in a PCI slot.
- If the USB port on your PC or the USB hub connected to the device does not operate properly, follow the steps below:
  - If your PC comes equipped with several USB ports, try using a different USB socket.
  - If other USB devices are connected to your PC, disconnect them from your PC to avoid possible conflicts.
- Since the USB hub may introduce problems, try bypassing the USB hub by connecting the unit directly to your PC.
- Do not remove and connect the USB cable from/to the PC in a short period of time.

**Limitations when using with Windows® XP/2000****Windows® XP**

- Log onto your PC with administrator privileges; the software may not be installed properly otherwise. Upon using the software, you will need to log on as an administrator. If you are logged in as a non-administrative account, then you must first log off to log into an administrator's account.

**Windows® 2000**


- When installing as well as using the software, you will need to log on as an administrator. If necessary, you may need to contact the administrator of the PC in a work environment.

**Installing****Precautions:**

- **Prior to installing the Synchronization Software, make sure that Microsoft® Outlook® is installed and set up. If not, install and set up the Outlook® first, then install the Synchronization Software.**
- **Disconnect the USB cable before the installation. If the installation is proceeded with the USB cable connected, you must disconnect the cable, then follow the Read Me file on the CD-ROM to start over the installation procedure.**

1. Insert the PC software CD-ROM into your CD-ROM drive. Installation process should automatically start.  
If the PC software screen does not appear, double-click "My Computer" to locate the CD-ROM drive directory, then double-click to launch "installer.exe" found on the CD-ROM.
2. Click the "Install" button.

3. Follow the installation instructions that appear on the screen.
4. When the installation is complete, click the "Finish" button to finish the installation process.
5. When the USB cable detection window appears, connect the USB connector of the USB PC-Link cable to the PC's USB port, then click "Next". Do not connect the Organizer yet.
6. The USB driver installation window appears.
7. Follow the installation instructions on the screen.
8. When the installation is complete, click the "Finish" button to finish the installation process.
9. When the USB cable detection window appears, click "Next" to have the USB cable detected. Click "Finish" to complete the detection procedure.

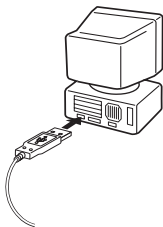

**Note:**


- If the cable is not detected, refer to the Read Me file on the CD-ROM to start over the procedure.
10. The procedure will then be followed by the Serial Port Setup, and the Synchronization setting window.

**Note:**

- For Windows2000® Professional and Windows® XP, install/uninstall programs after logging on as an Administrator.
- Apply the USB cable for use with OZ-290H only. The cable cannot be used with other devices.

## Serial Port Setup

The serial port setting dialog box appears after you have finished software installation.



### Connecting the Organizer to your PC

1. Turn off the Organizer.
2. Connect the other end of the USB PC-Link cable to the Organizer's option port.
3. Turn on the Organizer.




Click "Auto Detect..." to allow the Synchronization to automatically detect the appropriate serial port. Make sure that the unit is physically connected with the PC first, then click this button.

If the desired serial port is not found, manually select the serial port from the drop-down list.

## Synchronization Software

After the Serial Port Setup is complete, the Settings window will appear.

To bring up the Settings window manually, right-click on the Synchronization icon on the Windows® system tray, then select "Settings..." in the menu.

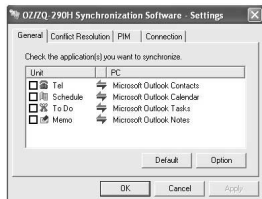

### General tab

This tab allows you to select the application that you want to synchronize with the PC.

- Click on the checkbox for each application to enable synchronization.
- Use the "Option" button, or double-click the desired settings row to configure the communication method.
- Click the "Default" button to reset all settings to the default values, including the Options settings.

### Synchronization action:

- ↔: Merges the data between the PC and the unit.
- ←: PC overwrites the data of the unit.
- : The unit overwrites the PC data.

## The Conflict Resolution Tab

The Synchronization software's Conflict Resolution tab allows you to select the way data conflicts are resolved when data modifications are made and the "Synchronize" option is selected on the General tab.

- Add all conflicting items: Each modification on both the unit and the PC is reflected and saved respectively after synchronization.
- Unit overwrites PC data: The PC data will be overwritten. The modifications made on the unit are reflected on the PC after synchronization.
- PC overwrites unit data: The unit data will be overwritten. The modifications made on the PC are reflected on the unit after synchronization.

## The PIM Tab

The PIM tab allows you to configure the download settings of the PIM data.

- Use Outlook HOME 'Address' and 'Fax number': Downloads or synchronizes only data of HOME addresses and FAX numbers.
- Use Outlook WORK 'Address' and 'Fax' number: Downloads or synchronizes only data of WORK addresses and FAX numbers.
- Today forward: Downloads or synchronizes only data of today and forward.
- All: Downloads or synchronizes all schedule data.


## The Connection tab

This tab allows you to change settings for the serial port and the password.

- Serial port : Specify the serial port to connect the unit to the PC.
- Auto Detect : Click to allow the PC to detect the appropriate serial port.

## Desktop Utilities

Launch "Desktop Utilities" from the Start menu, or right-click on the Synchronization icon on the Windows® system tray, then select "Desktop Utilities..." in the menu. Utilize the Desktop Utilities via the following graphic interface:

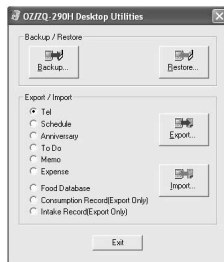

### Backup/Restore

The Backup/Restore menu of the Desktop Utilities allows you to make a backup file of the unit data, or to restore it back to the internal memory of the unit. Be noted that the setup parameters, won't be backed up.

- Backup: Select "Backup..." from button, then enter the desired name of the file to be backed up.
- Restore: Select "Restore..." from button, then select the desired name of the file to be restored.

## Export/Import

The Export/Import menu of the Desktop Utilities allows you to import data created by each PC application to the unit, or export data out of the unit.

- Export: Select the desired item (application data, Food Database, Consumption Record, or Intake Record), then click "Export..." and enter the desired filename to which you wish to export data.
- Import: Select the desired application name or Food Database, then click "Import..." and enter the desired filename from which you wish to import data.

## Un-installing the PC software

Prior to uninstalling the PC software, quit all programs.

1. Within the Control Panel, launch "Add or Remove Programs". In the list of installed software, select the PC software, then click the "Change/Remove..." button.
2. When the Install Shield program screen appears, select "Remove", then click "Next".
3. For the verification prompt, click on the "OK" button. When the Uninstall window for the USB driver is displayed, disconnect the USB cable and click "Next" to execute the un-installation procedure.
4. When the un-installation procedure is complete, click the "Finish" button to finish.

## Battery Replacement

### Batteries used

Type	Model	Quantity	Use
Lithium battery	CR2032	2	Unit operation and backlighting

- Be sure to write down any important information stored in the memory before replacing the batteries.

### Precautions

Since improper use of the batteries may cause leakage or explosion, strictly observe the following instructions:

- If fluid from a leaking battery accidentally gets into your eyes, it may result in serious injury. Should this occur, flush your eyes with clean water and consult a physician immediately.
- Should fluid from a leaking battery come into contact with your skin or clothes, immediately wash with clean water.
- If the Organizer will not be used for an extended period of time, to avoid damaging the Organizer remove batteries and store in a safe place.
- Do not leave exhausted batteries inside the Organizer.
- Do not use different types of batteries or partially used batteries.
- Insert the battery with its positive side (+) correctly oriented.
- Never throw batteries into a fire because they might explode.
- Keep batteries out of reach of children.
- When batteries become near exhaustion, remove them from the Organizer immediately to avoid battery leakage and corrosion inside the Organizer.

Because the batteries in the Organizer were installed at the factory, they may become exhausted before the specified expiration time is reached.

### When the **BATT** Symbol Appears

When "**BATT**" is displayed, immediately replace the operation battery with a new one.

**The operation battery holder is indicated as "For OPERATION" in the battery compartment.**

If the battery level is low, the alarm may not sound, or similarly the Backlight may not function or remain on for less than the set interval. Continued use of the Organizer with low battery can alter or clear the memory contents. Memory contents may be lost if the battery is improperly replaced or if the following instructions are disregarded.

#### Note:

- After the battery replacement, check also that the Backlight functions properly.

#### Caution:

- PC Link may not be available when the battery level is low.
- Expense Report (Summary Report) may not be available when the battery level is low.
- Under the low battery condition, new data entry and editing of existing data may not be performed in some modes. Also Clock settings, step count function of the pedometer, and the calorie calculation may not be available.

### When the Backlight Won't Function

When the Backlight cannot be turned on (except when "**BATT**" is displayed or the Organizer is in the PC Link mode), replace the battery for the backlight ("For BACKLIGHT & OPERATION").




**The backlight and operation battery holder is indicated as "For BACKLIGHT & OPERATION" in the battery compartment.**



## Replacing the batteries

- Make sure the power is turned off before replacing the batteries.
- Do not press **[ON]** until the battery replacement procedure is completed.
- Do not remove all of the batteries at once. Remove and replace batteries one by one.

1. Press **[ON]** to turn the power off.
2. Loosen the screw (turn counterclockwise) and remove the battery holder cover on the back of the unit.
3. Remove one used battery using a ball-point pen or similar object.
  - Do not use a mechanical pencil or sharp pointed object.
4. Install one new battery with the positive side (+) facing up.
5. Repeat step 3 and 4 for replacing both batteries, if necessary.
6. Replace the battery holder cover and secure with the screw.
7. The power will be turned on 2 to 3 seconds after **[ON]** is pressed.
  - If nothing appears on the display, press the **RESET** switch and press **[NEXT]**. Do not tap **[2nd]** and press **[ENTER]**. This key sequence will clear all the memory contents.
8. Set the clock to the correct time. (see page 6)

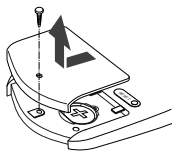

### Caution:

- Clock settings and/or other settings and listings may be lost when batteries are removed for a long time. Replace the batteries as quickly as possible.
- Make sure to confirm all settings are set correctly after replacing the batteries.

## Specifications

<b>Model:</b>	OZ-290H
<b>Product name:</b>	Electronic Organizer
<b>Display:</b>	14 columns x 5 lines with the Backlight
<b>Memory capacity:</b>	1.5 MB Equivalent*
<b>User area:</b>	Approx. 896 KB
<b>Clock mode</b>	
Accuracy:	±60 seconds/month (at 25°C/77°F)
Display:	Year, month, day, day of the week, hour, minute, second, AM/PM, city name
Clock system:	12-hour/24-hour format (switchable), 3 types of date format (switchable), World clock function, daylight saving time/summer time display function, daily/hourly/schedule alarm function
<b>Telephone mode:</b>	Entry and recall of Last name, First name, Company, Home#, Office#, Fax#, Mobile#, E-mail, Address, City, State, Zip code, Country, Note
<b>Calendar mode:</b>	From Jan., 1950 to Dec., 2150, Confirmation of the Schedule, To Do, and Anniversary mode entries can be made by the indication marks seen on the right side of the date
<b>Schedule mode:</b>	Entry and recall of schedule (year, month, day, hour and minute), schedule alarm and Description

**Anniversary mode:** Entry and recall of month, day and description of anniversaries

**To Do mode:** Entry and recall of To Do listings (Due Date, Priority and Description)

**Memo mode:** Entry and recall of memo listings

**Expense mode:** Entry and recall of Expense listings (Date, Category, Amount, Payment, Receipt and Memo) and Summary Report during a specified period to display the total amount spent in a preset category, Meals, Hotel, Car, Phone, Fares, Entertainment, Tips and Miscellaneous, that can be changed with the selection of edit Category.

**Word translator mode:** English from/to Spanish, approx. 12000 words for each language

**Spell checker mode:** Approx. 12000 English words can be referred to as suggested entries.

**Diet function mode:** Step count precision: within  $\pm 10\%$  (by vibration testing machine)  
Food Database: 800 foods  
Value entry: 9 fields (Calorie, Carbohydrate, Total Fat, Saturated Fat, Cholesterol, Dietary Fiber, Sodium, Sugars, Protein)

**Calculator mode:** 12 digits (with calculation status symbol) Addition, subtraction, multiplication, division, percentage, square root, memory calculation, etc.

**Currency/Unit conversion mode:**  
12 digits, 14 combinations of currencies (5) and metric (9) conversions

**Game mode:** 2 games

**Secret function:** Protects listings with a password

**Power consumption:** 0.13 W

**Operating temperature:** 0°C ~ 40°C (32°F ~ 104°F)

**Power supply:**

3.0V  $\ddot{\cdot}$  (DC) (Lithium battery CR2032 x 2)

**Auto Power Off Function:**

Approx. 7 minutes

**Battery life: (at 25°C/77°F)**

- Approx. 6 months  
While PEDOMETER is set to ON, with 5 minutes of data search, 55 minutes of data display, and 10000 step counts per day.
- Approx. 1800 hours  
When data is continuously displayed with PEDOMETER set to OFF.
- Approx. 1200 hours  
When data is searched for 5 minutes and displayed for 55 minutes per hourly use with PEDOMETER set to OFF
- Approx. 2 years  
When turned off and the clock is running with PEDOMETER set to OFF
- Approx. 4000 times  
When the Backlight is turned on for 10 seconds and turned off for 50 seconds per minute while the display is activated.

**Weight:** Approx. 105 g (0.23 lb.) (Including batteries)

**Dimensions:**

71.6 mm (W) x 112.5 mm (D) x 16.9 mm (H)  
2-13/16" (W) x 4-7/16" (D) x 21/32" (H)

**Accessories:** 2 lithium batteries (installed), CD-ROM software,  
USB PC-Link cable, operation manual, stylus, carrying  
case with belt clip

\* Memory at 1.5MB Equivalent. Approx. 7,000 telephone names &  
numbers (names & numbers <home, office, fax and mobile> are 14  
characters and address is 38 characters per entry) can be stored by  
using compression technology. (Compression Rate: Approx. 1.5:1)

**Names and zone numbers of the cities in the clock**

Zone No.	City	Zone No.	City
0	TONGA	11	CAIRO
1	AUCKLAND	12	HELSINKI
	WELLINGTON		BARCELONA
2	NOUMEA		AMSTERDAM
3	GUAM		ROME
	SYDNEY	BERLIN	
3.3	ADELAIDE		PARIS
4	TOKYO	13	LISBON
5	SINGAPORE		LONDON
	HONG KONG	14	AZORES ISLANDS
	BEIJING	15	—
6	BANGKOK		MID ATLANTIC
6.3	YANGON	16	RIO DE JANEIRO
7	DHAKA	17	CARACAS
7.3	DELHI	18	TORONTO
8	KARACHI		NEW YORK
8.3	KABUL	19	CHICAGO
9	DUBAI	20	DENVER
9.3	TEHRAN	21	LOS ANGELES
10	RIYADH	22	ANCHORAGE
	MOSCOW	23	HONOLULU
		24	MIDWAY ISLANDS

## PRODUCT SUPPORT

If you have read the ORGANIZER operation manual, but you still require product support, you can:

### Call a SHARP Customer Assistance Center

630-378-3590  
(7am to 7pm CST M – F)

### Visit our Web Site

<http://www.sharpusa.com>

### Send an E-mail

[pdasupport@sharpsec.com](mailto:pdasupport@sharpsec.com)

### Write to our Customer Assistance Center

SHARP Electronics Corp.  
Customer Assistance Center  
Att: WIZARD HELP  
1300 Naperville Drive  
Romeoville, IL 60446

### Declaration of Conformity

Electronic Organizer : OZ-290H

USB PC-Link cable: CE-179T

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:

SHARP ELECTRONICS CORPORATION

Sharp Plaza, Mahwah, New Jersey 07430-1163

TEL: 1-800-BE-SHARP

Tested To Comply With FCC Standards



FOR HOME OR OFFICE USE

WARNING – FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: A shielded interface cable is required to ensure compliance with FCC regulations for Class B certification.



**Instrucciones abreviadas en español**


**ÍNDICE**

Empleo del organizador por primera vez .....	S-1
Función de desconexión automática .....	S-2
Luz de fondo .....	S-2
Ajuste del contraste de LCD .....	S-2
Activación y desactivación del sonido de las teclas .....	S-2
Comprobación de la memoria .....	S-2
Teclado táctil .....	S-3
Modo de reloj .....	S-3
Modo de teléfono .....	S-4
Modo de calendario .....	S-5
Modo de programa de actividades .....	S-5
Modo de aniversario .....	S-7
Modo de cosas a hacer ("To Do") .....	S-8
Modo de apuntes .....	S-9
Modo de gastos .....	S-10
Edición de listas .....	S-12
Borrado de listas .....	S-12
Modo del traductor de palabras .....	S-12
Modo de corrector ortográfico .....	S-13
Modo de función dieta .....	S-14
Modo de conversión .....	S-19
Modo de juego .....	S-20
Utilización del software de PC incluido .....	S-21
Reemplazo de las pilas .....	S-26

**Empleo del Organizador por primera vez**


Asegúrese de realizar las operaciones siguientes antes de emplear el Organizador por primera vez.

1. Saque las hojas de aislamiento de las pilas del compartimento de las pilas situado en la parte posterior de la unidad.

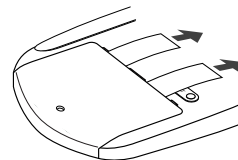

El Organizador empieza a funcionar.  
(Las hojas de aislamiento de las pilas fueron insertadas en la fábrica para impedir que se agoten las pilas.)

2. Pulse el interruptor **RESET**.  
Se visualizará el mensaje "RESET?".

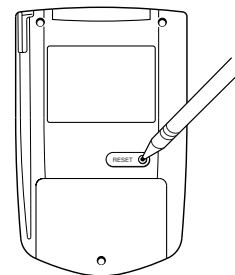

3. Pulse **2nd**, y luego **ENTER**.

Para pulsar las teclas táctiles, emplee el lapicero (incluido en el paquete).

Aparecerá el mensaje "RESET!".

El Organizador se inicializará ahora. Ponga la fecha y la hora en el reloj (consulte la página S-3).

**Nota**

- Pulse el interruptor **RESET** con el lapicero incorporado o con un objeto similar.

No utilice un objeto cuya punta pueda romperse o esté muy afilada.

## **Función de desconexión automática**

Cuando ninguna de las teclas haya sido pulsada o tocada durante aproximadamente 7 minutos, el Organizador desconectará automáticamente la alimentación para ahorrar energía de las pilas.

## **Luz de fondo**

La luz de fondo le permitirá ver el visualizador y utilizar el Organizador incluso en condiciones de baja iluminación. Al pulsar **BackLight** una vez se ilumina el visualizador durante tanto tiempo como se utiliza el Organizador; si no se detecta ninguna actividad de las teclas dentro del intervalo especificado, el Organizador se apagará automáticamente.

- Para apagar la luz de fondo, vuelva a pulsar **BackLight**.
- La luz de fondo puede permanecer encendida durante menos tiempo del preajustado o puede no funcionar si el nivel de las pilas está bajo.
- La luz de fondo no funciona en el modo PC Link.

## **No utilice innecesariamente la luz de fondo.**

- Dado que la luz de fondo consume energía, su abuso podrá reducir considerablemente la vida útil de las pilas.

## **Apagado de la luz de fondo**

- La luz de fondo puede ajustarse para que se apague una vez transcurrido un intervalo especificado.

1. Pulse **CLOCK/ALARM** **MENU**, seleccione "BL TIME SET" utilizando **▲** o **▼**, y pulse **ENTER**.

2. Utilizando **▲** o **▼**, seleccione un intervalo de tiempo deseado (10, 20 o 30 segundos) y pulse **ENTER**.

## **Ajuste del contraste de LCD**

1. Pulse **CLOCK/ALARM** **MENU**, seleccione "LCD CONTRAST" utilizando **▲** o **▼**, y pulse **ENTER**.
2. Pulse **▲** o **▼** para oscurecer/iluminar el visualizador (entre 1 y 8).
3. Cuando termine, pulse **ENTER**.

## **Activación y desactivación del sonido de las teclas**

1. Pulse **CLOCK/ALARM** **MENU**, seleccione "KEY TONE" utilizando **▲** o **▼**, y pulse **ENTER**.
2. Seleccione la activación/desactivación de la función de sonido de las teclas utilizando **▲** o **▼**.
3. Cuando termine, pulse **ENTER**.

## **Comprobación de la memoria**

- Pulse **CLOCK/ALARM** **MENU**, seleccione "MEMORY CHECK" utilizando **▲** o **▼**, y pulse **ENTER**.


La visualización de verificación de la memoria aparecerá e indicará el espacio que queda libre en la memoria.

La pantalla anterior aparecerá después de transcurridos 2 segundos.



## Teclado táctil

Modo de introducción de letras    Modo de introducción de números



- Cada vez que se pulse **[2nd]**, el teclado táctil cambiará entre el modo de introducción de letras y el modo de introducción de números. Para pulsar las teclas táctiles, utilice el lapicero (incluido en el paquete).
- Pulse sobre el centro de cada tecla.
- Se pueden introducir números, caracteres alfanuméricos, símbolos y “+ - x ÷ .”.

## Modo de reloj

### Ajuste del reloj local

1. Si el visualizador está en otro modo o en el modo del reloj mundial, pulse **[CLOCK/ALARM]** para entrar en el modo del reloj local.


#### Nota:

- Durante el periodo de la hora de verano, ponga de antemano DST (horario de verano) en ON. Pulse **[DST]** una vez para conmutar el ajuste de la DST.

2. Pulse **[EDIT]** .


El Organizador entrará en el modo de ajuste del reloj.

3. Seleccione su ciudad de residencia utilizando **[NEXT]** o **[PREV]**.

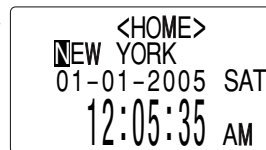

4. Pulse **[v]** para mover el cursor a la posición Month.
5. Introduzca el mes apropiado. Introduzca de la misma forma el día y luego el año.
6. Pulse **[v]** para mover el cursor a la posición Hour.
7. Introduzca la hora apropiada.
8. Introduzca de la misma forma los minutos y luego los segundos.
9. Seleccione AM o PM utilizando **[AM/PM]**.
10. Pulse **[ENTER]** para ajustar el reloj.

El reloj empieza exactamente a partir de la hora ajustada.

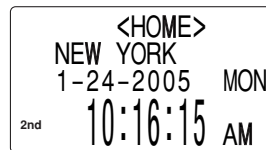

## Modo de teléfono

### Entrada

#### <Ejemplo>

1. Pulse **[TEL]**, seleccione "BUSINESS", y luego pulse **[ENTER]**.

<BUSINESS>  
SEARCH NAME?

2. Pulse **[EDIT]**.

El visualizador cambiará al modo de introducción de registro.

3. Introduzca el apellido.

Por ejemplo, "Smith".

4. Pulse **[▼]** y luego introduzca el nombre. Por ejemplo, "John".

5. Pulse **[▼]** para mover el cursor al campo de las compañías e introduzca "ABC International Co."

6. Pulse **[▼]** para mover el cursor al campo Home #.

7. Introduzca "585-4280".

8. Pulse **[▼]** para mover el cursor al campo Office # e introduzca "619-542-7320".

9. Entre en cada campo de la misma forma.

10. En el campo Notes, pulse **[ENTER]** para guardar las listas de teléfonos.

Aparecerá la visualización de búsqueda Business.

## Búsqueda

### Búsqueda alfabética del apellido

1. Pulse **[TEL]** y seleccione la categoría utilizando la tecla **[▲]** o **[▼]**, luego pulse **[ENTER]**.  
Aparecerá la visualización de búsqueda.
2. Pulse **[NEXT]** o **[PREV]** para buscar en orden alfabético la lista deseada.

### Búsqueda directa del apellido

1. Pulse **[TEL]** y seleccione la categoría (Business, en este ejemplo) utilizando la tecla **[▲]** o **[▼]**, luego pulse **[ENTER]**.

Aparecerá la visualización de búsqueda.

<BUSINESS>  
SEARCH NAME?  
smi ■

2. Introduzca en orden algunas de las letras del apellido.

Se puede introducir un máximo de 10 letras.

3. Pulse **[ENTER]** para buscar la lista deseada.

Si no hay datos que coincidan aparecerá "NOT FOUND!", y la pantalla volverá luego a la visualización inicial.

### Consulte también

Edición de listas .....	S-12
Borrado de listas .....	S-12

## Modo de calendario

### Navegación en la visualización del calendario mensual

1. Pulse **[CALENDAR/SCHEDULE]** una o dos veces para entrar en el modo de calendario.

Aparecerá el calendario mensual del mes actual.

Parpadeará el día actual.

Navegue por el calendario utilizando las teclas siguientes:

**[NEXT]** **[PREV]** : visualiza el mes posterior o anterior.

**[◀]**: Vaya al día anterior

**[▶]**: Vaya el día siguiente

**[▲]**: Vaya a la semana anterior

**[▼]**: Vaya a la semana siguiente

- Los cursores **[◀]**, **[▶]**, **[▲]** y **[▼]** sólo se pueden mover dentro del mes visualizado.

	8-2005						
	1	2	3	4	5	6	
	7	8	9	10	11	12	13
	14	15	16	17	18	19	20
2nd ▼	21	22	23	24	25	26	27

### Vaya directamente al mes deseado

1. En el modo de calendario, pulse **[=]**.

Aparecerá la pantalla de introducción de la fecha.

2. Introduzca la fecha deseada.

<CALENDAR> SEARCH DATE? 08-12-2005
2nd

3. Pulse **[ENTER]**.

Aparecerá el calendario mensual de la fecha deseada.


#### Nota:

- En el modo de calendario se encontrarán disponibles los calendarios mensuales de enero de 1950 a diciembre de 2150.

### Confirmación de las entradas de los modos de programa de actividades, cosas a hacer y aniversario

En la visualización del calendario mensual usted puede ver las fechas a las que ha asignado un programa de actividades, cosas a hacer o un aniversario.

Las marcas de indicación se visualizan de la forma siguiente:

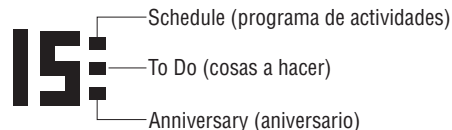

## Modo de programa de actividades

### Entrada

#### <Ejemplo>

El 11 de septiembre de 2005 se celebrará una reunión de las 10:00 AM a las 11:00 AM.

1. Pulse **CALENDAR/SCHEDULE** una o dos veces para entrar en el modo de programa de actividades.

Aparecerá la visualización de búsqueda del programa de actividades.

La fecha actual se visualizará y el cursor situado en el primer número parpadeará.

El primer número depende de su elección del formato de la fecha. Estos ejemplos están en el formato MM-DD-AAAA.

2. Pulse **EDIT**. Aparecerá la visualización de introducción del programa de actividades. Introduzca 09 para el mes.

```
<SCHEDULE>
SEARCH DATE?
08-12-2005
2nd
```

```
09-12-2005
START:05:54 PM
END :05:54 PM
ALARM:<YES>
REMINDER:
2nd
```

3. Introduzca el día/año deseado de la misma forma.  
4. Pulse **▼**, e introduzca 10:00AM para la hora de inicio.  
5. Pulse **▼**.

La hora de finalización cambiará automáticamente a 30 minutos después de la hora de inicio. (Sin embargo, la hora de finalización permanecerá dentro del día especificado.)

6. Introduzca 11:00 AM para la hora de finalización y pulse **▼**.

7. Pulse **NEXT** o **PREV** para seleccionar "Yes" o "No" para el ajuste de la alarma y pulse **▼**.

Si usted selecciona "Yes", la alarma del programa de actividades sonará al llegar al comienzo del tiempo restante establecido para antes de la hora de inicio. Si selecciona "No", la alarma del programa de actividades no sonará.

**Nota:**

- Si selecciona "No" en el paso 7, aparecerá "PLAN". Vaya al paso 9 para continuar.

```
▲ START:10:00 AM
END :11:00 AM
ALARM:<YES>
REMINDER:
2nd
▼ 00 MIN. BEFORE
```

```
▲ END :11:00 AM
ALARM:<NO >
REMINDER:-----
00 MIN. BEFORE
PLAN:█
```

8. Introduzca el tiempo apropiado para el tiempo restante y pulse **▼**.

La alarma del programa de actividades sonará al llegar al comienzo del tiempo restante introducido para antes de la hora de inicio. Usted puede seleccionar cualquier número del 00 al 99.

**Nota:**

- Introduzca el número en el formato de dos dígitos.

9. Introduzca el nombre del elemento programado en el campo. (Encuentro).

Puede introducir un máximo de 96 caracteres alfanuméricos.

10. Pulse **ENTER** para guardar la lista de programas de actividades.

## Búsqueda

### Búsqueda del programa de actividades para hoy

1. Pulse **[CALENDAR/SCHEDULE]** una o dos veces para entrar en el modo de programa de actividades.

2. Pulse **[NEXT]** o **[PREV]** para buscar la lista del programas de actividades deseada.

Las listas guardadas en el Organizador se visualizarán en orden cronológico.

```
8-12-2005
START:12:15 PM
END :12:45 PM
ALARM:YES
REMI2ndNDER:
```

### Búsqueda de fecha

1. Pulse **[CALENDAR/SCHEDULE]** una o dos veces para entrar en el modo de programa de actividades.

2. Ponga la fecha deseada.

Seleccione el campo del mes, día y año, e introduzca el número deseado.

```
<SCHEDULE>
SEARCH DATE?
09-11-2005
```

3. Pulse **[ENTER]** para buscar la lista de programas de actividades deseada de la fecha especificada.

Al pulsar **[NEXT]** o **[PREV]** se pueden visualizar las listas de ese día.

### Consulte también

Edición de listas ..... S-12

Borrado de listas ..... S-12

## Modo de aniversario

### Entrada

#### <Ejemplo>

"Nancy's Birthday" el 12 de febrero.

1. Pulse **[MEMO/ANN]** una o dos veces para entrar en el modo de aniversario.

2. Pulse **[EDIT]**.

Aparecerá la visualización de introducción de aniversario.

3. Introduzca la fecha, 02 para el mes y 12 para el día.

4. Pulse **[▼]**.

La fecha del recordador parpadeará.

5. Introduzca la fecha del recordador de 0 a 9.

6. Pulse **[▼]**.

7. Introduzca "Nancy's Birthday".

8. Pulse **[ENTER]** para guardar la lista de aniversario.

El signo de aniversario (🎂) no aparecerá hasta que se ponga el día en el recordador.

```
<ANNIVERSARY>
SEARCH DATE?
08-12
```

2nd

```
DATE:02-12
REMI2ndNDER:
5 DAYS BEFORE
DESCRIPTION:
```

2nd

## Búsqueda

### Búsqueda secuencial

1. Pulse **[MEMO/ANN]** una o dos veces para entrar en el modo de aniversario.
2. Pulse **[NEXT]** o **[PREV]** para buscar las listas.

### Búsqueda de fechas

Introduzca la fecha para ir a la fecha deseada en el paso 2 de arriba y luego pulse **[ENTER]**.

### Consulte también

Edición de listas .....	S-12
Borrado de listas .....	S-12


## Modo de cosas a hacer

## Entrada

### <Ejemplo>


Usted tiene que visitar HK Exhibition el 10 de diciembre de 2005.

1. Pulse **[TO DO/EXPENSE]** una o dos veces para entrar en el modo de cosas a hacer.

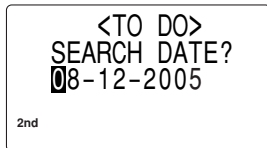

2. Pulse **[EDIT]**.

Aparecerá la visualización de cosas a hacer.

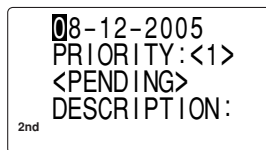

3. Introduzca 12 en el campo del mes y luego introduzca 10 y 2005 respectivamente.
4. Pulse **[▼]** y seleccione el número de prioridad, desde 1 (alta) a 9 (baja) utilizando **[NEXT]** o **[PREV]** (o introduzca el número), y luego pulse **[▼]**.
5. Pulse **[▼]** para dejar el estado como "PENDING".
6. En el campo de descripción, introduzca lo que tiene que hacer para el día deseado.  
Introduzca "Visit HK Exhibition".  
Puede introducir un máximo de 96 caracteres alfanuméricos.
7. Pulse **[ENTER]** para guardar la lista de cosas a hacer.


## Búsqueda

### Búsqueda secuencial

1. Pulse **[TO DO/EXPENSE]** una o dos veces para entrar en el modo de cosas a hacer.
2. Pulse **[NEXT]** o **[PREV]** para buscar la lista de cosas a hacer deseada.

## Búsqueda de fecha

1. Pulse **[TO DO/EXPENSE]** una o dos veces para entrar en el modo de cosas a hacer.
2. Seleccione el campo del mes, el día o el año y luego introduzca la fecha deseada.
3. Pulse **[ENTER]** para buscar la lista de cosas a hacer deseada de una fecha especificada.

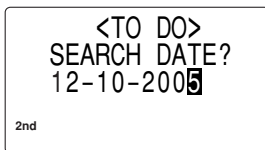

## DONE Elementos completados

1. Pulse **[TO DO/EXPENSE]** una o dos veces para entrar en el modo de cosas a hacer.
2. Pulse **[NEXT]** o **[PREV]** para seleccionar los elementos de cosas a hacer.
3. Pulse **[EDIT]** **[▼]** **[▼]** para entrar en el campo de estado.
4. Pulse **[NEXT]** o **[PREV]** para seleccionar "DONE", y luego pulse **[ENTER]**.

## Consulte también

Edición de listas ..... S-12

Borrado de listas ..... S-12

## Modo de apuntes


Puede guardar apuntes empleando el modo de apuntes. Se puede introducir un máximo de 96 caracteres alfanuméricos por lista.

## Entrada

### <Ejemplo>


Introduzca su número de pasaporte: 12AB34567

1. Pulse **[MEMO/ANN]** una o dos veces para entrar en el modo de apuntes.

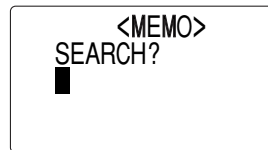

2. Pulse **[EDIT]** e introduzca lo siguiente.

**Passport No. 12AB34567**

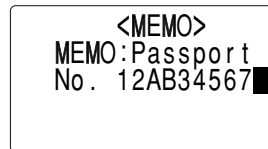

3. Pulse **[ENTER]** para guardar la lista de apuntes.

## Búsqueda

### Búsqueda secuencial

1. Pulse **[MEMO/ANN]** una o dos veces para entrar en el modo de apuntes.  
Aparecerá la visualización de búsqueda del modo de apuntes.
2. Pulse **[NEXT]** o **[PREV]** para buscar las listas.

### Búsqueda directa

1. Pulse **[MEMO/ANN]** una o dos veces para entrar en el modo de apuntes.  
Aparecerá la visualización de búsqueda.
2. Introduzca la(s) primera(s) letra(s) del apunte deseado (ej. "pasa").  
Se puede introducir un máximo de 10 letras.
3. Pulse **[ENTER]** para buscar la lista deseada.

■ Passport No.  
12AB34567

### Consulte también

Edición de listas .....	S-12
Borrado de listas .....	S-12

## Modo de gastos

### Entrada

#### <Ejemplo>

La fecha es 18 de agosto de 2005.  
Usted adquirió billetes de avión por un importe de 1200 \$ para un viaje de negocios.

**<EXPENSE>**  
▶ **EXPENSE**  
**REPORT**  
**CATEGORY**  
2nd

1. Pulse **[TO DO/EXPENSE]** una o dos veces para entrar en el modo de gastos.
2. Pulse **[▲]** o **[▼]** para seleccionar "EXPENSE", y luego pulse **[ENTER]**.  
Aparecerá la visualización de búsqueda de gastos.
3. Pulse **[EDIT]**.

**08-18-2005**  
**CATEGORY:**  
**<Meals >**  
**AMOUNT:** 0.  
2nd ▼

El primer número depende de su elección del formato de la fecha.  
Estos ejemplos están en el formato MM-DD-AAAA.

4. Introduzca la fecha si es necesario.
5. Pulse **[▼]**.



6. Seleccione la categoría de gastos utilizando **[NEXT]** o **[PREV]**.

Hay 8 categorías preajustadas para elegir.

Meals ➡ Hotel ➡ Car ➡ Phone ➡ Fares ➡  
(Enter't) Entertainment ➡ Tips ➡ (Misc) Miscellaneous ➡...

7. Pulse **[▼]** e introduzca 1200.

Se puede introducir un máximo de 12 dígitos.

8. Pulse **[▼]**.

9. Seleccione el pago utilizando **[NEXT]** o **[PREV]**.

Hay 4 sistemas de pago preajustados para elegir.

Cash ➡ Check ➡ Card ➡ Others ➡...

10. Pulse **[▼]**, y seleccione "YES" o "NO" utilizando **[NEXT]** o **[PREV]** en el campo "RECEIPT".

11. Pulse **[▼]**, e introduzca "Flight ticket" en el campo "MEMO".

12. Pulse **[ENTER]** para guardar los datos.

```
▲ <Fares >
AMOUNT :
          1200.
PAYMENT :
2nd <CHECK > ▼
```

```
▲ AMOUNT :
          1200.
PAYMENT :
          <CHECK >
2nd RECEIPT : <YES> ▼
```

## Recuperación

### Búsqueda secuencial

1. Pulse **[TO DO/EXPENSE]** una o dos veces para entrar en el modo de gastos.
2. Pulse **[▲]** o **[▼]** para seleccionar "EXPENSE", y luego pulse **[ENTER]**. Aparecerá la visualización de búsqueda de gastos.
3. Pulse **[NEXT]** para ver el siguiente registro, o **[PREV]** para ver el registro anterior.

### Consulte también

Edición de listas .....	S-12
Borrado de listas .....	S-12

## Edición de listas

### 1. Edición

1. Recupere una lista en el modo deseado.
2. Pulse **EDIT**.  
La visualización cambiará al modo de edición.
3. Edite los datos.  
**◀▶ ▲▼**: mueve el cursor a la izquierda, derecha, arriba o abajo respectivamente.  
**DEL**: se puede utilizar para borrar caracteres.  
**INS**: cambia entre el modo INSERT y el modo OVERWRITE.
4. Pulse **ENTER** para guardar.

## Borrado de listas

### Borrado


1. Recupere una lista en el modo deseado.
2. Pulse **DEL**.  
Aparecerá la visualización de confirmación.
  - Para cancelar el borrado, pulse **2nd**.
3. Pulse **ENTER** para borrar la lista.

## Modo del traductor de palabras

Este aparato ofrece una función de traducción de inglés a español y viceversa. Cada vez que toque **E↔S**, el modo cambiará entre el modo de traducción de palabras y el modo de corrector ortográfico.

1. Pulse **E↔S** una, dos, o tres veces para entrar en el modo de traducción de inglés → español.  
Pulse **E↔S** una, dos, o tres veces para entrar en el modo de traducción de español → inglés.

Campo del inglés

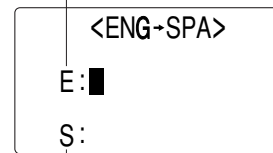

Campo del español

2. Introduzca la palabra que desee traducir y pulse **ENTER**.  
Luego se visualizará la correspondiente palabra inglesa o española.
  - Cuando se encienda el pequeño símbolo “◀” o “▶”, esto indicará que existen más letras. Para ver las letras restantes de palabras largas que no caben en la pantalla, utilice **◀** o **▶** para desplazar la palabra.
  - Si no se encuentra la palabra correspondiente se visualiza “NOT FOUND!”. Luego se visualizará la siguiente palabra en orden alfabético.
  - Pulse **NEXT** o **PREV** para desplazarse por la lista de palabras, o introduzca una palabra nueva utilizando el teclado, y pulse **ENTER** para hacer otra búsqueda.

## Notas:

- Las abreviaturas indican lo siguiente:  
(Am): Inglés americano  
(Br): Inglés británico  
(adj): Adjetivo  
(adv): Adverbio  
(n): Nombre  
(pron): Pronombre  
(v): Verbo  
(f.): Género femenino  
(m.): Género masculino
- Algunas veces es posible que aparezcan dos palabras idénticas en la lista de palabras.
- Introduzca correctamente los caracteres europeos y los espacios. De otra forma, la unidad tal vez no pueda realizar la búsqueda.
- En el campo del español, usted podrá introducir las letras siguientes. Pulse repetidamente la tecla de la letra respectiva después de pulsar **[SMBL]**.

Tecla	Letras	Tecla	Letras
A	á à â ä	N	ñ
C	ç	O	ó ò ô õ
E	é è ê ë	U	ú ù û ü
I	í ì î ï	Y	ý ÿ


- Active "CAPS" para introducir letras mayúsculas.

## Modo de corrector ortográfico

El modo de corrector ortográfico será muy útil cuando no se conozca la ortografía de una palabra que desee buscarse. Cada vez que toque **[ABC]**, el modo cambiará entre el modo de corrector ortográfico y el modo de traducción de palabras.

### Búsqueda de una palabra con ortografía ambigua


- Dé un toque en **[ABC]** una, dos, o tres veces para entrar en el modo de corrector de ortografía.
- Para comprobar la ortografía, introduzca la palabra y dé un toque en **[ENTER]** para iniciar la comprobación de ortografía. La longitud máxima de la palabra introducida es de 36 caracteres.

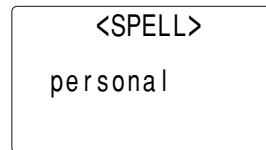

- Si la palabra introducida es ortográficamente correcta, aparecerá brevemente el mensaje "CORRECT!" (correcto), y después reaparecerá la visualización de una palabra.
- Si la palabra introducida es ortográficamente incorrecta, se visualizará cierto número de palabras relacionadas; utilice **[▲]** o **[▼]** para desplazarse por las palabras. Si la palabra introducida es ortográficamente incorrecta, se visualizarán palabras relacionadas. Si el corrector de ortografía es incapaz de encontrar palabras relacionadas, después aparecerá "0", seguido por la pantalla inicial de introducción.
- El modo del corrector de ortografía busca una correspondencia de una palabra dada en la base de datos instalada que contiene unas 12000 palabras.
- Es posible que no siempre se den específicamente las variantes de una palabra dada o la raíz de una variante dada.

## Modo de función dieta

La función de dieta podrá organizar su consumo diario de calorías al caminar, así como administrar su toma diaria de calorías. Toque varias veces [DIET] para hacer que se visualice la pantalla del modo de función dieta y la pantalla del modo de juegos (función de dieta → BLACKJACK → ALPHA ATTACK → función de dieta ...).

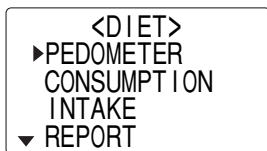

La función de dieta de esta unidad calculará el consumo estimado de calorías con el pedómetro incorporado, y comparará el valor con el valor de consumo de consumo objetivo. \* El consumo mediante metabolismo basal no se contará como parte de este cálculo.

Los artículos alimentarios podrán seleccionarse de la base de datos de alimentos, o programarse en la forma deseada. Haga que el Organizador compare el valor con el valor de toma objetivo introducido.

- \* El metabolismo basal es la energía requerida para mantener las funciones vitales de su cuerpo, tales como respiración, pulso, y mantenimiento de la temperatura de su cuerpo.
- Siga las indicaciones de su médico cuando utilice esta unidad para organizar su dieta.
- Antes de utilizar esta función, tendrá que medir la longitud de su zancada y su peso.

## Medición de la longitud de su zancada

Para que la Función de Dieta trabaje adecuadamente, tendrá que medir en primer lugar la longitud de su zancada.


### Nota:

- En este manual, "longitud de zancada" se refiere a la distancia desde la punta de un pie a la del otro.
  1. Camine normalmente 10 pasos, como se muestra en la ilustración.
  2. Mida la distancia que ha recorrido.
  3. Divida la distancia por 10. Escriba el resultado como "longitud de zancada".

Ejemplo:

Distancia recorrida = 320"

Longitud de zancada =  $320 \div 10 = 32$ "




## Modo de currículum del usuario


Introduzca la información sobre la longitud de su zancada y su peso previamente medidos.


1. Toque [DIET] una, dos o tres veces para entrar en el modo de función dieta.
2. Seleccione "USER PROFILE" utilizando [▲] o [▼], y presione [ENTER].

Nota:

- Cuando utilice el modo de función de dieta por primera vez, o después de la operación de reposición (RESET) del Organizador, pasará automáticamente al modo de currículum del usuario.

3. Rellene el campo de introducción de STRIDE (zancada) con el valor de la longitud de su zancada obtenido con el método anteriormente indicado, y toque .

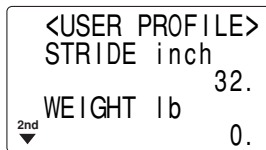

4. Introduzca el valor del peso de su cuerpo en el campo WEIGHT (peso), y toque .

5. Si es necesario, siga los pasos de arriba para introducir valores objetivos de su toma diaria de calorías y alimentación.






Introduzca los parámetros siguientes:

- Value of Calories for Intake (calorías de la toma)
- Value of Total Fat for Intake (grasas totales de la toma)
- Value of Saturated Fat for Intake (grasas saturada de la toma)
- Value of Cholesterol for Intake (colesterol de la toma)
- Value of Sodium for Intake (sodio de la toma)
- Value of Carbohydrate for Intake (carbohidratos de la toma)
- Value of Dietary Fiber for Intake (fibra dietética de la toma)
- Value of Sugars for Intake (azúcares de la toma)
- Value of Protein for Intake (proteínas de la toma)
- Value of Calories for Consumption (calorías del consumo)

6. Presione  para almacenar el ajuste.


#### Nota:

- Se le recomienda referirse a la documentación apropiada, o consultar a un médico antes de introducir todos los valores objetivo, tales como el valor objetivo diario de calorías a tomar.
- Las unidades tales como STRIDE (zancada) y WEIGHT (peso) podrán cambiarse en el modo MENU.

Seleccione "UNIT" (unidad) en el modo MENU, y después presione . Utilice   para seleccionar "STRIDE" (zancada) o "WEIGHT" (peso), y después seleccione la UNIT (unidad) deseada (pulgadas/cm, libras/kg) utilizando  o .


## Colocación de la unidad

Cierre la cubierta, y coloque la unidad en la funda de transporte, como se muestra en la ilustración, y después cerciórese de que la solapa superior esté cerrada.

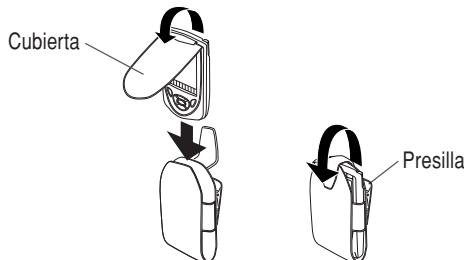

Asegure la presilla de la funda de transporte a su cinturón o a la parte superior de su pantalón o falda.

La unidad deberá fijarse en posición vertical a la tierra a fin de poder contar correctamente los pasos.

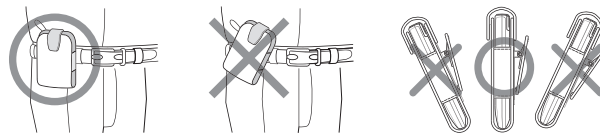

- Cerciórese de que la presilla haya quedado firmemente asegurada en su lugar. Si colocase inadecuadamente la unidad, podría desprenderse u ofrecer mediciones incorrectas.
- La presilla para el cinturón ha sido diseñada para sujetar la unidad mientras camine. La presilla puede no sujetar la unidad o puede romperse si la expone a una condición de fuerte impacto, como cuando corra o juegue al béisbol.

### La unidad puede no contar correctamente los pasos si:

- Camina a un ritmo irregular, o en un lugar muy concurrido.
- Arrastra excesivamente los pies.
- Se ha calzado sandalias.
- Varía su movimiento (hace deporte, por ejemplo).
- Se mueve excesivamente hacia arriba/abajo.
- Está en un vehículo con movimientos verticales y horizontales.
- La ha fijado incorrectamente (inclinada, por ejemplo).

## Modo de pedómetro

Cambie el estado del pedómetro a ON (activado) o OFF (desactivado). Para contar pasos, active esta función.

Toque [CLOCK], y toque [MENU], y seleccione "PEDOMETER SET" (ajuste ped.) en el modo MENU, y pulse [ENTER]. Utilice ▲ o ▼ para seleccionar "ON" (activado), presione [ENTER], y comience a caminar. Para desactivar el pedómetro, seleccione "OFF" (desactivado).

Para ver el cómputo de pasos y de los valores de calorías

1. Toque [DIET] una, dos o tres veces para entrar en el modo de función dieta.

2. Seleccione "PEDOMETER" (pedómetro) utilizando ▲ o ▼, y presione [ENTER] dos veces para hacer que se visualice el informe provisional del consumo de calorías y el cómputo total de pasos.

Para volver a la pantalla anterior, toque [C•CE].

- El cómputo de pasos se registrará automáticamente cuando el reloj señale las "23:59:59".
- Esta unidad calcula el consumo de calorías con la fórmula siguiente\*:

Consumo de calorías [Kcal] = (paso × zancada [pulgadas] × 2,54 × 0,001 + 3,5) × peso [libras] × 0,45359237 × 0,005

- El cálculo se ejecuta una vez por minuto para acumular valores.
- \* Basándose en las "Guías para Prueba y Prescripción de Ejercicio del ACSM" © Colegio Médico de Medicina Deportiva, 2000. Publicados por Lippincott Williams & Wilkins, 2000.

### Nota:

- Compruebe regularmente la memoria.
- Cuando la memoria esté llena, el registro del pedómetro no podrá registrarse.
- Cuando el nivel de carga de la pila esté bajo, es posible que no estén disponibles la función de cómputo de pasos del pedómetro, y el cálculo de calorías.
- El valor de calorías visualizado se redondea a tres decimales.

3-21-2005
CALORIE KcaI
80. 213
STEP
150.

## Modo de consumo

Usted podrá ver el consumo diario de calorías y el cómputo de pasos del día.

1. Toque **[DIET]** una, dos o tres veces para entrar en el modo de dieta.
2. Seleccione "CONSUMPTION" (consumo) utilizando **[▲]** o **[▼]**, y presione **[ENTER]**.
3. Utilice **[NEXT]** y **[PREV]** para seleccionar el día que desee visualizar. Para hacer que se visualice el cómputo de paso y el consumo de calorías.
  - Si no hay datos almacenados, se visualizará el mensaje "NOT FOUND!" (no encont).

## Modo de base de datos de alimentos

Descargue la base de datos de alimentos del CD-ROM. (Consulte la página S-25.)

La base de datos contiene 10 categorías de elementos de 800 nombres de alimentos. El contenido de la base de datos podrá aumentar o editarse, y podrá intercambiarse con un PC como elemento de exportación/importación.

### Nota:

- La lista de alimentos contenida en el CD-ROM se basa en "Food Database Release 16" (versión abreviada) emitida por el Departamento de Alimentos y Agricultura de los Estados Unidos. El orden de las palabras de los elementos, así como el símbolo ( " ) de algunos elementos pueden estar modificados.
- Todos los nombres de compañías y/o productos son marcas comerciales y/o registradas de sus respectivos propietarios.

## Modo de toma

Introduzca los artículos alimentarios diarios seleccionándolos de la base de datos de alimentos. Descargue la base de datos de alimentos del CD-ROM. (Consulte la página S-25.)

1. Toque **[DIET]** una, dos o tres veces para entrar en el modo de función dieta.
2. Seleccione "INTAKE" (toma) utilizando **[▲]** o **[▼]**, y presione **[ENTER]**.
3. Toque **[EDIT]**, y después utilice **[▲]** y **[▼]** para seleccionar alimentación en el campo de selección. Usted podrá introducir las primeras letras del nombre del alimento deseado, y después desplazarse por los elementos utilizando **[NEXT]** o **[PREV]**. Cuando no haya ninguna concordancia, se visualizará "NOT FOUND!" (no encont!).
4. Utilice **[▲]** y **[▼]** para seleccionar el campo de introducción para cada AMOUNT (cantidad) y DATE (fecha) de la toma a fin de introducir valores.
5. Presione **[ENTER]** para escribir la introducción.
  - Toque **[C-CE]** para volver a la visualización inicial.

03-25-2005 FOOD: BUTTER, SA LTED 717. 2nd ▼ AMOUNT :
---

### Adición de elementos a la base de datos

1. Toque **[DIET]** una, dos o tres veces para entrar en el modo de dieta.
2. Seleccione "FOOD DATABASE" (bd alim.) utilizando **[▲]** o **[▼]**, y presione **[ENTER]**.
3. Toque **[EDIT]**, introduzca el nombre del alimento deseado con un máximo de 96 caracteres.
4. Utilice **[▼]** para pasar al campo siguiente, y después introduzca los valores totales de calorías y hidratos de carbono, seguido por **[ENTER]**.

- Toque **[C•CE]** para volver a la pantalla inicial.

## Búsqueda y edición

1. Toque **[DIET]** una, dos o tres veces para entrar en el modo de dieta.
2. Seleccione "FOOD DATABASE" (bd alim.) utilizando **[▲]** o **[▼]**, y presione **[ENTER]**.
3. Presione **[NEXT]** o **[PREV]** para seleccionar el nombre del alimento deseado.
  - Usted podrá introducir las primeras letras del nombre del alimento deseado, y después desplazarse por los elementos utilizando **[NEXT]** o **[PREV]**. Cuando no haya ninguna concordancia, se visualizará "NOT FOUND" (no encont).
4. Utilice **[▲]** o **[▼]** para hacer que se visualice el valor de calorías y demás información.
  - Toque **[C•CE]** para volver a la pantalla inicial.
5. Para editar el elemento seleccionado, toque **[EDIT]**. Muévase entre los campos de introducción utilizando **[▲]** o **[▼]** para introducir los nombres de los alimentos, las calorías, y demás valores.
6. Presione **[ENTER]** para registrar las introducciones.

CHEESE, COLBY
CALORIE Kcal
394.
FA SAT g
20. 218

### Nota:

- El valor de calorías visualizado se redondea a tres decimales.

## Modo de informe

Usted podrá ver el informe de toma/consumo de un período especificado.

1. Toque **[DIET]** una, dos o tres veces para entrar en el modo de dieta.
2. Seleccione "REPORT" (informe) utilizando **[▲]** o **[▼]**, y presione **[ENTER]**.
3. Presione **[ENTER]**, y utilice **[▲]** y **[▼]** para seleccionar "INTAKE" (info. tomas) o "CONSUMPTION" (consumo). Utilice **[NEXT]** o **[PREV]** para seleccionar el elemento que desee visualizar en REPORT. Si selecciona "INTAKE", podrá elegir uno de los diez elementos siguientes: ALL (todo), CALORIE (calorías), TOTAL FAT (grasas totales), SATURATED FAT (grasas saturadas), CHOLESTEROL (colesterol), SODIUM (sodio), CARBOHYDRATE (carbohidratos), DIETARY FIBER (fibra dietética), SUGARS (azúcares), o PROTEIN (proteínas). Para "CONSUMPTION", seleccione uno de los tres elementos siguientes: ALL, CALORIE, o STEP (paso).
4. Presione **[▼]**, e introduzca los valores para fecha de empiezo y fecha de terminación, seguido por **[ENTER]**.
5. Se visualizará un informe.
  - INTAKE: Utilice **[▲]** y **[▼]** para cambiar entre la visualización del total de calorías y la del total de hidratos de carbono.
  - CONSUMPTION: Se visualizará el valor del consumo total de calorías.

<INTAKE>
--REPORT--
ITEM:<ALL>
FM:03-20-2005
<sup>2nd</sup> TO:03-20-2005

CALORIE Kcal
* _____
2000.
<sup>2nd</sup> _____
200.

Icono que indica que el resultado ha sobrepasado el valor objetivo.

Carbohidratos actuales

Indicación de la comparación con el objetivo del día (más/menos).

### Nota:

- El valor de calorías visualizado se redondea a tres decimales.



## Modo de conversión

### Modo de conversión de divisas

La conversión de divisas tiene 5 etapas de conversión programable. Cada etapa es capaz de hacer cálculos con 12 dígitos.

#### Ajuste de una nueva tasa de conversión de divisas

<Ejemplo> Ajuste de la tasa siguiente: £1 = \$1,45

1. Pulse **CALC/CONV** el número apropiado de veces para seleccionar el modo de conversión de divisas.
2. Pulse **NEXT** o **PREV** para seleccionar la etapa de conversión de divisas apropiada.
3. Pulse **EDIT**.

Aparecerá el modo de ajuste.

Los nombres de divisas preajustados se pueden cambiar aquí.

4. Cambie el nombre de la divisa de la izquierda si es necesario, y luego pulse **►**.

#### Nota:

- Para el nombre de la unidad de divisa se puede introducir un máximo de 4 caracteres.
5. Cambie el nombre de la divisa de la derecha si es necesario, y luego pulse **▼**.

```
<CURRENCY>
CAD-USD
RATE=
1.
```

6. Introduzca la tasa; 1,45.

Para la tasa se puede introducir un máximo de 12 caracteres alfanuméricos.

Si necesita borrar el número de la tasa, pulse **C·CE**.

```
<CURRENCY>
GBP-USD
RATE=
1.45
```

7. Pulse **ENTER** para almacenar el ajuste.

#### Conversión de divisas

Asegúrese de ajustar la tasa antes de iniciar una conversión.

<Ej. £ → \$>

1. Pulse **CALC/CONV** el número apropiado de veces para seleccionar el modo de conversión de divisas.
2. Pulse **NEXT** o **PREV** para seleccionar la etapa de conversión de divisas apropiada.
3. Introduzca la cantidad. (Ej. £50)
4. Pulse **►**.  
(£50 = \$72,5 aproximadamente)

```
<CURRENCY>
GBP-USD
50.
72.5
```

<Ej. \$ → £>

5. Introduzca la cantidad. (Ej. \$120)
6. Pulse **◀**.

(\$120 = £82,76

aproximadamente)

Utilice **◀** o **►** para cambiar la dirección de conversión.

```
<CURRENCY>
GBP-USD
120.
82.7586206896
```

Pulse **C·CE** para borrar el resultado del cálculo.

## Modo de juego


Pulse **[GAME]** una o dos veces para reproducir el juego "BLACKJACK" o "ALPHA ATTACK".

Cada vez que usted pulse **[GAME]**, la visualización cambiará entre "BLACKJACK" y "ALPHA ATTACK".

### BLACKJACK (Veintiuno)


Procure que su "mano" (la suma total de los números correspondientes a sus cartas) sea 21 o se aproxime a este número, pero sin rebasarlo.

1. Pulse **[GAME]** una o dos veces para visualizar la pantalla del modo de juego siguiente.
2. Pulse **[ENTER]** para empezar un juego. Las 2 cartas de la izquierda son para usted. (Una de ellas descubierta y la otra tapada.)
3. Acepte la apuesta máxima que se visualiza parpadeando a la izquierda (un máximo de 10) o introduzca una apuesta inferior.

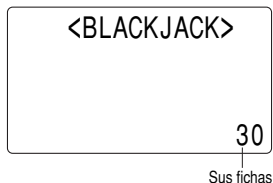


4. Pulse **[SPACE]** para ver su mano. Cada vez que pulsa **[SPACE]**, se le entrega una carta nueva.

- "J", "Q" y "K" cuentan como 10.
- "A" puede contar como 1 o como 11.
- Cuando las 2 primeras cartas sean "A" y una carta de figura ("J", "Q" o "K"), su mano será "BLACKJACK".

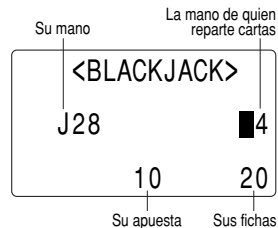

5. Pulse **[ENTER]** para no recibir más cartas y quedarse plantado. A continuación se verá la mano de quien reparte las cartas y los resultados.

- Cuando usted gane, su total parpadeará y su apuesta se doblará.
- Cuando usted gane con "BLACKJACK", su apuesta se triplicará.

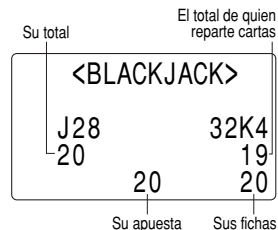

6. Pulse **[ENTER]** y visualice la pantalla del modo de juego.
  - El juego terminará cuando usted no tenga más fichas para apostar.
  - Pulse cualquier tecla de modo para abandonar el juego. Sus fichas quedarán guardadas par la próxima vez.

## ALPHA ATTACK

Escriba los caracteres (A a Z) visualizados en la línea del fondo para borrarlos. El juego se divide en 20 niveles de velocidad.

1. Pulse **[GAME]** una o dos veces para visualizar la pantalla del modo de juego siguiente.

2. Pulse **[NEXT]** / **[PREV]** para seleccionar el nivel.

- 01: lento, 20: rápido

3. Pulse **[ENTER]** para iniciar un juego.

4. Pulse la tecla correspondiente al primer carácter del extremo izquierdo de la línea del fondo.

(En este caso, pulse las teclas en el orden siguiente: E → Y → K → W.)

- Al pulsar las teclas correctas en el orden correcto se van borrando los caracteres.
- Cuando se visualicen 12 caracteres en cada nivel, el juego continuará a un nivel más rápido (hasta alcanzar el 20).
- El juego terminará cuando no se puedan visualizar más caracteres. Entonces se visualizará la pantalla del modo de juego mostrando el nivel con el que finalizó el juego.
- Para abandonar el juego, pulse o cualquier tecla de modo.

<ALPHA ATTACK>

LEVEL : 01

<ALPHA ATTACK>

LEVEL : 03

CAPS  
EYKW

## Utilización del software de PC incluido

El CD-ROM contiene software para activar el intercambio de datos con un PC. El software consiste en:

### Software de sincronización:

Puede resultar útil para sincronizar datos de Microsoft® Outlook® como, por ejemplo, contactos, calendarios, tareas y apuntes, con el Organizador.

### Utilidades de escritorio:

Pueden utilizarse para realizar una copia de seguridad/restablecer datos en el Organizador, así como para descargar la base de datos para varias funciones, y exportar/importar en diferentes formatos de archivo.

### Requerimientos mínimos del sistema:

- PC IBM o 100% compatible
- Microsoft® Windows® 98/98SE/2000 Professional/Me/XP Home/XP Professional
- Pentium® 300 MHz o más
- 50 MB de espacio libre en el disco duro
- RAM de 64 MB para Microsoft® Windows® 98/98SE/2000 Professional/Me
- RAM de 128 MB para Microsoft® Windows® XP Home/XP Professional
- Un puerto compatible con USB 1.1 / 2.0
- Unidad de CD-ROM
- Ratón o puntero compatible

Requerimientos adicionales del sistema:

- Microsoft® Outlook® 98/2000/2002/2003 deberá estar instalado para utilizar el software de sincronización entre el Organizador y su PC.

## Acerca de los puertos USB

- La activación del modo de ahorro de energía (como la función de suspensión, reanudación, o descanso) de algunos PC puede resultar en mal funcionamiento del puerto USB. En tal caso, desactive el modo de ahorro de energía.
- El software puede no funcionar adecuadamente con una tarjeta USB adquirida en un establecimiento del ramo e instalada en una ranura PCI.
- Si el puerto USB de su PC o el concentrador USB conectado al dispositivo no funciona adecuadamente, realice los pasos siguientes:
  - Si su PC está equipado de varios puertos USB, trate de utilizar otro diferente.
  - Si hay otros dispositivos USB conectados a su PC, desconéctelos para evitar posibles conflictos.
- Como el concentrador USB puede introducir problemas, pruebe a desviarlo conectando la unidad directamente a su PC.
- No desconecte y conecte el cable USB de/en su PC en un corto período de tiempo.

## Limitaciones cuando utilice Windows® XP/2000

### Windows® XP

- Entre en su PC con privilegios de administrador, ya que de lo contrario es posible que el software no se instalase adecuadamente. Después de utilizar el software, tendrá que iniciar la sesión como administrador. Si entra en sesión con una cuenta no administrativa, tendrá que salir de sesión y volver a entrar con una cuenta de administrador.

### Windows® 2000

- Cuando instale o utilice el software, tendrá que entrar en sesión como administrador. Si es necesario, tendrá que ponerse en contacto con el administrador del PC en un entorno de trabajo.

### Instalación

#### Precauciones:

- **Antes de instalar el software de sincronización, cerciórese de haber instalado y configurado Microsoft® Outlook®. En caso contrario, instale y configure en primer lugar Outlook®, y después el software de sincronización.**
- **Desconecte el cable USB antes de la instalación. Si realizase la instalación con el cable USB conectado, tendría que desconectar dicho cable y después referirse al archivo Read Me del CD-ROM para volver a realizar el procedimiento de instalación.**

1. Inserte el CD-ROM con el software de PC en su unidad CD-ROM. El proceso de instalación deberá empezar automáticamente. Si no aparece la pantalla del software de PC, haga doble clic en "My Computer" para localizar el directorio de la unidad CD-ROM, y luego haga doble clic para lanzar "installer.exe" que se encuentra en el CD-ROM.
2. Haga clic en el botón "Install"
3. Siga las instrucciones de instalación que aparecen en la pantalla.
4. Cuando termine la instalación, haga clic en el botón "Finish" para finalizar el proceso de instalación.


5. Cuando aparezca la ventana de detección de cable USB, conecte el conector del cable USB PC-Link al puerto USB del PC, y después haga clic en "Next". No conecte todavía el Organizador.

6. Aparecerá la ventana de instalación del controlador USB.

7. Siga las instrucciones de instalación de la pantalla.

8. Cuando termine la instalación, haga clic en el botón "Finish" para finalizar el proceso de instalación.

9. Cuando aparezca la ventana de detección del cable USB, haga clic en "Next" para que se detecte el cable USB. Para finalizar el proceso de detección, haga clic en "Finish".

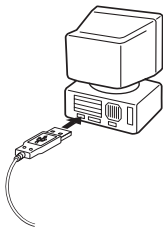

#### Nota:

• Si el cable no se detecta, consulte el archivo Read Me del CD-ROM para volver a realizar el procedimiento de detección.

10. Al procedimiento anterior le seguirá el de Serial Port Setup, y la ventana de de ajuste de sincronización.

#### Nota:

- Para Windows® 2000 Professional y Windows® XP, instale/desinstale programas después de iniciar la sesión como Administrator.
- Utilice solamente el cable USB indicado para OZ-290H. Este cable no podrá utilizarse con otros dispositivos.

## Preparación de puerto serial

El cuadro de diálogo del ajuste del puerto serial aparece después de que usted haya terminado de instalar el software.



## Conexión del Organizador al PC

1. Apague el Organizador.
2. Conecte el otro extremo del cable USB PC-Link al puerto para opciones del Organizador.
3. Encienda el Organizador.




Haga clic en "Auto Detect..." para permitir que la sincronización detecte automáticamente el puerto serial apropiado. Asegúrese primero de que la unidad esté conectada físicamente al PC, y luego haga clic en este botón.

Si no se encuentra el puerto serial deseado, selecciónelo manualmente desde la lista desplegable.

## Software de sincronización

Después de completar la preparación del puerto serial aparecerá la ventana de ajustes. Para mostrar manualmente la ventana de ajustes, haga clic con el botón derecho del ratón en el icono de sincronización de la bandeja del sistema Windows®, y luego seleccione el elemento de ajuste deseado en el menú.

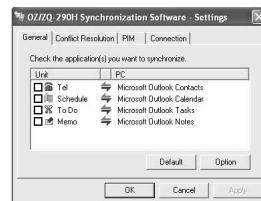


## Ficha general


En la ficha general usted podrá:

- Hacer clic en la casilla de verificación de cada aplicación para activar la sincronización con el PC.
- Utilizar el botón "Option" o hacer doble clic en la fila de ajustes deseada para configurar el método de comunicación.
- Hacer clic en el botón "Default" para reponer los ajustes de opciones.

### Acción de sincronización:

: Fusiona los datos entre el PC y la unidad.

: El PC escribe sobre los datos de la unidad.

: La unidad escribe sobre los datos del PC.

## Ficha de resolución de conflictos

La ficha de resolución de conflictos del software de sincronización le permite seleccionar la forma en que los conflictos de datos se resuelven cuando se hacen modificaciones en los datos y se selecciona la opción "Synchronize" en la ficha general.

- Add all conflicting items: Cada modificación en la unidad y en el PC se refleja y guarda respectivamente después de la sincronización.
- Unit overwrites PC data: Se escribirá sobre los datos del PC. Las modificaciones hechas en la unidad se reflejan en el PC después de la sincronización.
- PC overwrites unit data: Se escribirá sobre los datos de la unidad. Las modificaciones hechas en el PC se reflejan en la unidad después de la sincronización.

## La ficha PIM

La ficha PIM le permite configurar los ajustes de descarga de los datos PIM

- Utilización de Outlook HOME "Address" y "Fax number": Descarga o sincroniza solamente los datos de las direcciones HOME y los números de FAX.
- Utilización de Outlook WORK "Address" y "Fax number": Descarga o sincroniza solamente los datos de las direcciones WORK y los números de FAX.
- Hoy y en adelante: Descarga o sincroniza solamente los datos de hoy y en adelante.
- Todos: Descarga o sincroniza todos los datos de programas.

## Casilla Connection


Esta casilla le permitirá cambiar los ajustes para el puerto en serie y la contraseña.

- Serial port : Especifique el puerto en serie para conectar la unidad al PC.
- Auto Detect : Haga clic aquí para permitir que el PC detecte el puerto en serie apropiado.

## Utilidades de escritorio

Haga clic con el botón derecho del ratón en el icono de sincronización de la bandeja del sistema Windows®, y luego seleccione "Desktop Utilities..." en el menú.

Utilice las utilidades de escritorio vía la interfaz de gráficos siguiente:

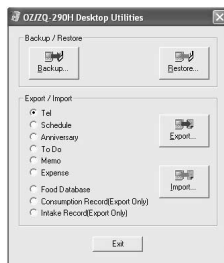

### Copia de seguridad/Restauración

El menú de copia de seguridad/restaurar las utilidades del escritorio le permite hacer copias de seguridad de los datos de la unidad, o restaurarlos en la memoria interna de la unidad.

- Copia de seguridad: Seleccione "Backup..." con el botón, y luego introduzca el nombre deseado del archivo del que va a hacer una copia de seguridad.
- Restauración: Seleccione "Restore..." con el botón, y luego seleccione el nombre deseado del archivo que va a restaurar.

### Exportar/Importar

El menú de exportar/importar de la utilidad del escritorio le permite importar a la unidad datos creados por cada aplicación de PC, o exportar datos de la unidad.

- Exportar: Seleccione el nombre de la aplicación deseada (datos de aplicación, base de datos de alimentos, registro de consumo, o registro de toma) y luego haga clic en "Export...", y a continuación introduzca el nombre del archivo deseado del que usted quiere exportar datos.

- Importar: Seleccione el nombre de la aplicación deseada o la base de datos de alimentos, y luego haga clic en "Import...", y a continuación introduzca el nombre del archivo deseado del que usted quiere importar datos.

### Desinstalación del software del PC

Antes de desinstalar el software del PC, cierre todos los programas.

1. En el panel de control, abra "Add or Remove Programs". En la lista del software instalado, seleccione el software del PC. Y después haga clic en el botón "Change/Remove...".
2. Cuando aparezca la pantalla del programa Install Shield, seleccione "Remove", y después haga clic en "Next".
3. Cuando aparezca el mensaje de verificación, haga clic en el botón "OK". Cuando aparezca la ventana Uninstall para el controlador USB, desconecte el cable USB y haga clic en "Next" a fin de ejecutar el procedimiento de desinstalación.
4. Cuando termine la desinstalación, haga clic en el botón "Finish" para finalizar el proceso de desinstalación.

## Reemplazo de las pilas

### Pilas utilizadas

Tipo	Modelo	Cantidad	Uso
Pila de litio	CR2032	2	Funcionamiento de la unidad e iluminación de fondo

- Asegúrese de escribir cualquier información importante almacenada en la memoria antes de cambiar las pilas.

### Precauciones

Como el uso inapropiado de las pilas puede producir fugas o explosión, observe al pie de la letra las instrucciones siguientes:

- Si el fluido de una pila que tiene fugas entra por accidente en sus ojos podrá causarle una grave lesión. Si le ocurre esto, lave sus ojos con abundante agua limpia y consulte inmediatamente a un médico.
- Si el fluido de una pila que tiene fugas entra en contacto con su piel o ropas, lave inmediatamente la parte afectada con agua limpia.
- Si el Organizador no va a ser utilizado durante un largo periodo de tiempo, para evitar que se estropee, retire las pilas y guárdelo en un lugar seguro.
- No deje las pilas agotadas dentro del Organizador.
- No utilice tipos de pilas diferentes ni pilas parcialmente usadas.
- Inserte la pila con su lado positivo (+) posicionado correctamente.
- No arroje nunca las pilas al fuego porque podrán explotar.
- Guarde las pilas fuera del alcance de los niños.
- Cuando las pilas estén muy descargadas, sáquelas inmediatamente del Organizador para evitar el riesgo de fugas y corrosión en el interior del Organizador.

Debido a que las pilas entregadas con el Organizador han sido instaladas en fábrica, éstas podrán descargarse antes de transcurrir el tiempo de duración especificado.

### Cuando se visualice **BATT**

Reemplace inmediatamente la pila de funcionamiento por otra nueva cuando se visualice "**BATT**".

**El portapila de la pila de funcionamiento se indica con la palabra "For OPERATION" en el compartimiento de las pilas.**

Si la pila tiene poca carga, puede que no suene la alarma, o que la luz de fondo no funcione o funcione durante menos tiempo que el establecido. El uso continuado del Organizador con una pila que tiene poca carga puede alterar o borrar el contenido de la memoria. El contenido de la memoria se puede perder también si la pila se reemplaza incorrectamente o si no se siguen las instrucciones siguientes.

#### Nota:

- Después de reemplazar la pila, compruebe también que la luz de fondo funcione correctamente.

#### Precaución:

- PC Link puede que no esté disponible cuando el nivel de carga de la pila esté bajo.
- El informe de gastos (informe sumario) puede que no esté disponible cuando el nivel de carga de la pila esté bajo.
- Cuando el nivel de carga de la pila esté bajo, puede que en algunos modos no se puedan introducir datos nuevos ni editar datos existentes. Y puede que tampoco se puedan realizar ajustes del reloj u otros ajustes.

### Cuando la luz de fondo no funciona

Cuando la luz de fondo no pueda encenderse (excepto cuando se visualice "**BATT**" o el Organizador esté en el modo PC Link), cambie la pila de la luz de fondo ("For BACKLIGHT & OPERATION").

**El portapila de la pila de la luz de fondo y la operación se indica con la palabra "For BACKLIGHT & OPERATION" en el compartimiento de las pilas.**




## Cambio de las pilas

- Asegúrese de desconectar la alimentación antes de cambiar las pilas.
- No pulse **[ON]** hasta después de completar el procedimiento de cambio de las pilas.
- No retire todas las pilas en el mismo tiempo. Retire e instale las pilas una a la vez.

1. Pulse **[ON]** para desconectar la alimentación.


2. Afloje el tornillo (hacia la izquierda) y retire la cubierta del compartimiento de las pilas ubicada en la parte posterior de la unidad.

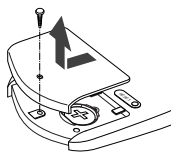

3. Retire una pila usada con un bolígrafo u otro objeto similar.


- No emplee un lápiz mecánico ni un objeto puntiagudo.

4. Instale una pila nueva con el lado positivo (+) hacia arriba.



5. Repita los pasos 3 y 4 para reemplazar ambas pilas en caso de ser necesario.

6. Vuelva a poner la cubierta del compartimiento de las pilas y asegúrela con el tornillo.

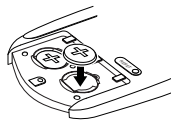

7. La alimentación se conectará a 2 a 3 segundos después de pulsar **[ON]**.

- Si no aparece nada en la pantalla, presione el interruptor RESET y luego pulse **[NEXT]**.

No dé un toque en **[2nd]** y pulse **[ENTER]**. La secuencia se borrará todo el contenido de la memoria.

8. Ajuste el reloj a la hora correcta. (Consulte la página S-3.)

### Precaución:

- Los ajustes del reloj y/u otros ajustes y listines podrán perderse cuando las pilas sean retiradas durante mucho tiempo. Reemplace las pilas lo más rápidamente posible.
- Confirme que todos los ajustes sean los correctos después de cambiar las pilas.



## LIMITED WARRANTY

SHARP ELECTRONICS CORPORATION warrants to the first consumer purchaser that this Sharp brand product (the "Product"), when shipped in its original container, will be free from defective workmanship and materials, and agrees that it will, at its option, either repair the defect or replace the defective Product or part thereof with a new or remanufactured equivalent at no charge to the purchaser for parts or labor for the period(s) set forth below.

This warranty does not apply to any appearance items of the Product nor to the additional excluded item(s) set forth below nor to any Product the exterior of which has been damaged or defaced, which has been subjected to improper voltage or other misuse, abnormal service or handling, or which has been altered or modified in design or construction.

In order to enforce the rights under this limited warranty, the purchaser should follow the steps set forth below and provide proof of purchase to the servicer.

The limited warranty described herein is in addition to whatever implied warranties may be granted to purchasers by law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD(S) FROM THE DATE OF PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein, or to extend the duration of any warranties beyond the time period described herein on behalf of Sharp.

The warranties described herein shall be the sole and exclusive warranties granted by Sharp and shall be the sole and exclusive remedy available to the purchaser. Correction of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of Sharp to the purchaser with respect to the Product, and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise. In no event shall Sharp

be liable, or in any way responsible, for any damages or defects in the Product which were caused by repairs or attempted repairs performed by anyone other than an authorized servicer. Nor shall Sharp be liable or in any way responsible for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

**THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.**

<u>Your Product :</u>	Electronic Organizer
<u>Warranty Period for this Product :</u>	One (1) year parts and labor from date of purchase.
<u>Additional Items Excluded from Warranty Coverage :</u>	Any consumable items such as paper, maintenance cartridge, ink cartridges supplied with the Product or to any equipment or any hardware, software, firmware, fluorescent lamp, power cords, covers, rubber parts, or peripherals other than the Product.
<u>Where to Obtain Service :</u>	At a Sharp Authorized Servicer located in the United States. To find out the location of the nearest Sharp Authorized Servicer, call Sharp toll free at 1-800-BE-SHARP.
<u>What to do to Obtain Service :</u>	Ship (prepaid) or carry in your Product to a Sharp Authorized Servicer. Be sure to have proof of purchase available. If you ship or mail the Product, be sure it is packaged carefully.

TO OBTAIN SUPPLY, ACCESSORY OR PRODUCT INFORMATION, CALL 1-800-BE-SHARP.

**SHARP®**

**SHARP ELECTRONICS CORPORATION**

Sharp Plaza, Mahwah, New Jersey 07430-1163

PRINTED IN CHINA/IMPRESO EN CHINA

04DT (TINSE0747EHZZ)