Getting to know your Alcatel 4073 GS Smart telephone
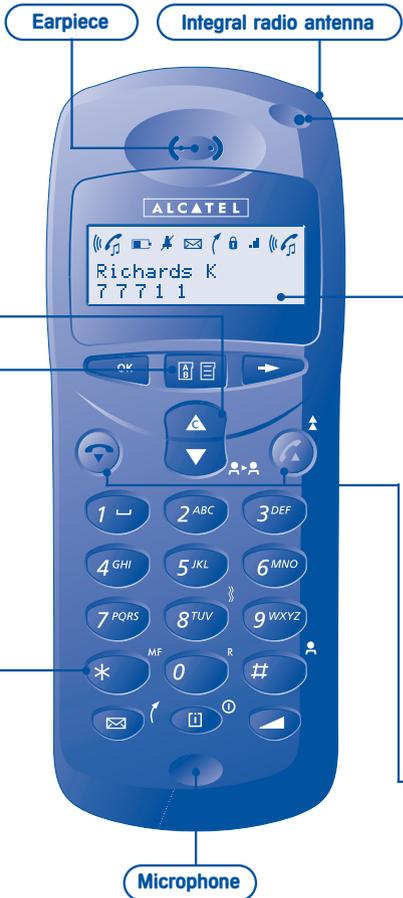
Navigator:

Allows you to move through the menus and to confirm entries:

- ▲ Display previous choice. Erase last character entered.
- ▼ Display next in list. Transfer (long press).
- **OK** Validate entry.
- ➡ Scroll the display pages.

Initiate a call by name/Personal directory

Function keys:

The function is obtained by a long press on the key (2 beeps).

- ✱ MF Sending DTMF codes (long press).
- 🛈 Customizing your telephone.
- 0 R **R:** send timed break (long press).
- # Adjusting your telephone (long press).
- 8 TUV Activating vibrate mode while deactivating the ringer, or vice-versa (long press).
- ✉ Message function. Forward function (long press).
- 🛈 On-Off (long press).
- 📃 **During a call:** adjusting earpiece sound volume.

Earpiece | Integral radio antenna

Display:
```
Richards K
77711
```

Microphone

Green light indicating:

Incoming call: flashes with call ringing if ringer and vibrate mode are deactivated.
Going out of radio coverage: fast flashing.

Display and corresponding icons:

Has 2 lines of 16 alphanumeric characters and 1 line of 8 icons.

Radio reception icon (1):

- Limit of coverage or outside coverage (flashing). Poor reception (light on).
- Reception OK (light on).

Battery icon (1):

- Battery discharged or defective (flashing).
- Battery on charge (flashing).
- Battery fully charged (light on).

Option icons (4):

- 🔒 Lock/unlock.
- ✉ Message.
- Forward.
- Ringer disabled.

Call keys:

- Off hook. Redial function (long press).
- Hang up.

GETTING STARTED

Installing the battery in the telephone

- remove the cover
- connect the battery socket. **Check correct polarity:** red wire towards inside of telephone
- position the two wires under the battery and slide the battery into position
- click the cover into position

Switching on your telephone:

🛈 **long press** ➡ display comes on ➡ ⏳ ➡ **your telephone is switched on**

wait a moment (= 3 sec.)   battery and radio coverage icons light up

Conversely, if the display does not come on, charge the battery.

> 🛈 *If you are outside radio coverage, the radio coverage icon flashes. If "AUTO-INSTALL, System 1 - OK?", is displayed, see paragraph "Registering your telephone in the system".*

Switching off your telephone:

🛈 **long press**

SETTING UP

Selecting language

🛈 **short press** 5 JKL 4 GHI ➡ you have the choice of 4 predefined languages

Selecting language (cont.)

👉 `1 ⌷` or `2 ABC` or `3 DEF` or `4 GHI`

`OK` — validate   📞 — return to idle status

Adjusting the audio functions

When your telephone is in standby, you can customize some of its functions:

👉 `# 👤 long press` ➡ `OK` — you have the choice of various options*:

- 1 - Ringer
- 2 - Vibrate mode
- 3 - Key tone
- 4 - Radio beep

➡ messages related to functions are displayed

* ↕ to select the option

For each function, transition between "active" mode and "inactive" mode (and vice-versa) is obtained by:

👉 `OK`

Example:

Please select: 1 - Ringer on   👉 `OK`   Please select: 1 - Ringer off

➡ Ringer active   ➡ Ringer disabled

When the selection is completed:

👉 📞 and again 📞 — to return to idle status

Adjusting your ringer

You can select your ringer tune (choice of 7) and adjust the volume (3 levels):

👉 `🔂 short press` `5 JKL` `3 DEF` ➡ the tune number and volume level number are displayed

To play the various ringer tunes proposed:

👉 `1 ⌷` several presses

Adjusting ringer volume: Validate:

👉 `2 ABC` several presses   👉 `OK` and 📞 to return to idle status

Selecting your receiver sound volume

during a call 👉 ◢ several presses (1 to 3)

A beep indicates maximum volume selected.
The last adjustement entered is retained for the next call.

USING YOUR TELEPHONE

Making a call

👉 📞 and ⠿ dial ➡ you have a call in progress

or ⠿ ➡ dial directly

Answering a call: To terminate a call:

👉 📞 or remove telephone from charger   👉 📞 hang up

Calling your correspondent by name (company directory)

👉 `📇 short press` ⠿ ➡ correspondent's name is displayed

first letters of correspondent's name

When name is found:

👉 `OK` or 📞

make the call   exit from mode

Calling from your personal directory

👉 `📇 long press` ⠿ — the system automatically dials the number

directory number required (0 to 9)

or 👉 `📇 long press` ↕ `OK` ➡ the system automatically dials the number

to select directory entry

Calling from the common directory

Your terminal hass access to the common directory of short outside numbers:

👉 ⠿

speed dial number (8000-8399)

Redialling the last number dialled (redial)

👉 `◔ long press` ➡ last number dialled is redialled

Requesting automatic callback

Internal extension busy

👉 `5 JKL` ➡ display acknowledges callback

After busy extension, hangs up. Callback recall is received.

👉 ◔

to make the call

Making a second call during a conversation

| during a conversation | ☞ | ⠿ | ➡ | the first call is placed on hold |

dial the second number directly

Recovering the first call:

| ☞ | ➡ **long press** | ➡ | the first call is recovered the second call is automatically placed on hold |

place the second call on hold

If you make a mistake, hang up 🔘 . Your telephone rings and you recover your first call by pressing 🔘

Answering a second call during a conversation

| you are in conversation and you hear a repeated beep |)((☎ ⇒ | Richards K | ☞ | **OK** **long press** |

caller's name for 3 seconds

| ⇒ | the first call is placed on hold |

Recovering the first call:

| ☞ | ➡ **long press** | ➡ | identical to previous case |

place the second call on hold

Transferring a call

To transfer your call to another number:

| during a conversation | ☞ | ⠿ | ➡ | your call is placed on hold | 🔽☎ **long press** | or | ☎ |

destination number

long press

if allowed by your telephone configuration

Switching between calls (Broker call)

During a call, a second call is on hold. To switch between the two calls:

| ☞ | ➡ **long press** | ⇒ | the other call is placed on hold |

Three-way conference with internal and/or external correspondents (conference)

During a conversation, another call is on hold:

For a three-way conference:

| ☞ | ▲ **long press** | or | ⠿ |

"Conference" function code

To hang up calls:

| ☎ |

Cancelling the conference and recovering your first call:

| ☞ | ▲ **long press** | or | ⠿ | ⇒ | the second call is placed on hold |

"Conference" function code

Programming your personal directory

Your directory can contain up to 10 numbers, which you can enter through the numeric keypad (keys 0 to 9).

| ☞ | 📇 **long press** | 📱 **short press** | ▲▼ | **OK** | ⇒ | 1 or 2 |

select a number 0 to 9

1 - Programming a number (first time)

| Name | **OK** | ⇒ | Number | **OK** | ☎ |

the current value is displayed (max. 6 letters per entry)

validate

enter telephone number

validate

quit

Programming your personal directory (cont.)

2 - Modifying a number

| 📇 **long press** | ⠿ | **OK** |

erase name

enter new name*

validate

| 📇 **long press** | ⠿ | **OK** | ☎ |

erase number

enter new number*

validate

quit

*Example: Enter a name.

| 2 ABC | press once for "A", press twice for "B", press three times for "C". | * |

Wait a short period and cursor would jump to a next position.

* Use the ▲ keys to back space.

Charging your telephone battery

Connect the charger to a power supply (AC/DC transformer plugged into mains). Install the telephone in the charging holder and observe the battery icon.

Battery charge low (less than 5 %):

🔋 "battery low" icon is displayed.

Battery charge at least 50 %:

🔋 "battery hald charged" icon is displayed.

🔋 and flashes during the charge.

Battery charge OK:

🔋 "batterie charge OK" icon is displayed.

Install the telephone in its charging holder regularly.

Charging holder

The holder is an integral part of the charger used with this telephone. It is a convenient means of stowing the telephone while simultaneously charging the battery. The telephone can be "On" or "Off".

The holder comprises:
1. a position for the telephone,
2. a mains power connection cable, through and AC/DC transformer.
The mains power socket used must be close to the charger/holder and easily accessible, so that it can be used as an "on/off" facility.
The level of charge is shown on the telephone display (battery icon).

Registering your telephone in the system

To operate correctly, any DECT telephone needs to registered in at least one system (subscription operation).

When using your 4073 GS Smart telephone for the first time, prepare your system for registration (see Office System installation guide).

When the system is ready:

👉 [i] **long press**

switch the telephone **"On"**

👉 [#] **long press** [2 ABC] [OK]   *option*

"Install-Sys 1" is displayed → [▲▼] [OK] → "Code AC" is displayed

select system (1 to 3)

Two possibilities for "AC Code?"

■ **if no system code:**

[OK] → "Subscription running ..." is displayed

■ **if system code:**

[keypad] [OK] → "Subscription running ..." is displayed

enter code

Subscription accepted:

⏳ "Subscription accepted" and the radio coverage icon are displayed → your telephone is now operational in GAP mode

max. 2 minutes

Subscription failure:

"Subscription accepted" is not displayed **or** "Subscription rejeted" is displayed → [i] **long press** and repeat the procedure

This may be because your system has not been prepared for the registration. Consult your installation technician.

Your telephone provides access to a number of functions, depending on your system version and configuration.

See the installation guide or contact your installation technician.

Case

Various models of carrying case are available.
These cases provide effective protection against impact (being dropped), dust and liquids.
Carrying cases are strongly recommended in severe environments.
For the characteristics of each model, contact your installation technician.

⚠️ *Remove the belt clip from your telephone to facilitate case insertion and removal.*

Table of codes provided by Alcatel Office

Function	Default code	Your code
Answer general bell	*1	
Answer paging	#95	
Automatic callback if terminal busy	5	
Broker call	2	
Cancel all diversions	*00	
Cancel automatic callback	#99	
Common directory numbers	8000 to 8399	
Conference	3	
Divert group calls	#06	
Divert if busy	*02	
Divert to paging	*04	
Do not disturb	*05	
DTMF End to End	##	
Follow me diversion	*06	
Group call pick-up	*6	
Hunting group in	*4	
Hunting group out	#4	
Immediate diversion	*01	
Intrude on a call	4	
Locking/Unlocking	*3	
Paging	7	
Park/retrieve parked call	*7	
Protect a call	*98	
Redial last number	#1	
Selective diversion		
Terminal call pick-up	#6	
Text message (call back later)	*91	

QUICK GUIDE

(AUS)

ALCATEL

4073 GS Smart

mobile telephone

DECT DIGITAL