

# Continental<sup>®</sup>

E l e c t r i c

## INSTRUCTION MANUAL



## TOASTER OVEN

**MODEL:  
CE23531**

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against risk of electrical shock, do not immerse cord, plug, or any non-removable parts of this oven in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment. Or, call the appropriate toll-free number listed on the cover of this manual.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electrical burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquid.
- Turn all controls to OFF before inserting or removing plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in this appliance, as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material including curtains, draperies, walls and the like, when in operation. Do not store any item on top of unit when in operation.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts resulting in a risk of electric shock.
- Extreme caution should be used when using containers constructed of other than metal or glass.
- Do not store any material, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic wrap, and the like.
- Do not cover crumb tray or any parts of the oven with metal foil. This will cause overheating of the oven.
- To stop toasting, broiling or baking turn the controls to OFF.
- Use extreme caution when removing tray or disposing of hot grease.

## SAVE THESE INSTRUCTIONS.

## POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## ELECTRICAL CORD

- a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used,
  - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance,
  - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
  - 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

# OPERATING INSTRUCTIONS


The Toaster Oven is equipped with all the options of a full size oven in a counter top appliance; it toasts and bakes.

**NOTE:** Initial start up operation may result in minimal smell and smoke (about 15 min.). This is normal. It is due to the protective substance on heating elements which protects them from salt effects during shipping from factory.

## BROILING

1. Use the cooking book for cooking times.
2. Turn the temperature dial to Broil. The oven does not need to be preheated for broiling.

**Important:** You must set the timer or select Stay On for the oven to function.

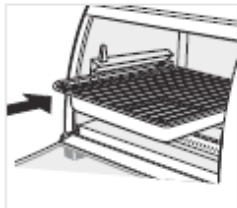

3. Set the timer to desired number of minutes including preheat time or to Stay On, if you want to control cooking time or need to cook your food longer than 60 minutes.
4. Open oven door and using the bake pan as a drip tray, insert it under the slide rack on the rack support rails
5. Place food on the slide rack/broiling rack.

Note: Be sure the top edge of the food or container is at least 1" (2.54 cm) away from the upper heating elements.

**Important:** Food should not extend beyond the edges of the multi-use pan to avoid drippings from falling onto the heating elements.

6. The first time you broil an item in this oven, cook according to recipe or package instructions and check at minimum time to see if it is done.
7. When finished broiling, the signal bell sounds and the On indicator light goes off.
8. Using an oven mitt or pot holder, slide out broiling rack together with bake pan to remove food.

## TOASTING

1. Rotate the Temperature Dial clockwise to “toast”.  
Open the Oven Door and place the bread on the Wire Rack up to 4 slices.

**NOTE** – Remember to first remove the Multi – use pan. Your new Toaster Oven unit has a unique Multi – use pan which slides into special grooves beneath the wire rack.. This pan catches the drippings when baking but must be removed when toasting to allow for even toasting.

2. The Timer Dial is the on/off Switch.  
Choose your crust preference by adjusting the Timer Dial clockwise to select light, medium or dark, To test the toasting of your type of bread, we suggest to start at medium setting as bread varies according to humidity, thickness and texture, Each type of bread will toast differently according to these properties.

**IMPORTANT:** When choosing toast color (light, medium, dark,) Always rotate timer to over “dark” setting and then Rotate back to “dark”, “medium” or “light”. This will ensure that the timer operates correctly and safely.

When the toast cycle is finished the bell will ring and the electrical power is automatically turned off.

To stop the cycle at any time, turn the Timer counter – clockwise to “off” position and the bell will ring.

4 slices will be lighter than 1 slice – adjust Timer accordingly.

Place 1 slice of bread in center of wire rack, 4 slices side by side.

## BAKING

1. Slide in the Multi – Pan under the wire rack.
2. place food on the wire rack.

**NOTE** – We always suggest to preheat oven 5 minutes at this setting before place the food.

3. Rotate the Temperature Dial clockwise to desired temperature
4. The Timer Dial is the on/off switch

After rotate the Temperature Dial to your desired temperature, then you must select the Timer Dial with the following options.

- a. For short time baking rotate the Timer Dial clockwise (up to 60 minutes ),  
At the sound of the bell the bake function will off automatically.

OR

- b. For longer time baking, rotate the Time Dial **counter – clockwise** to

“oven on” setting. The cooking will continue until the Timer Dial is manually turned to “off” position and the bell will sound.

**NOTE** – Always monitor the food at this setting to ensure that you are not overcooking.

**IMPORTANT:** When setting the Timer Dial for less than 5 minutes, always rotate timer to over 5 minutes and then rotate back to your chosen time. This will ensure a safe and accurate timer setting.

## DEFROSTING

1. Make sure that all plastic and paper wrappings are removed.
2. Slide in the Multi – use Pan under the wire rack. Place the food on the top of the wire rack in the oven. Close the oven door.
3. Rotate the Temperature Dial Clockwise to 160<sup>o</sup> F position.
4. Rotate the Timer Dial to minutes setting as desired. The unit will turn itself off automatically.
5. Do not preheat. Cook until thawed. Timing varies according to food type and size.

NOTE – To avoid contamination, thawed food should be refrigerated or fully cooked.

## SLOW COOK

1. Slide in the Multi – use Pan under the wire rack. Place the food on the wire rack and close the oven door. For food with liquids you may choose to place food directly on Multi – use Pan and place on top of the wire rack.
2. Rotate the Temperature Dial clockwise between 250<sup>o</sup>F- 350<sup>o</sup>F position.
3. Rotate the Timer Dial counter – clockwise to “oven on” position. The oven will remain on until the Timer Dial is manually rotated to “off” position. This setting is useful for pot roasts etc requiring long cooking time.

## USEFUL TIPS

1. Condensation will appear on the oven door for some foods and then disappear. This is normal.
2. Cook food immediately after defrosting.
3. Frozen foods and thick meat will take longer to cook.
4. When defrosting, do not place food in layers – place as a single layer on Multi – use pan.

5. Avoid opening the Oven Door too frequently to prevent heat loss.
6. When toasting, frozen bread or many slices should be at a darker setting than 1 regular slice.
7. When baking, smoke will likely appear. Removing excess fat prior to baking can reduce this. Always use Multi – use pan.

## CARE AND CLEANING

1. Before using your Toaster Oven, wash all of the accessories – Wire Rack and Multi – use pan, in hot water with detergent or soap.
2. Initial start up operation may result in minimal smell and smoke (about 15 min.) This is normal. It is due to the protective substance on heating elements which protects them from salt effects during shipping from factory.
3. Always make surer that the appliance is unplugged and allow to cool before cleaning.
4. The Wire Rack can be removed for easy cleaning.  
Open the Oven Door and tilt upward slightly and pull the Wire Rack straight toward you until it slides out completely. Once the rack is removed, clean the interior with a damp cloth.

To replace the Wire Rack, open oven Door and tilt upward slightly and slide the rack into the two rack grooves at either side of the oven chamber and push straight to the back of the oven chamber. Ensure that the automatic hooks are in correct position to push in the Wire Rack towards the rear of oven chamber. The exterior may be wiped with a damp cloth.

**REMEMBER**, do not place the entire unit in water or any liquid.

**DO NOT WIPE THE HEATING ELEMENTS** – They are self cleaning!

5. Cleaning the Bottom of the Crumb Tray  
This appliance has a drop open crumb tray at the bottom of the baking chamber. First unplug this appliance and allow to cool.  
To clean out the crumbs, simply tilt the unit backwards and push the Crumb Tray Slide Fastener towards the rear, down allow to drop on counter top. Wipe interior of crumb tray with a damp cloth. After cleaning, slide the "Crumb Tray Slide Fasteners " into the tabs to lock the crumb tray.

Washing of the interior of the crumb tray is accomplished by pacing unit on its back side and allow crumb tray to fall forward for easy cleaning.

**DO NOT** use the dishwasher to clean any of the accessories which are included with this product.

**DO NOT** use any abrasive cleaning products.

**CLEAN** accessories with a soft cloth in hot water with liquid detergent or soap.

After cleaning. Close the access panel and check that it is locked securely into position.

**CAUTION**

*TO PREVENT COUNTERTOP FROM BEING DAMAGED, THE TOASTER OVEN MUST BE OPERATED WITH THE CRUMB TRAY IN PLACE, SECURELY CLOSED AND CLEANED OF EXCESS FOOD.*

*NEVER OPERATE YOUR TOASTER OVEN WITH THE OVEN DOOR OPEN.*

*NEVER PUT THE MULTI – USE PAN (OR ANY OTHER ACCESSORY) DIRECTLY ON THE TOP OF THE LOWER HEATING ELEMENTS.*

*THE EDGES OF THE METAL GUARD COVERING THE LOWER HEATING ELEMENT SHOULD NEVER BE TOUCHED DURING CLEANING. ALWAYS USE A SOFT BRUSH OR OTHER UTENSIL TO PREVENT INJURY.*

**TAKE CARE**

Always leave at least 30mm between the top of food and the top heating elements.

Remove all plastic and paper from food, TV Dinners, etc before cooking.

Always use oven mitts to remove multi – use pan after cooking.

**RECIPE GUIDE**

Remember in Bake function only, preheat oven 5 minutes.

Always use oven mitts to remove Multi – use pan after cooking.

<b>FOOD GROUP</b>	<b>QUANTITY</b>	<b>INSTRUCTIONS</b>
Frozen pizza	2-4 slices	Bake on multi – use pan at 450°F for 15-20 minutes.
Bacon	4-6 strips	Bake on multi – use pan at 450°F Use Timer set to 7-12 minutes. According to taste preference.
Hamburgers	Up to 4 pcs (about 1/4 lb ea.)	Bake on multi – use pan at 450°F for 20 minutes.
Leftovers	Fill Multi – use	Bake at 250°F-375°F W/timer at 15 minutes. Continue according to taste
Leftovers (frozen)	Fill Multi – use pan – 1 layer only	Bake at “defrost” for 10-15 minutes. Then select temperature according to taste preference
Chicken	Fill Multi – use pan – 1 layer only	Bake at 450°F for 35 minutes or until juices run clear with the “oven on” setting.
TV Dinners	Place foil container Directly on wire rack	Follow package directions

**NOTE-**The Recipe Guide is for suggestion only. Temperatures may vary depending on the size and consistency of the food  
Frozen food will take longer to cook than thawed food.

<b>TROUBLESHOOTING GUIDE</b>	
<b>Problem</b>	<b>Solution</b>
Unit smokes during bake function	<p>Initial start up operation may result in minimal smell and smoke (about 15 min.). This is normal. It is due to the protective substance on heating. Elements which protects them from salt effects during shipping from factory.</p> <p>Smoke in baking functions often means the multi – use pan or Interior is dirty.</p> <p>Smoke almost always appears in baking and is normal. Cut off excess fat prior to baking to reduce smoke</p> <p>Stop using appliance if smoke source is the power cord. Unplug.</p>
The wire rack is stuck and oven	<p>Remove wire rack and clean inside the door does not operate smoothly Wire Rack grooves inside oven chamber. Also clean inside of Crumb tray. Check that hooks on oven door are properly aligned into wire rack.</p>
Toast black and smoking or too light	<p>Choose a lighter or darker crust setting</p>

**QUICK START GUIDE**  
**PLEASE READ THE IMPORTANT SAFEGUARDS FIRST!**

The toaster Oven is equipped with all the options of a full – size oven in a countertop appliance; appliance; it toasts and bakes, Please follow these step instructions.



# Continental<sup>®</sup>

E l e c t r i c

## MANUAL DE INSTRUCCIONES



**HORNO TOSTADOR**

**MODEL:  
CE23531**

# INSTRUCCIONES IMPORTANTES DE SEGURIDAD

Cuando se utilizan aparatos eléctricos, se debe respetar ciertas reglas de seguridad, incluyendo las siguientes:

- Por favor lea todas las instrucciones.
- No toque las superficies calientes. Utilice las asas o las perillas.
- A fin de protegerse contra un choque eléctrico, no sumerja el cable, el enchufe ni ninguna pieza no removible del aparato.
- Se debe tomar mucha precaución cuando el producto se utilice por o en la presencia de menores de edad.
- Desconecte el aparato de la toma de corriente cuando no esté en uso y antes de limpiarlo. Espere que el aparato se enfríe antes de instalar o retirar los accesorios.
- No se debe utilizar ningún aparato eléctrico que tenga el cable o el enchufe averiado, que presente un problema de funcionamiento o que esté dañado. Devuelva el aparato al centro de servicio autorizado más cercano para que lo examinen, reparen o ajusten. También puede llamar gratis al número apropiado que aparece en la cubierta de este manual.
- El uso de accesorios no recomendados por el fabricante presenta el riesgo de lesiones personales.
- No utilice el aparato a la intemperie.
- No permita que el cable cuelgue del borde de la mesa o del mostrador ni que entre en contacto con superficies calientes.
- No coloque el tostador sobre ni cerca de una hornilla de gas o eléctrica, ni cerca de un horno caliente.
- Se debe ejercer mucha prudencia al transportar un aparato con aceite u otros líquidos calientes.
- Ajuste todos los controles a la posición de apagado (OFF) antes de enchufar o desconectar el aparato.
- Este aparato se debe utilizar solamente con el fin previsto.
- A fin de evitar el riesgo de incendio o choque eléctrico, jamás introduzca alimentos demasiado grandes ni utensilios de metal adentro del aparato.
- Existe el riesgo de incendio si el aparato permanece cubierto mientras se encuentra en funcionamiento o si éste llegase a entrar en contacto con cualquier material inflamable, incluyendo las cortinas y las paredes. Asegúrese de no colocar nada sobre el aparato mientras se encuentre en uso.
- No utilice almohadillas de fibras metálicas para limpiar el aparato. Las fibras metálicas podrían entrar en contacto con las piezas eléctricas del aparato, resultando en el riesgo de un choque eléctrico.
- Tenga mucho cuidado al utilizar recipientes que no sean de metal ni de vidrio.
- Cuando este aparato no se encuentre en funcionamiento no se debe almacenar nada aparte de los accesorios recomendados por el fabricante.
- No introduzca los siguientes materiales en el aparato: papel, cartón, envolturas plásticas ni materiales semejantes.

## ENCHUFE POLARIZADO

Este aparato cuenta con un enchufe polarizado (un contacto es más ancho que el otro). A fin de reducir el riesgo de un choque eléctrico, este enchufe encaja en una toma de corriente polarizada en un solo sentido. Si el enchufe no entra en la toma de corriente, invértalo y si aun así no encaja, consulte con un electricista. Por favor no trate de alterar esta medida de seguridad

## CABLE ELÉCTRICO

- El producto debe proporcionarse con un cable corto (o uno desmontable) para reducir el riesgo de enredarse o de tropezar con un cable largo.
- Se encuentran disponibles cables desmontables o de extensión más largos, que es posible utilizar si se emplea el cuidado debido.
- Si se utiliza un cable desmontable o de extensión,
  - El voltaje eléctrico del cable desmontable o del cable de extensión debe ser, como mínimo, igual al del voltaje del aparato,
  - Si el aparato es del tipo que va conectado a tierra, el cable de extensión deberá ser un cable de tres alambres conectado a tierra.
  - El cable más largo debe acomodarse de modo que no cuelgue del mostrador o de la mesa, para evitar que un niño tire del mismo o que alguien se tropiece.

## INSTRUCCIONES DE FUNCIONAMIENTO

Este horno viene equipado con todas las funciones de un horno tamaño normal de uso convencional. Tuesta y hornea.

**NOTA:** El primer uso podría ocasionar la emisión de un cierto olor y humo (alrededor de 15 minutos). Esto es normal y se debe a las sustancias protectoras sobre las resistencias eléctricas que las protegen de los efectos del salitre durante el envío desde la fábrica.


## GUARDE ESTAS INSTRUCCIONES

### Para Asar

- Consulte el tiempo de cocción recomendado en la guía de asar.
- Gire el control selector de temperatura a la posición de asar (BROIL). No se requiere precalentar el horno para asar.

**Importante:** Para activar el horno, se requiere ajustar el minuterero a una temperatura determinada o seleccionar la posición de funcionamiento continuo (Stay On).

- Ajuste el minuterero al tiempo deseado, incluyendo el período de precalentamiento o seleccione la posición de funcionamiento continuo (Stay On), si desea controlar el tiempo de cocción o si los alimentos requieren más de 60 minutos de cocción.

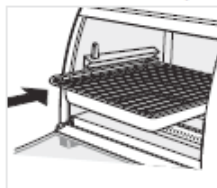

- Abra la puerta del horno y utilice la bandeja de horneado como bandeja de goteo, instalándola debajo de la parrilla corredera, sobre los carriles de descanso

- Coloque los alimentos sobre la parrilla corredera/parrilla de asar.

**Nota:** Asegúrese de que haya un espacio mínimo de 2,54 cm (1") entre los alimentos o el borde superior del recipiente y los elementos calefactores.

**Importante:** Los alimentos no deben de sobrepasar los bordes de la bandeja de horneado/bandeja de goteo, a fin de evitar exceso de goteo sobre los elementos calefactores.

- La primera vez que prepare algo en este horno, cocine según la receta o las instrucciones del paquete y supervise los alimentos al cumplirse el tiempo mínimo de cocción.
- Al finalizar el ciclo de cocción, suena el timbre de aviso y la luz indicadora de funcionamiento (ON) se apaga.
- Abra la puerta del horno y con la ayuda de un protector o guante de cocina, deslice la parrilla corredera hacia afuera para retirar los alimentos.

## LISTA DE COMPONENTES DEL HORNO

- |    |                        |     |                     |
|----|------------------------|-----|---------------------|
| 1. | Perilla de Tiempo      | 9.  | Manija de la puerta |
| 2. | Perilla de Temperatura | 10. | Parrilla Inferior   |
| 3. | Manija de la puerta    | 11. | Cuerpo              |
| 4. | Parrilla Superior      | 12. | Indicador de poder  |
| 5. | Puerta                 | 13. | Selector            |
| 6. | Bandeja                | 14. | Punto de soporte    |
| 7. | Brazo                  | 15. | Manija secundaria   |
| 8. | Patas de sostenimiento |     |                     |

## INFORMACIÓN TÉCNICA

Voltaje	120 V
Poder	1300 W
Contador	60 min.
Medidas	385x232x230 mm
Peso	3.355 Kg.
Accesorios	1 Bandeja; 1 Brazo; 1 Manija

**NOTA:** Cuando utilice este aparato la primera vez puede notar un olor particular a humo o incluso a quemado, cosa que es totalmente normal ya que las parrillas y los filamentos de calor no han sido usados nunca antes. Este olor es causado por una película protectora que llevan los utensilios dentro del horno, que los protege de suciedad e infección durante la manipulación de la fábrica a su hogar.

## PARA TOSTAR

- Rote la perilla de temperatura a la posición "TOSTADO". Abra la puerta y coloque el pan dentro del horno sobre las parrillas hasta cuatro pedazos de pan. Recuerde que debe retirar la bandeja multiusos primero. El pan debe ser colocado justo sobre las parrillas.
  - El Reloj de tiempo de cocción es el botón de Encendido/Apagado. Escoja su temperatura y nivel de tostado ajustando la perilla a Light (bajo), MED (medio), DARK (Alto). Para probar o ensayar cual de los niveles es el mas apropiado recomendamos iniciar en la posición de MED, ya que el punto del pan varia de acuerdo a la textura, la humedad y el aspecto.
1. Cuando el ciclo haya terminado, usted escuchara un timbre y el p o d e r eléctrico se apagara automáticamente.
  2. Para parar el ciclo en cualquier momento, gire la perilla a la posición Apagado. Escuchara un timbre.
  3. 4 Tajadas de pan se tostaran mas suave que una sola. Aplique la ley de la proporción.

4. Coloque una sola tajada en el centro o alinee las cuatro tajadas h a c i a los lados.

## HORNEANDO

- Coloque los alimentos sobre la bandeja multiusos y luego coloque la bandeja en la parte superior de las rejillas. Cierre la puerta del horno.
- Precaliente el horno siempre **ANTES DE HORNEAR**. Cuando desee dar inicio al ciclo de horneado, solamente gire la perilla de temperatura al punto deseado.
- El botón de Apagado/Encendido es el mismo que aplica al cronometro. De inicio al proceso de horneado que desea completar y manipule los tiempos de cocción, girando la perilla a las temperaturas o al tiempo deseado.

## DESCONGELAR

- Asegúrese de que todas las envolturas de los alimentos como plásticos, cartones, aluminios, etc. sean removidos antes de introducirlos al horno. Cuando haya hecho lo anteriormente indicado, coloque los alimentos sobre la bandeja multiusos e introdúzcala en el horno, cierre la puerta.
- Rote la perilla de temperatura a la posición de 160° F.
- Rote la perilla de tiempo a la posición deseada.
- No **PRECALIENTE**, Cocine hasta que el hielo haya sido derretido. El tiempo varia de acuerdo a la comida y al tamaño del alimento. Recuerde que para prevenir la contaminación, la comida descongelada debe ser **CONSUMIDA EL TIEMPO EN QUE SE DESCONGELO, NO DEBE SER REFRIGERADA O GUARDADA PARA DESPUÉS. PUEDE SER MORTAL.**

## COCCIÓN LENTA

- Coloque la comida en la bandeja de cocción multiusos. Introduzca la bandeja en el horno y luego cierre la puerta.
- Rota la perilla de temperatura a la posición de 250° F a 350° F.
- Rote la perilla de tiempo a la posición de **ENCENDIDO**. EL horno permanecerá encendido hasta que la perilla sea girada a la posición de **APAGADO**. Esta función del horno es recomendada para cocinar alimentos que requieren de un proceso de cocción lento, constante y uniforme.

## NOTAS DE AYUDA

- Niveles de condensación aparecerán en la puerta del horno ya que algunas comidas generan humedad. Esto es normal.
- Cocine la comida inmediatamente **DESPUÉS DE DESCONGELAR**.

- La comidas congeladas y gruesas tomaran mas tiempo para enfriarse y para cocinarse.
- No abra la puerta del horno frecuentemente ya que el calor se perderá.
- Cuando tueste pan o harinas, e introduzca mas de una tajada de pan o harina, usted debe considerar un nivel mas alto de temperatura dada la cantidad de alimento.
- Cuando dore, humo saldrá de la puerta de manera considerable. Asegúrese de remover la grasa después de cocinar.

## **CUIDADO Y MANTENIMIENTO**

- Antes de utilizar su horno tostador, lave todos los accesorios. Utilice solamente jabón de utensilios de cocina.
- El primer uso de su horno, causara que la película que recubre las partes anexas y que protege de infecciones y regeneramiento durante el transporte del horno de la fabrica a su casa, se quemé. El olor a quemado y desagradable la primera vez es **TOTALMENTE NORMAL**.
- Siempre deje que el horno se enfríe y que pierda los niveles de calor excesivo antes de limpiarlo todo o parcialmente cualquiera de sus partes.
- La parrilla de cocción puede ser removida para limpiarla de manera fácil y asegurarse que ningún tipo de exceso de grasa se acumule en las partes principales de la misma. Nunca limpie los elementos del horno que se encargan de calentar Ellos poseen un sistema de auto limpieza.
- Limpie la parte inferior de la bandeja o receptáculo de moronas.
- Este aparato posee una bandeja o receptáculo de morones, como se indico en el punto anterior usted debe limpiarla, este receptáculo esta ubicado en la parte inferior del horno.
- Limpie dentro del horno cuando haya concluido ciclos de cocción de cualquier tipo de alimento graso o no graso.
- **NUNCA UTILICE MATERIALES ABRASIVOS PARA LIMPIAR EL HORNO.**
- **LIMPIE** los accesorios con una tela suave y húmeda en jabón.
- Después de limpiar, cierre el panel y asegúrese de que este correctamente cerrado.

## **PRECAUCIÓN**

- Utilice siempre el horno tostador con **TODOS SUS ACCESORIOS EN LUGAR CORRESPONDIENTE DE ACUERDO A SU USO.**
- **NUNCA OPERE EL HORNO CON LA PUERTA ABIERTA.**
- **NUNCA COLOQUE** la bandeja o parrillas directamente sobre las rejillas de calor o anexos de calentamiento del horno, esto causara que los alimentos se quemen y se estropee su cocción logrando así el daño permanente del horno.

- Un cable de poder pequeño es proveído junto con el horno. En caso de que uno mas largo sea requerido, cómprelo en un proveedor autorizado de cables eléctricos y asegúrese que el cable coincida con el voltaje de su horno. **NUNCA DEJE QUE EL CABLE CUELGUE DE LAS SUPERFICIE DONDE EL HORNO ESTA APOYADO.**

## **GUIDE DE SU HORNO TOSTADOR**

- Deje un espacio considerable entre las paredes y superficies de contacto con el horno para que haya la ventilación necesaria.
- Límpielo al menos cada dos veces que lo use.
- Remueva siempre todo tipo de materiales no comestibles.
- Siempre utilice los utensilios proveídos para retirar las parrillas o las bandejas del horno y prevenir quemaduras o arruinamiento del horno.

**REMEMBER** – The “Timer Dial” is the on/off switch for your choice of Toast and Bake functions.

<b>BAKE</b>	<b>TOAST</b>
<p>1. Select the Temperature Dial clockwise to any desired temperature.</p> <p>2. Turn Timer Dial counter-clockwise to “oven on” position and when finished. Manually rotate Timer Dial clockwise to the “off” position.</p> <p><b>OR</b></p> <p>Use Timer Dial up to 15 minutes – unit will automatically shut – off.</p> <p>IMPORTANT: When setting the Time Dial for less than 5 minutes, always rotate timer to over 5 minutes and then rotate back to your chosen time. This will ensure a safe and accurate timer setting.</p>	<p>1. Select the Temperature Dial clockwise to “toast”.</p> <p>2. Turn the Timer Dial clockwise to light, medium or dark setting.</p> <p>Remember to use only up to the “dark” of The Timer, otherwise the toast will burn.</p> <p>No need to select temperature as toast” is automatically preset to maximum Temperature.</p> <p>IMPORTANT: When choosing toast color (light, medium, dark) always rotate timer to over “dark” Setting and then rotate back to “dark”, “medium” or “light”. This will ensure that the timer operates correctly and safely.</p>