



PermaLife™

AIR PURIFIER



ENGLISH
See page 1

FRANÇAIS
Consulter la page 19






Model 37750

Replacement Filter Information

<u>Model</u>	<u>Pre-Filter</u>
37750	30901

www.hunterfan.com

Table of Contents

Safety Instructions	3
Introduction	3
 Description of Air Filtration System	
How the Air Purifier Works	4
Air Purifier Components	4
Display and Control Keys	5
 Operation	
Initial Operation	6
Filter Life Counters	8
Locking/Unlocking the Keypad	8
Resetting the Air Purifier	9
Using the Ionizer	9
Controlling the Backlight	9
 Air Purifier Maintenance	
Cleaning Your Air Purifier	10
Changing the Pre-Filter	10
Cleaning the Filter	11
Obtaining Replacement Filters	13
 Troubleshooting	
Problem and Solutions	14
Technical Support	14
 Warranty Information	15

SAFETY INSTRUCTIONS

IMPORTANT!

READ ALL INSTRUCTIONS BEFORE USING THIS AIR PURIFIER.

1. This air purifier is designed for use on a flat level floor and may not work properly on an uneven floor. **ALWAYS** place the air purifier on a firm level floor. **ALWAYS** place the air purifier at least six (6) inches away from walls and heat sources such as stoves, radiators, or heaters.
2. Place the air purifier in an area that is out of the reach of children.
3. Before using the air purifier, extend the cord and inspect for any signs of damage. **DO NOT** use the product if the cord has been damaged.
4. This product has a polarized plug (one blade is wider than the other) as a safety feature. This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If the plug still does not fit, contact a qualified electrician. **DO NOT** attempt to defeat or override this safety feature.
5. **ALWAYS UNPLUG** the air purifier while it is being cleaned.
6. **DO NOT** move or tilt the air purifier while it is in operation. Turn off and unplug before moving.
7. **DO NOT** immerse the air purifier in water at any time because permanent damage will occur. To properly clean your air purifier, follow the instructions in the Maintenance section of this manual (pg. 10).

READ AND SAVE ALL INSTRUCTIONS.

Introduction

Thank you for purchasing the PermaLife™ Air Purifier from Hunter Fan Company. You have purchased our latest development in portable air purification which has been designed to improve the quality of the air that you breathe. The following innovative features are included in your Hunter Air Purifier.

- **High Particulate Efficiency:** The cleanable filter will remove 99.5% of 0.5 micron particles from the air that passes through the filter.
- **Odor Removal:** The activated carbon pre-filter helps remove odors such as cooking, smoke, and pet smells from the air. It also traps lint, hair, and other large particles to help extend the life and performance of the cleanable filter.
- **Ionizer:** The ionizer improves the quality of air in the room by releasing negative ions into the air that attract positively charged dust, smoke, and pollen particles.
- **Quiet:** The air purifier has been designed to operate quietly and efficiently. You can choose among three speeds to best meet your needs at different times.
- **Filter Counters:** Filter maintenance is critical to the performance of the air purifier. To help you determine when to change or clean the pre-filter and cleanable filter, the unit has built in life counters that keep track of the life remaining of each filter.
- **NiteGlo™ Light:** Your air purifier display has a backlight that is continuously lit as long as there is power to the unit. You can choose to turn the backlight off or on.



Description of Air Filtration System

How the PermaLife™ Air Purifier System Works

As the air is pulled into the purifier, the activated carbon pre-filter absorbs odors and catches large particles. Then, the air travels through the PermaLife™ Cleanable Filtration System where the smaller particles are collected. Then, the ionizer releases negative ions into the air that attract positively charged dust, smoke, and pollen particles. Finally, the clean purified air is released back into the room.

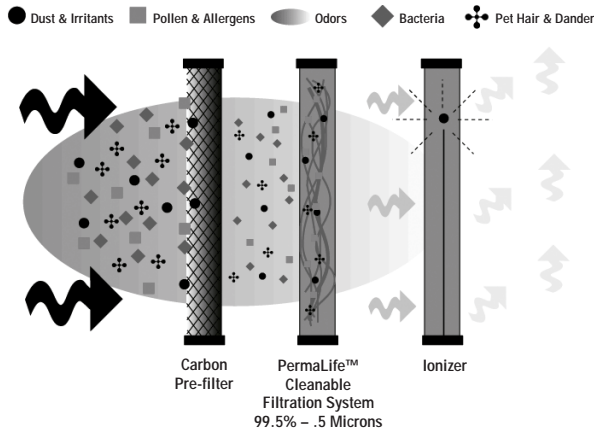


Fig. 1 - Illustration of the Air Filtration System

Air Purifier Components

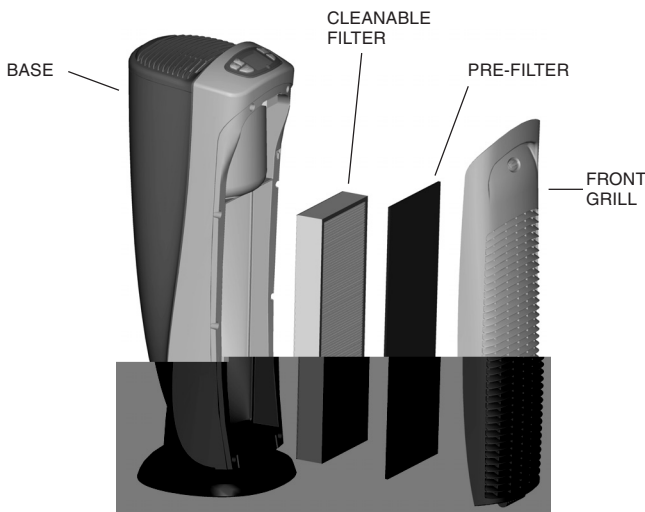


Fig. 2 - Air Purifier Components

Description of Air Filtration System



Display and Control Keys

The display and control keys allow for easy operation of the air purifier.



UP/DOWN KEYS: Adjusts the blower speed and turns the unit on and off.



PRE-FILTER RESET: Resets the Carbon Pre-Filter Life Counter.



FILTER RESET: Resets the Cleanable Filter Life Counter.



IONIZER KEY: Turns the ionizer on and off.

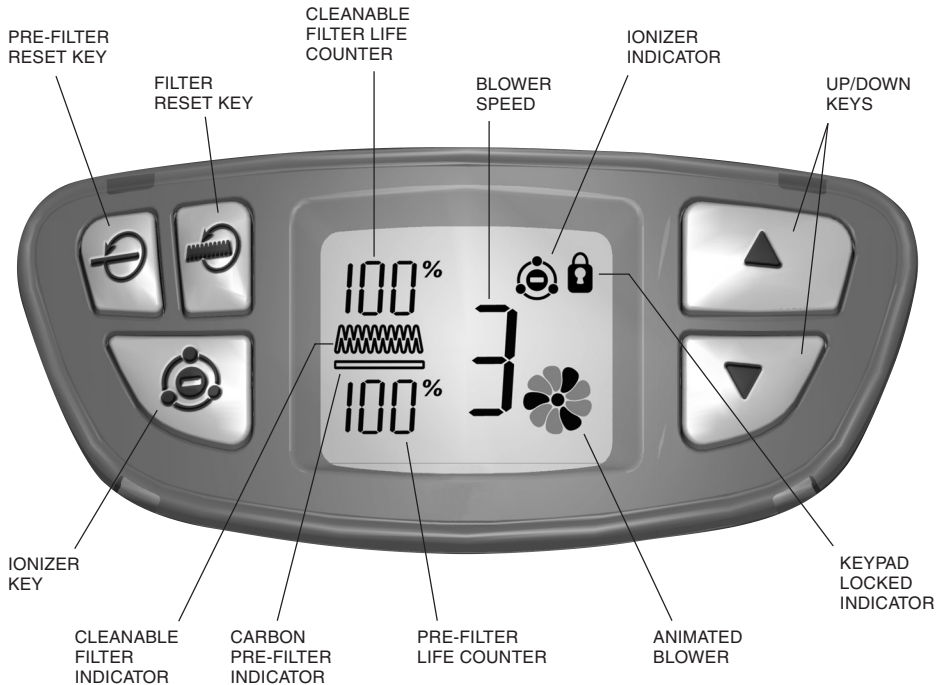


Fig. 3 - Air Purifier Control Area and Alpha-numeric Display



Operation

Initial Operation

This section provides basic instructions on the use of your air purifier. After following these initial directions, please continue reading this booklet to learn how to operate the more advanced features of your air purifier.

Basic Operation of the Air Purifier:

1. Take the air purifier out of the box and remove the clear plastic protective bag. Place the unit on a firm level floor.
2. Before turning on the air purifier, you need to confirm that the filters are firmly in place and have not become loose during shipping. To check the filters, first open the front grill. Release the front grill by placing your fingers under the handle on the grill and pull forward, then up.

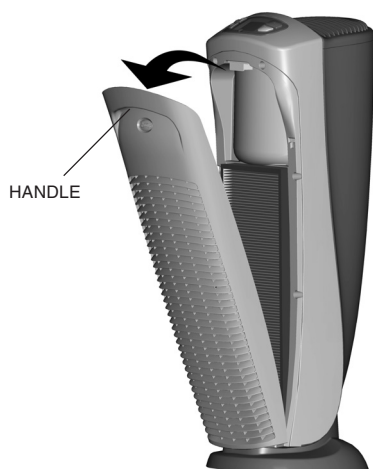


Fig. 4

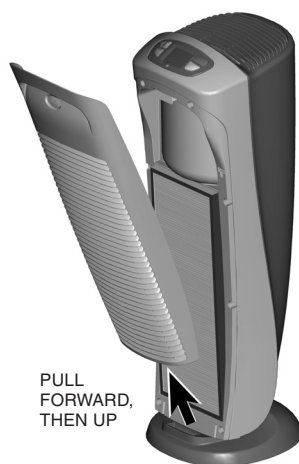


Fig. 5

3. Next, check the cleanable filter by pressing firmly on all four corners of the filter to ensure that it is fully inserted into the filter opening.
4. The carbon pre-filter is mounted inside the front grill with hook tape. Confirm that it properly covers the grill vents. You may notice a few black particles coming off the pre-filter. Those particles are part of the odor-removing activated carbon and will be collected on the filter during use.





Operation

Filter Life Counters

The pre-filter and filter are critical to the proper operation of the air purifier. To help you know when to clean or change the filters, your Hunter Air Purifier has Filter Life Counters that will monitor the percentage of life your filter has left. Although the exact life of the filters depends on the environment, the table below gives typical usage times of the filters.

Table 2: Typical Usage Times of the Filters

Filter Type	Typical Usage
Activated Carbon Pre-Filter	1400 hours
Cleanable Filter	2800 hours

The display shows the percentage of life left since the counter was reset. **NOTE:** The percentage level drops in 5% increments.

The values of the Pre-Filter and Filter Life Counters are stored in the air purifier's memory. **The unit may be unplugged and moved or stored without losing the Pre-Filter and Filter Counter values.**

To properly track filter usage, the Pre-Filter and Filter Life Counters should be reset each time the filters are changed or cleaned. Refer to Changing the Pre-Filter (pg. 10) or Cleaning the Filter (pg. 11) for instructions on how to reset the counters.

Locking/Unlocking the Keypad

Once you enter the desired speed, you may want to lock the keypad to prevent accidental changing of the speed. When the keypad is locked, all keys will be disabled. If you press a key, the Keypad Locked Indicator will be displayed on the screen for 1-2 seconds.

To Lock or Unlock the Keypad:



1. To lock the keypad, press and hold the UP/DOWN keys simultaneously for 2-3 seconds. The Keypad Locked Indicator will appear on the display. Refer to Fig. 9. After releasing the keys, the Keypad Locked Indicator will disappear.
2. To unlock the key pad, press and hold the UP/DOWN keys simultaneously for 2-3 seconds. The Keypad Indicator will disappear and the keypad will be functional.

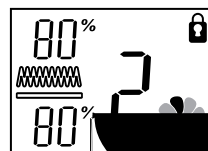


Fig. 9



Resetting the Air Purifier

In the unusual situation that the unit or the display is exhibiting erratic behavior, you may want to reset the air purifier. If you still have problems after resetting the air purifier, please contact Hunter for additional assistance (refer to Technical Support, pg. 14).

To Reset the Air Purifier:

1. Unplug the unit for at least 30 seconds.
2. Plug the unit back in.

Using the Ionizer

Using the ionizer improves the quality of air in the room. Negative ions are released into the air and positively charged dust, smoke, and pollen particles are attracted to the negative ions. These particles settle out of the air and can be vacuumed up during normal cleaning. These particles are also more easily captured by the cleanable filter as they pass through the PermaLife™ Cleanable Filtration System. To ensure the best air circulation in the room, we recommend that you place your air purifier six (6) inches away from any walls.

To turn the ionizer on or off:



1. To turn the ionizer on, press the IONIZER key. The Ionizer Indicator will appear on the display. Refer to Fig 10.



2. To turn the ionizer off, press the IONIZER key. The Ionizer Indicator will disappear.

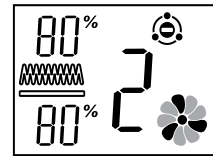


Fig. 10

Controlling the Backlight

Your air purifier display has a backlight that is continuously lit as long as there is power to the unit. The backlight may be turned off.

To turn the backlight off or on:



Press the PRE-FILTER RESET and FILTER RESET keys at the same time.

NOTE: Do not hold down the keys for longer than 2 seconds. This may reset a filter counter.

and





Air Purifier Maintenance

Cleaning Your Air Purifier

Proper maintenance of your Hunter Air Purifier will help ensure years of trouble free service.

Follow these steps to properly maintain your air purifier:

1. Approximately every 90 days, the outside of the unit should be cleaned with a soft, damp cloth.
2. If needed, the front grill can be removed from the unit and cleaned with soapy water. Simply remove the pre-filter before exposing the grill to water.
3. Follow the instructions in Changing the Pre-Filter and Cleaning the Filter (pgs. 10 and 11) to determine when and how to replace or clean the filters.

NOTES:

- The air purifier must be unplugged during the cleaning process.
- Be sure the unit is completely dry before plugging in and using.
- Never immerse unit in water.

Changing the Pre-Filter

When the Pre-Filter exceeds 1400 hours (refer to Filter Life Counters for additional information, pg. 8), the Pre-Filter Life Counter will display 0% life remaining and the Pre-Filter indicator will flash as a reminder that you should replace the pre-filter. To maintain proper odor-removing capability and overall filtration performance, the pre-filter should be changed every 1400 hours (approximately 3 months of use). If necessary, the pre-filter can be changed more often. Proper maintenance of the pre-filter will help extend the life of the cleanable filter. Refer to Obtaining Replacement Filters (pg. 13) if you need help finding replacement filters.

To change the pre-filter and reset the Pre-Filter Life Counter:

1. First, turn off and unplug the air purifier.
2. Next, remove the front grill. Place your fingers under the handle on the grill and pull forward, then up. Refer to Figs. 4 and 5 (pg. 6).
3. The pre-filter is attached to the inside of the grill with hook tape. Pull gently on the pre-filter to remove it. Refer to Fig. 11 (pg. 11).
4. If needed, use a soft damp cloth to wipe off the grill.
5. Install the new pre-filter by placing it in the grill and pressing gently on the pre-filter so that it adheres to the hook tape. You may notice a few black particles coming off the pre-filter. Those particles are part of the odor-removing activated carbon and will be collected on the filter during regular use.

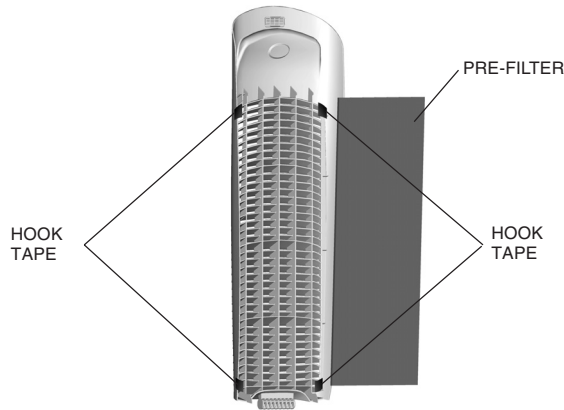


Fig. 11

6. Place the front grill back onto the unit. First, line up the tab on the bottom of the grill with the recess on the purifier base and then push the top of the grill forward until it is closed. Refer to Figs. 6 and 7 (pg. 7). **NOTE:** This unit will not operate unless the grill is in the correct position.
7. Plug in the air purifier.



8. Finally, reset the Pre-Filter Counter by pressing the PRE-FILTER RESET key for 2 seconds. The Pre-Filter Counter will return to 100% and the Pre-Filter indicator will stop flashing.

Cleaning the Filter

The PermaLife™ Filtration System uses a cleanable filter that never has to be changed, only cleaned. When the filter exceeds 2800 hours (approximately 4 to 6 months of use), the Filter Life Counter will display 0% life remaining and the Filter indicator will flash (refer to Filter Life Counters for additional information, pg. 8). This is a reminder that you should check the filter and clean if necessary. The proper time to clean the filter depends on usage and the environment. Use the following list to help determine if the filter should be cleaned:

- Compare the color of the filter to the color coded chart on the inside of the housing. If the filter color matches the darkest color on the chart, you should clean the filter.
- If you notice a decrease in air output or an increase in noise at any time during normal operation, the filter may be clogged. Clean the filter to return to normal operation.

To clean the filter and reset the Filter Life Counter:

1. First, turn off and unplug the air purifier.
2. Next, remove the front grill. Place your fingers under the handle on the grill and pull forward, then up. Refer to Figs. 4 and 5 (pg. 6).

Continued



Air Purifier Maintenance

3. Gently pull on the filter to remove it from the unit. While removing the filter, note the directional arrows printed on the top of the filter. The filter will be reinstalled with the same orientation. Refer to Fig. 12.
4. The label on the top side of the filter points to the side that should be cleaned. Refer to Fig. 12. With a vacuum cleaner and upholstery brush attachment, clean the filter until all particles are removed. Do not use water or liquids to clean.
5. Install the filter with arrows pointing towards the unit. Refer to Fig. 12. Press the filter firmly into the air purifier. To avoid damaging the filter media, you should press on the frame of the filter only.



Fig. 12

6. Place the front grill back onto the unit. First, line up the tab on the bottom of the grill with the recess on the purifier base and then push the top of the grill forward until it is closed. Refer to Figs. 6 and 7 (pg. 7). **NOTE:** This unit will not operate unless the grill is in the correct position.
7. Plug in the unit.



8. To reset the filter counter, press the FILTER RESET key for 2 seconds. The Filter Counter will return to 100% and the Filter indicator will stop flashing.

Air Purifier Maintenance



Obtaining Replacement Filters

To obtain replacement filters for your air purifier, first determine your model number by looking at the information label on the back of the air purifier. The model number will be listed on the label. Then, call 1-800-4HUNTER for your nearest retailer or Hunter Customer Service at 1-888-830-1326 (CAN 1-866-268-1936) to order directly. To order online, visit our Website at www.hunterfan.com. To ensure that you obtain the correct filters, please find your model number below that specifies the correct replacement filters.

Hunter Air Purifier Model No.: 37750

Pre-Filter Replacement Model No.: 30901



Troubleshooting

Problem	Solutions
1. No display or operation.	<ul style="list-style-type: none">• Confirm that the unit is plugged in.• Check the installation of the front grill.• Reset the air purifier. (See Resetting the Air Purifier on pg. 9.)
2. Keypad does not work.	<ul style="list-style-type: none">• Key pad has been locked to prevent accidental changes to the programs. (See Keypad Lock on pg. 8 to unlock the key pad.)
3. Erratic Display or Operation.	<ul style="list-style-type: none">• Reset the air purifier. (See Resetting the Air Purifier on pg. 9.)
4. Filter and/or Pre-filter Indicator is Flashing.	<ul style="list-style-type: none">• The Filter and/or Pre-Filter Life Counters have reached the estimated usage times. Check and replace or clean filters if needed. (Refer to Filter and Pre-Filter Counters on pg. 8.)
5. Cleanable Filter and/or Carbon Pre-Filter Life Counter is flashing 0%.	<ul style="list-style-type: none">• The Filter and/or Pre-Filter Life Counters have greatly exceeded the estimated usage times. Replace or clean the corresponding filters.
6. Unit has reduced air flow or increased noise.	<ul style="list-style-type: none">• The filter is clogged and should be cleaned. (Refer to Cleaning the Filter on pg. 11.)

Technical Support

If you have any additional questions or problems with your Hunter air purifier, please call 1-888-830-1326 (CAN 1-866-268-1936) from 8:00 am to 5:00 pm Central Time or contact us over the Internet at www.hunterfan.com.



**Hunter Fan Company
PermaLife™ Air Purifier
5 YEAR LIMITED WARRANTY**

The Hunter Fan Company makes the following limited warranty to the original residential user or consumer purchaser of the PermaLife™ Air Purifier:

If any part of your PermaLife™ Air Purifier motor or control panel fails during the first five (5) years from the date of installation due to a defect in material or workmanship, we will provide a replacement Air Purifier free of charge. Installation is deemed to occur at the date of purchase.

If the Air Purifier cord or front grill fails any time within one (1) year after installation due to a defect in material or workmanship, we will replace or, at our option, repair the unit free of charge at our nearest service center or at our Service Department in Memphis, Tennessee. You will be responsible for all parts and labor costs after this one-year period.

USE OF A NON-HUNTER FILTER WILL INVALIDATE THIS WARRANTY. IF THE ORIGINAL RESIDENTIAL USER OR CONSUMER PURCHASER CEASES TO OWN THE AIR PURIFIER, THIS WARRANTY AND ANY IMPLIED WARRANTY WHICH THEN REMAINS IN EFFECT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE VOIDED.

NO WARRANTY, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS MADE IN RESPECT TO THE FILTER MATERIAL OR CARBON FILTER.

THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. THE DURATION OF ANY IMPLIED WARRANTY INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IN RESPECT TO THE MOTOR IS EXPRESSLY LIMITED TO THE PERIOD OF THE EXPRESS WARRANTY SET FORTH ABOVE.

This warranty is voided if the air purifier is not purchased and used in the USA or Canada.

This warranty excludes and does not cover defects, malfunctions or failures of the Air Purifier which were caused by repairs by persons not authorized by us, use of parts or accessories not authorized by us, mishandling, modifications, or damage to the Air Purifier while in your possession, or unreasonable use, including failure to provide reasonable and necessary maintenance. This warranty does not cover Air Purifiers used in commercial applications. There are no express or implied warranties as to commercial purchasers or users.

To obtain service, contact the nearest Hunter authorized service center or the Hunter Fan Company Service Department, 2500 Frisco Avenue, Memphis, Tennessee 38114, 1-888-830-1326. For the name of our nearest authorized Hunter Fan Company Service Center,

Continued



Warranty

write to the Hunter Fan Company at the preceding address. You will be responsible for insurance and freight or other transportation to our factory service center. We will return the Air Purifier freight prepaid. The Air Purifier should be properly packaged to avoid damage in transit since we will not be responsible for any such damage. Proof of purchase is required when requesting warranty service. The purchaser must present sales receipt or other document that establishes proof of purchase.

IN NO EVENT SHALL HUNTER FAN COMPANY BE LIABLE FOR DIRECT, INDIRECT, SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE AIR PURIFIER. YOUR SOLE REMEDY WILL BE REPAIR OR REPLACEMENT AS PROVIDED ABOVE.




SOME AMERICAN STATES AND CANADIAN PROVINCES DO NOT ALLOW:

- LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS;
- THE EXCLUSION OR LIMITATION OF DIRECT, INDIRECT SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES;

SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Other Home Comfort Products from Hunter

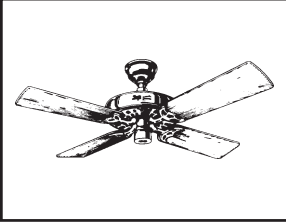

The Care-Free
Humidifier™

Programmable
Thermostat

To learn more about Hunter Fan Company products, please see our Web page at:

www.hunterfan.com



HUNTER FAN COMPANY
2500 FRISCO AVENUE
MEMPHIS, TN 38114, USA

Printed in China and Taiwan



DEPUIS

1886

PURIFICATEUR D'AIR

PermaLifeTM



ENGLISH
See page 1

FRANÇAIS
Consulter la page 19

Modèle 37750

Informations sur le remplacement du filtre

Modèle

37750

Pré-filtre

30901

www.hunterfan.com



INSTRUCTIONS DE SÉCURITÉ

IMPORTANT !

LISEZ TOUTES LES INSTRUCTIONS AVANT D'UTILISER CE PURIFICATEUR D'AIR.

1. Ce purificateur d'air est conçu pour une utilisation sur un sol au niveau et pourrait ne pas fonctionner adéquatement sur une surface inégale.

Placez **TOUJOURS** ce purificateur d'air sur une surface dure et de niveau. Placez **TOUJOURS** ce purificateur d'air à un minimum de quinze (15) cm (6 pouces) des murs et sources de chaleur comme les poêles, radiateurs ou calorifères.

2. Placez le purificateur d'air dans un endroit où il sera hors de portée des enfants.
3. Avant d'utiliser le purificateur d'air, déroulez son cordon et inspectez-le pour y repérer d'éventuels signes de dommage. N'utilisez **PAS** ce produit si le cordon est endommagé.
4. Ce produit est muni d'une prise polarisée (une broche est plus large que l'autre) comme disposi-
P



Description du système de filtration de l'air

Comment fonctionne le système de purificateur d'air PermaLife™

Comme l'air est aspiré dans le purificateur, le pré-filtre au charbon actif absorbe les odeurs et emprisonne les plus grosses particules. Puis, l'air passe à travers le système de filtration nettoyable PermaLife™ où les particules plus petites sont recueillies. Ensuite, le ioniseur libère des ions négatifs dans l'air ; ces ions attirent la poussière, la fumée et les particules de pollen positivement chargées. Finalement, l'air purifié est libéré dans la pièce.

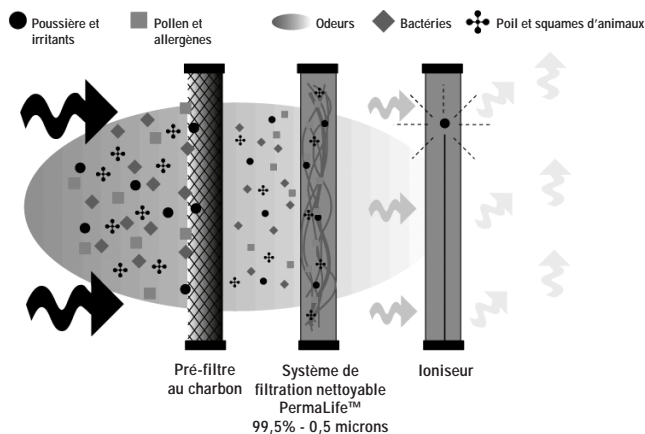


Fig. 1 - Illustration du système de filtration de l'air

Composants du purificateur d'air

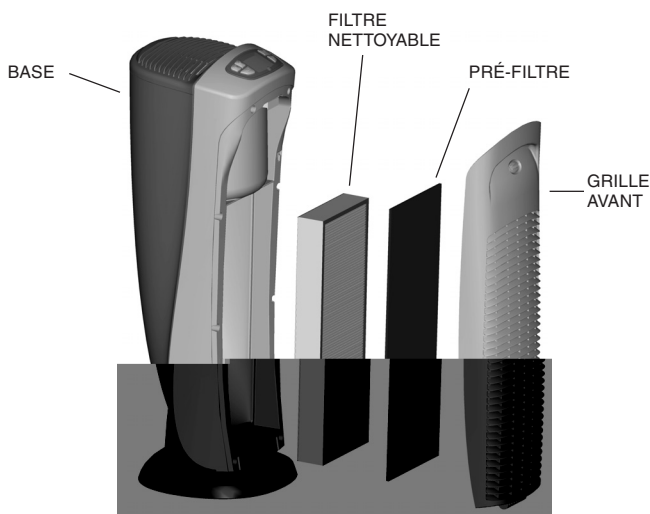


Fig. 2 - Composants du purificateur d'air

Description du système de filtration de l'air



Afficheur et touches de commande

L'afficheur et les touches de commande permettent une utilisation facile du purificateur d'air.



TOUCHES HAUT/BAS : ajuste la vitesse du ventilateur et allume ou éteint l'appareil.



REINITIALISATION DU PRE-FILTRE : réinitialise le compteur de durée de vie du pré-filtre au charbon.



RÉINITIALISATION DU FILTRE : réinitialise le compteur de durée de vie du filtre nettoiable.



TOUCHE IONISEUR : allume et éteint l'ioniseur.

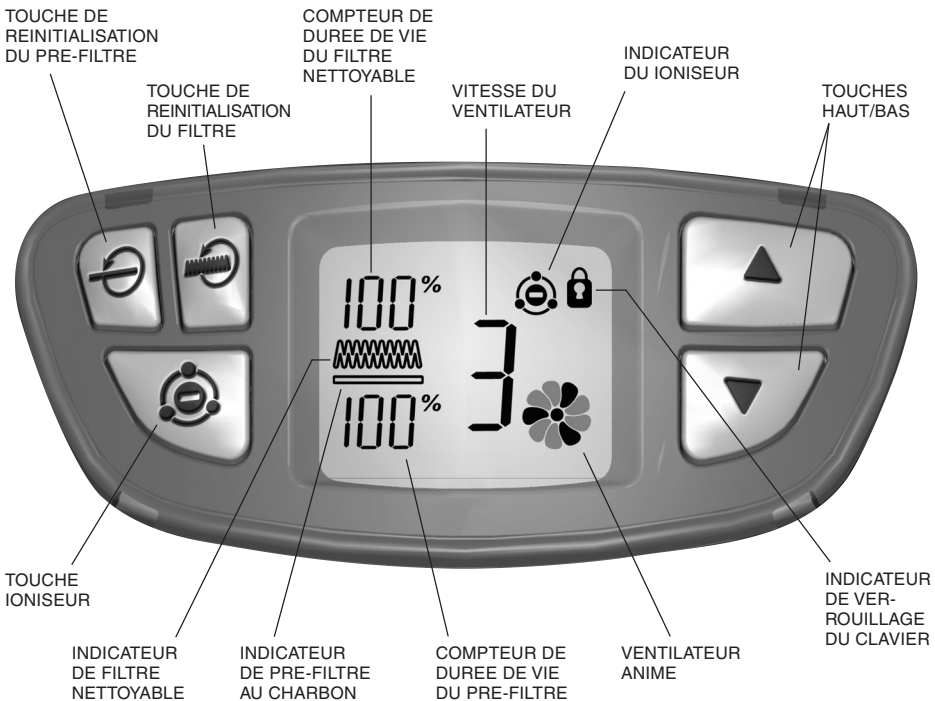


Fig. 3 - Zone de commande du purificateur d'air et afficheur alphanumérique



Fonctionnement

Utilisation initiale

Cette section vous propose des instructions de base sur l'utilisation de votre purificateur d'air. Une fois ces directives initiales suivies, continuez à lire cette brochure pour apprendre comment faire fonctionner les options les plus avancées de votre purificateur d'air.

Utilisation de base du purificateur d'air :

1. Sortez le purificateur d'air de la boîte et retirez le sac de plastique protecteur. Placez l'appareil sur un plancher ferme et au niveau.
2. Avant de mettre en marche le purificateur d'air, vous devez vous assurer que les filtres sont fermement en place et ne se sont pas desserrés pendant l'expédition. Pour vérifier les filtres, ouvrez d'abord la grille avant. Libérez la grille avant en plaçant vos doigts sous la poignée de la grille et en tirant vers l'avant puis vers le haut. Consultez les figures 4 et 5.

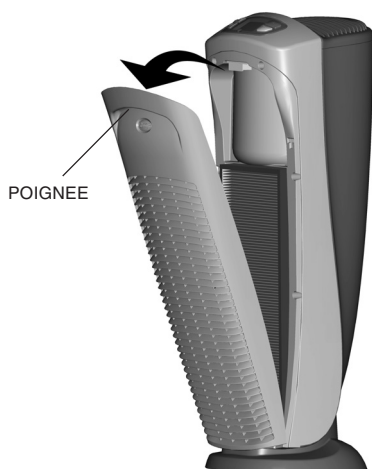


Fig. 4



Fig. 5

3. Ensuite, vérifiez le filtre nettoyable en appuyant fermement sur les quatre coins du filtre pour vous assurer qu'il est entièrement inséré dans l'ouverture du filtre.
4. Le pré-filtre au charbon est monté à l'intérieur de la grille avant à l'aide d'un ruban agrafeur. Assurez-vous qu'il couvre correctement les événements de la grille. Il se peut que vous notiez quelques particules noires sortant du pré-filtre. Ces particules font partie du charbon actif supprimeur d'odeur et elles seront recueillies par le filtre durant son fonctionnement.

Fonctionnement



5. Remplacez la grille avant sur l'appareil. D'abord, alignez la languette du bas de la grille avec le renforcement de la base du purificateur puis poussez le haut de la grille vers l'avant jusqu'à ce que l'appareil se ferme. Consultez les figures 6 et 7.

REMARQUE : cet appareil ne fonctionnera que si la grille est dans la position adéquate.

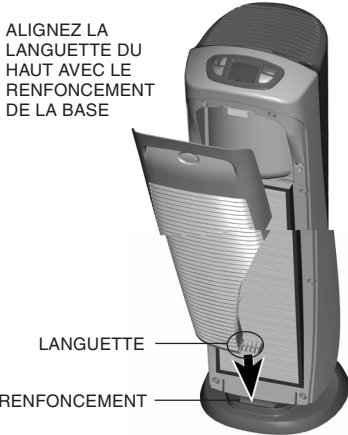


Fig. 6



Fig. 7



6. Branchez l'appareil dans une prise électrique 120 volts et appuyez sur la touche UP. Le purificateur d'air démarrera à vitesse de ventilateur basse.



7. Utilisez les touches UP/DOWN pour ajuster la vitesse du ventilateur au niveau désiré (0 - éteint, 1 = en veille, 2 = actif, 3 = nettoyage turbo). Consultez la figure 8.

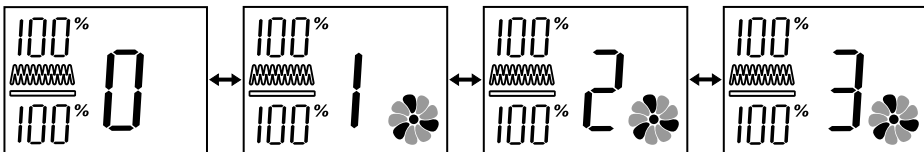


Fig. 8



Fonctionnement

Compteurs de durée de vie du filtre

Le pré-filtre et le filtre sont indispensables à un fonctionnement adéquat du purificateur d'air. Pour vous aider à savoir à quel moment nettoyer ou changer les filtres, votre purificateur d'air Hunter possède des compteurs de durée de vie du filtre qui contrôleront le pourcentage de durée de vie qui reste à votre filtre. Bien que la durée de vie exacte des filtres varie selon l'environnement, le tableau ci-dessous donne des temps d'utilisation type des filtres.

Tableau 2 : Temps d'utilisation type des filtres

Type de filtre	Utilisation type
Pré-filtre au charbon actif	1400 heures
Filtre nettoyable	2800 heures

L'afficheur montre le pourcentage de durée de vie restante depuis que le compteur a été réinitialisé. **REMARQUE** : le pourcentage diminue selon des augmentations de 5%.

Les valeurs des compteurs du pré-filtre et du filtre sont entreposées dans la mémoire du purificateur d'air. **L'appareil peut être débranché et déplacé ou entreposé sans perdre les valeurs du compteur de pré-filtre et de filtre.**

Pour un suivi adéquat de l'utilisation du filtre, les compteurs de durée de vie du pré-filtre et du filtre doivent être réinitialisés chaque fois que les filtres sont changés ou nettoyés. Consultez Changement du pré-filtre (page 28) ou Nettoyage du filtre (page 29) pour les instructions sur la façon de réinitialiser les compteurs.

Verrouiller/déverrouiller le clavier

Une fois la vitesse désirée entrée, vous désirez peut-être verrouiller le clavier pour empêcher une modification accidentelle de la vitesse. Lorsque le clavier est verrouillé, toutes les touches sont désactivées. Si vous appuyez sur une touche, l'indicateur de verrouillage du clavier s'affichera à l'écran pendant 1 à 2 secondes.

Pour verrouiller ou déverrouiller le clavier :



1. Pour verrouiller le clavier, appuyez et maintenez enfoncées les touches UP/DOWN simultanément pendant 2-3 secondes. L'indicateur de verrouillage du clavier apparaîtra à l'afficheur. Consultez la Figure 9. Une fois les touches relâchées, l'indicateur de verrouillage du clavier disparaîtra.
2. Pour déverrouiller le clavier, appuyez et maintenez enfoncées les touches UP/DOWN simultanément pendant 2-3 secondes. L'indicateur de clavier disparaîtra et le clavier sera fonctionnel.

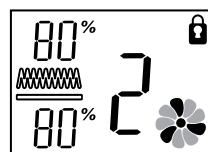


Fig. 9



Réinitialiser le purificateur d'air

Dans le cas bien improbable où l'appareil ou l'afficheur démontrerait un comportement instable, vous désirez peut-être le réinitialiser. Si vous êtes toujours victime de problèmes une fois le purificateur d'air réinitialisé, contactez Hunter pour une aide additionnelle (consultez Soutien technique, page 32).

Pour réinitialiser le purificateur d'air :

1. Débranchez l'appareil pendant au moins 30 secondes.
2. Rebranchez l'appareil.

Utiliser le ioniseur

L'utilisation de l'ioniseur améliore la qualité de l'air dans la pièce. Les ions négatifs sont libérés dans l'air et positivement chargés ; la poussière, la fumée et les particules sont attirées par les ions négatifs. Ces particules forment un dépôt et peuvent être supprimées pendant un nettoyage normal. Elles sont également plus faciles à capturer par le filtre nettoyable lorsqu'elles passent à travers le système de filtration PermaLife™. Pour assurer la meilleure circulation d'air possible dans la pièce, nous vous recommandons de placer votre purificateur d'air à six pouces de distance des murs.

Pour mettre en marche ou éteindre l'ioniseur :



1. Pour mettre en marche l'ioniseur, appuyez sur la TOUCHE IONIZER (ioniseur). L'indicateur Ionizer apparaîtra à l'afficheur. Consultez la figure 10.



2. Pour éteindre l'ioniseur, appuyez sur la TOUCHE IONIZER (ioniseur). L'indicateur Ionizer disparaîtra.

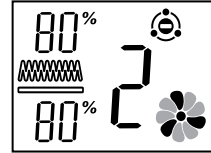


Fig. 10

Contrôler le rétroéclairage

L'afficheur de votre purificateur d'air possède un rétro éclairage allumé en continu aussi longtemps que l'appareil est alimenté. Ce rétro éclairage peut être éteint.

Pour allumer ou éteindre le rétro éclairage :



et



Appuyez simultanément sur les touches PRE-FILTER RESET et FILTER RESET.

REMARQUE : Ne maintenez pas enfoncées les touches pendant plus de 2 secondes. Cela pourrait réinitialiser le compteur de filtre.



Entretien du purificateur d'air

Nettoyer votre purificateur d'air

Un entretien adéquat de votre purificateur d'air Hunter vous assurera des années d'utilisation sans souci.

Suivez ces étapes pour faire un entretien adéquat de votre purificateur d'air :

1. Tous les 90 jours environ, l'extérieur de l'appareil doit être nettoyé à l'aide d'un chiffon doux et humide.
2. Au besoin, la grille avant peut être retirée de l'appareil et nettoyée à l'eau savonneuse. Retirez simplement le pré-filtre avant d'exposer la grille à l'eau.
3. Suivez les instructions Changement du pré-filtre et Nettoyage du filtre (pages 28 et 29) pour déterminer quand et comment remplacer ou nettoyer les filtres.

REMARQUES :

- Le purificateur d'air doit être débranché pendant le nettoyage.
- Assurez-vous que l'appareil est complètement sec avant de le rebrancher et de l'utiliser.
- N'immergez jamais l'appareil.

Changement du pré-filtre

Lorsque le pré-filtre excède 1 400 heures (consultez Compteurs de durée de vie du filtre pour de plus amples informations, à la page 26), le compteur de durée de vie du pré-filtre affiche 0% de durée de vie restante et l'indicateur de pré-filtre clignote pour vous rappeler qu'il est temps de le remplacer. Pour assurer une capacité de suppression des odeurs adéquate et une bonne performance globale de filtration, le pré-filtre devrait être changé toutes les 1 400 heures (environ 3 mois d'utilisation). Si nécessaire, vous pouvez le changer plus fréquemment. Un entretien approprié du pré-filtre aidera à prolonger la vie du filtre nettoyable. Consultez Obtenir des filtres de remplacement (page 31) au besoin pour savoir où trouver des filtres de remplacement.

Pour changer le pré-filtre et réinitialiser le compteur de durée de vie du pré-filtre :

1. D'abord, éteignez et débranchez le purificateur d'air.
2. Ensuite, retirez la grille avant. Placez vos doigts sous la poignée de la grille et tirez vers l'avant puis vers le haut. Consultez les figures 4 et 5 (page 24).
3. Le pré-filtre est attaché à l'intérieur de la grille à l'aide d'un ruban agrafeur. Tirez délicatement sur le pré-filtre pour le retirer. Consultez la figure 11 (page 29).
4. Au besoin, utilisez un chiffon doux et humide pour essuyer la grille.
5. Installez le nouveau pré-filtre en le plaçant dans la grille et en appuyant délicatement sur le pré-filtre afin qu'il adhère au ruban agrafeur. Il se peut que vous notiez quelques particules noires sortant du pré-filtre. Ces particules font partie du charbon actif supprimeur d'odeur et elles seront recueillies par le filtre durant son fonctionnement.

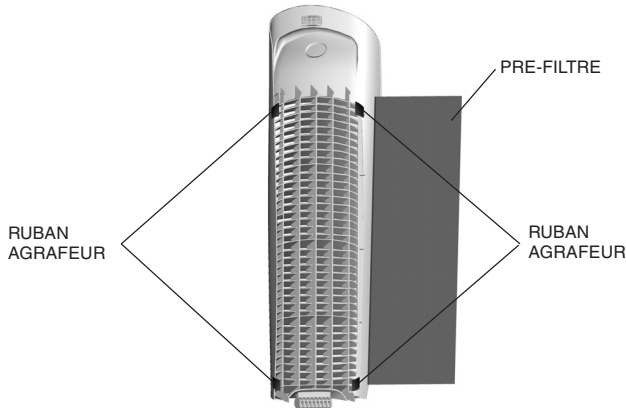


Fig. 11

6. Remplacez la grille avant sur l'appareil. D'abord, alignez la languette du bas de la grille avec le renforcement de la base du purificateur puis poussez le haut de la grille vers l'avant jusqu'à ce que l'appareil se ferme. Consultez les figures 6 et 7 (page 25).

REMARQUE : cet appareil ne fonctionnera que si la grille est dans la position adéquate.

7. Branchez le purificateur d'air.



8. Finalement, réinitialisez le compteur du purificateur d'air en appuyant sur la touche PRE-FILTER RESET (REINITIALISATION DU PRE-FILTRE) pendant 2 secondes. Le compteur du pré-filtre se remettra à 100% et l'indicateur de pré-filtre arrêtera de clignoter.

Nettoyage du filtre


Le système de filtration PermaLife™ utilise un filtre nettoyable qui n'a jamais à être changé, seulement nettoyé. Lorsque le filtre dépasse les 2 800 heures (environ 4 à 6 mois d'utilisation), le compteur de durée de vie du filtre affiche 0% de durée de vie restante et l'indicateur du filtre clignote (consultez Compteurs de durée de vie du filtre pour de plus amples informations, à la page 26). C'est un rappel que vous devez vérifier le filtre et le nettoyer au besoin. Le bon moment pour nettoyer le filtre varie selon l'utilisation et l'environnement. Utilisez la liste suivante pour déterminer si le filtre doit être nettoyé :

- Comparez la couleur du filtre au tableau des codes de couleur à l'intérieur du boîtier. Si la couleur du filtre correspond à la couleur la plus foncée du tableau, c'est le moment de le nettoyer.
- Si vous notez une diminution de sortie d'air ou une augmentation du bruit pendant l'utilisation normale, c'est peut-être que le filtre est obstrué. Nettoyez le filtre pour revenir à un fonctionnement normal.

Suite



Entretien du purificateur d'air

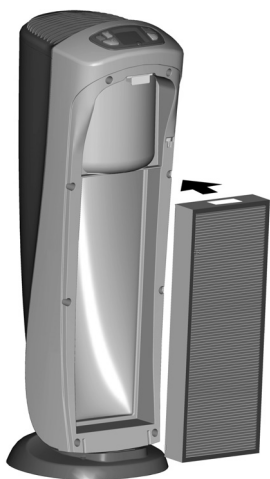

Clean/Vacuum This Side
DO NOT use water or
liquids to clean.
Limpiar/aspire este lado
NO use agua ni líquidos para limpiar.
Nettoyez / passez l'aspirateur de ce
côté
N'utilisez PAS d'eau ou de liquides
nettoyants.



Air
D

Fig. 12



Entretien du purificateur d'air



Obtenir des filtres de remplacement

Pour obtenir des filtres de remplacement pour votre purificateur d'air, déterminez tout d'abord votre numéro de modèle en vérifiant l'étiquette d'information à l'endos du purificateur d'air. Le numéro de modèle sera inscrit sur l'étiquette. Puis, appelez au 1-800-4HUNTER pour connaître le détaillant le plus près de chez vous ou appelez le service à la clientèle de Hunter au 1-888-830-1326 (CAN 1-866-268-1936) pour commander directement. Pour commander en ligne, visitez notre site Web au www.hunterfan.com. Pour vous assurer que vous obtiendrez les filtres appropriés, recherchez ci-dessous votre numéro de modèle ce qui vous donnera les filtres de remplacement appropriés.

Purificateur d'air Hunter modèle no. : 37750

Remplacement du pré-filtre modèle no. : 30901



Dépannage

Problème	Solutions
1. Ni affichage ni fonctionnement.	<ul style="list-style-type: none">• Assurez-vous que l'appareil est branché.• Vérifiez l'installation de la grille avant.• Réinitialisez le purificateur d'air. (Consultez Réinitialisation du purificateur d'air à la page 27).
2. Le clavier ne fonctionne pas.	<ul style="list-style-type: none">• Le clavier a été verrouillé pour empêcher des changements accidentels au programme. (Consultez Verrouillage du clavier à la page 26 pour déverrouiller le clavier.)
3. Affichage ou fonctionnement instable.	<ul style="list-style-type: none">• Réinitialisez le purificateur d'air. (Consultez Réinitialisation du purificateur d'air à la page 27).
4. L'indicateur du filtre et/ou du pré-filtre clignote.	<ul style="list-style-type: none">• Les compteurs de durée de vie du filtre et/ou du pré-filtre ont atteint la durée d'utilisation estimée. Vérifiez et remplacez ou nettoyez les filtres au besoin. (Consultez Compteurs de filtre et de pré-filtre à la page 26).
5. Le compteur de durée de vie du filtre nettoyable et/ou du pré-filtre au charbon clignote 0%.	<ul style="list-style-type: none">• Les compteurs de durée de vie du filtre et/ou du pré-filtre ont atteint la durée d'utilisation estimée. Remplacez ou nettoyez les filtres correspondants.
6. Il y a diminution du débit d'air ou augmentation du bruit.	<ul style="list-style-type: none">• Le filtre est obstrué et doit être nettoyé. (Consultez Nettoyage du filtre à la page 29).

Soutien technique

Si vous avez d'autres questions ou des problèmes avec votre purificateur d'air Hunter, appelez au 1-888-830-1326 (CAN 1-866-268-1936) de 8h00 à 17h00 heure normale du Centre ou contactez-nous via Internet à l'adresse www.hunterfan.com.



Hunter Fan Company
Purificateur d'air PermaLife™
GARANTIE LIMITÉE DE 5 ANS

Hunter Fan Company fait la garantie limitée suivante à l'utilisateur résidentiel d'origine ou à l'acheteur consommateur du système de purification d'air PermaLife™.

Si une quelconque pièce de votre purificateur d'air PermaLife™ ou du panneau de contrôle fait défaut pendant les cinq (5) premières années à partir de la date d'installation à cause d'une défaillance dans les matériaux ou la fabrication, nous remplacerons à nos frais le purificateur d'air. Nous considérons que l'installation a été effectuée à la date de l'achat.

Si le fil ou la grille avant du purificateur d'air s'avère défectueux un (1) an ou moins après son installation, à cause d'une défaillance du matériel ou de fabrication, nous remplacerons ou, selon notre décision, réparerons gratuitement l'appareil à notre centre de service le plus près ou à notre Division du service, à Memphis, Tennessee. Vous serez responsable des coûts de toutes les pièces de même que de ceux de la main d'oeuvre, après cette période d'un an.

UTILISER UN FILTRE NE PROVENANT PAS DE HUNTER INVALIDERA CETTE GARANTIE. SI L'UTILISATEUR D'ORIGINE OU L'ACHETEUR CONSOMMATEUR CESSE D'ÊTRE PROPRIÉTAIRE DU PURIFICATEUR D'AIR, CETTE GARANTIE ET TOUTE AUTRE GARANTIE IMPLICITE QUI DEMEURE EN EFFET, INCLUANT MAIS SANS ÊTRE LIMITÉ À TOUTE GARANTIE IMPLICITE DE MISE EN MARCHÉ OU D'ADAPTATION À DES FINS PARTICULIÈRES, SERONT ANNULÉES.

AUCUNE GARANTIE, EXPRESSE OU IMPLICITE, INCLUANT TOUTE GARANTIE DE MISE EN MARCHÉ OU D'ADAPTATION À DES FINS PARTICULIÈRES, N'EST FAITE EN REGARD DU MATÉRIEL DU FILTRE OU DU FILTRE AU CHARBON.

CETTE GARANTIE TIENT LIEU ET PLACE DE TOUTE AUTRE GARANTIE EXPRESSE. LA DURÉE DE TOUTE GARANTIE IMPLICITE INCLUANT, MAIS SANS ÊTRE LIMITÉE À, TOUTE GARANTIE IMPLICITE DE MISE EN MARCHÉ OU D'ADAPTATION À DES FINS PARTICULIÈRES, EN REGARD DU MOTEUR EST EXPRESSÉMENT LIMITÉE À LA PÉRIODE DE LA GARANTIE EXPRESSE ÉTABLIE CI-DESSUS.

Cette garantie est annulée si le purificateur d'air n'a pas été acheté aux États-Unis ou au Canada.

Cette garantie exclut et ne couvre pas les défaillances, malfunctions ou défauts du purificateur d'air, s'ils ont été causés par des réparations effectuées par des personnes non autorisées, par l'utilisation de pièces ou accessoires non autorisés par nous, par une mauvaise maintenance, des modifications ou des dommages au purificateur d'air alors qu'il était en votre possession ou par une utilisation déraisonnable, incluant le défaut d'y apporter un entretien raisonnable et nécessaire. Cette garantie ne couvre pas les purificateurs d'air utilisés dans des applications commerciales. Il n'existe aucune garantie expresse ou implicite pour les acheteurs ou utilisateurs commerciaux.



Garantie

Pour obtenir du service, contactez le centre de service Hunter le plus près de chez vous, ou la division du Service de Hunter Fan Company, 2500 Frisco Avenue, Memphis, Tennessee 38114, au 1-888-830-1326. Pour obtenir l'adresse du centre de service autorisé Hunter le plus près de chez vous, écrivez à Hunter Fan Company à l'adresse précédente. Vous serez responsable des coûts d'assurance et d'expédition ou de tout autre moyen de transport à notre centre de service. Nous vous retournerons le purificateur d'air exempt de charge d'expédition. Le purificateur d'air doit être convenablement emballé afin d'éviter les dommages lors du transit, auquel cas, nous ne serons pas responsables de tels dommages. Une preuve d'achat est requise lors d'une demande de service garanti. L'acheteur doit présenter un reçu d'achat ou tout autre document établissant une preuve de l'achat.



EN AUCUNE CIRCONSTANCE HUNTER NE PEUT-ELLE ÊTRE TENUE RESPONSABLE DE TOUT DOMMAGE DIRECT, INDIRECT, SPÉCIAL, CONSÉCUTIF OU SECONDAIRE POUR UN MONTANT SUPÉRIEUR AU PRIX D'ACHAT DE L'HUMIDIFICATEUR. LE SEUL DÉDOMMAGEMENT PROPOSÉ EST LA RÉPARATION OU LE REMPLACEMENT TEL QUE MENTIONNÉ CI-DESSUS.

CERTAINS ÉTATS AMÉRICAINS ET PROVINCES CANADIENNES NE PERMETTENT PAS LES LIMITATIONS SUR LA DURÉE D'UNE GARANTIE IMPLICITE ;

- L'EXCLUSION OU LA LIMITATION DES DOMMAGES DIRECTS, INDIRECTS, SPÉCIAUX, CONSÉCUTIFS OU SECONDAIRES ;
- LES LIMITATIONS OU EXCLUSIONS CI-DESSUS PEUVENT ALORS NE PAS S'APPLIQUER À VOUS.

CETTE GARANTIE VOUS DONNE DES DROITS LÉGAUX SPÉCIFIQUES ET VOUS POUVEZ AVOIR D'AUTRES DROITS QUI VARIENT D'UN ÉTAT À L'AUTRE ET D'UNE PROVINCE À L'AUTRE.

Autres produits de confort au foyer de Hunter

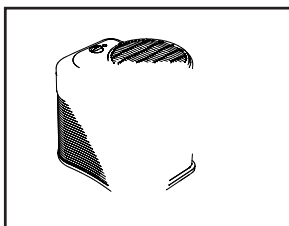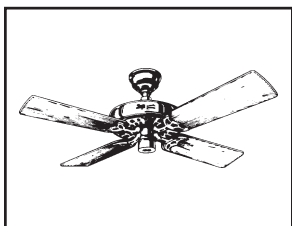

L'humidificateur
Care-Free
Humidifier™

Thermostat
Programmable

Pour en apprendre davantage à propos des produits de Hunter Fan Company,
visitez notre page Web à l'adresse :

www.hunterfan.com



HUNTER FAN COMPANY
2500 FRISCO AVENUE
MEMPHIS, TN 38114, USA

Imprimé en Chine et à Taiwan