AudioSource®

S3D60

Soundbar w/sonic emotion 3D Sound
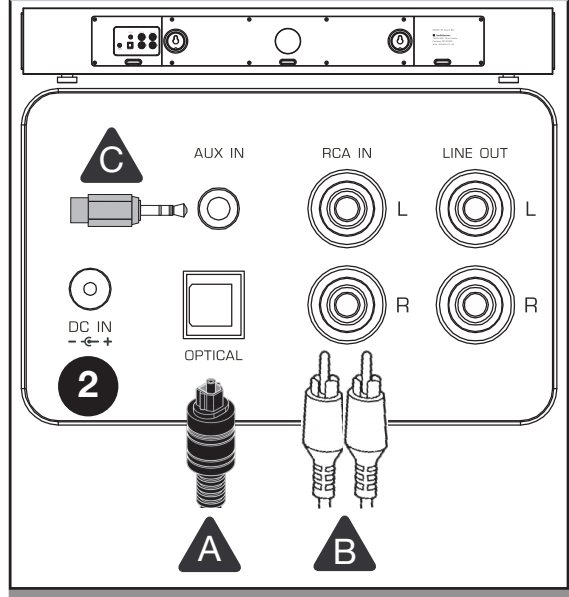
Quick Start Guide

Included in box: S3D60 Sound Bar, Credit Card Style Remote (Battery Included), Product Manual, Quick Start Guide
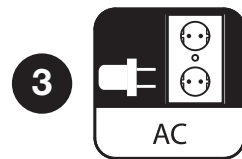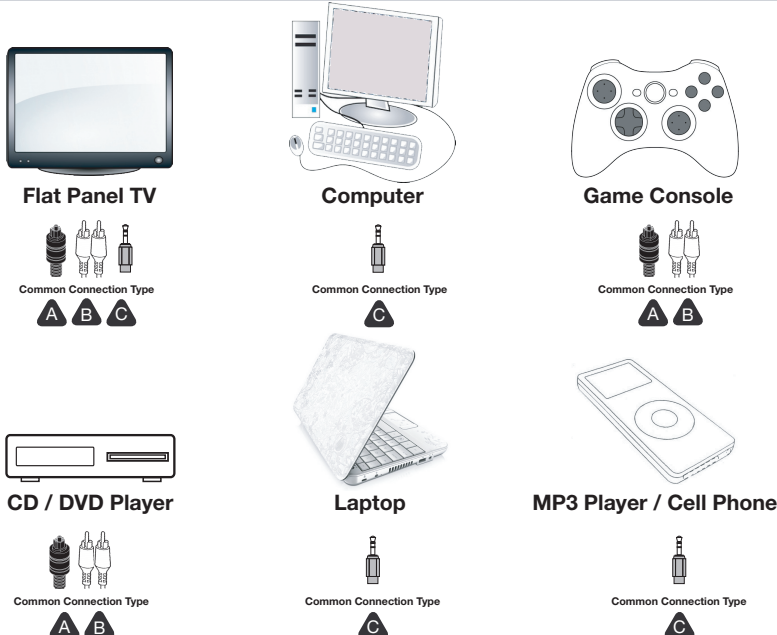
Installation Sequence

1 **Connect Source**
A single cable is needed per source.
See table below for common connection types & installation locations.

2 **Plug power adaptor into rear of sound bar**

3 **Plug power adaptor into wall outlet**

4 **Press power button**

5 **Select source**

6 **Adjust to desired volume**

7 **Select mode best suited to source**

Rear Panel

C AUX IN | RCA IN | LINE OUT

L | L

DC IN | OPTICAL | R | R

2

A **B**

Compatible Sources

1 (Only a single cable is used per source)

Flat Panel TV
Common Connection Type
A B C

Computer
Common Connection Type
C

Game Console
Common Connection Type
A B

CD / DVD Player
Common Connection Type
A B

Laptop
Common Connection Type
C

MP3 Player / Cell Phone
Common Connection Type
C

3 AC

Front Panel

S3D60 3D Sound Bar

4 **7**

6

AUX RCA OPTICAL   MOVIE NORMAL MUSIC

5 SOURCE | 🔊 | 🔊 | MODE

sonic emotion 3D SOUND