


中文 English

3

6

Туре 5363

99658055/VIII-10 China/GB

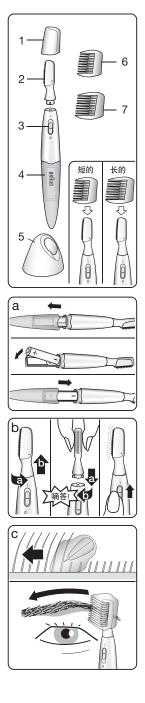

中文 使用产品前请仔细阅读使用 说明书,并请妥善保管。

# 螫告

	1+	÷		-	1.0		나는	<u>.</u>		
		产								
于	儿	童	无	法	触	及	的	位	置	0
굷	亜	在	岩	*	的	臣	畦	F	庙	Ē
				×	нJ	JX,	шV	-	١ <u>ع</u> د	11
		品								
如	果	剪	子	损	坏	或	断	裂	,	切
勿	使	用	本	产	品	0				
除	非	受	到	负	责	其	安	全	人	$\pm$
的	适	当	监	护	,	否	则	,	本	产
品	不	适	合	身	体	官	能	或	心	智
能	力	退	化	的	ĴĹ	童	或	成	人	使
用	0	_	般	情	况	下	,	我	们	建
议	将	此	产	品	置	于	儿	童	无	法
接	触	的	地	方	0	如	电	量	耗	尽
		期								
生	漏	液	0	为	了	保	护	您	和	此
产	品	,	请	适	时	取	下	电	池	;
在	处	理	漏	液	电	池	时	,	请	避
免	皮	肤	接	触	0					

# 电池

**-,**⊷ 本产品使用-池。为<sup>,,,, 조</sup>" 本产品使用一节AAA 1.5Ve 池。为达到最佳性能,请作 用碱性锰电池(型号LRO3、 AM4、AAA,例如金霸王)。 1.5V电 请使 确定电器已关闭。 向 下拉(a), 取下电池仓盖子 (4)。 插入 、电池, (+)极和(-)极方 向见标记 上电池仓 盖.

(3)向上滑动,启动产品。将 前子逆向去除毛发的方向, 并引导动子。 (3)向上滑动, 生长的方向。 为达到最佳的 效果, 在使用时, 用· 只手 拉紧皮肤。

本产品配备两把长度不同的 修剪梳子,以将毛发修剪到 均匀的长度(例如眉毛的轮 廓)**:** 

短修剪梳子(6): 5mm / 1/5英寸 长修剪梳子(7): 8mm / 1/3英寸

8mm ۰J

在连接修剪梳子之前,确定 产 品已关闭。

我们建议您开始使用长修剪 梳子。沿剪子上方移动修剪 梳子,直到其喀嚓一声就公。 梳子, 打开产品, 打开产品,逆毛发生长方向 轻梳您的眉毛,如(c)中所示。 确保梳子的任一侧平直贴靠

皮肤

**清洁和保养** 在清洗之前,关闭产品。 逆时针旋转90度,取下剪子 (2),然后将剪子拿起。您可 在流动温水下冲洗卸下的剪 7

在连接之前, 请确保剪子完

在建按之时, 四7770 全干燥。 存放时,则连接保护罩(1)。 在用水清洗之后,我们建议 您一年两次滴一滴轻机油润 ... 滑刀片

如有变化, 恕不另行通知。

产品使用寿命结束	¥
时,不得将空电池和	X
产品与一般废弃物或	
垃圾一同丢弃。请将	
其送至博朗服务中心	
或当地正规收集点进	
行处理。	

### 保证

保证材料和工艺2年无缺陷(电 池除外)。本保证仅在本产 品正式销售的国家有效。 池除外)。

德国博朗精准修剪器
PT10
型号:5363
经销商:广州宝洁有限公司
地址: 广州市经济技术开发区滨河路一号
邮编: 510730
原产国:中国
Braun是德国博朗公司
(BraunGmbH)的注册商标。
经德国博朗授权制造

## 保修

我们为产品提供为期2年的 保修,保修期从购买日开始 计算。

在保修期内对于产品因材料 或生产过程引起的各种瑕疵, 我们会视情况更换零件或整 个产品。

申请保修必须将本产品和能 够证明购买日期的证据(购 货发票)一起交给授权的 Braun维修站,本产品附有 一张受权的维修站名单。

请确认已将购货发票放置在 安全的地方。

上述保修不包括以下内容:

- 由于使用不当而造成的产品损坏(如:使用错误的电流、电压,将产品插入不合适的插座,或者人为损坏等)。
- 正常使用引起的产品老化、 磨损、但对产品的使用功 能及价值影响不大。
- 如果产品经过未经授权的 人员的修理,或产品使用 了非本公司(Braun)的零件, 保修期即终止。
- 非家庭使用 ( 如工业、商 业用 ) 引起的损坏。
- 本保修适用于全球范围的 所有经博朗公司及其指定 供应商出售的博朗产品。 并且在当地没有进口限制 或其它法律条文限制本保 修即可执行。
- 在保修期内提供的服务并 不影响保修期的结束,保 修期中替换的零件或整机 的保修服务与本产品的保 修期同时终止。
- 除非确有法律规定,本公司不对其他任何要求负责。
   同供贷商的销售合同中规定的各项权利不受此保修的影响。

如果需要保修或维修,请与 当地或就近的维修站联系。 顾客免费热线:800 8201357

л

后服务部地址确定于2009年11月, 不定期更新。如有疑问,请咨询客户

博朝(上海)国际贸易有限公司 地址:上海市外高桥保税区非 拉路55号综合楼第四层 A部位 后服务日常联系地址: 中国上海浦东三林路550号 邮编:200124

上海通思党易有限公司可办理理 电 话:(021) 64606449 / 645 E-mail: sp-order@hansi.sh.c 邮 编:201100 注: 如果当地无特约维修站, 维修站联系。 個话免费咨询热线: 800-820-手机用户咨询热线: 400-820-请与就近的

最新Braun售后服务部地址 公司名称 地址 联系电话 安帮北站天路家用电器维修服务社
 ⊢海市永兴路540号(靠近西藏北路)

~≝ ホ路210 - → に广场) 22533 (中侨家电维修服务有同 1市采荷路10号 17438 1~~~

青岛市市南区超维影视通讯技术服务部 青岛市南区银川西路3号政泰商务楼202室

厦门市思明区新鹭声电子技术服务部 厦门后埭溪路248号之6、7、8号

南京博伊华电子电器经营部 南京市中山北路223号建达大厦

无锡新讯通信设备服务有限公司 无锡市五爱北路27号

常州市金博家电经营部 常州市天宁区迎宾路江南佳园4-S-10

南通市崇川雷声电器服务中心 南通市虹桥路怡安花苑11幢04店面

宁波市江东明楼甬城家电维修部 宁波市江东惊驾路506号

7777344 宁波海曙创佳数码家电维修部 宁波市苗圃路39弄50号(海关对面) 37134422

87134422 济南市天桥区启航家电服务部 济南市历下区历山路57号历山商务®

心407室 86950100 合肥国升数码技术服务部 合肥市金寨路93号鸿基国际/ 2655887/2654456 郑州百川电器技术有限公司 郑州百北下街79号 2006 400°

北京盛侨家用电器维修服务中心 北京市丰台区方庄芳群园2区6号 芳公寓408室 67698025/67630617

河江 14 mm... 石家庄市機集路 70 % 6601 1733 天津市大东电器维修有限公司 天津市市东区演江道10 % 72 120167 天津市南开区三马路 12 0 % 27 12 0 168 / 27 12 0 7 % 次阳市 今东业家电技术服务有限公司 次阳市 沙河区承德路36-1 24 24 7 0 309 / 24 8 5 3 4 0 % 哈尔滨市道里区信誉进口家电修理部 哈尔滨市道里区信誉进口家电修理部 哈尔滨市道里区信誉进口家电修理部

84644674 哈尔滨市道外区尼康映像数1 哈尔滨市道外区尾康映像数1 88940125

大连中服电子技术服务中心 大连市沙河口区西南路791号--7

86841988 长春市朝阳区圣炎夏普维修站 长春市工农大路28号(桂林路与富锦 路交汇) 空空空空

85625783 南关区鑫昌行声光科技商行 长春市南关区卫星路卫星嘉园13栋3单 元205门市 <sup>55308851</sup>

55399851 奥西百利商贸有限公司 西安市丰禾路6号丰禾小区22号楼2楼 56220211

市博健电器有限公司 市五羊新城明月二路春风路E

称自运 87386165(6) 深圳市顺电连锁股份有限公司 深圳市华强北路上步工业区202栋2楼东

63260235 重庆市渝中区中侨家用电器维修部 重庆市江北区建新南路18号城市领地A 栋附2楼7号门市 6352717

武汉市江岸区兆利达家电维修中心 汉口解放大道1439号4栋3单元101室

83527117 南宁市南方家用电器维修中 广西南宁市唐山路29号首层 3118895/3907787 昆明松和电器有限公司 昆明市环城北路280号 3645557

长沙市俊铭电器有限公司 长沙市车站南路934-940号

区得盛家用电器维修普 西商业街10号

福州福春电器维修服务有限公司 福州市塔头路328号顺意园一楼店面(

·司可办理零件及产 6449 / 64584260 hansi.sh.cn

温州市声像技术服务公司 温州市锦绣路利府花苑5幢 88850706/10187

85790611 长沙

1976 省家用电器维修中心 庄市槐北路70号

66964036

心有限公司

站-122 杭

5170118

3420092

82729805 常州

88366 南通

> 6889688 /85102

城市 中区

上海 00235

> 苏州 苏州家用 苏州市干 |电器维修服务 -将西路1168号

青岛

61003 厦门

0003 南京

14031 无锡

26001

15040

15000 宁波

250013 济南

230022 合肥

50000 郑州

北区 100078 北京

00035 北京

> 0021 石家庄

0100 天津 沈阳 011

6021 大连

130021 长春

130000 长春

710014 西安

518028 深圳

0020 重庆

30015

0007

017 成都 佛山

50001 福州 福州

325000 温州

南 Ì 1 昆明 武汉

南区 510600

哈尔河

宁波

01100 上海

州锅炉厂 7582122

800-820-1357 400-820-1357

brAun

上述售后期 可能有不定 服务热线。 固话免费者 手机用户者

咨询热线:800-820-1357 咨询热线:400-820-1357

5

### English

Please read the use instructions carefully and thoroughly before using the appliance.

using the appliance. **Warning** Keep the appliance out of the reach of children. Do not use the appliance on irritated skin. Never use the appliance if the cutting head is damaged or broken. This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, unless they are given supervision by a person responsible for their safety. In general, we recom-mend that you keep the appli-ance out of reach of children. Batteries may leak if empty or not used for a longer time. In order to protect you and the appliance, please remove batteries in a timely manner and avoid skin contact whilst handling leaking batteries. Batteries

Batteries This appliance operates with one AAA 1.5 V battery. For best performance, use an alkaline manganese battery (type LR03 AM4, AAA, e.g. Duracell). Make sure the appliance is turned off. Remove the battery com-partment cover (4) by pulling downwards (a). Insert the battery with the (+) and (-) poles in the direction marked. Close the battery compartment

Using the appliance Your Exact Series Precision Trimmer is perfectly suited for closely and safely removing any unwanted hair on body and face (e.g. neck, back, eye brows). Slide the on/off switch (3) up to turn the appliance on. Place the cutting head (2) against the hair to be removed and guide it slowly against the direction of hair growth. For optimum results, pull the skin taut with one hand while using. The appliance comes with two

The appliance comes with two trimming combs in different lengths for trimming hair to a uniform length (e.g. eyebrow shaping): • short trimming comb (6): 5 mm / 1/5" • long trimming comb (7): 8 mm / 1/3"

8 mm / 1/3" Ensure that the appliance is turned off before attaching a trimming comb. We recommend that you start with the long trimming comb. Slide it over the cutting head (2) until it clicks into place. Turn on the appliance and gently comb your eyebrow against the direction of hair growth as shown in (c). Ensure that either one of the comb sides is guided flat against the skin.

Cleaning and maintenance Always turn off the appliance before cleaning. Remove the cutting head (2) by turning counterclockwise 90° and then lifting it up. You can rinse the detached cutting head under warm running water. Please ensure that the cutting head is complete dry before attaching it. For storage, attach the protective cap (1). We recommend lubricating the blade with a drop of light machine oil twice a year or afte cleaning with water.

Subject to change without notice

At the end of their life, empty batteries and the appliance should not be thrown away with general waste or rubbish. Please dispose of them at Braun Service Centre or a appropriate local collectio point. X at an

Guarantee 2 year guarantee against material and workmanship defects (except battery). Th guarantee is valid in those countries where this produc officially being sold. is duct is