

MANUAL DE INSTRUCCIONES



Plancha

Continental
Platinum

Continental
Platinum

Dry Iron



INSTRUCTION MANUAL

IMPORTANT SAFETY INSTRUCTIONS

When using your iron, basic safety precautions should always be followed, including the following:

- READ ALL INSTRUCTIONS BEFORE USING.
 - Use iron only for its intended use.
 - To protect against a risk of electric shock, do not immerse the iron in water or other liquid.
 - The iron should always be turned off (refer to “How to Use” section) before plugging into or unplugging from an outlet. Never yank cord to disconnect from outlet; instead grasp plug and pull to disconnect.
 - Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around cord wrap when storing.
 - Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron, take it to a qualified serviceman for examination and repair.
- Incorrect reassembly can cause a risk of electric shock when the iron is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board. Always position iron carefully to prevent it from falling if ironing board is accidentally moved or cord is pulled. Always use heel rest.

SAVE THESE INSTRUCTIONS

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

TAMPER-RESISTANT SCREW

This appliance is equipped with a tamper-resistant screw to prevent removal of the bottom cover. To reduce the risk of fire or electric shock, do not attempt to remove the bottom cover. There are no user serviceable parts inside. Repair should be done only by authorized service personnel.

INSTRUCCIONES IMPORTANTES DE SEGURIDAD

Siempre que utilice su plancha, debe seguir algunas precauciones básicas de seguridad, incluyendo las siguientes:

- LEA TODAS LAS INSTRUCCIONES ANTES DE UTILIZAR EL PRODUCTO.
- Use la plancha únicamente para planchar.
- No sumerja la plancha en agua ni en ningún otro líquido para evitar el riesgo de un choque eléctrico.

Siempre apague la plancha (vea la sección “Como usar”) antes de conectarla o desconectarla de la toma de corriente. Nunca tire del cable para desconectarlo, sujete el enchufe para hacerlo.

- No permita que el cable entre en contacto con superficies calientes. Permita que la plancha se enfríe antes de guardarla. Enrolle el cable holgadamente alrededor del talón de la plancha.
- No haga funcionar la plancha si ésta tiene dañado el cable o si la plancha se ha dejado caer y se ha estropeado. A fin de reducir a un mínimo el riesgo de un choque eléctrico, no desarme la plancha. Acuda a una persona de servicio, calificada para revisar y efectuar las reparaciones necesarias. El armar la plancha incorrectamente puede ocasionar el riesgo de un choque eléctrico cuando la plancha esté en funcionamiento.

Se requiere supervisión cuando cualquier unidad electrónica esté siendo usada cerca de los niños o por ellos mismos. No desatienda la plancha mientras esté conectada o cuando esté sobre la tabla de planchar. Coloque siempre la plancha con cuidado para evitar que se caiga al moverse la tabla o al tirar del cable. Siempre use el talón de descanso.

GUARDE ESTAS INSTRUCCIONES

ENCHUFE POLARIZADO

Este artefacto posee un enchufe polarizado (un contacto es más ancho que el otro). Para reducir los riesgos de choque eléctrico, este enchufe entra en un contacto polarizado de una sola manera. Si el enchufe no entra en su contacto, invértalo. Si aun así no entra, busque la ayuda de un electricista calificado. No intente hacerle ninguna modificación al enchufe.

TORNILLO DE SEGURIDAD

Esta unidad está equipada con un tornillo de seguridad para prevenir que se le remueva la cubierta en la parte de abajo. Para reducir el riesgo de incendio o choque eléctrico, por ningún motivo intente quitar esta cubierta. La unidad no contiene partes reparables por dentro. Cualquier reparación deberá ser llevada a cabo únicamente por personal de servicio autorizado.

How to Use

This appliance is for household use only.

Before first use, remove any labels, stickers or tags attached to the body or soleplate of the iron.

Plug in the iron.

Select temperature using Temperature Selector

Tip: If unsure of a garment's fiber, test a small area (on an inside seam or hem) before ironing.

Care and Cleaning

This product contains contains no user serviceable parts. Refer service to qualified service personnel.

CLEANING OUTSIDE SURFACES

Make sure iron is unplugged and has cooled completely. Wipe the soleplate and outer surfaces with a soft cloth dampened with water a mild household detergent. Never use abrasives, heavy-duty cleansers, vinegar or scouring pads that may scratch or discolor the iron.

STORING YOUR IRON

1. Unplug the iron and allow it to cool.
2. Check that the selector is set to DRY.
3. Wrap the cord loosely around the heel rest and tuck in the plug to secure it.
4. Store vertically on its heel rest.

Como usar

Este aparato es solamente para uso doméstico.

Antes de usar la plancha por primera vez, retire cualquier etiqueta o calcomanía adherida al cuerpo o a la plancha.

Enchufe la plancha.

Seleccione la temperatura deseada con el Selector de Temperatura

Consejo: Si no está seguro de la fibra de una prenda, haga una prueba en un área pequeña (en una costura o dobladillo interno) antes de planchar.

Cuidado y limpieza

El aparato no contiene piezas de utilidad para el consumidor. Para servicio, acuda a personal de asistencia calificado.

LIMPIEZA DE LAS SUPERFICIES EXTERIORES

Asegúrese de que la plancha esté desenchufada y se haya enfriado por completo. Limpie la plancha y demás superficies exteriores con un paño suave humedecido con agua y un detergente suave. Nunca utilice abrasivos, limpiadores fuertes, vinagre ni almohadillas de fibras metálicas que puedan rayar o decolorar la plancha.

ALMACENAMIENTO DE LA PLANCHA



1. Desconecte la plancha y permita que se enfríe.

2. Asegúrese de que el selector esté en seco.

3. Enrolle el cable alrededor del talón de apoyo y sujete el enchufe con el cable.

4. Guarde la plancha en posición vertical sobre el talón de descanso.

Knowing your Iron

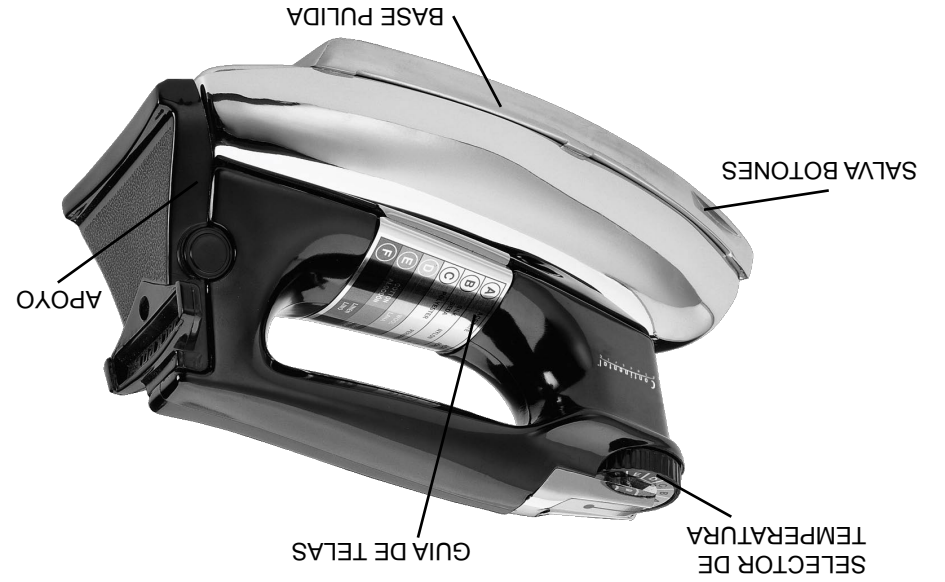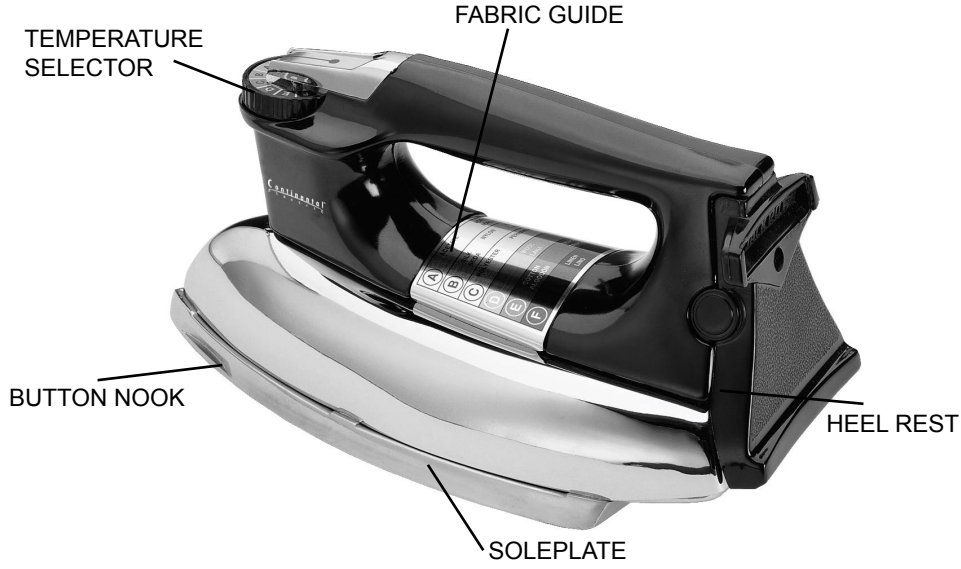

Conozca su plancha