




## *Direct View Television*

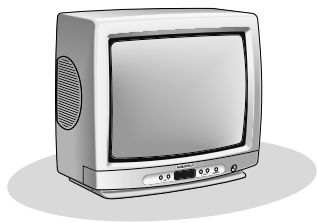

**Model - Chassis  
Reference Guide**

*Final Edition*



# Direct View Television Model - Chassis Reference Guide

## TABLE OF CONTENTS

***How to use this guide*..... i**

**SECTION 1 - MODEL REFERENCE ..... 1-1**

- MODEL TO SERVICE MANUAL BASE MODEL
- MODEL TO CHASSIS NUMBER
- MODEL YEAR
- SERVICE MENU CODES
- FEATURES

**SECTION 2 - CHASSIS REFERENCE ..... 2-1**

- CHASSIS TO MODEL NUMBER

**SECTION 3 - SERVICE MANUAL FILE REFERENCE ..... 3-1**

- MODELS BY SERVICE MANUAL



# How To Use This Guide

This guide provides easy access to Mitsubishi Direct View Television model and chassis data. Popular information from a variety of sources has been compiled in one easy to use manual. There are three sections. The examples below show details on how to use this resource.

**NOTE:** For Projection Television and VCR data, refer to the *Projection Television & Video Cassette Recorder Model - Chassis Reference Guide* (P/N: T/M CROSSREF).

## Section 1 - Model Reference

1. Model to Service Manual Base Model
2. Model to Chassis
3. Model Year
4. Service Menu Codes
5. Features

1 Model to Service Manual Base Model (see page 2 for illustration)

4 Service Menu Codes Press "MENU"+ numerical code

Model	Base Manual	Chassis	Year	Service Menu Codes						Features
				Option	Factory	A/V	Circuit	PIP	Sub	
CK-35702	CS-35701	YA2	1993	2358			2357			1,4,8
CK-35804	CS-35803	YA-2B	1995	2358			2357			1,2,3,6,7,8
CK-35FX2	CS-35FX1	WF	1992	008						1,2,4,8

2 Model to Chassis

3 Model Year

5 Features

1) S - VHS Inputs	4) Standard PIP	7) Starsight
2) A / V Network	5) Advanced PIP	8) MCS
3) Closed Caption	6) Two Tuner PIP	

*Example of Section 1*

## Section 2 - Chassis Reference


Enables you to quickly locate all models that use the same chassis type.

<b>XM-0</b>	
CK-27304	Models with similar chassis
CK-27306	
CS-26201	
CS-26301	

*Example of Section 2*

**Section 3 - Service Manual File Reference**

Enables you to identify all Models included in the same Service Manual.

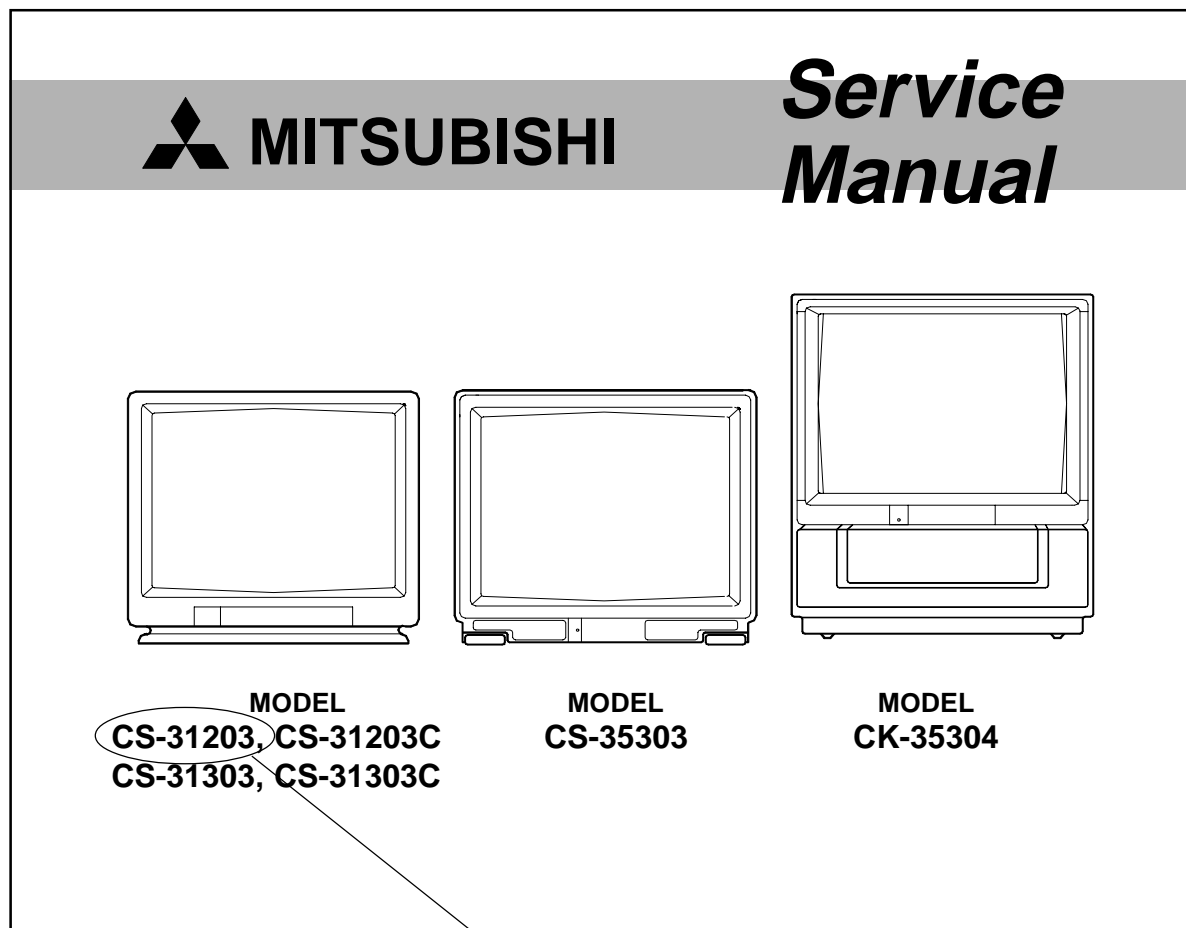

**Base Model**

Service Manuals should be filed under the Base Model. This will be the first model listed on the front of the Service Manual. In this example, the Base Model is CS-31203. A cover page should be filed for all the other models listed, referring back to the Base Model. Or, use the Model Reference in *Section 1* to look up the Base Model. **Section 3 can be used to set up and maintain a complete file system.**

Base Model

<u>BASE MODEL</u>	<u>MODELS IN MANUAL</u>
<b>CS-31203</b>	CK-35304
	CS-31203
	CS-31203C
	CS-31303
	CS-31303C
	CS-35303

All models included in the same Service Manual.

*Example of Section 3*

## **SECTION 1 - MODEL REFERENCE**

- MODEL TO SERVICE MANUAL BASE MODEL
- MODEL TO CHASSIS NUMBER
- MODEL YEAR
- SERVICE MENU CODES
- FEATURES

# Direct View TV Model Reference

Model	Base Manual	Chassis	Year	Service Menu Codes						Features
				Option	Factory	A/V	Circuit	PIP	Sub	
AM-1301	AM-1301	ME-1	1983							
AM-3501R(H)	AM-3501R	SX-1	1990							
CK-25B14	CK-25B14	MA3-C72R	1984							
CK-25B17	CK-25B17	MA3-C72R	1984							
CK-25B19	CK-25B17	MA3-C72R	1984							
CK-25E06	CK-25E06	RS5-CO6	1984							8
CK-2552	CK-2552	QA-7	1979							
CK-2553	CK-2553	QA-7	1980							
CK-2560R	CK-2560R	MU-5	1982							
CK-2561R	CK-2561R	MA-1	1984							8
CK-2573R	CK-2573R	MA-7	1983							
CK-2575R	CK-2575R	MA-7	1984							
CK-2582	CK-2582	MU-5	1981							
CK-2583R	CK-2583R	MA-1	1983							
CK-2584R	CK-2583R	MA-1	1983							
CK-2585R	CK-2585R	MA-1	1984							
CK-2587R	CK-2587R	MA-1	1984							8
CK-2588R	CK-2587R	MA-1	1984							8
CK-2600R	CK-2600R	SM2-2	1987							8
CK-2602R	CS-2656R	TM2-B	1988							8
CK-2604R	CK-2604R	TM3-A	1988							8
CK-2605R	CK-2604R	TM3-A	1988							8
CK-2606R	CK-2606R	UM2-B	1989							1,8
CK-2607R	CK-2607R	UM2-B	1990							1,8
CK-2630R	CK-2630R	TM4-B	1989							1,8
CK-2631R	CK-2630R	TM4-B	1989							1,8
CK-2662R	CK-2662R	MA3-3	1985							8
CK-2688R	CK-2662R	MA3-3	1985							8
CK-2689R	CK-2689R	RA-1	1986							8
CK-2690R	CK-2689R	RA-1	1986							8
CK-2691R	CK-2689R	RA-1	1986							8
CK-2693R	CK-2693R	SA-1	1987							
CK-2694R	CK-2693R	SA-1	1987							1,8
CK-2730R	CS-2723R	VM1-A	1990							1,8
CK-27304	CK-27304	XM-0	1994	008				007		1,3,4,8

\* On some models, the Service Menus may not be activated due to the customer's selection of the optional *Advanced Icon Menu*. Reset to the *Standard Menu* by:

- 1) Press <MENU>
- 2) Press <ENTER>
- 3) Press <UP/DOWN ARROWS> to select the *Standard Menu*
- 4) Press <ENTER>
- 5) Press <MENU> twice to exit.

### Direct View TV Feature Index

- |                   |                  |                                     |
|-------------------|------------------|-------------------------------------|
| 1) S - VHS Inputs | 4) Standard PIP  | 7) Starsight - <MENU> 2,3,5,6       |
| 2) A / V Network  | 5) Advanced PIP  | 8) MCS                              |
| 3) Closed Caption | 6) Two Tuner PIP | 9) TV GUIDE Plus+<br><MENU> 2,3,5,6 |

# Direct View TV Model Reference

Model	Base Manual	Chassis	Year	Service Menu Codes						Features
				Option	Factory	A/V	Circuit	PIP	Sub	
CK-27306	CK-27306	XM-0	1995	008				007		1,3,4,8
CK-31MX2	CK-31MX2	XM	1992	008				007	007	1,4,8
CK-3101R	CK-3101R	SA-2	1987							1
CK-3112R	CS-3103R	TA-B	1988							1,4,8
CK-3136R	CS-3535R	WF-B	1991	008						1,4,8
CK-31302	CK-31302	XM1	1993	008				007	007	1,3,4,8
CK-31304	CK-31304	JU-0	1995	2358			2357			1,3,5,8
CK-32308	CK-32308	ZM	1996	2358	1370	1379	2357			1,3,5,8
CK-32310	CS-32309	AM	1997	2358	1370	1379	2357			1,3,5,8
CK-35FX2	CS-35FX1	WF	1992	008						1,2,4,8
CK-35MX2	CK-31MX2	XM	1992	008				007	007	1,4,8
CK-35MX3	CK-31MX2	XM	1992	008				007	007	1,4,8
CK-3501R	CK-3501R	MA3-4	1985							8
CK-3502R	CK-3502R	RA-2	1986							8
CK-3513R	CK-3513R	SA-3	1987							1,8
CK-3514R	CS-3504R	TA-C	1988							1,4,8
CK-3526R	CK-3526R	WA-C	1991	008						1,4,8
CK-3527R	CK-3526R	WA-C	1991	008						1,4,8
CK-3530R	CS-3505R	UA-B	1989							1,8
CK-3531R	CS-3521R	VA-B	1990	008						1,4,8
CK-3536R	CS-3535R	WF-B	1991	008						1,4,8
CK-3551R	CK-3551R	RA-2	1986							8
CK-3551RS	CK-3551R	RA-2	1986							8
CK-3552R	CK-3551R	RA-2	1986							8
CK-3552RS	CK-3551R	RA-2	1986							8
CK-3553R	CK-3551R	RA-2	1986							8
CK-3553RS	CK-3551R	RA-2	1986							8
CK-3555R	CK-3555R	SA-3	1987							1,8
CK-3557R	CK-3555R	SA-3	1987							1,8
CK-3557RS	CK-3555R	SA-3	1987							1,8
CK-3560R	CS-3504R	TA-C	1988							1,4,8
CK-35304	CS-31203	JU-0	1994	2358			2357			1,3,4,5,8
CK-35306	CK-35306	JU-0	1995	2358			2357			1,3,5,8
CK-35308	CK-32308	ZM	1996	2358	1370	1379	2357			1,3,5,8
CK-35402	CS-27401	XM-2	1993	008				007	007	1,3,4,8

\* On some models, the Service Menus may not be activated due to the customer's selection of the optional *Advanced Icon Menu*. Reset to the *Standard Menu* by:

- 1) Press <MENU>
- 2) Press <ENTER>
- 3) Press <UP/DOWN ARROWS> to select the *Standard Menu*
- 4) Press <ENTER>
- 5) Press <MENU> twice to exit.

### Direct View TV Feature Index

- |                   |                  |                                     |
|-------------------|------------------|-------------------------------------|
| 1) S - VHS Inputs | 4) Standard PIP  | 7) Starsight - <MENU> 2,3,5,6       |
| 2) A / V Network  | 5) Advanced PIP  | 8) MCS                              |
| 3) Closed Caption | 6) Two Tuner PIP | 9) TV GUIDE Plus+<br><MENU> 2,3,5,6 |



# Direct View TV Model Reference

MODEL REFERENCE

Model	Base Manual	Chassis	Year	Service Menu Codes						Features
				Option	Factory	A/V	Circuit	PIP	Sub	
CK-35702	CS-35701	YA2	1993	2358			2357			1,4,8
CK-35804	CS-35803	YA-2B	1995	2358			2357			1,2,3,6,7,8
CK-36310	CS-36309	AM	1997	2358	1370	1379	2357			1,3,5,8
CM-1901	CM-1901	MU-9	1983							
CM-2501	CM-2501	MU-8	1983							
CS-13RX1	CS-13RX1	XL	1992							
CS-13RX2	CS-13RX1	XL	1992							
CS-13SX1	CS-13RX1	XL	1992							8
CS-1300	CS-1300	PA-1	1977							
CS-1302	CS-1302	QA-1	1977							
CS-1303	CS-1303	MU-1	1980							
CS-1304	CS-1304	MS-3	1983							
CS-1304A	CS-1304A	MS-4	1983							
CS-1305	CS-1305	MS-3	1984							
CS-1305A	CS-1304A	MS-4	1984							
CS-1330	CS-1330	KA-1	1977							
CS-1331	CS-1331	PA-1	1977							
CS-1332	CS-1332	QA-1	1978							
CS-1333	CS-1333	QA-1	1979							
CS-1333U	CS-1333U	MU-1	1981							
CS-1334	CS-1334	MS-3	1982							
CS-1340R	CS-1340R	MA-9	1983							
CS-1341R	CS-1341R	MA-9	1984							
CS-1342R	CS-1342R	RS-1	1985							
CS-1343R	CS-1342R	RS-1	1985							
CS-1344R	CS-1342R	RS-1	1985							
CS-1345R	CS-1345R	SS-1	1987							
CS-1346R	CS-1346R	TS-A	1988							
CS-1347R	CS-1347R	VL-A	1989							
CS-1348R	CS-1348R	VL-A	1990							
CS-1351	CS-1351	MA-6	1983							
CS-1352	CS-1352	MA-5	1984							
CS-1384R	CS-1384R	MA-5	1984							8
CS-1390	CS-1390	PA-1	1977							
CS-1392	CS-1392	QA-1	1979							

\* On some models, the Service Menus may not be activated due to the customer's selection of the optional *Advanced Icon Menu*. Reset to the *Standard Menu* by:

- 1) Press <MENU>
- 2) Press <ENTER>
- 3) Press <UP/DOWN ARROWS> to select the *Standard Menu*
- 4) Press <ENTER>
- 5) Press <MENU> twice to exit.

### Direct View TV Feature Index

- |                   |                  |                                     |
|-------------------|------------------|-------------------------------------|
| 1) S - VHS Inputs | 4) Standard PIP  | 7) Starsight - <MENU> 2,3,5,6       |
| 2) A / V Network  | 5) Advanced PIP  | 8) MCS                              |
| 3) Closed Caption | 6) Two Tuner PIP | 9) TV GUIDE Plus+<br><MENU> 2,3,5,6 |

# Direct View TV Model Reference

Model	Base Manual	Chassis	Year	Service Menu Codes						Features
				Option	Factory	A/V	Circuit	PIP	Sub	
CS-1395	CS-1395	MU-1	1981							
CS-1396R	CS-1396R	MA-5	1983							
CS-13101	CS-13101	XL1	1993							3
CS-13102	CS-13101	XL1	1993							3
CS-13103	CS-13103	SN-50	1995							3
CS-13104	CS-13104	SN-50	1995							3
CS-13201	CS-13101	XL2	1993							3,8
CS-1453	CS-1453	RS-2	1985							
CS-1454R	CS-1453	RS-2	1985							
CS-1456R	CS-1456R	RS-7	1986							
CS-1457R	CS-1457R	SS-2	1987							
CS-1485R	CS-1485R	MA3-1	1985							8
CS-1530	CS-1330	KA-1	1976							
CS-1531	CS-1531	PA-1	1977							
CS-1532	CS-1532	QA-1	1978							
CS-1533	CS-1533	QA-1	1979							
CS-1534	CS-1334	MS-3	1982							
CS-1584R	CS-1384R	MA-5	1984							8
CS-1590	CS-1590	PA-1	1977							
CS-1592	CS-1592	QA-1	1978							
CS-1595	CS-1395	MU-1	1981							
CS-1596R	CS-1396R	MA-5	1983							
CS-1730	CS-1730	KA-2	1976							
CS-1731	CS-1731	PA-2	1978							
CS-1732	CS-1732	QA-5	1978							
CS-1733	CS-1733	QA-6	1978							
CS-1790	CS-1790	PA-2	1976							
CS-1791	CS-1791	PA-1	1977							
CS-1798	CS-1798	MU-3	1981							
CS-1900	CS-1730	KA-2	1976							
CS-1900D	CS-1900D	KA-2	1976							
CS-1900H	CS-1900H	KA-2	1976							
CS-1901	CS-1731	PA-2	1978							
CS-1902	CS-1902	QA-2	1980							
CS-1902A	CS-1902	QA-2	1980							

\* On some models, the Service Menus may not be activated due to the customer's selection of the optional *Advanced Icon Menu*. Reset to the *Standard Menu* by:

- 1) Press <MENU>
- 2) Press <ENTER>
- 3) Press <UP/DOWN ARROWS> to select the *Standard Menu*
- 4) Press <ENTER>
- 5) Press <MENU> twice to exit.

### Direct View TV Feature Index

- |                   |                  |                                     |
|-------------------|------------------|-------------------------------------|
| 1) S - VHS Inputs | 4) Standard PIP  | 7) Starsight - <MENU> 2,3,5,6       |
| 2) A / V Network  | 5) Advanced PIP  | 8) MCS                              |
| 3) Closed Caption | 6) Two Tuner PIP | 9) TV GUIDE Plus+<br><MENU> 2,3,5,6 |

# Direct View TV Model Reference

MODEL REFERENCE

Model	Base Manual	Chassis	Year	Service Menu Codes						Features
				Option	Factory	A/V	Circuit	PIP	Sub	
CS-1902U	CS-1902U	MU-2	1981							
CS-1903	CS-1903	MS-1	1982							
CS-1904	CS-1904	MS-1	1985							
CS-1905	CS-1904	MS-1	1985							
CS-1930	CS-1730	KA-2	1976							
CS-1931	CS-1731	PA-2	1977							
CS-1933	CS-1933	QA-6	1979							
CS-1933U	CS-1933U	MU-2	1981							
CS-1934	CS-1934	MU-2	1981							
CS-1935	CS-1935	MS-1	1982							
CS-1936	CS-1936	MS-1	1983							
CS-1937	CS-1937	RS-3	1985							
CS-1938	CS-1937	RS-3	1985							
CS-1939	CS-1937	RS-3	1985							
CS-1940R	CS-1940R	MA-8	1983							
CS-1941R	CS-1341R	MA-9	1984							
CS-1942R	CS-1942R	RS-3	1985							
CS-1943R	CS-1942R	RS-3	1985							
CS-1944R	CS-1942R	RS-3	1985							
CS-1945R	CS-1945R	SS-3	1987							
CS-1946R	CS-1946R	TS-B	1988							
CS-1950	CK-2582	MU-6	1981							
CS-1950S	CK-2582	MU-6	1981							
CS-1951	CS-1951	MA-3	1983							
CS-1952	CS-1952	MA-8	1984							
CS-1952R	CS-1952	MA-8	1984							
CS-1953	CS-1953	RS-3	1985							
CS-1954R	CS-1953	RS-3	1985							
CS-1960R	CS-1960R	MU-2	1983							
CS-1970	CS-1970	MU-2	1980							
CS-1971	CS-1971	MU-2	1981							
CS-1972R	CS-1972R	MA-3	1983							
CS-1973R	CS-1973R	MA-3	1984							
CS-1982	CS-1982	MU-2	1981							
CS-1983R	CS-1983R	MA-4	1983							

\* On some models, the Service Menus may not be activated due to the customer's selection of the optional *Advanced Icon Menu*. Reset to the *Standard Menu* by:

- 1) Press <MENU>
- 2) Press <ENTER>
- 3) Press <UP/DOWN ARROWS> to select the *Standard Menu*
- 4) Press <ENTER>
- 5) Press <MENU> twice to exit.

### Direct View TV Feature Index

- |                   |                  |                                     |
|-------------------|------------------|-------------------------------------|
| 1) S - VHS Inputs | 4) Standard PIP  | 7) Starsight - <MENU> 2,3,5,6       |
| 2) A / V Network  | 5) Advanced PIP  | 8) MCS                              |
| 3) Closed Caption | 6) Two Tuner PIP | 9) TV GUIDE Plus+<br><MENU> 2,3,5,6 |

# Direct View TV Model Reference

Model	Base Manual	Chassis	Year	Service Menu Codes						Features
				Option	Factory	A/V	Circuit	PIP	Sub	
CS-1984	CS-1984	PA-2	1977							
CS-1984R	CS-1984R	MA-2	1984							8
CS-1985	CS-1985	QA-2	1978							
CS-1993	CS-1993	KA-2	1976							
CS-1994	CS-1791	PA-1	1976							
CS-1995	CS-1995	QA-2	1978							
CS-1997	CS-1997	QA-6	1978							
CS-1997UC	CS-1798	QA-6	1980							
CS-20EX1	CS-20EX1	XM	1992	008					007	1,8
CS-20RX1	CS-20RX1	XL	1992	008						
CS-20RX2	CS-20RX1	XL	1992	008						
CS-20SX1	CS-20SX1	XL-B	1992	008						8
CS-2000	CS-2000	RS-8	1986							
CS-2001R	CS-2000	RS-8	1986							
CS-2002R	CS-2002R	VL-B	1991							
CS-2003R	CS-2003R	VL-B	1991							
CS-2005R	CS-2005R	US2-A	1991							8
CS-2010R	CS-2610RC	UM2-A	1991							1,8
CS-2011R	CS-2011R	RS-8	1986							8
CS-2011RA	CS-2011RA	RS-8	1987							8
CS-2012RA	CS-2011RA	RS-8	1987							8
CS-2013R	CS-2013R	SM2-1	1987							8
CS-2014R	CS-2013R	SM2-1	1987							8
CS-2015R	CS-2015R	US2-A	1989							8
CS-2042R	CS-2042R	RS-8	1986							
CS-2043R	CS-2042R	RS-8	1986							
CS-2044R	CS-2042R	RS-8	1986							
CS-2045R	CS-1954R	SS-4	1987							
CS-2046R	CS-2046R	TS-C	1988							
CS-2047R	CS-2047R	VL-B	1989							
CS-2051R	CS-2051R	MA3-2	1985							8
CS-2051RA	CS-2051R	MA3-2	1985							8
CS-2052R	CS-2051R	MA3-2	1985							8
CS-2053R	CS-2051R	MA3-2	1985							8
CS-2054R	CS-2054R	SM3-1	1987							8

\* On some models, the Service Menus may not be activated due to the customer's selection of the optional *Advanced Icon Menu*. Reset to the *Standard Menu* by:

- 1) Press <MENU>
- 2) Press <ENTER>
- 3) Press <UP/DOWN ARROWS> to select the *Standard Menu*
- 4) Press <ENTER>
- 5) Press <MENU> twice to exit.

### Direct View TV Feature Index

- |                   |                  |                                     |
|-------------------|------------------|-------------------------------------|
| 1) S - VHS Inputs | 4) Standard PIP  | 7) Starsight - <MENU> 2,3,5,6       |
| 2) A / V Network  | 5) Advanced PIP  | 8) MCS                              |
| 3) Closed Caption | 6) Two Tuner PIP | 9) TV GUIDE Plus+<br><MENU> 2,3,5,6 |

# Direct View TV Model Reference

MODEL REFERENCE

Model	Base Manual	Chassis	Year	Service Menu Codes						Features
				Option	Factory	A/V	Circuit	PIP	Sub	
CS-2056R	CS-2054R	SM3-1	1987							8
CS-2058R	CS-2058R	TM2-A	1988							1,8
CS-2060R	CS-2058R	TM2-A	1988							1,8
CS-2061R	CS-2061R	MA-10	1984							8
CS-2062R	CS-2011R	RS-8	1985							8
CS-2062RA	CS-2011RA	RS-8	1985							8
CS-2063R	CS-2011R	RS-8	1986							8
CS-2063RA	CS-2011RA	RS-8	1986							8
CS-2064R	CS-2011R	RS-8	1986							8
CS-2064RA	CS-2011RA	RS-8	1986							8
CS-2070R	CS-2070R	UM2-A	1989							1,8
CS-2085R	CS-2085	MA3-2	1985							8
CS-2087R	CS-2087R	SM3-1	1987							8
CS-20101	CS-13101	XL1	1993							3
CS-20102	CS-13101	XL1	1993							3
CS-20103	CS-20103	SN-50	1995							3
CS-20201	CS-13101	XL2	1993							3,8
CS-20203	CS-20103	SN-50	1995							3
CS-20301	CS-20301	XM1	1993	008					007	1,3,8
CS-2183R	CS-2183R	MA-2	1983							
CS-2184R	CS-1984R	MA-2	1984							8
CS-2190	CS-2190	KA-3	1977							
CS-2192	CS-2192	QA-3	1979							
CS-2193	CK-2553	QA-9	1980							
CS-2195	CS-2195	MU-4	1981							
CS-2566R	CS-2566R	MA-1	1984							8
CS-2571	CS-2571	MU-5	1981							
CS-2572R	CS-2572R	MA-7	1983							
CS-2590	CS-2190	KA-4	1977							
CS-2592	CS-2592	QA-4	1979							
CS-2593	CS-2593	QA-4	1979							
CS-2594	CK-2553	QA-7	1980							
CS-26EX1	CS-20EX1	XM	1992	008				007	007	1,4,8
CS-2610R	CS-2610RC	UM2-B	1989							1,8
CS-2611R	CS-2610R	UM2-B	1989							1,8

\* On some models, the Service Menus may not be activated due to the customer's selection of the optional *Advanced Icon Menu*. Reset to the *Standard Menu* by:

- 1) Press <MENU>
- 2) Press <ENTER>
- 3) Press <UP/DOWN ARROWS> to select the *Standard Menu*
- 4) Press <ENTER>
- 5) Press <MENU> twice to exit.

### Direct View TV Feature Index

- |                   |                  |                                     |
|-------------------|------------------|-------------------------------------|
| 1) S - VHS Inputs | 4) Standard PIP  | 7) Starsight - <MENU> 2,3,5,6       |
| 2) A / V Network  | 5) Advanced PIP  | 8) MCS                              |
| 3) Closed Caption | 6) Two Tuner PIP | 9) TV GUIDE Plus+<br><MENU> 2,3,5,6 |

# Direct View TV Model Reference

Model	Base Manual	Chassis	Year	Service Menu Codes						Features
				Option	Factory	A/V	Circuit	PIP	Sub	
CS-2642R	CS-2651R	RS-6	1986							8
CS-2642RA	CS-2651RA	RS-6	1986							8
CS-2643R	CS-2651R	RS-6	1986							8
CS-2643RA	CS-2651RA	RS-6	1986							8
CS-2644R	CS-2651R	RS-6	1986							8
CS-2644RA	CS-2651RA	RS-6	1986							8
CS-2651R	CS-2651R	RS-6	1986							8
CS-2651RA	CS-2651RA	RS-6	1986							8
CS-2653R	CS-2653R	SM2-2	1987							8
CS-2654R	CS-2653R	SM2-2	1987							8
CS-2655R	CS-2655R	SA-1	1987							1,8
CS-2656R	CS-2656R	TM2-B	1988							1,8
CS-2657R	CS-2657R	TM3-A	1988							1,8
CS-2658R	CS-2657R	TM3-A	1988							1,8
CS-2667R	CS-2667R	MA3-3	1985							8
CS-2669R	CS-2669R	RA-1	1985							8
CS-2670R	CS-2670R	RA-1	1985							4,8
CS-2671R	CS-2671R	TA-A	1988							1,4,8
CS-26201	CS-26201	XM-0	1994	008					007	1,3,8
CS-26301	CS-26201	XM-0	1993	008					007	1,3,4,8
CS-27EX1	CS-20EX1	XM	1992	008				007	007	1,4,8
CS-27MX1	CS-27MX1	XM	1992	008				007	007	1,4,8
CS-27TX1	CS-27TX1	XM-C	1992	008				007	007	1,4,8
CS-2710R	CS-2710RA	UM2-C	1991							1,8
CS-2715R	CS-2715R	WM-A	1991	008						1,8
CS-2720R	CS-2720R	TM4-B	1989							
CS-2721R	CS-2720R	TM4-B	1989							
CS-2722R	CS-2722R	TM4B	1991							
CS-2723R	CS-2723R	VM1-A	1990							
CS-2724R	CS-2724R	VM2-A	1990							
CS-2725R	CS-3525R	WA-A	1991	008						
CS-2771R	CS-2724R	VM2-A	1990							
CS-27200	CS-27200	XM-0	1994	008				007	007	3
CS-27200A	CS-27200	XM-0	1994	008				007	007	3
CS-27201	CS-27201	XM-0	1994	008				007	007	1,3,8

\* On some models, the Service Menus may not be activated due to the customer's selection of the optional *Advanced Icon Menu*. Reset to the *Standard Menu* by:

- 1) Press <MENU>
- 2) Press <ENTER>
- 3) Press <UP/DOWN ARROWS> to select the *Standard Menu*
- 4) Press <ENTER>
- 5) Press <MENU> twice to exit.

### Direct View TV Feature Index

- |                   |                  |                                     |
|-------------------|------------------|-------------------------------------|
| 1) S - VHS Inputs | 4) Standard PIP  | 7) Starsight - <MENU> 2,3,5,6       |
| 2) A / V Network  | 5) Advanced PIP  | 8) MCS                              |
| 3) Closed Caption | 6) Two Tuner PIP | 9) TV GUIDE Plus+<br><MENU> 2,3,5,6 |

# Direct View TV Model Reference

MODEL REFERENCE

Model	Base Manual	Chassis	Year	Service Menu Codes						Features	
				Option	Factory	A/V	Circuit	PIP	Sub		
CS-27205	CS-27205	YM-0	1995	2358			2357			3,8	
CS-27209	CS-27209	SN-71	1997	See the Service Manual							3,8
CS-27301	CS-26201	XM-0	1993	008				007	007	1,3,4,8	
CS-27303	CS-27201	XM-0	1994	008				007	007	1,3,4,8	
CS-27305	CS-27205	YM-0	1995	2358			2357			3,8	
CS-27309	CS-27209	SN-71	1997	See the Service Manual							3,4,8
CS-27401	CS-27401	XM-2	1993	008				007	007	1,3,4,8	
CS-27403	CS-27403	XM-2	1993	008				007	007	1,3,4,8	
CS-27405	CS-27503	JU-2	1995	2358			2357			1,2,3,5,8	
CS-27407	CS-27407	JU-2	1996	2358			2357			1,2,3,5,8	
CS-27503	CS-27503	JU-2	1994	2358			2357			1,2,3,4,5,8	
CS-27609	CS-27609	ZM-2	1997	2358	1370	1379	2357			1,2,3,6,8,9	
CS-27701	CS-27701	YA2	1994	2358			2357			1,2,3,4,8	
CS-31AX1	CS-31AX1	XA	1992	008						1,4,8	
CS-31FX1	CS-35FX1	WF	1992	008						1,2,4,8	
CS-31MX1	CS-27MX1	XM	1992	008				007	007	1,4,8	
CS-3103R	CS-3103R	TA-B	1988							1,4,8	
CS-3104R	CS-3104R	VM1-B	1990							1,8	
CS-3114R	CS-3114R	VM2-B	1990							4	
CS-3115R	CS-2715R	WM-B	1991	008						1,8	
CS-3120R	CS-3120R	UA-A	1989							1,8	
CS-3121R	CS-3121R	VA-A	1990							1,4,8	
CS-3125R	CS-3525R	WA-B	1991	008						1,8	
CS-3131R	CS-3121R	VA-A-21R	1990							1,4,8	
CS-3135R	CS-3535R	WF-B	1991	008						1,4,8	
CS-31203	CS-31203	JU-0	1994	2358			2357			1,3,8	
CS-31205	CS-31205	JU-0	1995	2358			2357			1,3,8	
CS-31301	CS-20301	XM1	1993	008				007	007	1,3,4,8	
CS-31303	CS-31203	JU-0	1994	2358			2357			1,3,5,8	
CS-31305	CS-31305	JU-0	1995	2358			2357			1,3,5,8	
CS-31309	CS-31305	JU-0	1995	2358			2357			1,3,5,8	
CS-31505	CS-31505	JU-2B	1995	2358			2357			1,2,3,6,8	
CS-32207	CS-32207	ZM	1996	2358	1370	1379	2357			1,3,8	
CS-32307	CS-32307	ZM	1996	2358	1370	1379	2357			1,3,5,8	
CS-32309	CS-32309	AM	1997	2358	1370	1379	2357			1,3,5,8	

\* On some models, the Service Menus may not be activated due to the customer's selection of the optional *Advanced Icon Menu*. Reset to the *Standard Menu* by:

- 1) Press <MENU>
- 2) Press <ENTER>
- 3) Press <UP/DOWN ARROWS> to select the *Standard Menu*
- 4) Press <ENTER>
- 5) Press <MENU> twice to exit.

### Direct View TV Feature Index

- |                   |                  |                                     |
|-------------------|------------------|-------------------------------------|
| 1) S - VHS Inputs | 4) Standard PIP  | 7) Starsight - <MENU> 2,3,5,6       |
| 2) A / V Network  | 5) Advanced PIP  | 8) MCS                              |
| 3) Closed Caption | 6) Two Tuner PIP | 9) TV GUIDE Plus+<br><MENU> 2,3,5,6 |

# Direct View TV Model Reference

Model	Base Manual	Chassis	Year	Service Menu Codes						Features
				Option	Factory	A/V	Circuit	PIP	Sub	
CS-32507	CS-32507	JU-2B	1996	2358	1370	1379	2357			1,2,3,6,8
CS-32509	CS-32509	ZM-2	1997	2358	1370	1379	2357			1,2,3,6,8,9
CS-35AX1	CS-31AX1	XA	1992	008						1,4,8
CS-35FX1	CS-35FX1	WF	1992	008						1,2,4,8
CS-35MX1	CS-27MX1	XM	1992	008				007	007	1,4,8
CS-35X7	CS-35X7	WX	1992	008						1,4,8
CS-3503R	CS-3503R	SA-3	1987							1,8
CS-3504R	CS-3504R	TA-C	1988							1,4,8
CS-3505R	CS-3505R	UA-B	1989							1,8
CS-3506R	CS-3506R	VM2-C	1990							1,4,8
CS-3515R	CS-2715R	WM-C	1991	008						1,8
CS-3520R	CS-3505R	UA-B	1989							1,8
CS-3521R	CS-3521R	VA-B	1990							1,4,8
CS-3525R	CS-3525R	WA-C	1991	008						1,4,8
CS-3535R	CS-3535R	WF-C	1991	008						1,4,8
CS-3540R	CS-3540R	UD	1991							1,4,8
CS-35201	CS-35201A	XM1	1993	008				007	007	1,3,8
CS-35203	CS-27701	XM-1	1994	008				007	007	1,3,8
CS-35203	CS-35203	XM-1	1995	008			007			1,3,8
CS-35207	CS-32207	ZM	1996	2358	1370	1379	2357			1,3,8
CS-35301	CS-20301	XM1	1993	008				007	007	1,3,4,8
CS-35303	CS-31203	JU-0	1994	2358			2357			1,3,5,8
CS-35305	CS-35305	JU-0	1995	2358			2357			1,3,5,8
CS-35307	CS-32307	ZM	1996	2358	1370	1379	2357			1,3,5,8
CS-35313	CS-35203	JU-0	1995	2358			2357			1,3,5,8
CS-35401	CS-27401	XM-2	1993	008				007	007	1,3,4,8
CS-35403	CS-27503	JU-2	1994	2358			2357			1,2,3,5,8
CS-35405	CS-35405	JU-2	1995	2358			2357			1,2,3,5,8
CS-35503	CS-35503	YA-0	1995	2358			2357			1,2,3,5,8
CS-35505	CS-31505	JU-2B	1995	2358			2357			1,2,3,6,8
CS-35601	CS-35601	YA1	1993	2358			2357			1,2,3,8
CS-35607	CS-35607	ZA	1996	2358	1370		2357			1,2,3,6,8
CS-35701	CS-35701	YA2	1994	2358			2357			1,2,3,5,8
CS-35707	CS-35607	ZA	1996	2358	1370		2357			1,2,3,6,8
CS-35803	CS-35803	YA-2B	1995	2358			2357			1,2,3,6,7,8

\* On some models, the Service Menus may not be activated due to the customer's selection of the optional *Advanced Icon Menu*. Reset to the *Standard Menu* by:

- 1) Press <MENU>
- 2) Press <ENTER>
- 3) Press <UP/DOWN ARROWS> to select the *Standard Menu*
- 4) Press <ENTER>
- 5) Press <MENU> twice to exit.

### Direct View TV Feature Index

- |                   |                  |                                     |
|-------------------|------------------|-------------------------------------|
| 1) S - VHS Inputs | 4) Standard PIP  | 7) Starsight - <MENU> 2,3,5,6       |
| 2) A / V Network  | 5) Advanced PIP  | 8) MCS                              |
| 3) Closed Caption | 6) Two Tuner PIP | 9) TV GUIDE Plus+<br><MENU> 2,3,5,6 |



# Direct View TV Model Reference

Model	Base Manual	Chassis	Year	Service Menu Codes						Features
				Option	Factory	A/V	Circuit	PIP	Sub	
CS-35805	CS-35805	YA-2C	1995	2358			2357			1,2,3,6,7,8
CS-36309	CS-36309	AM	1997	2358	1370	1379	2357			1,3,5,8
CS-36509	CS-32509	ZM-2	1997	2358	1370	1379	2357			1,2,3,6,8,9
CS-36609	CS-27609	ZM-2	1997	2358	1370	1379	2357			1,2,3,6,8,9
CS-40FX1	CS-40FX1	WF-2	1992	008						1,4,8
CS-40307	CS-32307	ZM	1996	2358	1370	1379	2357			1,3,5,8
CS-40309	CS-40309	AM	1997	2358	1370	1379	2357			1,3,5,8
CS-40503	CS-40503	YA-0	1995	2358			2357			1,2,3,5,8
CS-40505	CS-40505	YA-0	1995	2358			2357			1,2,3,5,8
CS-40507	CS-40507	YA-0B	1995	2358			2357			1,2,3,5,8
CS-40509	CS-40509	ZM-2	1997	2358	1370	1379	2357			1,2,3,6,8,9
CS-40601	CS-35601	YA1	1993	2358			2357			1,2,3,4,8
CS-40707	CS-35607	ZA	1996	2358	1370		2357			1,2,3,6,8
CS-40805	CS-35805	YA-2C	1995	2358			2357			1,2,3,6,7,8
CS-40809	CS-40809	ZM-2B	1997	2358	1370	1379	2357			1,2,3,6,8,9
SMR-2601R	SM-2601R	UX	1990							1,8

\* On some models, the Service Menus may not be activated due to the customer's selection of the optional *Advanced Icon Menu*. Reset to the *Standard Menu* by:

- 1) Press <MENU>
- 2) Press <ENTER>
- 3) Press <UP/DOWN ARROWS> to select the *Standard Menu*
- 4) Press <ENTER>
- 5) Press <MENU> twice to exit.

### Direct View TV Feature Index

- |                   |                  |                                     |
|-------------------|------------------|-------------------------------------|
| 1) S - VHS Inputs | 4) Standard PIP  | 7) Starsight - <MENU> 2,3,5,6       |
| 2) A / V Network  | 5) Advanced PIP  | 8) MCS                              |
| 3) Closed Caption | 6) Two Tuner PIP | 9) TV GUIDE Plus+<br><MENU> 2,3,5,6 |

## **SECTION 2 - CHASSIS REFERENCE**

- CHASSIS TO MODEL NUMBER

# Direct View TV Chassis Reference

**AM**  
CK-32310  
CK-36310  
CS-32309  
CS-36309  
CS-40309

**JU-0**  
CK-31304  
CK-35304  
CK-35306  
CS-31203  
CS-31205  
CS-31303  
CS-31305  
CS-31309  
CS-35303  
CS-35305  
CS-35313

**JU-2**  
CS-27405  
CS-27407  
CS-27503  
CS-35403  
CS-35405

**JU-2B**  
CS-31505  
CS-32507  
CS-35505

**KA-1**  
CS-1330  
CS-1530

**KA-2**  
CS-1730  
CS-1900  
CS-1900D  
CS-1900H  
CS-1930  
CS-1993

**KA-3**  
CS-2190

**KA-4**  
CS-2590

**MA-1**  
CK-2561R  
CK-2583R  
CK-2584R  
CK-2585R  
CK-2587R  
CK-2588R  
CS-2566R

**MA-10**  
CS-2061R

**MA-2**  
CS-1984R  
CS-2183R  
CS-2184R

**MA-3**  
CS-1951  
CS-1972R  
CS-1973R

**MA-4**  
CS-1983R

**MA-5**  
CS-1352  
CS-1384R  
CS-1396R  
CS-1584R  
CS-1596R

**MA-6**  
CS-1351

**MA-7**  
CK-2573R  
CK-2575R  
CS-2572R

**MA-8**  
CS-1940R  
CS-1952  
CS-1952R

**MA-9**  
CS-1340R  
CS-1341R  
CS-1941R

**MA3-1**  
CS-1485R

**MA3-2**  
CS-2051R  
CS-2051RA  
CS-2052R  
CS-2053R  
CS-2085R

**MA3-3**  
CK-2662R  
CK-2688R  
CS-2667R

**MA3-4**  
CK-3501R

**MA3-C72R**  
CK-25B14  
CK-25B17  
CK-25B19

**ME-1**  
AM-1301

**MS-1**  
CS-1903  
CS-1904  
CS-1905  
CS-1935  
CS-1936

**MS-3**  
CS-1304  
CS-1305  
CS-1334  
CS-1534

**MS-4**  
CS-1304A  
CS-1305A

**MU-1**  
CS-1303  
CS-1333U  
CS-1395  
CS-1595

**MU-2**  
CS-1902U  
CS-1933U  
CS-1934  
CS-1960R  
CS-1970  
CS-1971  
CS-1982

**MU-3**  
CS-1798

**MU-4**  
CS-2195

**MU-5**  
CK-2560R  
CK-2582  
CS-2571

**MU-6**  
CS-1950  
CS-1950S

**MU-8**  
CM-2501

**MU-9**  
CM-1901

CHASSIS REFERENCE

# Direct View TV Chassis Reference

**PA-1**  
CS-1300  
CS-1331  
CS-1390  
CS-1531  
CS-1590  
CS-1791  
CS-1994

**PA-2**  
CS-1731  
CS-1790  
CS-1901  
CS-1931  
CS-1984

**QA-1**  
CS-1302  
CS-1332  
CS-1333  
CS-1392  
CS-1532  
CS-1533  
CS-1592

**QA-2**  
CS-1902  
CS-1902A  
CS-1985  
CS-1995

**QA-3**  
CS-2192

**QA-4**  
CS-2592  
CS-2593

**QA-5**  
CS-1732

**QA-6**  
CS-1733  
CS-1933  
CS-1997  
CS-1997UC

**QA-7**  
CK-2552  
CK-2553  
CS-2594

**QA-9**  
CS-2193

**RA-1**  
CK-2689R  
CK-2690R  
CK-2691R  
CS-2669R  
CS-2670R

**RA-2**  
CK-3502R  
CK-3551R  
CK-3551RS  
CK-3552R  
CK-3552RS  
CK-3553R  
CK-3553RS

**RS-1**  
CS-1342R  
CS-1343R  
CS-1344R

**RS-2**  
CS-1453  
CS-1454R

**RS-3**  
CS-1937  
CS-1938  
CS-1939  
CS-1942R  
CS-1943R  
CS-1944R  
CS-1953  
CS-1954R

**RS-6**  
CS-2642R  
CS-2642RA  
CS-2643R  
CS-2643RA  
CS-2644R  
CS-2644RA  
CS-2651R  
CS-2651RA

**RS-7**  
CS-1456R

**RS-8**  
CS-2000  
CS-2001R  
CS-2011R  
CS-2011RA  
CS-2012RA  
CS-2042R  
CS-2043R  
CS-2044R  
CS-2062R  
CS-2062RA  
CS-2063R  
CS-2063RA  
CS-2064R  
CS-2064RA

**RS5-CO6**  
CK-25E06

**SA-1**  
CK-2693R  
CK-2694R  
CS-2655R

**SA-2**  
CK-3101R

**SA-3**  
CK-3513R  
CK-3555R  
CK-3557R  
CK-3557RS  
CS-3503R

**SM2-1**  
CS-2013R  
CS-2014R

**SM2-2**  
CK-2600R  
CS-2653R  
CS-2654R

**SM3-1**  
CS-2054R  
CS-2056R  
CS-2087R

**SN-50**  
CS-13103  
CS-13104  
CS-20103  
CS-20203

**SN-71**  
CS-27209  
CS-27309

**SS-1**  
CS-1345R

**SS-2**  
CS-1457R

# Direct View TV Chassis Reference

**SS-3**  
CS-1945R

**SS-4**  
CS-2045R

**SX-1**  
AM-3501R(H)

**TA-A**  
CS-2671R

**TA-B**  
CK-3112R  
CS-3103R

**TA-C**  
CK-3514R  
CK-3560R  
CS-3504R

**TM2-A**  
CS-2058R  
CS-2060R

**TM2-B**  
CK-2602R  
CS-2656R

**TM3-A**  
CK-2604R  
CK-2605R  
CS-2657R  
CS-2658R

**TM4-B**  
CK-2630R  
CK-2631R  
CS-2720R  
CS-2721R

**TM4B**  
CS-2722R

**TS-A**  
CS-1346R

**TS-B**  
CS-1946R

**TS-C**  
CS-2046R

**UA-A**  
CS-3120R

**UA-B**  
CK-3530R  
CS-3505R  
CS-3520R

**UD**  
CS-3540R

**UM2-A**  
CS-2010R  
CS-2070R

**UM2-B**  
CK-2606R  
CK-2607R  
CS-2610R  
CS-2611R

**UM2-C**  
CS-2710R

**US2-A**  
CS-2005R  
CS-2015R

**UX**  
SMR-2601R

**VA-A**  
CS-3121R

**VA-A-21R**  
CS-3131R

**VA-B**  
CK-3531R  
CS-3521R

**VL-A**  
CS-1347R  
CS-1348R

**VL-B**  
CS-2002R  
CS-2003R  
CS-2047R

**VM1-A**  
CK-2730R  
CS-2723R

**VM1-B**  
CS-3104R

**VM2-A**  
CS-2724R  
CS-2771R

**VM2-B**  
CS-3114R

**VM2-C**  
CS-3506R

**WA-A**  
CS-2725R

**WA-B**  
CS-3125R

**WA-C**  
CK-3526R  
CK-3527R  
CS-3525R

**WF**  
CK-35FX2  
CS-31FX1  
CS-35FX1

**WF-2**  
CS-40FX1

**WF-B**  
CK-3136R  
CK-3536R  
CS-3135R

**WF-C**  
CS-3535R

**WM-A**  
CS-2715R

**WM-B**  
CS-3115R

**WM-C**  
CS-3515R

**WX**  
CS-35X7

**XA**  
CS-31AX1  
CS-35AX1

**XL**  
CS-13RX1  
CS-13RX2  
CS-13SX1  
CS-20RX1  
CS-20RX2

**XL-B**  
CS-20SX1

**XL1**  
CS-13101  
CS-13102  
CS-20101  
CS-20102

CHASSIS REFERENCE

# Direct View TV Chassis Reference

**XL2**  
CS-13201  
CS-20201

**XM**  
CK-31MX2  
CK-35MX2  
CK-35MX3  
CS-20EX1  
CS-26EX1  
CS-27EX1  
CS-27MX1  
CS-31MX1  
CS-35MX1

**XM-0**  
CK-27304  
CK-27306  
CS-26201  
CS-26301  
CS-27200  
CS-27200A  
CS-27201  
CS-27301  
CS-27303

**XM-1**  
CS-35203  
CS-35203

**XM-2**  
CK-35402  
CS-27401  
CS-27403  
CS-35401

**XM-C**  
CS-27TX1

**XM1**  
CK-31302  
CS-20301  
CS-31301  
CS-35201  
CS-35301

**YA-0**  
CS-35503  
CS-40503  
CS-40505

**YA-0B**  
CS-40507

**YA-2B**  
CK-35804  
CS-35803

**YA-2C**  
CS-35805  
CS-40805

**YA1**  
CS-35601  
CS-40601

**YA2**  
CK-35702  
CS-27701  
CS-35701

**YM-0**  
CS-27205  
CS-27305

**ZA**  
CS-35607  
CS-35707  
CS-40707

**ZM**  
CK-32308  
CK-35308  
CS-32207  
CS-32307  
CS-35207  
CS-35307  
CS-40307

**ZM-2**  
CS-27609  
CS-32509  
CS-36509  
CS-36609  
CS-40509

**ZM-2B**  
CS-40809

## **SECTION 3 - FILE REFERENCE**

- MODELS BY SERVICE MANUAL

# Direct View TV

## Service Manual File Reference

<u>BASE MODEL</u>	<u>MODELS IN MANUAL</u>	<u>BASE MODEL</u>	<u>MODELS IN MANUAL</u>	<u>BASE MODEL</u>	<u>MODELS IN MANUAL</u>
<b>AM-1301</b>	AM-1301	<b>CK-2606R</b>	CK-2606R	<b>CK-3551R</b>	CK-3551R CK-3551RS
<b>AM-3501R</b>	AM-3501R(H)	<b>CK-2607R</b>	CK-2607R		CK-3552R CK-3552RS
<b>CK-25B14</b>	CK-25B14	<b>CK-2630R</b>	CK-2630R CK-2631R		CK-3553R CK-3553RS
<b>CK-25B17</b>	CK-25B17 CK-25B19	<b>CK-2662R</b>	CK-2662R CK-2688R	<b>CK-3555R</b>	CK-3555R CK-3557R CK-3557RS
<b>CK-25E06</b>	CK-25E06	<b>CK-2689R</b>	CK-2689R CK-2690R CK-2691R	<b>CK-35306</b>	CK-35306
<b>CK-2552</b>	CK-2552	<b>CK-2693R</b>	CK-2693R CK-2694R	<b>CM-1901</b>	CM-1901
<b>CK-2553</b>	CK-2553 CS-2193 CS-2594	<b>CK-27304</b>	CK-27304	<b>CM-2501</b>	CM-2501
<b>CK-2560R</b>	CK-2560R	<b>CK-27306</b>	CK-27306	<b>CS-13RX1</b>	CS-13RX1 CS-13RX2 CS-13SX1
<b>CK-2561R</b>	CK-2561R	<b>CK-31MX2</b>	CK-31MX2 CK-35MX2 CK-35MX3	<b>CS-1300</b>	CS-1300
<b>CK-2573R</b>	CK-2573R	<b>CK-3101R</b>	CK-3101R	<b>CS-1302</b>	CS-1302
<b>CK-2575R</b>	CK-2575R	<b>CK-31302</b>	CK-31302	<b>CS-1303</b>	CS-1303
<b>CK-2582</b>	CK-2582 CS-1950 CS-1950S	<b>CK-31304</b>	CK-31304	<b>CS-1304</b>	CS-1304
<b>CK-2583R</b>	CK-2583R CK-2584R	<b>CK-32308</b>	CK-32308 CK-35308	<b>CS-1304A</b>	CS-1304A CS-1305A
<b>CK-2585R</b>	CK-2585R	<b>CK-3501R</b>	CK-3501R	<b>CS-1305</b>	CS-1305
<b>CK-2587R</b>	CK-2587R	<b>CK-3502R</b>	CK-3502R	<b>CS-1330</b>	CS-1330 CS-1530
<b>CK-2587R</b>	CK-2588R	<b>CK-3513R</b>	CK-3513R	<b>CS-1331</b>	CS-1331
<b>CK-2600R</b>	CK-2600R	<b>CK-3526R</b>	CK-3526R CK-3527R	<b>CS-1332</b>	CS-1332
<b>CK-2604R</b>	CK-2604R CK-2605R			<b>CS-1333</b>	CS-1333



# Direct View TV

## Service Manual File Reference

<u>BASE MODEL</u>	<u>MODELS IN MANUAL</u>	<u>BASE MODEL</u>	<u>MODELS IN MANUAL</u>	<u>BASE MODEL</u>	<u>MODELS IN MANUAL</u>
<b>CS-1333U</b>	CS-1333U	<b>CS-13103</b>	CS-13103	<b>CS-1900D</b>	CS-1900D
<b>CS-1334</b>	CS-1334 CS-1534	<b>CS-13104</b>	CS-13104	<b>CS-1900H</b>	CS-1900H
<b>CS-1340R</b>	CS-1340R	<b>CS-1453</b>	CS-1453 CS-1454R	<b>CS-1902</b>	CS-1902 CS-1902A
<b>CS-1341R</b>	CS-1341R CS-1941R	<b>CS-1456R</b>	CS-1456R	<b>CS-1902U</b>	CS-1902U
<b>CS-1342R</b>	CS-1342R CS-1343R CS-1344R CS-1345R	<b>CS-1457R</b>	CS-1457R	<b>CS-1903</b>	CS-1903
<b>CS-1346R</b>	CS-1346R	<b>CS-1485R</b>	CS-1485R	<b>CS-1904</b>	CS-1904 CS-1905
<b>CS-1347R</b>	CS-1347R	<b>CS-1531</b>	CS-1531	<b>CS-1933</b>	CS-1933
<b>CS-1348R</b>	CS-1348R	<b>CS-1532</b>	CS-1532	<b>CS-1933U</b>	CS-1933U
<b>CS-1351</b>	CS-1351	<b>CS-1533</b>	CS-1533	<b>CS-1934</b>	CS-1934
<b>CS-1352</b>	CS-1352	<b>CS-1590</b>	CS-1590	<b>CS-1935</b>	CS-1935
<b>CS-1384R</b>	CS-1384R CS-1584R	<b>CS-1592</b>	CS-1592	<b>CS-1936</b>	CS-1936
<b>CS-1390</b>	CS-1390	<b>CS-1730</b>	CS-1730 CS-1900 CS-1930	<b>CS-1937</b>	CS-1937 CS-1938 CS-1939
<b>CS-1392</b>	CS-1392	<b>CS-1731</b>	CS-1731 CS-1901 CS-1931	<b>CS-1940R</b>	CS-1940R
<b>CS-1395</b>	CS-1395 CS-1595	<b>CS-1732</b>	CS-1732	<b>CS-1942R</b>	CS-1942R CS-1943R CS-1944R
<b>CS-1396R</b>	CS-1396R CS-1596R	<b>CS-1733</b>	CS-1733	<b>CS-1945R</b>	CS-1945R
<b>CS-13101</b>	CS-13101 CS-13102 CS-13201 CS-20101 CS-20102 CS-20201	<b>CS-1790</b>	CS-1790	<b>CS-1946R</b>	CS-1946R
		<b>CS-1791</b>	CS-1791 CS-1994	<b>CS-1951</b>	CS-1951
		<b>CS-1798</b>	CS-1798 CS-1997UC	<b>CS-1952</b>	CS-1952 CS-1952R

DIRECT VIEW TV

# Direct View TV

## Service Manual File Reference

<u>BASE MODEL</u>	<u>MODELS IN MANUAL</u>	<u>BASE MODEL</u>	<u>MODELS IN MANUAL</u>	<u>BASE MODEL</u>	<u>MODELS IN MANUAL</u>
<b>CS-1953</b>	CS-1953 CS-1954R	<b>CS-2002R</b>	CS-2002R	<b>CS-2070R</b>	CS-2070R
<b>CS-1954R</b>	CS-2045R	<b>CS-2003R</b>	CS-2003R	<b>CS-2085</b>	CS-2085R
<b>CS-1960R</b>	CS-1960R	<b>CS-2005R</b>	CS-2005R	<b>CS-2087R</b>	CS-2087R
<b>CS-1970</b>	CS-1970	<b>CS-2011R</b>	CS-2011R CS-2062R CS-2063R CS-2064R	<b>CS-20103</b>	CS-20103 CS-20203
<b>CS-1971</b>	CS-1971	<b>CS-2011RA</b>	CS-2011RA CS-2012RA CS-2062RA CS-2063RA CS-2064RA	<b>CS-20301</b>	CS-20301 CS-31301 CS-35301
<b>CS-1972R</b>	CS-1972R	<b>CS-2013R</b>	CS-2013R CS-2014R	<b>CS-2183R</b>	CS-2183R
<b>CS-1973R</b>	CS-1973R	<b>CS-2015R</b>	CS-2015R	<b>CS-2190</b>	CS-2190 CS-2590
<b>CS-1982</b>	CS-1982	<b>CS-2042R</b>	CS-2042R CS-2043R CS-2044R	<b>CS-2192</b>	CS-2192
<b>CS-1983R</b>	CS-1983R	<b>CS-2046R</b>	CS-2046R	<b>CS-2193UC</b>	CK-2553UC CS-2193UC CS-2594UC
<b>CS-1984</b>	CS-1984	<b>CS-2047R</b>	CS-2047R	<b>CS-2195</b>	CS-2195
<b>CS-1984R</b>	CS-1984R CS-2184R	<b>CS-2051R</b>	CS-2051R CS-2051RA CS-2052R CS-2053R	<b>CS-2566R</b>	CS-2566R
<b>CS-1985</b>	CS-1985	<b>CS-2054R</b>	CS-2054R CS-2056R	<b>CS-2571</b>	CS-2571
<b>CS-1993</b>	CS-1993	<b>CS-2058R</b>	CS-2058R CS-2060R	<b>CS-2572R</b>	CS-2572R
<b>CS-1995</b>	CS-1995	<b>CS-2061R</b>	CS-2061R	<b>CS-2592</b>	CS-2592
<b>CS-1997</b>	CS-1997			<b>CS-2593</b>	CS-2593
<b>CS-20EX1</b>	CS-20EX1 CS-26EX1 CS-27EX1 CS-20RX1 CS-20RX2			<b>CS-2610R</b>	CS-2611R
<b>CS-20SX1</b>	CS-20SX1			<b>CS-2610RC</b>	CS-2010R CS-2610R CS-2610RC
<b>CS-2000</b>	CS-2000 CS-2001R				

# Direct View TV

## Service Manual File Reference

<u>BASE MODEL</u>	<u>MODELS IN MANUAL</u>	<u>BASE MODEL</u>	<u>MODELS IN MANUAL</u>	<u>BASE MODEL</u>	<u>MODELS IN MANUAL</u>
<b>CS-2651R</b>	CS-2642R CS-2643R CS-2644R CS-2651R	<b>CS-2715R</b>	CS-2715R CS-3115R CS-3515R	<b>CS-27609</b>	CS-27609 CS-36609
<b>CS-2651RA</b>	CS-2642RA CS-2643RA CS-2644RA CS-2651RA	<b>CS-2720R</b>	CS-2720R CS-2721R	<b>CS-27701</b>	CS-27701 CS-35203
<b>CS-2653R</b>	CS-2653R CS-2654R	<b>CS-2722R</b>	CS-2722R	<b>CS-31AX1</b>	CS-31AX1 CS-35AX1
<b>CS-2655R</b>	CS-2655R CK-2602R	<b>CS-2723R</b>	CK-2730R CS-2723R	<b>CS-3103R</b>	CK-3112R CS-3103R
<b>CS-2656R</b>	CS-2656R	<b>CS-2724R</b>	CS-2724R CS-2771R	<b>CS-3104R</b>	CS-3104R CS-3114R
<b>CS-2657R</b>	CS-2657R CS-2658R	<b>CS-27200</b>	CS-27200 CS-27200A	<b>CS-3120R</b>	CS-3120R
<b>CS-2667R</b>	CS-2667R	<b>CS-27201</b>	CS-27201 CS-27303	<b>CS-3121R</b>	CS-3121R CS-3131R
<b>CS-2669R</b>	CS-2669R	<b>CS-27201C</b>	CS-27201C CS-27303C	<b>CS-31203</b>	CK-35304 CS-31203 CS-31303 CS-35203C CS-35203CA CS-35303
<b>CS-2670R</b>	CS-2670R	<b>CS-27205</b>	CS-27205 CS-27205C CS-27305 CS-27305C	<b>CS-31205</b>	CS-31205
<b>CS-2671R</b>	CS-2671R	<b>CS-27401</b>	CK-35402 CS-27401 CS-35401	<b>CS-31305</b>	CS-31305 CS-31505 CS-35505
<b>CS-26201</b>	CS-26201 CS-26301 CS-27301	<b>CS-27403</b>	CS-27403	<b>CS-32207</b>	CS-32207
<b>CS-27MX1</b>	CS-27MX1 CS-31MX1 CS-35MX1	<b>CS-27407</b>	CS-27407	<b>CS-32207</b>	CS-35207
<b>CS-27TX1</b>	CS-27TX1	<b>CS-27503</b>	CS-27405 CS-27503 CS-35403	<b>CS-32307</b>	CS-32307 CS-35307 CS-40307
<b>CS-2710RA</b>	CS-2710RA			<b>CS-32507</b>	CS-32507

# Direct View TV

## Service Manual File Reference

<u>BASE MODEL</u>	<u>MODELS IN MANUAL</u>	<u>BASE MODEL</u>	<u>MODELS IN MANUAL</u>	<u>BASE MODEL</u>	<u>MODELS IN MANUAL</u>
<b>CS-32509</b>	CS-32509 CS-36509	<b>CS-3535R</b>	CK-3136R CK-3536R CS-3135R CS-3535R	<b>CS-35701</b>	CK-35702 CS-35701
<b>CS-35FX1</b>	CK-35FX2 CS-31FX1 CS-35FX1	<b>CS-3540R</b>	CS-3540R	<b>CS-35803</b>	CK-35804 CS-35803
<b>CS-35X7</b>	CS-35X7	<b>CS-35201A</b>	CS-35201	<b>CS-35805</b>	CS-35805 CS-40805
<b>CS-3503R</b>	CS-3503R	<b>CS-35203</b>	CS-35203 CS-35203C CS-35203CA CS-35313	<b>CS-40FX1</b>	CS-40FX1
<b>CS-3504R</b>	CK-3514R CK-3560R CS-3504R	<b>CS-35305</b>	CS-35305	<b>CS-40503</b>	CS-40503
<b>CS-3505R</b>	CK-3530R CS-3505R CS-3520R	<b>CS-35405</b>	CS-35405 CS-35405C	<b>CS-40505</b>	CS-40505
<b>CS-3506R</b>	CS-3506R	<b>CS-35503</b>	CS-35503	<b>CS-40507</b>	CS-40507 CS-40507C
<b>CS-3521R</b>	CK-3531R CS-3521R	<b>CS-35601</b>	CS-35601 CS-40601	<b>CS-40509</b>	CS-40509
<b>CS-3525R</b>	CS-2725R CS-3125R CS-3525R	<b>CS-35607</b>	CS-35607 CS-35707 CS-40707	<b>CS-40809</b>	CS-40809
				<b>SM-2601R</b>	SMR-2601R

Copyright © 1999 Mitsubishi Digital Electronics America, Inc.  
9351 Jeronimo Road • Irvine, CA 92618-1904  
[www.mitsubishi-tv.com](http://www.mitsubishi-tv.com)  
Part Number: **T/M CROSSREFCTV**