

Da

1114 F

An Electrical Library

PRACTICAL BOOKS FOR HOME AND SHOP STUDY

BY T. O'CONOR SLOANE.

CONSISTING OF THE FOLLOWING BOOKS:

How to Become a Successful Electrician	Price \$1.00
Electricity Simplified	1.00
Electric Toy Making, Dynamo Building, etc.	1.00
Arithmetic of Electricity	1.00
Standard Electrical Dictionary	3.00

THE NORMAN W. HENLEY PUBLISHING CO.

132 Nassau Street, New York

Electric Toy Making For Amateurs

This Work Treats on the Making of Electrical Toys, Electrical Apparatus, Motors, Dynamos and Instruments in General, and is Designed to Bring Within the Reach of Young and Old the Manufacture of Genuine and Useful Appliances.

By T. O'CONOR SLOANE, A.M., E.M., Ph.D.

Author of
"Standard Electrical Dictionary," "Electricity Simplified,"
"Arithmetic of Electricity," Etc., Etc.



TWENTIETH EDITION

Revised and Enlarged

Fully Illustrated

NEW YORK:

THE NORMAN W. HENLEY PUBLISHING CO.

132 NASSAU STREET

1914

Copyrighted 1914 and 1909 by THE NORMAN W. HENLEY PUBLISHING CO.

Copyrighted 1903 and 1891 by NORMAN W. HENLEY & CO.

Preface to the Twentieth Edition

IN PRESENTING this Twentieth Edition, the author takes occasion to express his appreciation of the wide-spread and gratifying interest that has been shown in this book since its first appearance. In order to extend still further its usefulness, the book has been carefully revised and several new chapters added, thus bringing it up-to-date and giving further directions for the making of many interesting electrical contrivances.

"Electric Toy Making" is a very comprehensive title, one which may be made to embrace far more ground than this work pretends to cover. In the realms of amateur work of all kinds-mechanics, natural science, and even legerdemain or natural magic—electricity can be made to play an important part. The methods of applying it to simple constructions, within the reach and scope of amateurs, constitute the theme of this book. The effort has been to present the reader with a suggestive line of experimentation and construction, and to open a field within which his own ideas can have indefinite scope and extent. It is believed that little in the way of actual toy making can be done outside of the general limits here defined. Thus, as adjuncts to a static electric machine, Holtz or Wimshurst, a quantity of pieces of apparatus might have been described, but such appliances do not deserve to be called toys in any sense.

It is hoped that the work will prove fertile in the suggestive sense. Many things are presented which are

susceptible of almost any quantity of modifications. The motors have been selected with regard to their variation from the usual type of "reversible dynamo." The simple experiments and constructions given under static electricity are made, as far as possible, independent in action, except as far as an induction or spark coil and battery may be needed to operate some of them.

As a good workman is known by his tools, so is the electrician judged by his battery. The few hints given as to the use of batteries should tend to put the amateur on a proper footing at the all-important foundation and basis of his operations. With a well-kept battery the neatly constructed apparatus will appear to double advantage, and its effectiveness will be secured. Apparatus is often blamed for the short-comings of the current-generator.

The Author.

February, 1914.

CONTENTS.

CHAPTER I.	
BATTERIES.	
Primary Batteries in General—Batteries with Electric	
Light Carbons-A Tomato Can Battery-Materials for	
Battery Cells	9
UHAPTER II.	
PERMANENT MAGNETS.	
How to Magnetize Steel Bars—Rolling Armatures— Mahomet's Coffin—Magnetic Jack-straws—The Magnetic Top—The Magnetic Pendulum—Mayer's Floating Needles	
-Magnetic Fishes, and the Magnetic Swan, Boat, etc	23
CHAPTER III.	
ELECTRO-MAGNETS.	
Construction of Electro-Magnets-Magnetizing Coils-	
The Magic Circle—Magnetic Hemispheres	37
CHAPTER IV.	
ELECTRIC MOTORS.	
Pendulum Coil Motor—Recordon Magnet Motor—Multipolar Motor—Page's Rotating Armature—The Electric	
Locomotive	46

CHAPTER V.	
ELECTRIC BELLS.	
The Tolling Bell—The Vibrating Bell—The Safe	
Protector	65
CHAPTER VI.	
MISCELLANEOUS TOYS.	
The Electric Dancer—The Magic Drum—The Elec-	
tric Hammer—Electric Insects—The Incandescent	
Lamp	7 3
CHAPTER VII.	
SPARK AND INDUCTION COILS, AND ALLIED SUBJECTS.	
The Spark Coil—The Induction Coil—Recordon's	
Induction Coil—The Magneto-Generator—Electric	
Artillery—Electric Gymnastics — Ano-Kato — Simple	
-	89
Experiments in Static Electricity	00
CHAPTER VIII.	
HAND POWER DYNAMO.	
Page 1	21
CHAPTER IX.	
An Easily Constructed Motor—Simple Electric Mo-	
tor—A Small Electro Motor—Another Simple Motor	
-Simple Electric Locomotive Motor-Telegraph	
Key—Sounder—Microphone — Telephone Receiver—	
How to Make Simple Dry Cells—An Efficient Plunge	
Battery—Small Storage Battery—A Cheap Polarity	
Indicator—A Useful Electric Candle—Electric Warn-	
ing Signal—Electric Door Locking Device 1	28
CHAPTER X.	
MISCELLANEOUS RECEIPTS AND FORMULE.	
Page	92
1450 1	

CHAPTER I.

BATTERIES.

PRIMARY BATTERIES IN GENERAL—BATTERIES WITH ELECTRIC LIGHT CARBONS—A TOMATO CAN BATTERY—MATERIALS FOR BATTERY CELLS.

Primary Batteries in General.

THE requirements of a good battery are easier stated than secured. It should be constant, of low resistance, and of good electro-motive force. The latter factor should not fall below one volt. For this reason the caustic soda batteries are hardly to be recommended unless the amateur is willing to use a large number of cells.

For constancy and cheapness the sulphate of copper cells lead. The quality of cheapness appertains both to original cost and expense of running. A great objection is their high resistance; for this reason a very large battery may seem to have but little power. If an effort is made to reduce their resistance, by bringing the plates closer, copper is deposited on the zinc.

The deposition of copper on the positive plates is not only annoying, as exacting scraping and cleaning, but exhausts the solutions. It does not do to bring the plates too close together. This is one reason for high resistance, but there is a greater one. It is that the solutions either of zinc or copper sulphate in the cell are never of low resistance. Such solutions do not compare with dilute sulphuric acid for conductivity.

Owing to its constancy and cheapness, the sulphate of copper combinations form favorite batteries with telegraph operators. In the Daniell battery a plate of zinc is contained in a porous cup surrounded by a plate of copper The three are placed in a glass jar A solution of zinc sulphate is poured into the porous cup; a solution of copper sulphate into the outer jar. In the gravity battery only the glass jar and two plates are used. The copper plate is in the bottom and a gutta-percha covered wire leads from it. The zinc plates are near the top of the jar. To charge it, water is introduced until the zinc is covered. A handful of crystals of copper sulphate are added with a little zinc sulphate solution if necessary. Gravity is here relied on to keep the two solutions separate; the zinc sulphate increases in quantity with the working of the battery, but the copper sulphate solution is kept as strong as possible. After a while the zinc sulphate solution will exceed in specific gravity the copper sulphate solution, when the battery will cease to act properly. Hence, the upper layers of liquid are withdrawn from time to time and replaced by plain water.

The Leclanché battery, before the introduction of

the dry batteries, was the great open circuit battery.

For intermittent work either type can now be recommended. For constant and heavy work neither is of any utility whatever.

For heavy work the bichromate cells are the best, all things considered. They are not very constant and with a heavy output soon begin to run down.

Of them the Bunsen battery is to be recommended for constant currents of long duration. The cell consists, in brief, of a porous cup and outer jar. in on of the divisions an amalgamated zinc plate is contained; in the other division a carbon plate. The carbon is surrounded by a strong solution of chromic and sulphuric acids. The latter imparts conductivity; the former is the depolarizer. The zinc is surrounded with dilute sulphuric acid. The two solutions inevitably diffuse one into the other. The more they are kept distinct the better the condition of the battery is.

The plain bichromate battery consists of a jar containing the amalgamated zinc and carbon plates and charged with the chromic-sulphuric acid solution. This is a defective combination. The chromic acid acts upon the zinc, and the battery rapidly deteriorates when on open circuit.

The latter trouble is avoided by removing the plates, or, at any rate, the zinc plate, when the cell is not in use. This practise economizes solution and is by all means to be recommended. Various mechanical con-

structions have been adopted for raising the plates. Such batteries are termed dip batteries.

The solution to be used should be carefully prepared. An inferior mixture gives very inferior results. The following is the celebrated Trouvé solution and can be highly recommended:

It requires—

Water	8 pints.
Powdered Potassium Bichromate	1 2-10 lbs.
Concentrated Sulphuric Acid	3 6-10 lbs.

The bichromate is added to the water and stirred well through it. The acid is slowly added, with constant stirring. A glass rod, and glass, or well enamelled iron vessels should be used for the mixing. As the acid is added the temperature rises and all, or nearly all, of the bichromate dissolves. Sometimes to four parts of water as much as one part of bichromate is added, with nearly two parts of sulphuric acid. All parts are by weight. The secret is in the fine pulverization of the bichromate and in the gradual addition with constant stirring of the acid.

Great care should be taken in pulverizing the bichromate to inhale none of the dust, as it may cause ulcers.

The above solution may be employed in the carbon plate division of the Bunsen cell with excellent results.

For the zinc plate division of the Bunsen cell, one part, by weight, of sulphuric acid to twelve of water is used.

Very useful little batteries may be constructed by using a mixture of two parts sal ammoniac with one part of mercurous or white mercury sulphate in water as the excitant. Zinc and carbon are the elements and are contained in a single cell.

A piece of old battery carbon may be bored out for part of its length and used as both the cup and negative element at once. It should be well paraffined by dipping in melted paraffine wax. A zinc rod or wire small enough to enter the hole having some rubber bands wound around it, is inserted as the positive plate. The bands must cover as little of its surface as possible and its bottom must not touch the carbon. The sal ammoniac-mercurous sulphate solution is the excitant. A little of the mixture is placed in the cup, some water is added and mixed with it. The zinc is placed in position, and all is ready for use.

Such a battery is, of course, more of a curiosity than a practical source of current.

For working small apparatus the silver chloride cell has been very highly thought of. Although originally of somewhat high cost the silver is not lost and can readily be reconverted into chloride when the battery becomes exhausted.

A test tube made of extra thick glass will answer for the cell. A piece of sheet zinc is bent so as to fit

closely in the tube, in contact with its sides. A lug or projecting piece extends up from the zinc. The plate should be nearly as long as the tube. It must be well amalgamated and put in position.

Next, a very thin piece of silver foil is wrapped around a rod of wood the size of a lead pencil. A silver wire is soldered or otherwise connected to this to act as terminal. A thick paste of silver chloride and water is spread upon a piece of blotting paper, which is just long enough to go once around the silver. This is then wrapped around the foil with the chloride paste against the silver.

A strip of muslin is wrapped two or three times around the blotting paper and is neatly sewed or tied.

A thick rubber band, best a section from some rather heavy gas tubing, is put over each end of the silver element. It must fit without squeezing. A perforated slice of cork will answer as well. The silver element is dropped into place, and the tube is filled with a solution of sal ammoniac in water.

Such a cell is without local action, and represents a very small open circuit battery. Two or three will operate a small induction coil. Their durability depends on the amount of silver chloride.

As no gas is generated, the cells may be enclosed hermetically by corks, coated or covered with a thick layer of sealing-wax or cap-cement. They form a convenient pocket battery. Sometimes they are made in soft rubber tubing, closed at both ends with corks and cement as above.

The present work does not purport to treat of batteries, yet it has seemed well to say this much on the subject and to give some examples of the utilization of common material for the purpose in the next sections.

For temporary purposes a battery of great power is easily made up by using the bichromate solution, with zinc and carbon as the elements, and any convenient porcelain or glass vessels as the cups or jars. For permanent batteries considerable may be done in the way of neat mounting, etc., to make them attractive objects to the eye of the amateur electrician.

One concluding word must be said: Never attempt to use unamalgamated zincs in a bichromate cell. To amalgamate, place a little globule of mercury in a saucer with some dilute sulphuric acid. Wet the zinc plate with the acid. Then, with a bit of zinc or galvanized iron, rub the mercury well over the surface of the zinc plate.

In the cut of the electric light carbon battery, page 18, the arrangements for amalgamating are shown. The slip of galvanized iron in the saucer is bent so as to fit around the circular zinc rods.

Batteries with Electric Light Carbons.

Electric light carbons make excellent material for the negative plate of batteries. They may be used in various ways as regards their mounting. The first thing to be done to them is to remove the copper plating from such portions as are to be immersed in the acid or battery fluid. This is easily effected by immersion in dilute nitric acid to the desired depth. A few seconds will generally suffice to strip the metal.

The next step depends on how they are to be used. Old rejected pieces, such as the lamp trimmers throw away, may be employed in some constructions. If the pieces are short, an excellent system is the following:

For each battery jar one long piece is selected. The copper is removed from its lower part, one or two inches at one end being left plated. It is then washed and dried in an oven. To the upper or coppered end while still hot, or if it has cooled, while heated gently, paraffine wax is applied just below the copper, until the porous carbon has absorbed all that it can.

The smaller pieces of carbon are completely stripped of copper. The long piece is placed upright in a porous cup and the small pieces are packed in around it. This makes the negative element. The wire is wound around the coppered end and may, if desired, be soldered thereto. It is also possible to drill a small hole in the top and screw in a binding post, which may be further secured by soldering.

The illustration presents another method. To carry it out the carbons must be rather long, according to the average of the rejected pieces. The copper is dissolved from their lower portions, leaving one or two inches coppered. They are washed, dried and paraffined as just described.

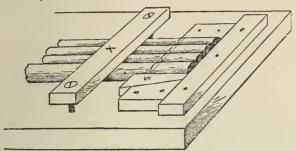


FIG. 1.-MAKING NEGATIVE PLATES FROM ARC LIGHT CARBONS.

They are next placed on a board and secured as shown by a strip, X. As carbons are often slightly bent, care should be taken to turn them until they lie as fully in contact as possible. A couple of side blocks, abutting against a straight end piece, form a pocket to receive the coppered ends, which are pressed together by the wedge, W.

With soldering acid, solder and soldering iron, the ends are now soldered together. The solder is melted into the grooves formed by the contiguous carbons. After cooling, the carbons, now united, are turned over, are again secured as shown and the opposite sides are soldered.

This gives what is practically a solid battery plate, and which really possesses special advantages in its

increased area of surface. A binding post can be soldered into one of the grooves.

Another way of uniting carbons is to cast lead around the ends of a bunch, instead of soldering. This, however, makes a heavy plate only adapted for large batteries.



Fig. 2.—Electric Light Carbon Battery.

An excellent method is illustrated in the next cut. It is to cut out a circular or square piece of wood to cover or else to simply extend across the top of the jar. Holes are bored in it through which the carbons are tightly thrust after stripping and paraffining. The ends are brought just flush with the surface of the wood, and a strip of brass or copper is sweated to the plated carbon ends. This is done by first tinning the lower surface of the brass plates, where it is to come in contact with the carbons, and then tinning each carbon top. The strip is now laid in position, and by heating it the two sets of tinned surfaces are caused to unite by the solder running together. The brass plate is pressed down and held so until the solder is partly cooled and has set or hardened.

If the ends are not plated a piece of copper foil can be forced into the hole with the carbon, and to this a wire is soldered connecting all the carbons together. The foil can be doubled over the top of the carbons, and the connecting strip of foil used as just described.

As regards zincs, old Leclanché battery zincs can be used in a similar way by thrusting them through holes in a board. All the soldering must be done before the zincs are amalgamated.

A very neat battery is made by cutting out the wood to cover the jar, and giving it a rebate all around its edge, so that it cannot slip. The zincs and carbons are then fastened in holes as just described. For a single fluid battery this is an excellent form of construction.

The wooden top may be made of pine, or, if a

hard wood is desired, mahogany or maple is good. Ash is not altogether satisfactory, because if the lower surface gets wet the piece warps badly. But this is of less importance, as the greatest care should be taken to avoid such wetting as the acid will corrode the connections.

It will be seen also that a binding post can in this battery be screwed through a hole in the brass or copper strips directly into the wood, and then, if desired, may be soldered.

A Tomato Can Battery.

The above designation applies to a simple form of home-made battery in which a discarded tomato can may be made to play a part. It is a battery of considerable merit, but of too low voltage.

The outer vessel for containing the fluids and other parts of the battery is a tomato can or other iron vessel. Within it is a porous cup. The annular space between is filled with fine scrap iron, such as turnings, borings and clippings. A zinc plate goes into the porous cup.

The exciting solution is a ten per cent. solution of caustic soda. The wires are connected as shown, one to the zinc plate and one to the can itself.

The battery is liable to polarization, but the large surface of the iron protects it to some extent.

If it is desired to make it constant or self-depolarizing, a quantity of oxide of copper may be placed in the bottom of the jar upon a layer of iron borings and the rest of the filling of iron scraps may be dispensed



Fig. 3. A Tomato Can Battery.

with. This makes it a Lalande-Chaperon battery. The E. M. F. is about .75 volt.

Materials for Battery Cells.

Before leaving the subject a word may be said on the cell proper. Porcelain marmalade jars make excellent receptacles for small couples. In selecting a vessel there is one point of special importance. The sides should not taper or slope outwards. It is far better to have a vessel that is smaller at the neck than at the bottom. Self-sealing preserve jars for this reason are very serviceable.

Wooden battery troughs have been used to a considerable extent. These may be made of pine, oak, mahogany or maple. The sides may be protected from the liquids by baking and, while hot, coating with melted paraffine. Potassium bichromate battery solution, however, will in time attack almost anything except glass or porcelain.

A long trough to contain a number of elements may have its partitions made of glass set in grooves in the sides and secured with cement.

CHAPTER II.

PERMANENT MAGNETS.

HOW TO MAGNETIZE STEEL BARS—ROLLING ARMATURES—MAHOMET'S COFFIN—MAGNETIC JACK-STRAWS—THE MAGNETIC TOP—THE MAGNETIC PENDULUM—MAYER'S FLOATING NEEDLES—MAGNETIC FISHES, AND THE MAGNETIC SWAN, BOAT, ETC.

How to Magnetize Steel Bars.

A BAR of soft iron held in a magnetic field, is acted on by the lines of force constituting the field, and becomes a magnet and will attract iron, and act exactly as the permanent magnet does. When removed from the field of force it will show hardly any magnetism. If a piece of steel is treated in the same way, it will also show magnetism when in the field; but, on removal, will retain some of it. It is a permanent magnet.

Permanent magnets are easily made of such material. The bar of steel should be of good quality, and tempered to a straw color or purple. All the shaping, filing or polishing, which it is proposed to give it, should be done before magnetizing, as the least thing in the way of filing or jarring the magnet injures its power.

It may be magnetized by another magnet, permanent or electro—or by a magnetizing coil and battery. It is enough to touch one end to the most strongly magnetic part of the field magnet of an active dynamo. This suffices because of the intense polarity of the powerfully excited machine.

With a single permanent magnet, a bar may be thus magnetized. It is rubbed from the centre to one end, with one pole of the magnet a number of times, the magnet being drawn away from the end and carried back to its centre through the air, and the stroking is repeated a number of times. Then the same process with the other pole of the magnet is applied to the other half of the bar. It is well to turn it over so as to stroke all sides of it.

A simpler way is to stroke from one end of the bar to the other, always in the same direction, with one pole of a magnet, returning it through the air.

Two magnets may be fixed in an inclined position with their poles of opposite name close together, and the bar may be stroked with them as described above for a single magnet. The next cut illustrates this method as well as the process next to be described.

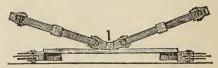


Fig. 4. Magnetizing a Bar of Steel.

An excellent method is to apply the stroking from

centre to ends with two magnets simultaneously. A little bit of wood or brass should be used to prevent their ends from coming in contact in the centre of the magnet. The cut shows the arrangement, *l* representing the separating piece, and also shows the bar resting upon the opposite poles of two other magnets. The end to be stroked with a north pole should rest upon the north pole of a magnet, and the same applies to the south pole.

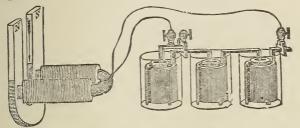


Fig. 5. Magnetizing a Horseshoe Magnet.

Magnets are generally either straight or horseshoe in shape. If of the latter description they may be magnetized by touching both poles to opposite poles of a dynamo field magnet. It should be noted that this will reduce for the moment the power of the dynamo. Where a small electro-magnet is at hand the stroking process may be applied as shown in the cut. The bent bar is placed against the poles of the excited electro-magnet, and is drawn downwards as shown by the arrow. This is repeated a number of times and the bent bar, after each stroke, is pulled

away from the electro-magnet and is returned to its original position. It is then well to reverse operations; to apply the other face of the bent bar, now partly magnetized, to the electro-magnet, but this time to keep the bend upwards as the opposed poles must be kept in the same relation. The bar is now drawn upwards and away from the electro-magnet a few times and the operation is complete.

If the electro-magnet has its poles too far apart to fit the horseshoe bar, which it is desired to magnetize, a small block of iron can be placed against one pole to set as an extension. To each pole, if desired, an extension can thus be attached so that a much larger or smaller horseshoe bar can be magnetized.

If the horseshoe bar is thin in the other direction, so that its edge would come against the faces of the electro-magnet, the inside or outside of the bar should be rubbed, and not the edges.

To make powerful magnets thin pieces of steel may be magnetized separately and then clamped or screwed together. They must not be rivetted or soldered as either would injure the magnetism.

Another way, Jacobi's method, to magnetize a horseshoe bar, is to place it with its poles against those of a strong horseshoe magnet. A bar of soft iron, long enough to reach across from outside to outside of the parallel legs is now laid across at or near the ends of the legs of the bar to be magnetized and is drawn along it back to the bend and away from it. It

is returned through the air and the process repeated a few times on each side of the bar. It is said that a one-pound magnet may thus be made which will carry twenty-six and a half pounds.

To magnetize with a coil, all that is necessary is to surround a part or all of the bar with a coil of insulated wire and to pass a strong current through it for an instant. By Elias' method the coil is moved backward and forward along the bar which it encircles while the current is passing. The number of passes is of greater importance for weak currents. For strong ones a single pass is ample.

By another method the bar is armed with two short cylinders of iron, one at each end of three or four times its diameter. These armatures should be of soft iron. It is placed in the axis of a coil that is of the same diameter as the armatures and which is long enough to include both armatures and the bar. A current is passed through the coil and powerful magnetization results.

To preserve magnets their opposite poles must be connected so as to complete the magnetic circuit. With bar magnets this is best done by placing them, almost touching each other, in pairs with their opposite poles corresponding in direction. Two little bars of soft iron laid across from pole to pole complete the circuit. Such bars are termed keepers. If a single magnet is in question a bent piece of soft iron may be used to connect the two poles. A magnet

may even be left without any keeper, if placed in the magnetic meridian. For horseshoe magnets a single keeper, the armature, suffices to connect both poles.

In using magnets all jarring must be avoided. It does no harm to pull the armature off if done perfectly steadily and without jar. The re-attraction of the armature with a "click," is what deteriorates a permanent magnet most rapidly.


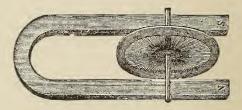


FIG. 6. THE BOLLING ARMATURE.

Rolling Armatures.

The rolling armature consists of a short cylindrical axis of iron to whose center a wheel is attached. The wheel may be made of lead or other metal. When it is placed as shown upon a horseshoe magnet it will adhere, but if the magnet is properly inclined will roll down to the end. The momentum of the fly-wheel keeps up the motion and the armature rolls across the

poles and up the other side for a considerable distance.

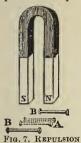

OF ROLLING AR-

MATURES.

A modification of this armature consists of two little bars of iron with brass rollers attached to their ends. They are placed in the position A, as shown in the dotted lines in the cut. On approaching them with the magnet they become polarized both in the same sense and at once repel each other and roll away as shown by B B.

If the horseshoe magnet has parallel sides, and the last described armatures are nicely made, they may be made to roll upon it somewhat as the other rolling armature does.

By concealing the magnet under a sheet of paper the recession or rolling away from each other of the two bars may be made to seem quite mysterious.

Mahomet's Coffin.

The next cut shows a very pretty magnetic experiment which recalls the famous unsupported coffin of Mahomet. A needle, whose point may be broken off, is magnetized by a few strokes with a magnet. On drawing it by a thread, as shown, over the poles of a horseshoe magnet so as to bring like poles over each other, it will lie horizontally and motionless in the air, sustained by an invisible force. As it is drawn forwards and from the further side of the horseshoe magnet it tends to follow the lines of force and rises

along the line of an arc gradually reaching the position shown.

With a strong magnet and a little bar of steel, con-

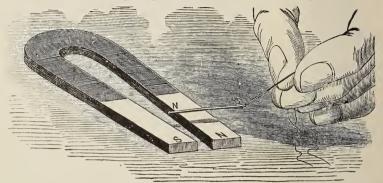


FIG. 8. MAHOMET'S COFFIN.

tained in a miniature coffin, the last resting place of the prophet could be well simulated.

Magnetic Jack-Straws.

Magnetic jack-straws are an interesting modification



of the time-honored game. They are made up of a set of jack-straws to each of which a piece of iron is attached. They may be given the usual shapes exactly as in the regular game.

In place of the hook there is substituted a magnet. With this the

Fig. 9. Magnetic Jack-Straws. magnet. With this the straws are drawn out one by one.

In the cut a simple way of making the straws is shown. Short pieces of iron or steel wire are used. Some have little blocks of wood fastened to them; others are bent and twisted, others are plain. Different values are assigned to each kind. Each player draws out straws until he shakes or moves one which he is not attempting to remove. He then resigns to the other player. This is kept up until all are withdrawn. The one getting the highest score, as determined by adding up the value of the straws captured, is the winner.

The Magnetic Top.

This amusing toy is easily made. A bar of steel, suitable for the spindle of such a top as shown, is sharpened at one end, and a metallic or heavy wooden disc is fitted to it. The best method of attachment would be by screwing, or by a couple of nuts, one above and one below the disc, the spindle being threaded in either case. The combination is a top. Before putting it together the spindle is magnetized. All shaping, cutting or filing must precede the magnetizing.

FIG. 10. THE MAGNETIC TOP.

A supply of short pieces of iron wire is required; some of these are bent into different shapes, circles, letter S's, etc; others are straight. When the top is spun by the fingers, and one of the wires is placed on the table against its point, it is slowly carried back and forth in the most curious way. It is well, to make it appear still more mysterious, to use cotton or silk covered wire.

As the top rotates, the wire is carried by a sort of friction-pulley action along in the direction of its length. As its end reaches the point of the top it changes sides and returns as it is acted on by the other side of the spindle, and thus goes back and forth, first on one side and then on the other side of the top as long as it spins.

The Magnetic Pendulum.

A universal joint is one that admits of movement in all directions. The construction of a perfect joint of this description is far from a simple matter.

The magnetic pendulum shows how a magnet can be instrumental in producing one.

The original idea of the apparatus was to show the rotation of the earth by Foucault's well-known experiment. A pendulum has fitted to the upper end of its rod, a piece of iron with smoothly rounded upper end. This is suspended from a magnet by simple attraction. Such a pendulum is free to swing

in any or all planes without being restrained by torsion.

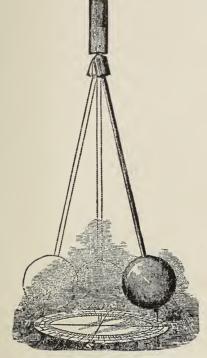


Fig. 11. THE MAGNETIC PENDULUM.

It is therefore peculiarly well adapted to be used in proving, by its change of plane of oscillation, the rotation of the earth upon its axis. It is not to be supposed that the motion is without retardation from its method of suspension. The magnet acting upon the soft iron produces a damping action due to induced currents. The ordinary friction can be reduced by having the face of the magnet as smooth as possible, by weighting the pendulum until it is barely supported, and by accurate finish of the iron top of the pendulum rod.

It is obvious that, using a cylindrical armature with horizontal axis, the pendulum could be made to swing always in the same plane. The curvature of the cylindrical surface also could be modified so as to give a cycloidal arc of swing to the pendulum bob. But the isochronism of the pendulum would be affected by the action of the magnet on the iron, so that a cycloidal pendulum might not prove isochronous.

Mayer's Floating Needles.

This is an exceedingly pretty experiment, being an improvement on the well-known magnetic fishes. A number of large needles are magnetized, all in the same sense as regards their relation of poles to points or eyes. Each needle is then thrust through a small cork, so that only a little bit of the eye end projects above one surface of the corks. They are then floated in a vessel of water as shown, the like poles coming above the surface. Under the effect of repulsion and attraction, they float into the most symmetrical shapes, some of which are shown in the

lower diagrams of the cut. To cause them to separate, a magnet pole of the same name as that of their upper ends may be brought above them. This repels them in all directions.

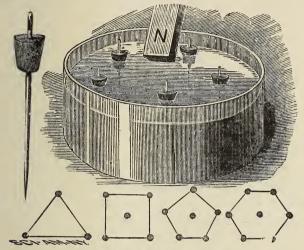


Fig. 12. Mayer's Magnetic Needles.

These floating needles are due to Prof. A. M. Mayer, of the Stevens Institute, N. J., and will well repay investigation.

Magnetic Fishes and the Magnetic Swan, Boat, etc.

A few words are enough to describe these well-known toys. The fishes or other objects are made of thin block tin or other non-magnetic material, so

as to float in water. Bits of iron or of magnetized steel are secured to them in the proper places. Thus, for the fish, a little bit of iron wire projecting from the mouth is proper. For the swan or boat a piece of magnetized steel may be secured in a similar position.

By a common magnet attached to a thread with a little stick or rod, the fish may be caught. The swan and boat may be attracted or repelled by one or the other poles of the magnet.

By using fish to which different values are assigned, or by having the number stamped upon them in a concealed place, a game can be made up. Each player should catch one fish at a time, alternating with the others. The one who catches those aggregaing the largest number would be winner. The numbers of the fish should be concealed, so as to be visible only when out of the water. Thus each player would have to rely on chance for his score.

CHAPTER III.

ELECTRO-MAGNETS.

CONSTRUCTION OF ELECTRO-MAGNETS—MAGNETIZ-ING COILS — THE MAGIC CIRCLE — MAGNETIC HEMISPHERES.

Construction of Electro-Magnets.

ELECTRO-MAGNETS are almost universally made of the horseshoe type. The core should be, for simple sustaining power, thick and short. The cuts through the book show the regulation shapes which curiously enough are not the most powerful. The core is very conveniently made in three pieces, the two arms being tapped or pinned into the yoke. A simple piece of bent iron, as shown in the electro-magnet in Figure 5, will suffice for the full core. It must be bent into U shape while hot, if of large size.

The coils may be wound directly on the core, in which case it is well to wrap the latter with paper. Either insulated or bare wire can be used. If the latter, rigorous care must be taken not to permit contiguous windings or coils to touch each other, and a

wrapping of shellacked paper must be employed between each layer of the windings.

On the whole insulated wire is to be recommended. A common mistake is to wind too much wire around the legs. The proper amount and size is a matter of calculation, all depending upon the battery to be employed, and the length and section of the core and its material.

The windings upon both legs must be in opposite directions. After winding the straight portion of one, the wire may be carried diagonally across the intervening space to the opposite face of the other leg, and the winding may thus be continued.

The coils may be made separate as will be described, or may be wound upon bobbins and thrust on as required.

Nothing is gained in general by carrying the windings around the bend.

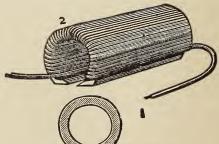


Fig. 13. Joule's Electro-Magnet.

A very powerful form of magnet is here illustrated.

It was devised by Joule, largely on experimental bases, and presents an excellent example of a highly efficient electro-magnet.

The core is readily made by filing off one side of a piece of gas pipe. No. 1 shows the section of the core, and No. 2 shows the complete magnet. Here it will be observed the winding is carried around the bend.

Electro-magnets are used in motors, dynamos and bells, and form a very important element in electric constructions. Their power depends on the current which passes around them and on the number of turns of wire through which the current passes. The lifting power in other words is proportional to the ampere turns.

Sometimes a straight bar is used as the core, and sometimes the armature is dispensed with, and the drawing into place of the movable core by the fixed coil, or the drawing of the coil by the fixed core is utilized. Thus, if through a coil of wire a sufficiently intense current is passed, a bar of iron brought into or near the opening of the coil will be drawn or sucked in like a plunger into a cylinder.

The latter type of magnet is ordinarily termed a solenoid, not very correctly however. It was used extensively by Dr. Page in his motors in the early days of the science. It is said that very powerful solenoid magnets were exhibited by the old-time lecturers, some sustaining the weight of several men.

Any magnetizing coil with a bar of iron may be used to illustrate this action. The drawing up of a bar from the table into its axis presents an extraordinary appearance when first seen. It is obvious that another version of Mahomet's coffin could be built upon this, the core being held down by a fine thread. This could be made to present the appearance of a metal bar floating, balloon fashion, at the end of a thread.


The winding of a magnet may be secured in place by glue or varnish, as will be described under "Magnetizing Coils" more fully. It is enough to wind on all the wire and then apply glue to the finished coil, drying, baking, and varnishing or painting.

It is obvious that, if a single length of wire is used for winding, and if the legs are wound separately, one end will come next to the core, and the other end will be on the outside of the wire coils and on the other leg. If wound separately on each leg and afterwards joined across the bend, the ends of the wire may be made to come out symmetrically. As regards appearance it is preferable to have them lie next the iron core; for ease of repair they should be on the outside. The latter is to be recommended.

Magnetizing Coils.

The construction of magnetizing coils, which have wo core to support or carry the wire, and in which the wire must be compact and adherent, layer to layer,

requires special care. They are wound upon a mandrel, a cylinder generally, which is afterwards withdrawn. It is necessary to arrange so that this withdrawal will be possible; therefore, the mandrel should be slightly tapered, if possible, to facilitate the removal. A glass bottle, a tumbler, or a round ruler or piece of curtain roller are good examples of mandrels.

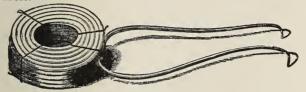

E.g. 14. MAGNETIZING COIL.

To make a magnetizing coil a mandrel of any convenient material is selected. A piece of paper is wrapped around it and on this the insulated wire is wound as neatly as possible. This may be done by hand as regularly as is possible on a lathe, although the use of the latter saves time. Where there are a great number of turns of wire an extemporized winder can easily be put together in a few minutes, the mandrel being used as axle, with a crank handle attached to one end, and then mounted in a couple of standards.

The windings of the coil have to be fastened together. For this purpose carpenters' glue may be employed. The glue is applied to each layer as it is wound and when the last layer is in place the free end of the wire is kept strained until the glue has hardened, which should be in an hour. The whole can then be slipped off the mandrel and dried over a stove.

If, on drying it, the surface shows cracks, they can be stopped up by a further coating of glue, followed by drying.

The coil thus prepared can be painted or varnished with alcoholic solution of shellac, which prevents the glue taking up moisture, and acts to hermetically seal the windings of the coil.

Additional security may be given by binding with wire, as shown in the cut, but this is unnecessary either when glue is employed or when the next described method is adopted.

A much nicer and more effectual way is to use a solution of gum copal in ether. This is applied to layer after layer and solidifies the whole mass with a water repelling medium. Alcoholic solution of shellac can be used in the same way. Heating may be necessary, as in the use of glue, to bring about the last degree of solidification.

The Magic Circle.

The magic circle next illustrated is designed for use with a small magnetizing coil. It is simply two semi-circles of soft annealed iron, provided with rings or handles exactly at the centre of each piece. The faces are planed or filed off so as to fit accurately. A good size is made of one inch round iron, bent into a circle of three inches internal diameter. For such a circle a coil of number eighteen to twenty wire, wound

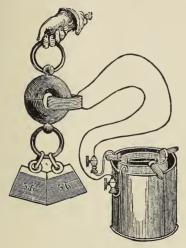


Fig. 15. THE MAGIC CIRCLE.

into forty or fifty turns, suffices. With a current of good strength the attraction the circles will develop is surprising.

Magnetic Hemispheres.

A very peculiar form of magnet is shown in the next cut. Although a modification of it is attributed to Prof. Forbes, by Thompson in his recent work on

the electro-magnet, it is really a very old form. The cut is a reproduction from Davis' Manual of Magnetism, a work copyrighted in 1847. It may aptly be termed the Magdeburgh Hemispheres of Electricity.

The small sectional figure in the left lower corner shows the construction. Two cylinders of soft iron



FIG. 16. THE MAGNETIC HEMISPHERES.

have cut out an annular groove of size adapted to receive a magnetizing coil. A slot is cut to permit the wires to come out where the two halves are face to face and in contact.

When the current is turned on and passes through

the coil, embedded in the recess, it polarizes the two coils, and if placed together they are strongly attracted. No magnetic circuit, it will be observed, is formed.

The coil may be a movable one, or may be cemented in place with varnish or sealing-wax. Rings should be fitted to both parts. Two persons may be placed in opposition to each other to try to pull them apart. The same magnetizing coil may be used for these as for the magic circle. The metal of the core may be a little heavier than that shown in the cut. These show very little residual magnetism and fall apart easily when the current ceases. The magic circle, on the other hand, retains much residual magnetism even when the current is turned off.

When two people pull against each other in their endeavors to draw apart the halves of this apparatus a sudden breaking of the circuit will cause a sudden giving away or perhaps a fall backwards.

The residual magnetism of the magic circle is so great that to obtain the same sudden separation a reversal of the direction of the current is necessary. This reversal can be easily made by shifting the ends of the wire by hand so as to connect with the other poles of the battery.

CHAPTER IV.

ELECTRIC MOTORS.

PENDULUM COIL MOTOR—RECORDON MAGNET MOTOR
—MULTIPOLAR MOTOR—PAGE'S ROTATING ARMATURE—THE ELECTRIC LOCOMOTIVE.

Pendulum Coil Motor.

A VERY pretty form of slow speed motor is shown in the cut, from which the general features of construction can be readily understood. A permanent horseshoe magnet is the basis of construction. This is attached to a board, as shown, so as to be held an inch or so above its surface.

A standard rises from the board just at the end of the magnet. It carries a horizontal axis on which two coils, such as described under magnetizing coils, swing at the end of short bars. These coils encircle the ends of the magnet. A fly-wheel is carried by two other standards and is connected by pitmen with suspension rods of the coils.

The coils are thus connected with the terminals or binding-screws seen on the base.

One terminal connects by the standard and magnet itself with the axis of the fly-wheel. A projecting

segment is attached to this axle, which extends about one-third around the shaft. The two springs seen rising from the base press alternately upon this as the wheel rotates.

From each spring a wire is carried up the large standard and down one of the vibrating rods to a coil. Each coil has its own spring. The other ends

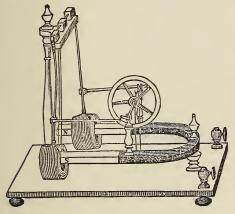


Fig. 17. PENDULUM COIL MOTOR.

of the coils unite and pass down the same standard to the other binding post.

Thus the current entering at one binding post passes by way of the magnet, standards, and fly-wheel axle. The collar is almost always in contact with one spring. The current passes through this, through

one of the coils, and leaves it to go to the other binding post, and thence to the battery again. The coil is attracted towards the magnet pole, and as it is drawn thither causes the wheel to rotate. As it reaches the pole and swings beyond it the collar breaks the connection and excites the other coil now most removed from its pole. This is in turn attracted, keeping up the rotation of the wheel. It is also clear that at certain phases both coils may be excited, one swinging to the left and the other to the right. To carry this out two collars may be employed, one for each coil. The other construction is simpler.

The winding of the coils must be thus arranged: The current in the coil surrounding the north pole of the magnet must go in the direction contrary to that of the hands of a watch, if the observer is supposed to be looking directly at the magnet end. The current in the other coil must go in the opposite direction.

Finally, the permanent magnet might be made of circular section so as to more closely conform to the coils, or the latter may be wound upon a square mandrel. In all such constructions it is important to keep the coils near to the field.

This motor illustrates one of the solenoid constructions already alluded to, where the core is stationary and the coils move. It is further to be noted that two round cores of unmagnetized iron can be used instead of a magnet. In such case the direction of winding of the coils is a matter of indifference.

Recordon Magnet Motor.

A very neat motor is based upon the same type of magnet as that used in the induction coil shown on a later page. In the present illustration B represents such a magnet, mounted in a frame and provided

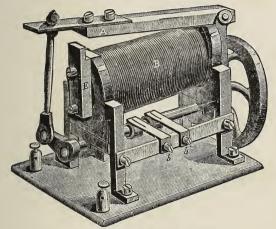


Fig. 18. RECORDON MAGNET MOTOR.

with two pole pieces, one projecting from each end. The one on the right has hinged to it the armature A. The other pole piece, E, is so shaped as to admit of the armature going within it, and making as close a fit as compatible with the absence of actual contact. An axle with fly-wheel is journaled in the lower part

of the frame. On the axle are a couple of commutator drums, on which two springs, b b, press.

The two commutators are of insulating material, wood or ebonite, and one-half of the face of each is coated with a slip of brass, which connects with the axle.

One of the binding screws, by a short piece of wire, connects with the frame of the apparatus, with the axle of the fly-wheel and with the metallic commutator sectors. The other binding post connects with one of the coil terminals. The two springs are insulated from the frame, which is effected by using a bar of wood to attach them to. A wire soldered to the screws which attach the springs thereto, runs back of the wood to the other coil terminal. The wire must be insulated from the frame. A pitman is attached to the free end of the armature, and its other end receives the crank pin of a crank fastened to the fly-wheel axle. As the axle rotates the armature will rise and fall, and, as the armature is drawn up and down, the fly-wheel will rotate.

The commutators are so adjusted that when the armature is at its highest point the springs are just in contact with the edge of the metallic segment. This closes the circuit and the armature is attracted and, as it descends, it turns the crank, axle and flywheel. It is clear that if the crank turns the wrong way the circuit will at once be broken. For this reason the wheel should be started in the right direc-

tion by hand. The armature is therefore drawn down by the magnet as long as contact of springs and commutator sectors last. This ceases just as the armature reaches its lowest point. The momentum of the fly-wheel completes the other half of the revolution, and again closes the circuit through the commutator just as the highest point is reached by the armature.

The same is repeated over and over again, and the wheel is kept rotating as if by a single acting engine.

It is in some respects well to set the commutator so that connection will be made only after the armature has descended a very short distance. This will make the motor less apt to start in the wrong direction.

The extension of the pole pieces gives the magnet a long range of action. The shape is also very compact, and the motor suggests possibilities in the way of improvement. The armature might be wound with wire and thus be excited also so as to increase the attraction.

M. Recordon, it is to be noted, makes these magnets with hollow cores. The aperture can be seen in the cut just back of the left-hand pole piece.

Multipolar Motor.

One of the principal points of merit in a well designed motor is the absence of dead points. The multipolar motor shown in the next illustration, while it has such, on account of their being subdivided into six for each revolution, is very constant in its movement.

The annular frame, A, and base, F, must be made of

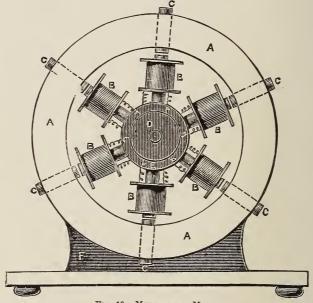


FIG. 19. MULTIPOLAR MOTOR.

some non-magnetic material, such as brass or wood. Through the frame, at even distances, six bars, C, C, of iron are thrust.

These constitute armatures. The rotating field is

built upon a drum, D, which carries six equally spaced radiating cores, carrying coils of wire, B, B. D may be made of brass or even of wood. A nonconducting or insulating collar, E, surrounds one part of it. The latter collar, E, is designed to receive upon its surface one set of terminal wires from the magnetizing coils; the other terminals go to the surface of the drum, D.

The magnetizing coils are wound very solidly with insulated wire upon the six cores. They may be further secured by flanges pinned or screwed in place, as the centrifugal force will be considerable.

The connections of the six field magnets are arranged to carry out this principle. During one-half of the total time of a rotation they must be receiving current, but this again must be divided into six periods, which amounts to saying that they are to be excited during alternate twelfths of each revolution. When in the position shown in the cut they are not excited. After they rotate until one-twelfth of a revolution is accomplished, the magnet cores are half way between the outer cores or armatures. At this point they are excited and the current continues for the next twelfth of a revolution, to cease again as the magnets pass the armatures. This is kept up all around the circle.

The six wires carried to the collar, E, connect with a brass or copper ferrule thereon. Six wires or ribs soldered to the ferrule at equal distances apart lie upon the surface of the collar. A copper spring rising from the base presses upon these. The proportions are so adjusted that the spring presses upon each wire during one-twelfth of a revolution. This contact period must correspond to the period when the magnets pass from the central point between armatures to the point opposite the same.

The other six wires run to a ferrule upon the drum D. A second spring presses continually upon this ferrule.

The wires from the battery, or other source of current, connect with the two springs, one wire with each.

If the arrangement thus described is studied it will be seen that the current passes during contact of the spring with the ribs upon the collar, E, or during the proper portions of the revolution. The magnets are all simultaneously excited in parallel, and are attracted to the cores in advance, referred to the direction of their motion. As soon as they reach them the current ceases and their inertia carries them through the next sixth of a revolution, when they are again excited.

The speed such a motor will attain is very great, and hence special care has to be taken to guard against centrifugal force displacing the coils.

Any number of magnets may be employed with a corresponding number of armatures and commutator connections, as the ribs are termed. It will be found

that the height as well as breadth of the ribs is a factor in determining the period of contact. The more elegant way is to make each rib exactly one-sixth the circle in width and fill the space between the ribs with insulating material flush with the surface of the ribs, so as to form a true cylindrical surface for the spring to bear against.

The next cut shows in general the plan of connection, only for seven instead of for six magnets. At M is



FIG. 20. COMMUTATOR OF MULTIPOLAR MOTOR.

the ferrule upon the drum, against which one spring, C, is constantly pressing. F, F, represent the ribs connected to the collar, against which nos the other spring, D, bears. Their degree of projection, it will be seen, determines the time of contact. P and N are the wires from the battery, and B is the baseboard. The dotted lines, H, H, indicate the course of two of the wires running to and connected with the ferrule, M.

A modification of this motor should be here alluded to. The magnets are made stationary and occupy

the position of the armature bars, while the rotating portion carries only the six armature bars. The commutator bars, springs, and ferrules are identical. One set of terminal wires from the magnets are united and a single larger wire is carried to a binding post. The other ends, in like manner, connect with one of the springs. The other spring connects to the other binding post. Or all the ends of the magnet wires, except those of any two magnets next to each other, may be connected so as to bring the magnets in series. The two free ends are connected as described, by means of the springs, one to the commutator, or ferrule, and the other to the binding post.

Page's Rotating Armature.

A simple form of motor, which may attain very high speed, is shown in the cut. The great velocity of an electric motor is not to be considered an advantage, as it necessitates a reduction of speed by belts and pulleys, or their equivalent.

Upon a fixed base, a permanent U-shaped magnet, N, S, is secured, above which a horizontal fixed piece is supported, forming the top member of a suitable frame. A set-screw, with a conical hole in its end, passes through the centre of this piece. A support, corresponding to the set-screw, is secured to the base directly below it, as shown. This support is a pin with a conical hole drilled in its top. Between the two coned supports a vertical spindle is carried. By

the set-screw the adjustment can be carried out, so as to leave the spindle free to turn, yet without any end shake.

To the spindle is attached a heavy bar of iron, wound with insulated wire, which is virtually a U-shaped

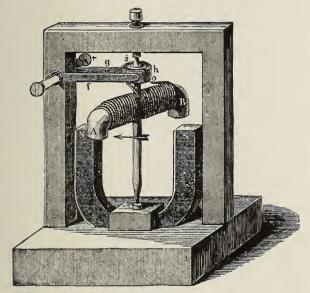


Fig. 21. Page's Rotating Armature.

electro-magnet. The wire is all wound in the same direction. The ends of the wire are carried to two divisions, i h, of a two-part commutator, which is attached to the spindle directly above the rotating

magnet, or polarized armature, as it might be called. Two springs, g, f, of copper, brass, or silver, press against the commutator. Each spring is attached to the frame, and each has its own binding post to receive the wires of the actuating circuit. When the current passes the armature and spindle rotate.

While the construction of the commutator is clear from the perspective view, a small sectional representation is also given. In it A is the section of the



vertical spindle. S, S are the two parts of the commutator. They consist of bent plates of copper, or brass, or silver, which are in-

sulated from the spindle. This insulation may be simply a perforated bit of wood to which the plates are cemented by sealing-wax, with a winding of silk at the ends of the plates to further secure them. The plates must of course not touch each other, and are arranged with the two separations almost in the plane at right angles to the plane of the electro-magnet. In the diagram, W, W represent the springs.

The general action of the motor is the following: The current, entering by the binding posts and springs through the commutator, magnetizes the core of the electro-magnet, which is generally denominated the armature. The magnetization is such that it is attracted in one direction or the other, assuming that the bar does not lie in the plane of the magnet. Yielding to the attraction it turns on its axis and

swings past the poles. As it does this, each spring presses on the other leaf or plate of the commutator. This causes a current, the reverse of the preceding, to pass through the coil, and the bar is at once repelled. As its momentum has carried it past the poles of the magnet it continues its rotation, and is attracted by the distant as well as repelled by the nearer poles. The same action of reversal occurs twice in each revolution.

If the armature lies in the plane of the fixed magnet the motor will not start, but a touch of the finger will suffice to set it going.

The name given to this apparatus is that of the celebrated Dr. Page, who, about half a century ago, endeavored to introduce electric motors. As he had no cheap source of current his work was a failure. If the armature in this motor is turned by power it will generate a current; in other words, the mechanism is reversible.

The Electric Locomotive.

An electric locomotive, based on the use of a motor such as already described under the title of "Page's Rotating Armature" (page 56), is illustrated here. The general construction is clear from inspection of the elevation. The motor is carried horizontally on a little car moving on a railway, and a prolongation of its shaft has on it a worm which gears into a

worm-wheel on the axle of one pair of wheels. This pair of wheels is attached rigidly to the axle and constitute the drivers.

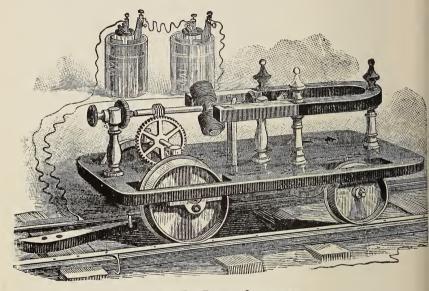


FIG. 23. THE ELECTRIC LOCOMOTIVE.

The current is taken from the rails, the motor acting as a bridge across them. The necessary connections for carrying out the plan, and the arrangements for automatically reversing the engine, will be understood from the view showing the bottom of the platform, the wheels and reversing blocks.

One pair of wheels, those on the left, are mounted loosely, the axle not rotating. The central or darkly shaded part, M, of the axle, is of wood. A wire from the metallic end of the axle, on which the wheel, K, rotates, runs to a central plate, and thence to a plate, G, which plates are insulated. Near G are two plates, E and F, also insulated, except that from each of them a commutator spring, to supply current to the motor, rises.

It is unnecessary to describe the springs and commutator. They are identical with those already described and illustrated (pages 56 to 59).

An insulated switch, A, turns about the central point between E and F. To its pivot, also insulated, a wire is attached, which connects with the journal of the car-wheel, J. The other car-wheel on the same axle is insulated from it by a wooden or vulcanite piece at L.

To the switch pivot a stiff wire with contact piece, C, is soldered. This presses upon E or F, according to the way the switch handle is turned. To the switch handle a second wire is soldered, which is bent so as to bring its two contact pieces, B and D, into the relations shown.

Both these wires must be of spring temper to ensure electrical contact by pressure between their ends and the plates over which they slide.

The moving of the switch handle towards the part corresponding to the lower portion of the cut would shift the contact pieces, B and C, to the reverse position, as regards the plates E and F. C would be shifted to E, and B would be shifted to F; while D would slide along its plate, G, it would not leave it.


As the switch is shown in the cut the current would enter by the wheel, K. It would pass to the plate, G, thence to the plate, E. It would then go through the coil of the armature of the motor, and, leaving it, would go through the plate, F, contact piece, C, switch journal, and its connection to the journal of the wheel, J, and through that wheel to the other rail.

This causes the motor to rotate and propels the car along the track always in the same direction.

Now, if the switch is turned, as already described, so as to reverse the position of the contact pieces, C and B, this will reverse the direction of the current as it goes through the motor, and will reverse the direction in which the car travels.

This reversal may be automatically effected by switch blocks attached to the roadway, two of which are indicated in the plan by H and I. If such are to be used a pin is inserted in the end of the switch, A, shown in the plan and elevation, which strikes the inclined edge of the switch-blocks and shifts over the switch. In an instant the motor is brought to rest and then starts back reversed.

The battery connections are shown in the eleva-

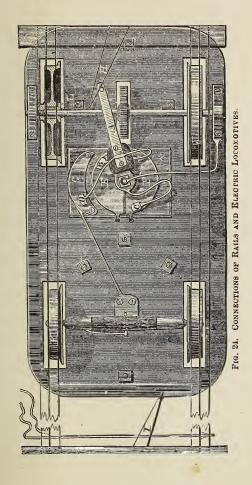

tion. The rails must be continuous, or must have their abutting ends connected by plates or wires. The two lines of rail must be well insulated from each other.

Any motor may be used to drive an electric locomotive. The advantage of those working with a permanent magnet for field is that they have a fixed direction of movement.

The elevation shows several details not needing description, such as the set-screws for adjusting the end play of the armature axle.

The general system of reversing might be applied to any other fixed direction motor. One advantage of the automatic reversing is that it obviates the necessity of a circular or continuous track. An improvement would also be to start a short up-grade directly beyond the reversing block to aid in stopping and starting back the motor.

CHAPTER V.

ELECTRIC BELLS.

THE TOLLING BELL—THE VIBRATING BELL—THE SAFE PROTECTOR.

The Tolling Bell.

ELECTRIC bells are generally of the gong type, and produce a sharp ring. The cut shows how a large regulation-shape bell can be made to toll by an electric current. In many cases the use of a gong would be disagreeable from its sound or appearance. In the arrangement illustrated, the ringing apparatus is all contained within the cavity of the bell so as to be pretty well hidden from sight.

The magnet consists of a perforated iron bobbin with heavy end flanges, of the Recordon type. A couple of pole pieces may be attached to the ends as shown. The magnet is attached to the base of the bell. One of its terminal wires runs through the axis of the extension of the magnet core to the outside of the bell, being insulated from the metal. This obviates the necessity of drilling a special hole in the bell, and possibly impairing its tone. The other terminal wire connects directly with the metal of the bell. A rod, bent into an irregular U shape, carries

at one end an iron ball, and constitutes the clapper. To the other limb of the rod a flat-faced bar of iron, long enough to reach from outside to outside of the pole pieces, is fastened. This acts as armature.

The bent bar is pivoted near its centre, as shown.

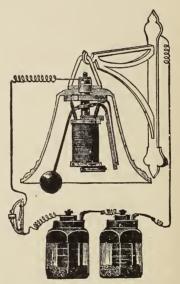


Fig. 25. THE TOLLING BELL.

A circle or ring is comprised within it at the top of the bend, which opening contains the suspension rod or core extension of the magnet. One pin goes through both sides of the ring and the suspension rod in question. This acts as a very excellent pivoting, preventing lateral shake.

The bell is hung to a metallic bracket. From the battery one wire runs directly to the bracket. It thus connects with the magnet coil, through the metal of the bracket and bell.

The other wire from the battery runs to a key, whence another wire connects with the magnet terminal wire coming out of the bell spindle.

The key may be of the simplest construction, as shown in the cut. When it is depressed, thus closing the circuit, the magnet is excited, attracts its armature and rings the bell.

The peculiar form of the magnet is not only advantageous in compactness of shape but is also supposed to give better results than usual in the way of attractive power.

The Vibrating Bell.

The continuously ringing bell is one which will automatically ring as long as the current continues. It is really a motor. A simple form is shown in the cut.

To a base-board is attached an electro-magnet. A bar of soft iron, which is its armature, is carried by a flat spring which draws it away from the magnet. A contact screw is so arranged as to touch the armature spring when the armature is drawn away from the magnet. To the armature is attached a wire,

carrying a ball, which serves as a clapper. A gong is fastened by its central post to the same base-board, which also may carry two binding posts.

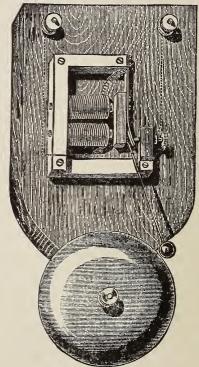


Fig. 26. THE VIBRATING BELL.

The connections are shown in dotted lines. From

one binding post a wire runs directly to one of the magnet terminals. From the other terminal of the magnet the wire connects with the armature spring. From the other binding post a wire runs to the metallic support of the contact screw.

When no current passes, the armature is drawn back from the bell, and the spring is in contact with the contact screw. If, now, a current is caused to pass, it enters by one of the binding screws and excites the magnet, its course going through the spring and contact screw. The magnet attracts its armature, and opens the circuit by drawing the spring away from the contact screw. The attraction of the armature draws the clapper against the bell and gives a ring. As the circuit is opened the armature springs back and again closes the circuit. Again the armature is attracted and the bell rings. This operation is repeated over and over again as long as the current is kept up.

The usual way of turning on the current is by a press-button, which construction is so simple as to need no description. It is seen in section on the left hand of the cut on page 66. Any form of switch will answer the same purpose.

The Safe Protector.

This apparatus is what may be termed a combined electrical and mechanical safe protector. The illustration shows its application and principle.

In Fig. 2 the ordinary bell, such as described in its

proper place (page 67), with battery, switch-box or "thief detector," and safe are shown. From the safe two wires, I J, are carried to the switch-box. Within the safe is a spring-switch, which, when pressed, maintains an open circuit, and when released

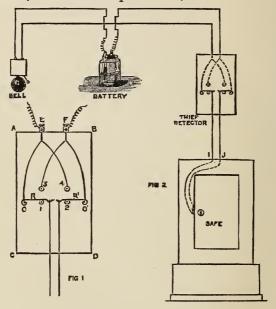


FIG. 27. THE SAFE PROTECTOR.

by the opening of the safe door, closes the circuit. Such a switch is so simple that enlarged description is not required. This switch is actuated by the safe door. When closed, the door keeps the circuit open by pressing on the switch. When the door is opened the circuit closes, as the switch is released from pressure.

Two wires from the battery and bell circuit lead to the switch-box, connecting with the binding screws, E, F, Fig. 1, on top of the box, A B C D. Within the box each wire bifurcates as shown, and has its two terminals connected to the two pairs of pins, O¹, 3 and O, 4 respectively. On the pins, O, O¹, two springs, R, R¹, work, to whose outer ends the safe wires are attached. These wires draw the springs down until they press against the steady-pins 1 and 2.

If, now, the safe is opened the circuit closes and the bell rings. If the burglar, before opening the safe, noticing the wires, I, J, cuts one of them to secure himself from detection, the spring R or R¹, as the case may be, springs up and makes contact with the stud, 3 or 4, on the opposite bell and battery terminal. This, of course, closes the circuit, also, and the bell rings. The same is the case if both wires are cut. Both springs then fly up and the circuit is closed just as before.

It will, of course, be an object to hide the switchbox, because if one or both of the leads from bell and battery are severed, the apparatus will become inoperative. The wires, I, J, must also be so fixed as to appear like ordinary electric leads. They must be perfectly free for their entire lengths. If the burglar understood the construction all he would have to do would be to secure the wires, I J, by staples or by tying, and then to cut them off below the staples. This would prevent the bell from ringing and would enable the safe to be opened. It is assumed, however, that the natural course of cutting one or both of the wires will be followed by any illicit operator, who attempts to prevent the electric alarm from operating.

CHAPTER VI.

MISCELLANEOUS TOYS.

THE ELECTRIC DANCER—THE MAGIC DRUM—THE ELECTRIC HAMMER—ELECTRIC INSECTS—THE INCANDESCENT LAMP.

The Electric Dancer.

This amusing toy originally was produced to be operated entirely by hand. The electrical modification is based upon the principle of the vibrating bell, and needs but a short description. The cuts show one construction very clearly.

A box contains the motive mechanism. This consists of an electro-magnet with a soft iron armature carried by a spring. A wire from the battery goes directly to the magnet. The other terminal of the magnet connects with the armature spring at L¹. The other end of the spring is bent at right angles at L², and carries a platform on a support L³. This is the dancing platform. A contact spring, S S, is carried by the armature spring. A contact screw, C, is adjustable as regards its contact with the spring S S. From it a wire runs to the binding post, B, to which the other battery wire is attached.

The magnet may have as cores round iron bars $\frac{3}{8}$ inch in diameter, $1\frac{1}{4}$ inch long, and wound to $1\frac{1}{8}$ inch diameter, with No. 26 silk covered wire.

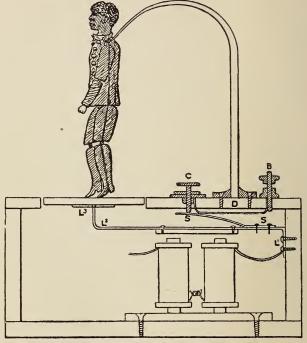


Fig. 28. THE ELECTRIC DANCER. ELEVATION.

The action of a current on such mechanism is to keep the platform in constant vibration, which may

be regulated and modified over quite a range of action by the screw, C.

The figure is made of wood, with very loose joints, and is suspended by a curved arm, so that its feet

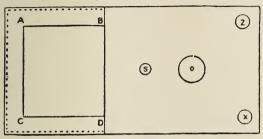


Fig. 29. THE ELECTRIC DANCER. PLAN.

just touch the stage. When a current passes, the figure begins to dance, and keeps it up as long as the battery supplies enough energy.

Another way of working it is to make the figure do the making and breaking of the circuit. For this end, the binding post, B, should be connected to the curved suspension-rod, instead of connecting with the contact screw, C. Jointed wires are carried through the figure, and the ends are soldered to light brass, or copper plates, on the soles of the feet. The armature spring is in electrical contact with the top of the dancing platform, which must have a metallic surface. Very thin sheet brass, or copper, may be used for this.

In the last construction, the screw, C, and spring,

S S, may be retained, but there must be no connection between them and the binding post, B.

Thus arranged, the feet will make and break the circuit. The jointed wires of one side are shown in the cut. The height must be accurately fixed, so that only slight adjustment need be made by the screw, C.

The wire by which the figure is suspended, should have plenty of spring to it. The figure may be suspended by a spiral wire spring, or even by an India rubber spring. In the latter case, if the figure is to make and break the circuit, by its feet, one or two wire conductors must be used independently of the rubber springs.

Two or three Leclanché cells will work the figure for a short time—for larger periods a more constant type of generator must be used.

The Magic Drum.

The magic drum has been exhibited by many professional magicians. When it is shown on a stage, far from the eyes of the audience, it can be easily manipulated, with little refinement, as far as concealment of its mode of action is concerned. The trick is doubtless familiar to our readers. A drum is hung, by one or two cords, from the top of the proscenium arch, or ceiling, and, in response to the performer's orders, plays, raps, etc.

The newer construction here illustrated, due to Mr. Geo. M. Hopkins, is superior, as it requires only

one suspending cord, and, without close inspection, it is far from obvious how the result is brought about.

The drum must contain some apparatus for making a sound. As shown in No. 2, the apparatus consists of a magnet and armature, D, both secured firmly

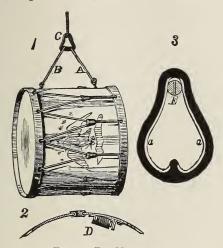


Fig. 30. THE MAGIC DRUM.

to the body of the drum. The armature should be as close to the poles of the magnet as possible, without touching, even when the current is turned on.

A sudden exciting or releasing from excitement of the magnet will produce a sound, on the general principle of the make and break sounds in a telephone. The advantage of this apparatus is that it can be so small and light as to be impossible of detection by the closest inspection. Placed close to the embouchure of the drum it will fall outside of the line of sight of any one looking into the interior.

If preferred, any form of rapping device, such as described for bells, can be used. These will be more easily detected.

From the magnet the two terminal wires run to opposite ends of the drum, and are provided with two ostensible suspending cords, A B, as shown in No. 1. These are, of course, really the conductors, and end in metallic hooks. They are hooked into a ring, C, which is hooked on the end of the suspending cord.

The ring is shown in detail in No. 3. It is of ebonite, or other non-conductor, and has two metallic strips, indicated by the unshaded areas, a b, within its interior. The main suspending cord, which includes two wires concealed in it, and insulated, one from the other, terminates in a hook, also of two insulated pieces of metal, whose section is seen at E. Each piece of this hook is connected with one of the two wires in the suspending cord.

It is obvious that, if the drum is suspended as shown, the two wires of the suspending cord may, at their further end, be attached to an electric circuit. If the current is turned on and off, a sound will be produced each time.

The single suspension cord, and the single hook

thereon, with the intermediate ring, and apparent absence of any sounding apparatus within the interior of the drum, enhance the mystery above the ordinary.

The drum may even be passed around for inspection. If this is to be done, it is well to remove the short suspending ends, A B, so that only a couple of rings for hanging it will be visible. In such case, the cords, A, B, should have hooks at both ends.

The Electric Hammer.

This toy, although, if made small, it is only a sort of model of a steam hammer, can be made quite powerful enough to be of some service. For the latter end, it would be well to vary the construction a little, and to use a polarized hammer spindle. Simplicity is favored by the construction described.

As shown in the cut, it comprises a solenoid or deep magnetizing coil, mounted on a suitable frame and base. Under the axis of the core is placed an anvil.

A bar of soft iron nearly fits the opening in the centre of the coil. The lower end of the bar is fitted with an enlargement to represent the hammer head.

One battery wire connects directly with one of the coil terminals. The other battery wire is attached to a flat rubbing plate of ebonite, or hard wood, which is secured by a single screw to the frame, so that it can be swung up or down, as desired. The attachment of the wire thereto is effected by a screw screwed into the plate, and through which its point extends.

The point is then filed off so as to be exactly flush with the face of the plate.

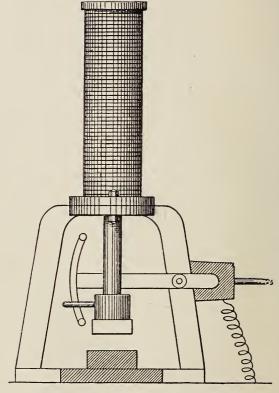


Fig. 31. THE ELECTRIC HAMMER. ELEVATION.

The second terminal of the coil is soldered to the metallic frame at any convenient point.

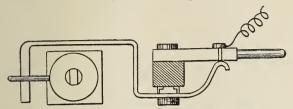


Fig. 32. Plan of Connections of Electric Hammer.

To the frame a swinging arm is pivoted, the same pivot serving for it and for the contact plate. It is bent so as to pass back of the stem of the hammer, and has two striking pins extending from it. A pin attached to the hammer stem, strikes one of these pieces, as the hammer rises, and another as it falls.

The action of the hammer, when connected to a battery, is as follows: The current passes by the contact screw, vibrating or swinging arm, and frame to the magnet, and leaves it by the regular connection.

The solenoid attracts and draws up the hammer. As it rises, the striking pin encounters the upper projection on the swinging arm, and raising it, displaces its end from the contact pin. This opens the circuit, stops the current, and the hammer falls. As it nearly reaches the anvil the pin again strikes the lower projection on the swinging arm, and, pressing it down, brings its end over the contact screw, thus closing the

circuit and again exciting the solenoid. The hammer is lifted and the same succession of movements occurs over and over again, with considerable rapidity.

The contact or rubbing plate may be adjusted by moving up or down, in order to regulate the motion of the hammer. As the latter falls by gravity only, its blows are not very heavy.

Electric Insects.

The base of the interesting toy next described, and due to Mr. Geo. M. Hopkins, is an electro-magnet, which is made to constitute the body of an insect. The first insect to be spoken of is the electric butterfly.

The sectional views of the body show a straight, soft iron core, to which an arched pole piece, h, is attached at the front of the insect's thorax. The back of the butterfly is a thin plate of iron attached to the other end of the core by the screw, g. To this plate two small armatures, i i, are pivoted at f, as shown, which extend down and over the ends of the pole piece, h. To these armatures the wings are attached. In making these there is room for artistic taste.

The armatures are made so much heavier than the wings that the latter stand erect. It is, however, a simple matter to introduce a fine German silver or brass wire spring to keep the armatures away from the pole piece.

The core is wrapped with No. 24 silk-covered wire,

and the terminals are made to represent, or are carried through or back of two of the insect's legs. The con-

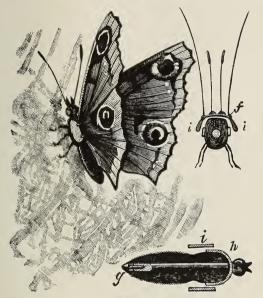


Fig. 33. Electrical Butterfly.

structor must not forget to put on the head with proper adjuncts.

When a current is passed through the insect the wings will be depressed. They will rise again on being released. The current may be turned on by hand, or an automatic circuit breaker, such as shown in the next cut, may be used.

This consists of a pendulum, whose motion is maintained by electricity. Near its top the rod

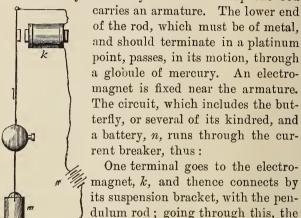


FIG. 34. PENDULUM CURRENT passes through the globule of mercury on m, to the other terminal which is connected therewith.

Thus the butterfly and the pendulum magnet are both excited, and the pendulum is attracted. If the pendulum is started swinging, it will, as it leaves the mercury globule, open the circuit, and the butterfly will move its wings; at the same time the magnet ceases to pull it. It swings back, and as it passes through the globule, is attracted by the magnet as the circuit closes, and the butterfly again moves its wings in the reverse direction.

This can be kept up as long as desired. The exact

position of the mercury globule, to give a good swing, must be determined by experiment. The plumb-bob



Fig. 35. ELECTRICAL DRAGON-FLY AND BEE.

is also made adjustable, so as to allow of varying the time of movement of the insect's wings.

The dragon-fly and bee are more independent. They are by nature quicker in their motions than the butterfly, and are constructed to rapidly move or "buzz" their wings.

The core is bent at right angles at the head as shown in the section of the dragon-fly. The armature, b, of soft iron, is carried by a spring fastened at c to the core of the magnet. This is wound also with No. 24 silk-covered wire. One terminal is connected to the spring at c. From the armature an extension of the spring reaches down over the insect's front, and is bent to receive a contact screw, d, best tipped with platinum. A contact piece, e, connects with a wire running through, or by, one of the legs. The other terminal of the magnet wire runs by another leg. Thence the two are carried to a battery.

The whole arrangement, it will be seen, is an automatic circuit breaker, and as long as the current is turned on, will keep the armature in vibration.

Properly shaped wings made of mica, and painted to represent the veins, are attached in any desired position to the armature. The current causes these to rapidly vibrate.

A very nice way to mount the insects is to place them on some artificial flowers in a flower pot, which latter contains a Leclanché battery.

One of the battery terminals connects with the insect. The other runs to the base of the flower pot. Here it nearly meets one of the terminal wires from the insect. A globule of mercury is so disposed as to leave the circuit open, if all is on a level table. If

lifted, or tipped a little, the mercury shifts and makes contact with both wires, closing the circuit and making the insects start into seeming life.

The Incandescent Lamp.

The amateur should not attempt to make incandescent carbon filament lamps. These are for sale, of all descriptions and sizes. A platinum wire lamp, unregulated, is easily made, and with a carefully regulated current is very good as a toy, but is of little practical value. The end of a test tube may be used to represent the bulb, and a bent loop of fine platinum wire to represent the filament. The ends of the platinum are soldered to two copper wires considerably thicker than themselves. The copper wires are thrust through a cork which closes the end of the tube. The platinum wire should be fine, No. 28 to 30.

The copper wire should be not less than No. 25.

The next cut shows a regulated platinum lamp, which might render real service, although it would never be as efficient as the carbon filament lamp, with its almost perfect vacuum.

A base carries two binding posts and a glass shade or bulb, and the mechanism of the lamp. From the binding posts wires run to a post, B, and a short screw at C. The latter screw holds down against the base a high arched piece. To the post, B, a rocker, A, is pivoted. From the arched piece to the rocker a platinum wire, P, extends.

As shown in the cut, the current entering by one post passes through the wire and out by the other post. As the wire expands with the heat, the left end of the rocker descends. The adjustment is such that contact is made before the platinum is hot enough

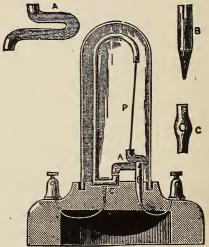


Fig. 36. SELF-REGULATING PLATINUM LAMP.

to melt. This short circuits the wire, and the heat falls; as the wire contracts, it breaks the contact and again grows hot. These operations in practise succeed each other so rapidly, and are of such slight degree, that all appears perfectly stationary, and no vibration is perceptible.

CHAPTER VII.

SPARK AND INDUCTION COILS, AND ALLIED SUBJECTS.

THE SPARK COIL—THE INDUCTION COIL—RECORDON'S INDUCTION COIL—THE MAGNETO-GENERATOR—ELECTRIC ARTILLERY—ELECTRIC GYMNASTICS—ANO-KATO—SIMPLE EXPERIMENTS IN
STATIC ELECTRICITY.

The Spark Coil.

For the production of a simple spark for lighting gas, firing an explosive mixture, and the like, a spark coil may be employed. It is simpler in construction than an induction coil. It practically represents a single coil, either primary or secondary, of the more complicated apparatus.

To construct one, a core of iron wire is first made. This may be a bundle of pieces of wire of gauge No. 20, or thereabouts. The pieces composing it should be about eight inches long, and the bundle should represent a cylinder about $\frac{3}{4}$ inch in diameter.

A very good plan is to put the pieces of wire in a coal fire in the evening, and to allow them to become

red hot. They are left in the fire over night until it has grown cold. This anneals them and leaves them covered with a thin film of oxide. The latter is a non-conductor of electricity, and its presence acts to break up the continuity of the core.

On this the coil is wound. It may be made of No. 20 wire, insulated with cotton. What is sold as magnet wire will answer perfectly. This should be wound on until the whole is about three times the diameter of the core. The wire windings should cover as nearly as possible the whole of the core.

If such a coil is placed in circuit with a battery, the parallel component windings of wire act one upon the other, when the current is turned on or off, and produce a high potential difference. This causes the production of a spark. The spark is strongest when the current is suddenly shut off by breaking the circuit. As the coil is normally on an open circuit, and as the operation of producing a spark consists in suddenly depressing and releasing a key, thus opening and closing the circuit in quick succession, a double spark or discharge is produced.

The battery for operating a spark coil should be, as a general rule, arranged in series. This gives as a starting point the highest attainable potential difference, which again is magnified or increased by the self-induction of the coil.

The tendency of the day is to use coils for high tension effects. Regular induction coils are to be recommended for powerful tension, but where a spark suffices, the spark-coil answers every purpose.

So true is this that, on an emergency, any electromagnet, such as is used in a telegraph sounder, or for lifting weights, and the like, can be made to do service as a spark-coil. The ready production of a spark on opening a circuit goes to prove that it includes a high potential battery, or that electromagnets, or some form of coil, are actuated by it.

The Induction Coil.

The induction coil is, in general terms, an apparatus for converting a current of one intensity into a current of a greater or less intensity. Conversely with the change of intensity there is an inverse change in the potential difference of such parts of the circuit as represent the entering and outgoing terminals of the coil. To bring about this change a steady current cannot be directly used—if such is the one to be acted upon it must first be converted into an irregular or varying one. The first, or unconverted current, is called the primary current. The converted current, produced by the action of the coil, is called the secondary current; it is always an interrupted current, and of the type known as alternating.

An induction coil may be very easily constructed. As a toy, for giving shocks and similar uses, it may be quite small. But as the size increases the difficulties of construction increase. The very large coils,

giving from twelve to forty-two inch sparks, require the highest skill of the apparatus maker.

For the amateur the induction coil will generally be designed to increase potential difference at the expense of intensity. The illustrations show the features of construction of a simple coil designed to do this.

Before going further it should be understood that nothing absolute can be said of the size of a coil, or of the wire composing it. All this is a matter of calculation, and depends upon the current to be used, and upon the current to be obtained from the coil.

The coil proper of the drawing consists of the core, A, primary coil, B, insulating coating, C, and secondary coil, D. The wires of the secondary coil are kept insulated from the primary, and the greatest care must also be taken to keep the different windings of both secondary and primary insulated from each other.

The core consists of a bundle of iron wires, about No. 18. These are laid together so as to form a cylinder. They may be annealed and oxidized as described for the spark coil. After wrapping the core with some shellacked paper, the primary wire is wound on as compactly as possible. It should be insulated wire, and it is well, if it is cotton covered, to paint over the successive layers with alcoholic solution of shellac.

For ordinary coils No. 18 wire is a good size, and two wrappings around the core may be employed.

A paste-board tube such as used for mailing drawings or papers which are not to be folded, serves to

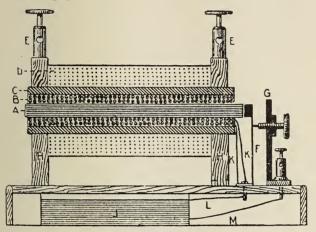


Fig. 37. Induction Coll.

cover the primary coil and core. On this the secondary core is wound. The tube must be well paraffined.

Here, far more precautions in the way of insulating the wire have to be taken. The wire itself is much finer. If the potential is to be raised to one thousand times the original difference, the wire will answer if of one-thousandth the section of the primary. Turns enough must then be given to it to ensure this ratio.

As a matter of practise the secondary is often made of coarser wire than is required under the above supposition. Very fine wire is expensive, and is difficult to work, as it is liable to break very easily when being wound. No. 36 wire is fine enough for all ordinary purposes.

Either bare, or insulated, or covered wire may be used. In any case the number of turns it takes around the core and primary must be equal to the turns of the primary multiplied by the factor expressing the desired ratio of increase of potential difference.

Suppose a coil is to produce one thousand times as great voltage as that existing between the primary terminals, and that the primary has fifty turns. Then the secondary must have fifty thousand turns.

If bare wire is used a layer is wound upon the insulating tube, C, the successive turns lying as close as possible without touching. Then a piece of paper is wound over the wire, and is shellacked, and the winding is continued over it. This goes on until the desired number of turns are obtained. As this involves a long piece of winding it is best to do it on the lathe.

An excellent plan is to wind only a half inch in length of the secondary at a time, but to wind each half inch to the full thickness before beginning the next. To execute this, a bit of thin board with a hole the size of the insulating tube in it is needed. This is thrust up to within half an inch of the end of the coil, and the space between it and the end is

wound to the full thickness; then it is shifted half an inch and the winding is thus continued until done.

In any case a temporary flange of some kind is needed at the ends to keep the coils square.

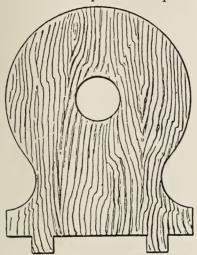


Fig. 38. End Piece of Frame of Induction Coll.

From time to time the wire should be tested for continuity, as it is very apt to break. If it does part, it may be carefully twisted together, and it is well to solder it. This can be done in the flame of an alcohol lamp. In testing its continuity an ordinary compass can be utilized as the galvanometer. If a dozen turns of the wire are taken around it a slight current will deflect the needle. The compass must

be so placed that the coils lie in the magnetic meridian. As battery, a copper coin and a bit of galvanized iron, immersed for the moment in dilute sulphuric acid, will answer if the galvanometer is sensitive enough. It is sufficient to discern the smallest possible change of direction of the compass-needle.

If insulated wire is used, it should be shellacked from time to time as wound, and the paper between the layers should always be used as described.

When all is wound it is mounted in a frame as shown, the coil being carried by two end pieces, H, H, one of which is shown in side elevation on a larger scale than that of the illustration of the coil.

The terminals of the secondary lead to and are soldered to two binding posts, E, E. The terminals of the primary, K, K, connect with a source of current which must be very variable, intermittent, or alternating.

If to the secondary terminals, or binding posts, a couple of pieces of wire are attached, the ends of which are held in the hands, and if then an intermittent current is passed through the primary, a series of shocks will be experienced.

For this purpose it is best to attach handles of brass tubing, about half an inch in diameter, to the ends of the wires, in order to give a larger surface of contact. Wet sponges may, with advantage, be used on the tubing, although as this is not necessary and is rather unpleasant, it is not generally done.

Sparks may also be taken from the coil by bringing the ends of two conductors from the secondary terminals sufficiently close. A very small coil, two or three inches long, will give a one-eighth inch spark, and some of the large ones will give a spark several feet long, one which will pierce a glass plate two inches or more in thickness.

The primary circuit may be broken by hand. One of the old methods consisted in connecting one end of the primary to the battery, and the other to a very

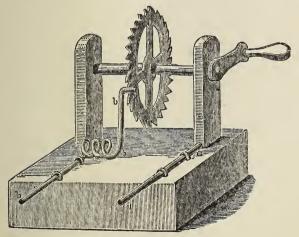


FIG. 39. CIRCUIT BREAKER.

coarse cut file. The teeth of the file might be an eighth of an inch apart, and as high as possible. Then the other wire from the battery was drawn

across the file, and, as it jumped from tooth to tooth, effected the desired "make and break."

Another way of doing it by hand is shown in the cut. A cog-wheel from an old clock, or elsewhere, is mounted on a metallic frame, which is in connection with one of the battery wires. A spring wire presses against the teeth as the wheel rotates. This spring is in connection with one of the primary terminals of the coil. The other primary terminal is in direct connection with the battery. Thus the make and break is obtained by turning the wheel.

The coil itself may be made to do the making and breaking. As shown in the cut it is thus arranged: On the base are two binding posts, which are the primary terminals. One of the primary terminal wires, K, K, runs directly to one of the binding posts. The other primary terminal wire runs to the base of the vertical spring, F. At its top this spring carries a block of soft iron which acts as an armature. The other binding post seen in the elevation connects with the metallic standard, G. An adjustable contact screw, with platinum point, goes through the top

When the terminals from a battery are attached to the binding screws the action is obvious. The spring, F, making contact through G with the battery, closes the primary circuit and a current goes through the

of the standard. The spring normally presses against this screw. It is well to rivet a little bit of platinum

on the spring at the point of contact.

primary. This magnetizes the core and the armature on the spring is attracted. It draws the spring away from the contact screw and breaks the circuit. The core ceases to be magnetic and the spring flies back and renews the contact. This action is kept up as long as connection with the battery is maintained, the makes and breaks succeeding each other with great rapidity.

As thus described, the induction coil is far from perfect. A violent sparking action takes place at the make and break contact and there is considerable waste of energy. Both these bad features can be diminished by the use of a condenser, whose construction will be next explained.

It would consist, in its simplest plan, of two leaves of tin-foil separated from each other, one connected to the spring, F, and the other to the standard, G. The area must be quite large so that as a matter of convenience it is best built up of small pieces of tin-foil laid in a pile that fits the base of the instrument, which is made into a box to contain them. The connections and general features of the condenser are best shown in the plan view.

Each piece of foil is cut with projecting ears, A, B, at one of the corners. The shape is seen in the plan view given here. A piece of paper, saturated with paraffine wax, is placed between each two sheets. In piling up the sheets of tin-foil the ears, A, or B, of each sheet are placed at the opposite corners as

indicated in the plan. It is now evident that if the projecting ears are bent down or pressed together, each set of leaves of tin-foil will be insulated from the other, but all the leaves of each set will be in electrical connection with each other. To

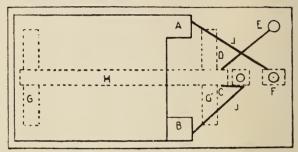


Fig. 40. Plan View of Induction Coil.

ensure all this, the paper should be cut an eighth of an inch longer and wider than the tin-foil. The paper can be easily waxed or paraffined by applying the wax in shavings and melting it with a hot sadiron, or in an oven or over a stove.

Referring now to the plan, in it E denotes one of the binding posts to which the battery wire is to be connected. H is the primary coil. From E a wire is carried to and connects at D with one of the terminals of H. The other terminal of H, denoted by C, connects with the spring (F, in the elevation), whose base is shown in the plan. The other binding post which, it will be remembered, is in connection with the

contact screw post (G, of the elevation), is shown at F in the plan. From this contact screw post a wire connects with one set of tin-foil sheets, A, while from the spring a wire connects with the other set of sheets, B.

The action of the condenser is apparent in the reduction of the size of the spark between the make and break surfaces, and in the lengthening of the other secondary spark. In other words, a condenser greatly improves the action of an induction coil, and should always be used.

As an example of a miniature coil the following data may be given: Core, 4 inches long, and as thick as a lead pencil. Length between end pieces, 3 inches. Primary coil, two ounces of No. 18 wire. The secondary wound to within $\frac{1}{4}$ inch of the insulating tube, with two ounces of No. 36 wire. The condenser, twenty pieces tin-foil, each 3 inches square.

An excellent way of making the insulating tube is to saturate a piece of blotting paper with paraffine wax. A wooden mandrel is wrapped with a piece of writing paper, whose free end is pasted down to the paper. This must be free to slide on and off. The mandrel must be of the diameter of the primary. On this the blotting paper is wound, being pressed into place with a hot iron. This solidifies it by melting the wax. It should be one-twentieth of an inch thick.

The tension of the shocks may be graduated by

pulling the core out or pressing it in. Its removal greatly reduces the intensity of action. Or else a space may be left between the secondary and primary, and a brass tube may be arranged to slide in and out of this space. The removal of the tube increases the energy of action.

Recordon's Induction Coil.

A very good form of induction coil is shown in the next cut which at least possesses the merit of novelty.

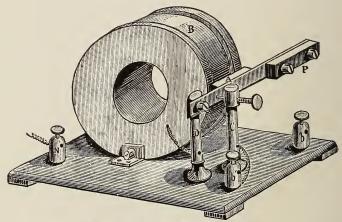


Fig. 41. Recordon's Induction Coil.

It is disadvantageous in not admitting the convenient use of a wire core.

The core which is hollow, is made of soft, annealed

iron, turned so as to represent a spool or bobbin with deep flanges at each end. It is mounted as shown, wound with primary and secondary coil, B, as described for the other form of coil. The secondary connects with two binding posts on the base, one of which is seen at N. Of the primary terminals, one connects with the standard, D, the other with the binding post, b. From the binding post, b^1 , a wire runs to the standard, C.

To the top of the standard, D, a spring is screwed to which an iron block, A, is attached. The standard, C, carries a contact screw with platinum point. The iron block, A, acts as the armature of the magnet. The piece, P, is simply designed to regulate the period of vibration and prevent too rapid a succession of makes and breaks. The battery connects with the binding posts, b^1 and b.

When the current passes to the primary coil through the standard, C, contact screw, spring and standard, D, it excites the core, which becomes a magnet. The armature, A, is attracted and draws the spring away from the contact screw. This opens the circuit. The core ceases to attract the armature and it springs back. The contact screw again comes in contact with the spring, and the current again passes. Thus the make and break is effected practically as in the case of the other coil.

Although shown without a condenser, it will work far better if it has one. This coil may be fitted with a regulator. To do this the barrel should be turned down so as to be very thin. It may even be made of sheet iron, bent into a tube and soldered along its seam, and to the heavy flanges. A bundle of iron wires is then arranged to fit into the tube, and to be slid in or out as desired. The more there are within the tube the greater will be the effect of the coil.

The dimensions of the coil illustrated are as follows: Diameter of coil, $3\frac{2}{100}$ inches; thickness of flanges, $\frac{2}{10}$ inch; exterior diameter of core, $1\frac{6}{10}$ inch; interior diameter of flange, $1\frac{4}{10}$ inch; diameter of flanges, $1\frac{7}{10}$ inch. Primary wire, $\frac{47}{100}$ lb. avoirdupois No. 18 wire; secondary wire (in 31 layers), $\frac{32}{100}$ lb. avoirdupois No. 32 wire. There is, of course, nothing absolute in these dimensions.

The Magneto-Generator.

A very powerful and compact form of magnetogenerator is the subject of the next cut. As arranged it is designed to give rapid alternating shocks.

Two powerful horseshoe magnets are mounted as shown. A pair of bobbins, such as those used on the legs of horseshoe electro-magnets, are carried by a vertical spindle so as to rotate between the opposing poles. The letters, N and S, seen on the magnet ends, denote the north and south poles respectively. The bobbins have, as cores, two bundles of iron wire, which should be annealed and oxidized. Each piece

of wire should be long enough to nearly reach from face to face of the magnets.

As wire, Nos. 30 to 36 may be used. The bobbins may be two inches long, and wound with enough wire to fill them up to a diameter of one inch. Between every layer of winding a piece of paraffined paper must be smoothly wound. Shellacked paper

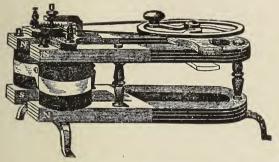


FIG. 42. MAGNETO-GENERATOR.

may be used instead, and each of the layers may then be varnished with alcoholic solution of shellac. The general precautions observed in winding the secondary of an induction coil must be followed here.

In laying on the windings the greatest care must be taken to avoid kinks, or sudden bends. From time to time the part wound should be tested with a galvanometer, as in the case of the induction coil, to see if it passes a current. If the wire breaks, the ends must be soldered after neat twisting together.

The wire on the bobbins must be wound in opposite directions, one right and the other left handed, exactly as in a horseshoe electro-magnet.

On the upper end of the spindle are an insulated collar and an insulated crown-wheel. The bobbins are connected together so as to give the current an opposite direction in each one. The connecting wire is made to lead diagonally from front of one to rear of the other. This leaves two free terminals. One is soldered to the collar, the other to the crown-wheel.

Two springs of copper, brass, or silver, press, one against the collar, the other against the teeth of the crown-wheel. Multiplying gear is applied to drive the mechanism, by turning the bobbins rapidly around in the magnetic field created by the magnets.

The springs are secured to insulated binding posts, to each of which flexible wire, or conducting cord, is connected. The other ends of the pieces have handles.

If, now, the hand-wheel is rapidly turned, while the handles are held one in each hand, or are applied to different parts of the body, a succession of rapidly succeeding shocks will be felt.

Should it be desired to have the impulses all run in the same direction, the commutator shown and described on page 58, must be used, instead of the collar and crown-wheel.

A well made magneto-generator, such as described, will give powerful shocks. If wound with coarser

30

wire, No. 25, or thereabouts, and if provided with the commutator just alluded to, it will give quite current enough to heat fine platinum wire and decompose water.

Electric Artillery.

Explosions of gunpowder, or of hydrogen, or of coal



Fig. 43. Electric Mortar.

gas, mixed with oxygen or air, can be produced by the electric spark, or by an incandescent wire. The cut shows what may be termed an electric mortar. It may be made of metal or of wood. Two wires, insulated from the material of the

mortar, if the latter is of metal, are arranged as shown, approaching close to each other, but not touching within the cavity of the mortar.

Such a mortar may be charged with powder, and if a spark from a Leyden jar, induction or spark coil, is passed through it, the powder will explode. A ball placed on the mouth, which is countersunk to receive it, will be shot into the air. A magnetogenerator may be used to produce the spark.

The ignition by a spark is not always certain. It is a common practice to include in the circuit, if a Leyden jar is employed, a piece of wet cord, which makes the spark more efficient. The spark may be taken also directly from an electric machine.

It is better to produce these explosions by a wire heated by a current. For such, the simplest method

is to fit the barrel with a plug, which screws tightly into it, and through which the two wires, well insulated, pass as shown in the cut.

The wires protrude a little on the inner side, and

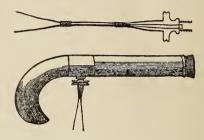


FIG. 44. ELECTRIC OR VOLTAIC PISTOL.

across from end to end of them a very fine wire, of platinum or of iron, is carried. It must be in good electrical connection with both, which is best insured by soldering. The copper wires may be No. 20 or thereabouts. What is the simplest, and really the best construction, is to make a plug of some non-conducting material, such as hard wood, and to thrust the bare wires through holes which, if in wood, may be bored with a brad-awl. The connecting wire should be very fine and the shorter it is the hotter it will get. If too great a current is employed the wire will be melted. It is well to test, by experiment, how many cups of the experimenter's battery are required to heat it to redness.

All this is a subject of calculation, and those who wish can readily work out the problem for themselves.

Such an apparatus may be called an electric primer. A pinch of gunpowder can be ignited by passing a current through the wire, immersed in or covered by it.

The voltaic pistol simply consists of a tube of brass with a handle and a side connection into which the plug screws. By holding it mouth downwards for a second or two, some inches above and over an open unlighted gas-burner, it will be charged with a mixture of air and gas. A cork is now thrust into its mouth; it is held pointed in the right direction, and a current is passed through the cap. The mixture explodes and drives the cork out. To produce a strong explosion, the proper mixture is about six of air to Such a mixture may be made in a test tube or even in a bottle. One sixth of its volume of water is introduced and the tube or bottle is inverted, without loosing any water, into a basin of water with its mouth under the surface; the rest of the bottle is now filled by bubbling gas into it.

The pistol barrel is filled with water; it is inverted in the basin, and the contents of the bottle are introduced, bubbling through the water. It is removed, mouth downwards, and quickly corked, and all is ready for the explosion.

For an extremely violent report, a mixture of one

volume of oxygen to two volumes of hydrogen gas may be used.

It is obvious that many variations can be introduced in this experiment. A bottle may take the place of the pistol. The wires may be thrust through the cork, which will take the place of both the cap and cork. The bottle is best filled over water to secure the right mixture. On turning on the current the cork will be driven up to the ceiling.

In the same way India rubber balloons may be exploded. They must be partially inflated with oxygen evolved under pressure, and then about twice the volume of hydrogen is introduced directly from the

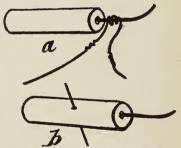


FIG. 45. FIRE CRACKER EXPLOSIONS.

generating flask. A very small cork is arranged with the exploding wire connection. As the balloon is filled its neck is pinched with the finger well up from the end, and the cork is dexterously introduced.

Common fire crackers may be used as presented in

the cut to illustrate electric fuses. All that is necessarv is to twist a fine wire around the projecting fuse of the cracker, as shown in the cut at a, or to transfix the cracker with a piece of fine wire, as shown at b. When a strong enough current is sent through the wire the explosion of the fire cracker will follow.

In "rain-making" experiments, conducted in the arid zone in the western United States, in the season of 1891, large balloons of combustible gas and oxygen were exploded by electricity in the hope of producing rain.

Electric Gymnastics.

A very clever idea has taken shape in the production of gymnastic apparatus, which in its use produces and administers electric shocks. The type of apparatus is of the weight-lifting kind, in which spade handles attached to ropes are pulled by the gymnast. The strings run over pulleys and weights are attached to their ends. By varying the weights the exercise may be made more or less severe, and by different movements a great variety of exercise may be derived from the comparatively simple apparatus.

The idea of applying electricity is to cause these movements to be productive of shocks. This can be effected in several ways. The first way to be described is by a magneto-generator.

The cords of the apparatus have wires running through them. The handles are metallic and are in

electric or metallic communication with the wire. The magneto-generator has already been described. In the ordinary gymnastic apparatus the pulleys are fastened about six feet from the floor. At this point the generator is to be secured. From the pulley spindle a horizontal axle runs along parallel with the wall. The generator is placed in such a position that this axle comes in the prolongation of its own axle and three or four inches out from the wall. The axle passes through two strong journal brackets or pillars. Two pulleys with deep, wide grooves have fastened to them the handle cords. A third pulley has the weight-cord fastened to and wound around it a number of times.

Under this arrangement it is clear that, when the weight is up, the handles will be free to be pulled out to the full extent. If the weight descends it will unroll its own cord, and roll up the other two.

In these movements, the bobbin of the generator will turn with greater or less velocity, according to the way in which the apparatus is handled. If the wire handle-cords are connected to the terminals from the bobbin, the one who manipulates the apparatus will receive a series of electric shocks. This will be more violent as he works the apparatus more energetically.

The connection is easily managed. Perhaps the simplest way is by springs, which bear against insu-

lated metal-coated drums or collectors.

For this method two collars of wood, or other insulating material, are fastened to the axle, one for each handle-cord. The collars have a ring of brass around their peripheries. Each wire from a handle-cord is soldered, or driven firmly under the brass on one of the collars.

Copper or brass springs are attached to the baseboard carrying the apparatus, which lies flat against the wall. There is one spring for each collar, and each presses against the metal coating of the collar. These springs are in electric communication with the terminals of the magneto-generator.

Thus arranged the generator terminals are in constant connection with the handles, and the person operating receives the desired electrical excitement. It is also possible to dispense with the commutator of the generator and simply connect the terminals from the rotating bobbins directly to the handle-wires. This gives, however, rather a slow succession of shocks.

Another way of arranging the system is to use an induction coil. Then the working of the apparatus is caused to make and break the primary circuit.

For this end, the general features of a rotating axle, with handle cord and weight-cord pulleys, is preserved. The same collars and springs are employed also. Upon the back-board an induction coil is mounted. Its secondary terminals are carried to

the two springs, thus being in electric connection with the handles.

The axle which rotates back and forth carries an insulated circuit breaking wheel of the general type of the one shown in the cut. As it has to work in

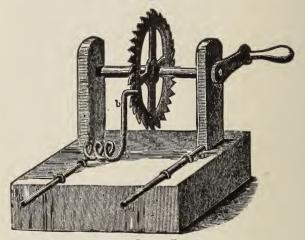


FIG. 46. CIRCUIT BREAKER.

both directions of rotation, the wire that strikes the teeth must be so bent and shaped as to work whichever way the wheel may rotate. Two springs press, one against the teeth, the other against the face or frame of the wheel, and connect with battery and primary.

A better arrangement is to mount a regular smooth surfaced commutator on the axle. This may consist of a wooden cylinder, to which are secured a number of slips of thin brass lying parallel with the axis. These should be so thin as to lie flush with the wood, or they may be inlaid, or embedded in it. Two small screws will fasten each piece. A ring of brass goes around one end of the commutator drum, being in good electrical connection with all the slips.

One spring is attached to the base so as to bear against the ring. Another spring bears against the drum to one side of the ring. From one spring a wire goes to one of the primary terminals of the coil. From the other spring a wire runs to the battery, and the other battery wire runs to the other primary terminal of the coil.

It will be understood, of course, that the coil is unprovided with an automatic circuit breaker, and that the manipulation of the apparatus by the gymnast, makes and breaks the primary circuit. This induces a current in the secondary, which, by the spring connections, wires and metallic handles, finds its way to the hands.

The coil should be provided with a movable core, or brass shielding tube, or else some arrangement for raising and lowering the battery plates should be provided in order to vary the strength of the induced currents.

The magneto-generator gives shocks varying in intensity as well as in frequency. The induction coil gives shocks of uniform intensity, varying in frequency. The objection to the latter is that it needs a battery.

It is also to be noted that the magneto-generator may be made to supply the proper current to the primary of an induction coil, and that the collecting collars may connect with the secondary of the coil. In this method, the characteristic alternating current of the generator works the induction coil to advantage, without any mechanical make and break device.

The primary of the coil thus used should have a large number of turns, from one-eighth to one-fourth as many as are in the secondary wire. The bobbins of the generator should be wound of the same sized wire as the primary of the coil. No. 24 wire would be a good size for both.

This disposition will increase the tension of the circuit, and will give more powerful effects, as the apparatus is more rapidly moved.

Ano-Kato.

The words ANO, KATO, are taken from the Greek, and mean up, down, and allude to the motions of the objects seen in the box. The cut shows its general features of construction. It is a shallow box whose bottom and interior sides are coated with tin-foil. A number of objects are made out of the lightest pith-

The latter may be of the pith of cornstalks, of elder pith, or, what is still better, of the pith of the dry stalks of the sunflower. Little men with jointed legs and arms, insects, jointed snakes, etc., are made out of the pith, and may be colored with a little red

and black ink. The box is covered with a piece of glass.

If the glass is rubbed with a proper rubber, it becomes electrically excited, and attracts the objects in the box. As they rise, they touch the glass; and as

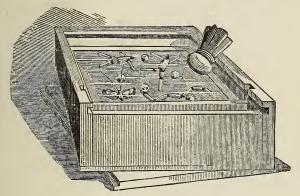


FIG. 47. ANO-KATO.

they lie against it, becoming charged with the same electricity, are quickly repelled. They fall into the box and are discharged by coming against the tinfoil, which, for high potential difference, may be considered to be in electrical communication with the earth.

This operation goes on as long as the rubbing is kept up.

For the rubber, a pad of hair, or other material, around which a piece of kid glove is tied, is employed.

This may be made much more efficient by the use of some amalgam such as that used on electric machines.

Simple Experiments in Static Electricity.

Some simple experiments in static electricity are next illustrated. The first cut shows a modification

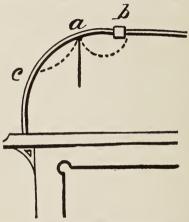


Fig. 48. Glass Show-Case Experiment.

of Ano-Kato. It is supposed to be especially adapted for use on the interior of a glass case.

A short silk thread, a, is stuck with a little bit of sealing-wax to the interior of a glass case, so as to hang down as shown in the full line. If, now, the exterior of the glass is excited by rubbing with a silk handkerchief, or other electrically efficient rubber, such as the pad just mentioned, the thread will be

agitated and drawn in one or the other direction as shown by the dotted lines, b, c, following sometimes the finger. It is needless to remark that the movements thus excited, may, in their way, be very curious and amusing.

The next cut gives a view of India rubber balloons,

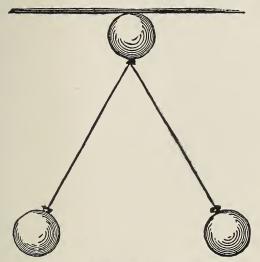


FIG. 49. EXPERIMENT WITH BALLOONS.

electrically excited. By striking these with a rubber of animal fibre, or tissue, such as a feather duster, they will become highly excited, and will tend to separate from each other. The balloons are the ordinary India rubber ones sold in the streets by peddlers,

It is said that three of them may be so excited that one will adhere to the ceiling, and carry the other two as shown. The latter are represented as repelling each other under the same excitement.



Fig. 50. Experiment WIT RUBBER THREADS.

But of these simple experiments, one of the best is shown in the next illustration. A bunch of fine India rubber threads is required. These may be procured at a suspender factory, or other place, where India rubber interwoven fabrics are made. The threads may be quite long—six or eight feet is not too much.

The bunch of threads is held in one hand, by the end, as shown, if not too long, or otherwise are suspended to the ceiling, and are gently stroked down with a feather duster.

They all become charged with the same kind of electricity, and hence, each thread repels its neighbor, and the whole bunch separates. The separation is quite persistent, and may last a long time.

CHAPTER VIII.

HAND POWER DYNAMO.

A HAND power dynamo is necessarily a rather feeble machine. But the construction of one is comparatively easy, and will give good practice, the benefits of which will be felt if a larger one is ever attempted.

For the sake of simplicity the well known "H" armature is adopted in the machine to be described, and the whole construction is designed to embody a very few parts.

In the illustration, the diagonally shaded parts show the section of the field magnet, wound with two coils of wire, as shown by the vertical lines near its base. The general construction or design is best seen in the cut. The following may be taken as general dimensions: Extreme length of field magnet, $4\frac{1}{2}$ inches; height, including feet, $4\frac{1}{2}$ inches; width, 2 inches. The elevation may be taken as on a scale of one-fourth the natural size.

As shown in the cut, an arm is cast on the magnet to hold the driving wheel. It is obvious that the arm can be dispensed with and a special standard used for this purpose, Holes are drilled in the foot-flanges of the field-magnet, and it is screwed down to a base board about twelve inches long and six inches wide.

The field proper, or area within the pole pieces, the space in which the armature rotates, must be as exact a circle as practicable. The iron should be of

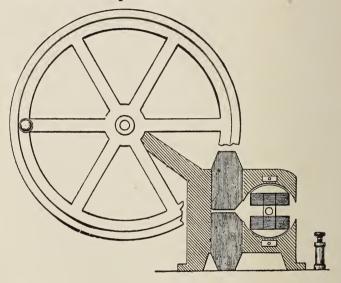


Fig. 51. Hand Power Dynamo. good quality and as soft as possible. Good cast iron will answer all requirements.

The interior surface of the pole pieces is sometimes

coated with tape, glued on. The portion to be wound with wire is smoothly coated in the same way. All is then ready for the winding.

One and one-half pounds of No. 21 silk-covered wire is used to wind the two field-magnet coils. The wire is weighed accurately and may be divided into two equal portions, each temporarily on its own reel. Otherwise it may be wound directly on one of the cores from a single reel, and the remainder weighed from time to time to ascertain when one-half has been employed. Then the other half is wound on the other core.

In either case the top core is first wound over the top and away from the operator, and as closely and evenly as possible. When partly wound, at short intervals, the winding is tested with a galvanometer and battery. One terminal of the battery is connected through a galvanometer with the coil terminal. The other battery terminal is touched to the iron of the field-magnet. If any deflection is produced the winding is defective in insulation, and is in electric contact with the field-magnet. It must be unwound and the trouble found and rectified.

In winding the superimposed layers, two pieces of tape, about one inch longer than the space wound, are to be laid on. After two or three thicknesses or layers of wire have been wound over it, the ends are turned in and over to be secured by the next winding. This is repeated so as to give a good wind-

ing surface and especially to prevent the under layers spreading. After a coil is wound it should be gently flattened down by blows with a wooden stick or mallet.

The second or lower coil is wound in the opposite direction over the top and towards the operator. If the wire with which the winding is done is in two pieces, two of the ends, the last of the upper and first of the lower coil must be connected by twisting and soldering, leaving two ends free. The latter go through holes in the base-board to two binding screws, one of which only is shown in the cut.

The armature is of "H" section and its spindle is journaled in two strips, which are screwed or bolted to the sides of the field-magnets. The places of attachment of one of these strips are indicated in the cut of the dynamo by two white rectangles with a bolt hole in the centre of each. These strips must be of brass or some non-magnetic material, and on no account of iron or steel.

The end view of the armature, giving also its cross section, is shown in the next cut. It may be of soft cast iron. It is far preferable, if possible, to build it up of washers of thin sheet iron annealed and oxidized, or with thin shellacked paper placed between each. In such case each piece must be perforated, but with a square or rectangular aperture, and strung upon a spindle which it closely fits. In such case special pieces must be used at the ends to secure the

necessary projections or horns shown more clearly in the next cut, which represents the end view of the armature.

The edges of the armature are filed or smoothed off if necessary, and it is wound with one half-pound

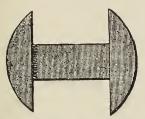


Fig. 52. END VIEW OF ARMATURE.

of the same wire. The surface to be wound must be covered with tape, glued on. The winding is led or made to begin from the commutator end of the armature, and is interrupted where the spindle comes as shown in the cut of the dynamo, Fig. 51.

The commutator shown on the left of the spindle is a block of hard wood about three-quarters of an inch in diameter, and three-eighths of an inch deep. A tube of brass is driven over it and is screwed fast with short screws, which must not reach the spindle. The commutator is driven on to the shaft. The brass tube, after being screwed in place, is cut with two oblique and narrow cuts completely separating it into two halves. One of these cuts is shown on the commutator in Fig. 53.

The two terminals of the armature winding are soldered each to one of the commutator divisions.

A driven pulley one inch in diameter is fastened on the proper end of the armature spindle.

All these parts must be rigidly secured together.

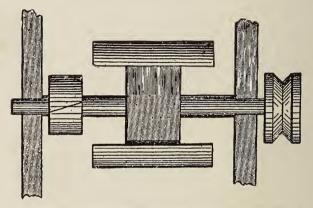


Fig. 53.—ELEVATION AND JOURNALLING OF ARMATURE, COMMUTATOR
AND DRIVING PULLEY.

The armature spindle is two and one-quarter inches long, $\frac{5}{16}$ inch diameter, and the ends are turned down to $\frac{3}{16}$ inch for the bearings. It must turn freely in the space between the pole pieces with a clearance of about $\frac{1}{16}$ inch. This will exact very accurate centering. It is well to turn a fine groove in the centre of the cylindrical sectors of the armature and to wrap a few turns of wire around the windings,

and within the groove to stop the windings from displacement by centrifugal force.

Two springs or "brushes" of spring-tempered copper, about one-half an inch wide, are attached to the base board and bear against the opposite sides of the commutator. From each spring a wire may be carried to a binding-post. This gives a shunt wound machine. Or only one of the field-magnet terminals may be carried to a binding-post, the other connecting with one of the commutator brushes. The other commutator brush connects with the other binding post. This is a series wound machine.

The driving pulley is about ten inches in diameter, and like the driven pulley is grooved to receive a sewing machine belt.

The proper position of the commutator is found by trial, twisting it back and forth until the best results are obtained.

Such a dynamo, if properly constructed, will, at 1,600 revolutions, or at two and one-half turns of the driving-wheel per second, give about ten volts potential difference, and over an ampere of current. Two or three cells of bichromate battery will operate it as a motor, the driving belt being removed.

CHAPTER IX.

AN EASILY CONSTRUCTED MOTOR—SIMPLE ELECTRIC MOTOR—A SMALL ELECTRO MOTOR—ANOTHER SIMPLE MOTOR—SIMPLE ELECTRIC LOCOMOTIVE MOTOR—TELEGRAPH KEY—SOUNDER—MICROPHONE—TELEPHONE RECEIVER—HOW TO MAKE SIMPLE DRY CELLS—AN EFFICIENT PLUNGE BATTERY—SMALL STORAGE BATTERY—A CHEAP POLARITY INDICATOR—A USEFUL ELECTRIC CANDLE—ELECTRIC WARNING SIGNAL—ELECTRIC DOOR LOCKING DEVICE.

An Easily Constructed Motor.

This motor requires very little lathe work and, in fact, can be built without the use of a lathe.

The field magnet is of soft iron, $\frac{1}{2}$ inch in diameter, and bent into horseshoe shape after heating.

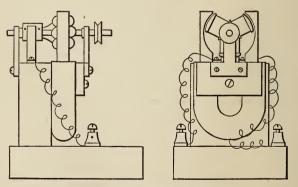


FIG. 54. AN EASILY CONSTRUCTED MOTOR.

The pole pieces are bored or filed out to just clear a 11/2-inch armature.

The armature is of the three-pole type and should be made of laminations of thin soft sheet iron cut to the shape and size shown in Fig. 55. A simple and easy way to make these is shown here. A pattern is first marked off by using a pair of dividers to mark the outside circumference of the poles. Divide this circle into three equal parts, and draw a line from the center of circle to each of the three points on the

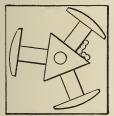


FIG. 55. ARMATURE LAMINATION.

circumference. These will be the center lines of the three poles of the armature.

Lay out, with the dividers, the three pole-pieces equally, using the three radial lines as center lines.


When this pattern has been cut out and carefully filed to shape, it is used to mark out the

other laminations. First, center-punch and drill a $\frac{1}{4}$ -inch hole for the shaft, exactly in the center of the sample lamination.

Lay the pattern on the sheet of iron, and mark the position of the shaft hole. Drill this hole first.

Place the shaft through the holes in the pattern and sheet, and mark out the shape of the lamination with a sharp scriber. The sheet iron pieces can be trimmed down to their outer shape with a pair of heavy shears, and the irregular portions cut out with a solid end punch, as shown in Fig. 56.

This punch can be made from a piece of tool steel

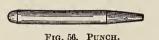

about ¼ inch in diameter and 3 inches long. The point is filed down to about 3-16 inch in

diameter, hardened, and tempered to a dark straw color.

Lay the sheet of iron on the end grain of a block of oak or other hard wood, and placing the point of the punch close to the line marked out for the shape of the finished lamination, give a quick, sharp blow with a hammer on the head of the punch. This will cut a round piece of sheet iron the size of the point of the punch without bending the iron out of shape.

Continue this operation along the lines marked out, letting the holes cut into each other slightly, and the irregular pieces required can be very readily and quickly cut out, leaving very little to be finished with the file.

Select a fresh spot on the block of wood for each hole cut out, otherwise the soft iron will be forced into a depression of the wood and be bent out of shape.

Sufficient laminations are required to build up a thickness of ½ inch.

When these are all cut out, assemble them on the shaft, with the pattern on the outside, and file the rough edges down to the size of the pattern.

The sharp corners should be filed off where the wire is to be wound on, and a layer of paper or other thin insulating material wrapped around. If paper is used, the iron should be shellacked first to make the paper stick to it.

The shaft is made of a piece of steel rod. Two mall brass collars can be forced on the shaft.

Fig. 57 shows the construction of the commutator.

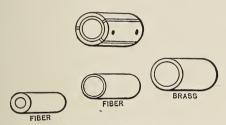


FIG. 57. DETAILS OF COMMUTATOR.

This is made from two pieces of fiber tubing and an outer tube of brass from which the segments are formed.

First, shellac the outside of the larger fiber tube and the inside of the brass tube and force them together.

At equidistant points around the circumference of

the tubes, at each end, drill holes for small brass rivets.

Escutcheon pins may be used for rivets, but the tops of the round heads must be filed down flat and the points put through the tubes *from the inside*. The points must be clipped off and riveted as each one is put in position.

To rivet them place a rod of iron or steel through the fiber tube and rest the rod on the jaws of a vise.

After the fiber and brass tubes are riveted, divide the brass tube into three equal parts around the circumference midway between the rivets, and with a hack saw cut the metal through, thus forming three segments from the brass tube.

Be sure to cut the brass tube entirely through and clean out all the chips of metal between.

Next shellac the small fiber tube and place it inside the larger tube. This is to protect the rivet heads from the metal shaft.

The commutator can now be placed on the shaft and the face turned off in a lathe. If the builder has no lathe, then file down the rivets and use the commutator without turning.

The fiber and brass tubing can be procured in such even and true shape that the turning is not an absolute necessity.

The bearings are cut out of 1-16-inch sheet brass. The size and shape are shown in the cuts.

The base and magnet support block are of wood, fiber or rubber, as desired.

The two pieces can be fastened together by screws passing through the base into the support.

The brushes are made from this brush copper and attached in the proper position on the support block by screws.

The field magnet is wound with four layers of No. 20 magnet wire. Begin and end the winding at the center of the curve of the magnet. Finish with a coat of shellac.

Wind the armature with No. 24 double-covered wire. Fill up the grooves with the wire, being careful to get the same number of turns on each of the three poles. Begin the winding on the side opposite the commutator and end on the commutator side.

When the three coils are wound, bring the three inside ends together and, after cleaning off the insulation, twist and solder them all together.

The outer ends of the coils are carried to the commutator and soldered to the segments, as shown.

Give the finished coils a good coat of shellac.

This is a very good design to "line up" after the parts are all completed, as will be seen from the cuts.

The circuit of the motor is from one binding post to the field magnet, thence to one brush and through the armature to the other brush and back to the second binding post. This is a "series" motor. A grooved pulley can be used to drive other machines, or a fan can be mounted on the end of the shaft.

Simple Electric Motor.

This motor is not as strong as one having an armature wound with coils of wire, but is very easily constructed and can be used as a motive power for small toys, etc.

The base and support for magnet can be made of wood, fiber, or rubber, as desired. The field magnet is of 1/4-inch soft iron and about 41/2 inches in length, bent into the shape shown. To clamp the magnet down onto the support use a brass strap drilled for a small wood screw.

The armature is made from a piece of soft iron $\frac{1}{8}$ by $\frac{1}{4}$ inch and about $\frac{11}{2}$ inches long.


A 3-32-inch hole for the shaft is drilled in the center of the armature.

The shaft should be about 2 inches long and carefully pointed at each end.

The armature can be forced onto the shaft and balanced to run steadily.

If one end of the armature bar is found to be heavier than the other when the shaft is supported on its pivots, that end should be filed until the armature will remain in any position in which it may be placed.

The bearings for the armature shaft are made of sheet brass of the shape shown.

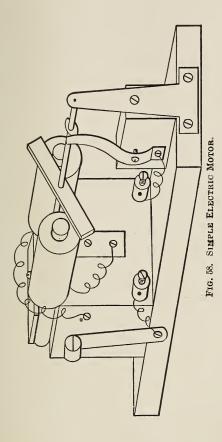

The shorter bearing is screwed to the magnet support, and the longer one to the base.

These bearings should be of sufficient stiffness to hold the shaft steadily, and not spring enough to allow the armature shaft to get loose in running.

A conical indentation is made with a center punch in each bearing for the pointed ends of the shaft.

When the shaft is in position between the bearings, the armature should be located on the shaft where it will just clear the ends of the magnet as it revolves.

The commutator consists of a small contact breaker of copper or brass of oval shape located on the shaft as shown.

At each revolution of the shaft the ends of the piece alternately touch the spring contact for an instant. The touch should occur when the armature is in about the position shown in the cut, and should break contact just before the armature is directly in front of both poles of the magnet. If allowed to remain in contact too long, the magnet will exert a back pull and retard the revolution of the armature. The exact position of this piece can be found by experiment.

The spring contact is mounted on the base by two screws. One screw clamps the contact and connecting wire firmly to the base, and the other screw adjusts the spring in its proper relation to the contact breaker.

The power of the motor can be doubled by making the armature in the shape of a cross instead of a straight bar, and arranging the contact breaker and spring with four points instead of two. This will make and break contact four times during each revolution of the armature instead of twice, as in the above description. A switch can be placed on the magnet support to stop and start the motor as shown.

The winding of the magnet coils consists of 400 turns of No. 26 single-covered wire in each coil. This may be wound directly onto the magnet by hand or wound over a fiber or paper spool and slipped onto the magnet afterward.

In either case the coils should be thoroughly shellacked and allowed to dry before handling.

The circuit is from binding post to one coil of the magnet, thence to the second coil, from magnet to bearing, and through shaft and contact to switch. From the switch to the second binding post.

When connected to a good-sized bichromate cell, the motor should run about two thousand revolutions per minute.

Small Electro-motor.

A very efficient little motor for driving model boats or locomotives, and for producing rotation of vacuum tubes, etc., may be constructed in the following manner: Procure a piece of soft hoop iron about ½-inch thick, ¾-inch wide, and 1 foot long; cut this into

two equal pieces 6 inches in length; drill a 1-16-inch hole through the centre of each one; then bend each piece of the iron into the shape of the letter U, having the limbs 13/4 inches apart, and therefore about 21/4 inches in length from the middle of bend to the end of limb. In one of these pieces, which is to be the fixed magnet, two other holes, in a line with the first, but near the edges of the iron, should be drilled, in order to enable the operator to fasten it to the base board when finished. A piece of sound mahogany or well-seasoned pine about 3 inches wide, 3/2-inch thick, and 10 inches long, should now be procured; and a piece about 3 inches square cut off one end and glued and screwed to the remaining 7 inches at right angles to it similar to a letter L. This piece, which forms the base board, may be stained or polished at the option of the maker. The next step is to wind the two U-shaped electro-magnets previously produced; great care, of course, being taken to cover the iron first with paper or tape to insulate the wire from the iron. Each magnet will require to be wound with 6 layers of No. 24 silk-covered wire; that is to say, between 6 and 9 ounces of the wire; the exact amount got on depending on the skill and neatness of the operator. The connection between the windings must be in the direction shown, viz., like a letter . It will be well, in order to avoid joints, to measure off one-half of the wire intended

to be laid on one electro-magnet, and without cutting it off from the remaining half, to wind one limb with the first half, the other limb being wound with the other half. In both electro-magnets, the winding should be begun near the bend; just at those portions where the limbs of the U begin to straighten. If, as directed, 6 layers of wire are got on, the finishing, or free extremities of the wires, will be found near the bend of the U's. At this point they should be carefully tied with thread to prevent uncoiling. If the operator prefers appearance to efficiency, nothing further need be done to the coils; but if, on the contrary, efficiency be the first consideration, it will be well to shellac the coils and let them dry in a warm place. Of course, in either case, the electro-magnets should be tested for insulation, before anything else be done. The next step is to fasten one of these electro-magnets (the one with the three holes drilled at the bend) to the upright piece of the base board, with the limbs parallel to the base itself, and at such a height that the other electro-magnet shall be able to rotate freely in front of it without touching the base; that is to say, the height from the base to the central hole of the fixed electro-magnet must not be less than 11/4 inches. The fixed electro-magnet must be fastened to the upright of the base board by means of two screws, one in each of the lateral holes previously drilled in the electro magnet. Through the central hole of this 140

same electro-magnet is passed a piece of stout brass wire about 1/8-inch diameter and 3/4-inch long, and which has been filed down for about 3/4 of its length to such a size that it can enter the hole in the centre of the electro-magnet, leaving a head about 3-16-inch protruding from this hole. In the centre of the head of this piece of brass is drilled a conical depression. This depression is to form one of the bearings in which the shaft or spindle which carries the movable electro-magnet will rotate. We will designate this the back bearing. The next operation consists in making a little pillar about 2 inches in height, from a piece of brass wire about 1/4-inch in diameter. About 1/2-inch of one extremity of this pillar should be reduced by turning or filing to 1/2-inch in diameter, and a thread put on it by means of a die. At the upper extremity a hole must be drilled and tapped at right angles to the length of the pillar, and at such a height that when the pillar is screwed into the base board the hole shall be exactly in a line with the conical depression in the back bearing. This hole should be about 1/2-inch in diameter, and be fitted with a brass screw, to serve as the front bearing. face of this screw must also have a conical depression drilled, corresponding to, and facing the one in the back bearing. The pillar may now be screwed into the centre of the base board at a distance of about 61/4 inches from the back bearing, with the screw

which forms the front bearing in a line with and perpendicular to, the back bearing. If necessary, a small nut may be put at the lower extremity of the pillar screw which passes into the base board, so as to insure rigidity. In this case a hole must be countersunk at the under surface of the board, so as to allow the nut to lie flush with the board. A piece of steel rod 1-16-inch in diameter is now procured, and cut so as to be a little longer than the distance between the back and front bearings. This is to form the shaft or spindle of the motor. Its two extremities are filed to fine conical points, so as to run freely in the conical depression of the front and back bearings. These points can then be hardened by making redhot and plunging in cold water. The free electromagnet is now to be fitted to this spindle. For this purpose the spindle is pushed through the central hole at the back of the bend; should the existing hole not be large enough, it must be reamed out until the spindle will just enter. The spindle with the electromagnet on it is then placed between the bearings, the screw of the front bearing being tightened up to hold the spindle immovable. The movable electro-magnet is then placed with its poles facing, but not touching those of the fixed electro-magnet, a piece of stout cardboard, 1-16-inch thick, being placed between the poles to prevent actual contact. The magnet being held firmly in this position by the left hand, a filemark is made with a sharp triangular file, at the point at which the bend of the electro-magnet touches the spindle. The spindle with the electro-magnet is now removed from between the centres, and the electro-magnet soldered to the spindle at the point just marked with the file. In order to solder effectually, the back of the bend of the electro-magnet, as also the inside of the bend, must be filed perfectly clean, and run over with the tinned soldering-iron, so as to get a coating of solder, before attempting to solder the spindle thereto. When this has been done, the movable electro-magnet should be again placed between its centres to see whether it runs freely before the poles of the fixed magnet, without either touching it on the one hand, or being more than 1-16-inch away from it on the other. If it should not do so, the soldering must be repeated until this result has been attained. A commutator is now made, and fitted to the spindle. It should be \(\frac{1}{2}\)-inch long, and \(\frac{1}{2}\)inch in diameter, the central hole being a tight fit on the spindle. A small piece of hard fiber about 1/2inch long is turned into a perfect cylinder about 3/8inch diameter. A hole 1-16-inch diameter is put centrally through this, so that it can be made to fit tightly on the spindle. A piece of brass tubing, about 1-16-inch thick, 1/2-inch long, and 3/8-inch in internal diameter, is now driven on to the fiber cylinder. Two short brass screws, not reaching to the

steel spindle, must now be procured, and, holes having been drilled at two opposite points in the diameter of the ring, and countersunk, the screws are inserted and tightly screwed down so as to hold the ring in its place. The brass tube or ring is now cut into two halves by giving two fine saw cuts across the ring at two points equi-distant from the screws just inserted. This completes the commutator, which is now ready to be slipped on the spindle. As the brass segments of this commutator must be carefully insulated from each other, from the spindle, and from he iron of the electro-magnet, very short screws must be used; and a small paraffined paper washer put over the spindle, against the electro-magnet, before the commutator is put on the spindle, and pushed up into its place, which is close against the outside of the bend of the movable electro-magnet.

A drop of shellac applied to the spindle where the commutator is finally to remain, will prevent it from slipping round. The commutator must be so placed on the spindle, that when the limbs of the movable electro-magnet are exactly opposite the limbs of the fixed electro-magnet, the slits of the commutator are in a line with the limbs; that is, they should find themselves at the two sides of the commutator, and not above and below. A small pulley, either of brass or wood, may be keyed or soldered to the spindle, to serve as a driving wheel. The free

ends of the movable electro-magnet wires should now be cut a convenient length and soldered, one to each segment of the commutator. Two L-shaped springs (to serve as brushes) are now to be made out of a piece of very thin and springy brass, about 1½ inches in length beyond the bend, and ¼-inch wide. These are to be screwed down to the base board in such a position that they press squarely, yet not too heavily

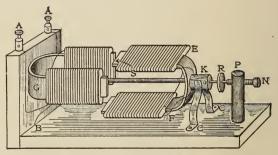


FIG. 59. SMALL ELECTRO-MOTOR.

on the opposite side of the commutator. Finally, one of the ends of the wires coming from the fixed electromagnet G (see Fig. 59) is connected to a binding screw, A. The other end, is carried in a groove under the base board to the screw of the brush C, to which it is soldered, or otherwise electrically connected. The other brush, C, is connected by another wire passing under the board (and shown at B) to the

terminal, A. The spindle carrying the movable electro-magnet and its attachment may now be put in its bearings, the brushes carefully adjusted, and the back screw, N, screwed up until the spindle can rotate freely, but without much play in its two centres, which should be kept oiled. If well made, this little motor will run well with a single Leclanché or pint bichromate cell, and at a furious speed with four cells.

Another simple motor to construct, and one which will immediately give us an insight into the principles involved in the electro-motor, is a modification of Dr. Ritchie's rotating electro-magnet. This may be very cheaply made from two bar-magnets, about 3 inches by 1/2-inch by 1/2-inch. These must be erected, as shown at S and N (Fig. 60), with opposite poles facing, on a base board, about 21/2 inches square. The lower poles should be connected together (underneath the board) by a strip of soft hoop-iron. This is not absolutely essential, but it conduces to the flow of the magnetism through the two bars. A steel spindle, A, about 3 inches long, may be made from a knitting-needle, the lower extremity being ground into a sharp point. At about an inch from the sharpened point is attached a hardwood collar, B, which can be fastened to the spindle either by a small key or by means of a little glue. Before being attached to the spindle, this collar must be furnished with two

brass segments, of which one is shown. The best way to make these segments is to fit a short piece of brass tube tightly over the hardwood collar. Drill two holes at opposite points of the circumfer-

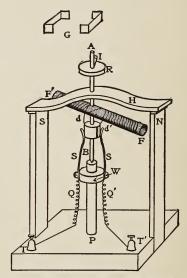


FIG. 60. VERTICAL SPINDLE MOTOR.

ence, and countersink the holes. Two short flatheaded screws (not reaching to the central spindle) are then fitted to the holes and screwed home. By means of a fine fret-saw, the tube is now cut across at two equidistant points in the circumference (avoiding the screws), so that the collar is embraced by two brass half-circles, not touching each other at any point. This arrangement of collar and brass segments is known as a "commutator," since it serves to commute or change the direction of the current supplied to the machine. Just above this collar is tied a bundle, F, of fine soft iron wire, about 1/4-inch in diameter, and of such a length as just to clear the magnet-poles, S and N. This bundle may be bound firmly together by wrapping round with thin ribbon from end to end, a little thin glue or shellac being used to hold the convolutions together. The upper part of the spindle, A, is then thrust through the centre of the bundle. The bundle must then be wound with two layers in one continuous length of No. 24 silk-covered copper wire, beginning at the middle, running to one end, returning by winding to the middle, then winding on to the other end, and finally winding back to the middle again; the two ends of the wire being brought out and soldered to the two segments of the commutator at dd'.

It is important that the slits in the commutator should be parallel with the length of the iron bundle, so that when the ends of the bundle face the poles of the bar-magnets the slits do so likewise. A short brass pillar about 11/4 inches long, made of 1/8-inch brass wire, is driven into the centre of the base board,

as shown at P. By means of a 1/s-inch drill a conical hole is made at the top of this pillar, in which can turn, as in a centre, the pointed end of the spindle, A. At about 1/4-inch from the top of this pillar is cemented, with glue, a wooden collar, W, to which are fastened, by means of short screws, not reaching to the pillar, two elastic brass springs, S S', each facing one of the magnets, and reaching to press firmly and yet lightly on the split commutator. Two copper wires, Q Q', connect these elastic springs (technically known as brushes, because they brush against the commutator) with the binding screws, T T', by means of which the electro-motor can be coupled up to the battery or other source of current.

A piece of sheet brass, about ½-inch thick, and long enough, when slightly arched in the middle, to reach a little beyond each magnet pole, as shown at H, is now cut and adjusted to fit firmly on the top of the magnets. To do this, two little rectangular pieces of thin brass, 1-32-inch thick, of the shape shown at G, are soldered at each end of the crosspiece, H, on the under surface, so as to clip tightly the ends of the magnets. A central hole is now drilled through the cross-piece or "bearing," H, to admit the passage and free rotation of the spindle, A. A small grooved pulley, R, which may be either of brass or hardwood, about ½-inch in diameter, is then to be fastened to the spindle by means of a key as shown

at I. By means of this pulley the power developed by this electro-motor can be transmitted wherever desired.

This electro-motor is described here (and recommended to be made), not because it is the most effective, but because it is very simple in construction, and because, if the reader makes one, so as to grasp the mode in which it acts, he will thoroughly understand the principles upon which all other electro-motors are constructed. We will, therefore, devote a few lines to the consideration of its action. Let us suppose that we begin by coupling up the positive pole of a battery (or other source of electricity) to the left-hand terminal T of the motor, the negative being connected to T', the coiled iron bundle standing with its extremities as shown in the figure, not quite facing the magnets. What takes place? The current passing along the wire Q, and entering the coil at d, converts the iron bundle into a magnet having a north pole at F', and a south pole at F. The consequence is that F' is attracted towards the magnet pole S, while F is similarly attracted by N. Under the influence of this double attraction, the iron bundle (which for the future we will designate the movable electro-magnet or armature) is pulled round towards the poles of the two magnets, carrying with it the spindle and pulley, A and R. When this armature arrives with its extremities exactly opposite

the magnet poles S and N, since the springs or "brushes" S S' are resting against the slits, no current passes through the armature coil; hence it ceases to be a magnet. And here it would stop, in this position, were it not for the fact that by the momentum gained by being pulled from its original position it passes a little beyond the central line, in so doing carrying the slits of the commutator a little past the springs or "brushes." Hence the spring S is actually resting against that section of the commutator which is attached to d', while SS' is resting against d. The effect of this is that the current now enters the coil of the electro-magnet or armature F F', in the opposite direction to which it did before; therefore the nearer extremities of the armature are repelled by the poles of the magnets N and S, and pushed on in the same direction until they stand across the said magnets, when they enter the sphere of attraction of the opposite poles, by which they are consequently attracted as at first. Again, but with increased momentum, the armature flies past the attracting poles, breaking and renewing contact as before, and this series of rapid magnetization, demagnetization, and reversal of magnetism, with its accompanying rapid rotation, takes place as long as current is supplied.

SIMPLE ELECTRIC LOCOMOTIVE MOTOR, 151

Simple Electric Locomotive Motor.

This motor can be constructed with very little lathe work and few tools.

There are two magnets of the horseshoe type. These are mounted on the platform of the car, as shown in Fig. 61, and the armature revolves between them.

The magnets are made of soft iron 3-16 inch in diameter and 3 inches long, bent to the shape shown.

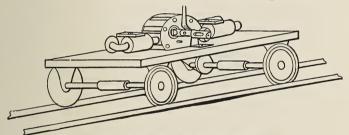


FIG. 61. ELECTRIC LOCOMOTIVE MOTOR.

The winding of the coils for these magnets should be ten layers of No. 28 single-covered wire. This should be wound on stout paper or fiber tubes and slipped onto the poles of the magnets after being shellacked and allowed to dry.


The armature consists of five strips of 3-16-inch square soft iron 13% inches long mounted in two disks of brass 1½ inches in diameter and 1-16 inch thick, as shown in Fig. 63.

Divide the periphery of the disks into five equal parts, and drill five ½-inch holes just within the edge of the disks as shown.

Turn down the ends of the soft iron rods so that they will project slightly through the disks of brass and rivet the ends.

A hole for a \(\frac{1}{8}\)-inch shaft must be drilled exactly in the center of the disks.

The commutator consists of brass pins projecting

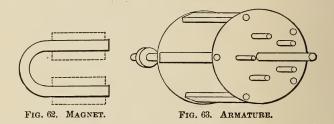

from the side of one of the brass disks. The pins are the same in number as the soft iron strips of the armature, and should be located in a line with the center of the disks and the strips, and about ½ inch from the shaft.

The brushes should be of very thin brush copper bent into a circle, and the ends riveted or screwed to the end pieces of the rocker arm, as shown in Fig. 64.

The rocker arm is made from a piece of sheet fiber

to insulate the brushes from the bearing. At each end is riveted, or screwed, an angle piece of brass to which the ring brushes are attached.

The hole in the center of the brush holder is drilled of a sufficient size to fit over the tube forming the bearing.

The reversing lever of the brush holders is an inverted T in shape, and is drilled with the same size of hole as the brush holder. In each end of the exten-



FIG. 64. BRUSH HOLDER DETAILS.

sions of the lever is drilled a hole which corresponds to holes drilled and tapped in the fiber piece of the rocker arm. When these parts are in position on the bearing and the screws inserted, they clamp the rocker arm and lever against the flat part of the bearing with sufficient force to hold the rocker arm in any position in which it is placed. The vertical lever should project above the armature far enough to be readily handled. The brush holder should be placed in such a position that the magnets will attract the strips of the armature just as they come near the poles, and cease attracting just as they are nearly in front of the poles.

To form stops for the rocker arm a small screw should be driven into the wood platform of the car under each end of the brush holder.

These can be adjusted to bring the brushes into the proper position—one for going ahead and the other for reversing. These will limit the movement of the rocker arm in both directions.

The bearings are of brass tubing soldered into the sheet metal supports, as shown.

These supports should be of brass 1-16 inch thick and bent at an angle at the base.

The platform of the car should be wood about 3 by 6 inches in size.

As the current is to be taken from the rails, it will be necessary to insulate the wheels of the two sides of the car. A simple way to do this is shown in Fig. 61.

The four wheels are each mounted on a short piece of steel rod for a shaft. The pieces are of such a length that when the wheels are in position on the rails, the ends of the axles will not touch each other. Two small fiber sleeves are drilled out, into which the inner ends of the axles are forced after they are placed through the sheet brass bearings of the car.

The construction of these parts is so clearly shown that further description is unnecessary.

The power is transmitted from the armature to the axle by a string belt running over two pulleys as shown.

The circuit of the motor is from one of the rails through the wheels and bearings to both of the magnets, thence to the bearings and commutator pins, from which it passes to the brushes, and from there by a flexible wire to one of the axle bearings on the opposite side of the car. From this point the current passes through one of the wheels to the second rail.

Telegraph Key.

A simple telegraph key, and one easily constructed by any amateur, is shown in the accompanying cut.

The base can be a piece of hard wood, fiber, or hard rubber, and the other parts can be elaborated to any degree to suit the taste of the constructor. The size of the base should be about 3x4 inches and \frac{1}{4} or \frac{3}{8} inch thick.

The key proper consists of a strip of spring sheet brass about 2½ inches long and ½ inch wide.

One end of this strip is mounted on a block of the same material as the base, and the other end is provided with a knob for the fingers. This is secured by a round-head screw which passes up through the brass strip into the knob.

In the base directly under this screw is placed another round-head screw. When the key is depressed, these two screws meet and make a contact. Two binding posts are located on the back of the base.

The circuit is as shown by the dotted lines. The wires can pass along the surface of the base or pass down through and have grooves made on the underside to receive them.

If the screw heads become oxidized and do not

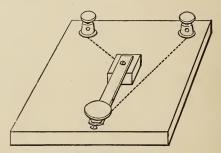


FIG. 65. TELEGRAPH KEY.

make good contact, they may be cleaned with fine sandpaper or emery cloth.

Sounder.

This instrument can be readily made by anyone having a few tools.

In the construction here shown, the cores of the electromagnet are formed of 5-16-inch flat-head wood

screws about 2½ inches long. The heads of the magnet coils are made of ½-inch sheet fiber 1 inch in diameter. The two upper heads should have clearance holes in them, which will allow the screws to pass through freely, but the holes in the lower heads should be smaller to allow the thread of the screws to be forced into them, and thereby hold them at the proper position.

These heads, or washers, should stand square with

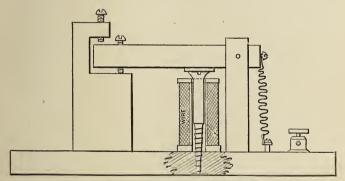


FIG. 66. SOUNDER, WITH DETAIL OF MAGNET.

the screws and at the same relative distance from the head. The body of the screws should be wound with a layer of paper shellacked, after which ten layers of No. 24 single cotton-covered magnet wire should be wound on each screw. The best way to do this winding is in a lathe; the point of the screw being held in the chuck and the wire spooled on between the washers. The more even the wire can be laid, the neater will be the appearance of the finished magnet. As soon as the wire begins to show an uneven surface, if a strip of stiff writing paper, cut just the width of the distance between the washers, is wound on over the under layer, it will form an even surface to begin the next layer on. It is always advisable to put a piece of this paper under the top layer of the wire. Both bobbins should be wound in the same direction, and when in position connect together the inside end of one coil with the outer end of the other. Fig. 66 shows the detail construction of one of the magnets.

The yoke of the magnet should be of soft iron about $\frac{1}{8}$ x 1 inch and $\frac{2}{8}$ inches long, having two 5-16-inch holes $\frac{1}{8}$ inches apart from center to center.

The armature is of soft iron $\frac{1}{8}$ x $\frac{1}{2}$ inch and 4 inches long. About $\frac{1}{2}$ inch from the outer end a small hole is drilled through the bar, and a piece of small steel wire driven into the hole. This wire should project about $\frac{1}{2}$ inch on each side of the bar. This forms the trunnion. The bearings for the trunnion are of hard wood or brass. If of wood they should be about $\frac{1}{2}$ inch square in section, but if of metal use the same size as the bar, $\frac{1}{4}$ x $\frac{1}{2}$ inch.

The height of the bearings should be about 21/4 inches above the base.

The parts can be attached at the bottom by turning down a tenon on the end to fit two holes drilled in the base, or a screw can be put up through into each bearing.

The bearings should be placed just far enough apart to allow a very thin washer between the bear-

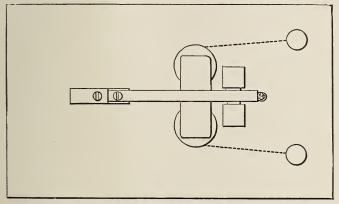


FIG. 67. TOP VIEW OF SOUNDER.

ing and bar on each side. On the end of the bar a hole is drilled and tapped for a small screw to hold one end of a coiled spring. The other end of the spring is attached to a screw directly underneath in the base, and by this latter screw the tension of the spring is adjusted.

At the inner end of the bar a machine screw is

placed at the position shown. This is for regulating the limit of travel of the bar in the downward direction.

The limit of upward travel is regulated by the screw placed in the standard. This standard is of brass or wood as desired, and can be attached at the bottom by two screws passing up through the base.

If the standard is of wood, it must be lined with a piece of metal where the adjusting screw of the bar strikes it, or a flat-head tack can be set into the wood at that point. The details of construction are clearly shown in Figs. 66 and 67.

Two binding posts are shown on the base, and the dotted lines represent the wire connections. The wires can lie along the top of the base, or pass down through and run along grooves cut on the under side.

Microphone.

The simplest form of microphone consists of three wire nails arranged as shown in Fig. 68.

The nails should be mounted on a thin box, such as the bottom of an inverted eigar box. This acts as a sounding board.

Two good-sized holes should be bored in each end of the box. The wires are twisted around the nails, as shown, and passed under the heads of the two screws in the end of the box. This is to prevent the wire from pulling the microphone out of position.

The complete instrument is arranged as shown. A battery and telephone receiver are put in circuit between the binding screws.

The footsteps of a fly walking over the cigar box can be distinctly heard at the receiver, although the listener be several yards distant and in another room.

A more permanent arrangement is shown in Fig.

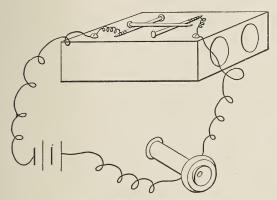


FIG. 68. WIRE NAIL MICROPHONE.

69. In this instance, instead of using three wire nails, three pieces of carbon are used.

Two of the pieces should be about ½ inch in diameter and about the same in height, with a hole drilled down through the center and a conical indentation on one side, as shown.

A screw is passed down through the center hole of each of the large carbons by which they are secured to a cigar box as a sounding board. The third piece of carbon should be about 3-16 inch in diameter and about $1\frac{1}{2}$ inch or 2 inches in length, with both ends pointed as shown.

The pointed ends of this latter piece of carbon rest

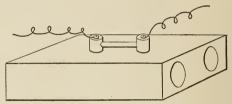


FIG. 69. CARBON MICROPHONE.

lightly in the conical indentations of the pair of ½-inch carbons, as shown.

As in the former instance, the battery and telephone receiver are placed in circuit with the microphone. The ends of the circuit wires are clamped under the screw heads passing down through the two carbon posts as shown.

Telephone Receiver.

This receiver is intended to be used with the microphones just described.

The materials necessary are a round bar magnet

 $\frac{1}{4}$ by 3 inches, one drachm No. 36 silk-covered magnet wire, a piece of ferrotype plate 3×3 inches, two small brass terminals, a piece of round hard wood about $1 \times 4\frac{1}{2}$ inches, and a round wood box $2\frac{1}{2}$ inches in diameter by $1\frac{1}{4}$ inches deep.

Drill a 1/4-inch hole, through the round piece of hard wood for its entire length to receive the magnet.

Drill a 1/4-inch hole through the center of the bot-

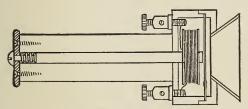


FIG. 70. TELEPHONE RECEIVER.

tom of the wooden box and, after squaring off the end of the round hard wood piece, glue the bottom of the box on the end of the piece, keeping the two \(\frac{1}{4}\)-inch holes in line.

On the opposite end of the hardwood piece is fitted a circular disk of brass about ¼ inch larger in diameter than the wood. Through the center is drilled a clearance hole for a No. 6 machine screw. Holes are also drilled and countersunk for three or four small brass wood screws by which it is secured in position.

The magnet should be drilled and tapped with No. 6 machine screw thread in one end.

The magnet should fit tight enough in the hole drilled through the wood piece that it will not turn readily when the screw is rotated for adjustment.

The piece of ferrotype plate can be fitted to the box as shown in cut. It must be held in the recess of the cover, and the two parts of the box must be fitted until they will just pinch the plate when shut together. A piece of stiff paper can be fitted first, and then the piece of plate marked out from it by a sharp pointed scriber.

Care must be used not to dent or bend the plate. It can be cut to the required size with a pair of shears. A hole about 1¾ inches in diameter with a beveled edge can now be cut in the cover of the box. This is for the ear piece, which should be of cardboard, pressboard or sheet fiber and glued into position.

A bobbin of pasteboard or fiber is made about 1 inch in diameter and % inch long.

This is placed on the end of the magnet bar in the relative position shown in the cut. After being shellacked the No. 36 wire is spooled on, leaving enough of the two ends projecting to be connected to the two binding posts as shown.

The parts are now ready to assemble.

First insert the magnet with its coil in position. Pass the No. 6 machine screw through the hole in

the brass plate, and place the spiral spring over the screw, after which get these parts into position and start the screw into the thread in the end of magnet. The piece of coiled spring used should be quite stiff.

After the screw is fairly started, insert the wood screws and fasten the brass plate in position.

The ends of the No. 36 wire can then be soldered to the binding posts.

The magnet can be adjusted so that it will stand just below the diaphragm, and the latter can now be placed in position.

Place the disk in the recess of the box cover, and with a brush carefully shellac the two surfaces of the box where they fit together. Place the cover in position and press the parts together.

The final adjustment consists in loosening the screw in the end of the magnet until the magnet will touch the diaphragm.

This can be tested by gently tapping on the diaphragm with a pencil. As soon as the magnet touches the diaphragm, it will emit a dull, heavy sound.

Then turn the screw in the opposite direction very slightly, and test with the pencil. As soon as the diaphragm gives a clear sound, it is ready for use.

How to Make Simple Dry Cells.

A very cleanly and convenient form of chemical current producer is called the dry cell because of the absence of liquid electrolyte. Such cells have been widely used in gas engine ignition work and for various intermittent work such as ringing door bells, operating annunciators, etc. While these cells are cheap and easily obtained, they may be easily made by the average amateur, and the experience gained will amply repay one for the time and trouble taken to manufacture them especially in the miniature forms, which are not so easily procured on the open market and with which numerous interesting experiments may be made.

These cells may be made in either of the two forms shown at Fig. 71, though the round type is the most popular. The voltage of the average dry cell is about $1\frac{1}{2}$ volts while the capacity depends entirely upon the size. The first step in making the round type is to turn out the forming block or plug as shown at A from some hard wood. A piece of sheet zinc is then obtained, this can be about 1-32 inch or 1-16 inch thick, and it is cut into rectangles of the size shown at B. A piece of zinc 3 9-64 inches long will suffice for covering the 1-inch forming plug completely,

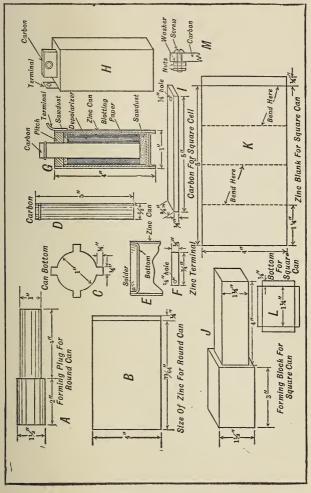


Fig. 71. DETAILING PRINCIPAL PARTS OF SIMPLE DRY CELLS AND THEIR RELATION TO EACH OTHER.

but it will be well to allow another ¼ inch to form a lap that can be soldered to complete the cylinder. Before forming up, the side of the zinc corresponding to the inside of the can should be well amalgamated, though this precaution need not be taken unless a dilute acid is to be used as the excitant. Care should be taken in soldering to have all solder on the outside of the cell because there is liable to be local action at the joint if any of the solder can be acted on by the electrolyte.

The bottom is cut from a piece of zinc of the same thickness as that used for the cylinder and can be made as shown at C. The lips are to be bent up as shown at E, and are intended to assist in holding the bottom in the can when soldered in place. The terminal F may be made of zinc, brass or copper and is intended to be attached to the top of the zinc can as shown in assembly view G by a drop of solder. The carbon rod is a piece of arc light carbon cut approximately to the dimensions indicated at D, a small groove being cut around near the top with a three cornered file so a copper wire may be tightly twisted around the carbon to form a terminal. If there is any copper plating on the carbon it should be entirely scraped off and the carbon stick smoothed over with sand paper or emery cloth to remove any traces of the metal.

. The first step in assembling the cell is to cut a piece of blotting paper of sufficient size to cover the bottom, and another piece large enough to go entirely around the interior of the zinc can. This blotting paper should be allowed to soak in the electrolyte until entirely saturated. The electrolyte or excitant may be either a dilute solution of sulphuric acid or a saturated solution of sal-ammoniac. The acid will give a slightly higher voltage, but even with the zinc well amalgamated it is apt to eat into it even when the cell is not in use. Most dry cell manufacturers use the sal-ammoniac solution. The disc of blotting paper is then laid on the bottom of the can, the strip is wrapped around the interior. About 1-8 inch of sawdust is then placed on the bottom of the zinc can to keep the carbon away from the bottom of the cell.

A depolarizing mixture consisting of black oxide of manganese and powdered carbon in equal parts is packed tightly around the carbon, and to insure an intimate contact and minimum internal resistance, this is tamped down with a small hardwood stick and hammer. The oxide and the carbon should be well mixed in a mortar and thoroughly granulated with the pestle, and before being placed in the cell, it is thoroughly saturated with the electrolyte and packed in the


zinc can in a damp condition. Care should be taken to locate the carbon rod in the center of the cell and to keep it there. After enough of the depolarizer has been packed into the cell so it is about ½ inch from the top of the can, another layer of sawdust is placed over the depolarizer and the cell is sealed with a layer of molten pitch. The outside of the cell may be painted with black asphaltum or other insulating paint or it may be inclosed in a heavy paper case.

If the amateur electrician wishes to build a square cell instead of the round one, he should obtain carbon plates and cut them up into members such as shown at I. These may often be made from discarded dry cell carbons cut down. Carbon may be easily shaped with a file and cut with a hack saw. The forming block shown at J will be needed if a number of the square cells are to be made, and the zinc blanks for the square can and its bottom may be easily made to the dimensions at K and L. The carbon plate may be drilled as shown at M for a small machine screw, preferably of brass, which will make a very satisfactory terminal. The appearance of the completed cell is clearly shown at H. square cell has more internal surface than the round one and will have somewhat higher capacity, though it will not have any higher voltage.

An Efficient Plunge Battery.

While the dry cells previously described are very convenient current producers they are suitable only when used intermittently. If used continuously, as in running small motors or lamps, they will depreciate rapidly and must be allowed to rest or recuperate before they can be used again. The writer has made and used with success a very cheap form of plunge battery that not only furnished a steadier flow of current than dry cells but which had a higher voltage per cell and more endurance than the open circuit type. The dimensions and general construction of the three cell battery outlined at Fig. 72 will demonstrate the simplicity of this battery and enable any one to build one similar without difficulty.

The basis of the battery is a wooden frame, composed of the basepiece, the uprights or side members and the cross bar. These may be made of any wood and finished to suit the builder. The uprights are secured to the base by wood screws and to the cross bar by wedges passing through that member, the ends of which fit suitable holes in the upright. The battery jars are ordinary water tumblers of fairly heavy glass, while the carbon plates are made from old dry battery carbons. Almost any user of a gasoline automobile

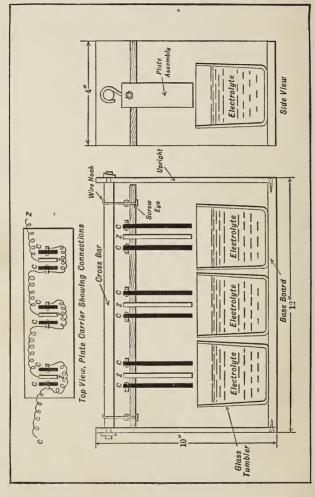

SHOWING METHOD OF CONSTRUCTING VERY EFFICIENT PLUNGE BATTERY THAT WILL DELIVER CURRENT OF SIX VOLTS. FIG. 72.

or motor boat will have old batteries on hand that he will be glad to dispose of, and all garages or auto repair shops will have old cells that can be had for the asking. These are cut open and the carbons removed. As the carbons have a terminal screw at the top there is little left to do to get them ready for the battery other than washing them carefully to remove all traces of the alkaline excitant, scraping them to expose a new surface and cut them to the proper length.

The zinc plates may be secured from any dealer in electrical supplies or may be cast into sand molds from a simple wood pattern by the amateur himself if he has the scrap zinc available to melt up. These should be the same size as the carbon members and should be well amalgamated before using. The plate carrier is made from a piece of hard wood with nine rectangular openings cut in so the plates will be a tight fit in the wood piece.

The plate carrier should be well soaked in melted paraffine wax or it may be coated with that material before the carbon and zinc plates are assembled in it. Two carbon plates are provided for each zinc element, one being placed at each side of the active member. The method of wiring the various plates together is clearly indicated in the top view of the plate carrier. First,

both carbons of each cell are joined together with a short wire, then the zinc element of the central cell is joined to the carbon members of the neighboring cell on one side, while its carbon plates are coupled to the zinc plate of the cell on the other side. This leaves the carbon plates of one end cell and the zinc plate of the other end cell free to be joined to the outer circuit. The plate carrier is provided with small eye bolts to which wire hooks are fastened so the entire plate assembly may be hung from the cross bar when the battery is not in use. The excitant is the bichromate of potassium solution described on page 12.

A battery of the plunge type described is able to develop 2 volts per cell or 6 volts for the battery and will furnish current enough to light several 6-volt 1-candle-power incandescent lamps or run a small battery motor at a high rate of speed. The principle of action is the same as the Grenet battery, of which it is a modified type. This battery may be made of larger capacity by using quart fruit jars for the containers and making the carbon and zinc plates proportionately larger. Care should be taken to remove the plates from the electrolyte at all times that the battery is not in use to prevent wasting of the zincs.

Small Storage Battery.

The battery equipment of the up-to-date electrical experimenter is not complete without one or more storage cells, and while these are costly to purchase, there is no reason why the experimenter possessed of a reasonable amount of patience should not be able to build a very satisfactory small cell without much trouble. storage cell differs from a primary battery in that it must be charged with a current of electricity before any current can be derived from it. The plates are practically of the same material at the start, commonly being made of lead. After the charging current has been passed through the battery for a sufficient period of time, the plates change their nature to some extent, that is to say, one of the plates becomes covered with a binoxide of lead while the other member remains practically spongy metallic lead. At this time, there is a difference of potential or electrical condition between the plates and if they are connected together a current of electricity which will flow in an opposite direction to the charging current passes through the circuit. The storage battery will continue to give out electricity until the plate that had been covered with the oxide of lead is changed in nature and similar to the

other member. Passing a current of electricity through the battery plates again will change their nature and the cell is once more capable of delivering current. Storage batteries are widely used at the present time in many applications and have entirely displaced the other forms of primary cells where a continuous current is needed and where proper charging facilities are available.

The small storage cell shown at Fig. 73 will deliver current enough to light a small 2-volt lamp or run a little motor. A battery of three of these cells will furnish six volts and will operate almost any electrical appliance designed for battery current such as an induction coil. electric horn, etc. The jar is made of an ordinary drinking glass of large size or from a small fruit jar. The plates are cut from sheet lead 1-8 inch or 3-16 inch thick, of the form shown at A. Five of these will be needed. Small separator blocks are made of soft wood as shown at B to place between the plates and eight of these should be provided. To facilitate forming the plates, the surface should be broken up in some way. The method outlined at C makes a very efficient plate and one that will form readily. The lead plate is laid on the bench and a straightedge of metal is held tightly against it with one hand while the other is used to draw a well-sharpened implement, such as an oyster knife,

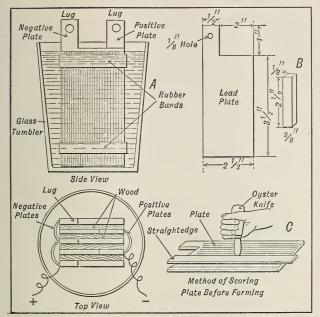


Fig. 73. SIMPLE AND INEXPENSIVE STORAGE BATTERY.

from one end of the plate to the other to score it at least 1–16 inch deep. These score marks are made as closely together as possible until the plate is scored its full width. After one side is scored, the plate is turned over and some cloths or other soft material is interposed between the scored side and the bench to prevent flattening of the raised portions and the other side is treated. The plates

may also be placed in a dilute solution of nitric acid to soften the surface. All the plates are roughened in the same manner and then are bound into a bundle, three of the plates having their upstanding lugs in one plane while the remaining two plates which are sandwitched between the other three have their lugs in the same plane. The plates are separated by the wooden spacers, one set at the top, the other at the bottom, and the entire assembly is held together by heavy rubber bands.

The electrolyte is a 10 per cent. solution of sulphuric acid in distilled water. The plate assembly is immersed in the liquid and the operation of charging may be commenced. If direct electric lighting current is available, the forming process will be easily accomplished. It is merely necessary to connect the battery in series with a 110-volt 16-candle-power carbon filament lamp and leave it on charge for 10 or 15 hours. At the end of this period, the battery should be completely discharged through a small 2-volt lamp. It is again recharged and at the end of the charging period, discharged again. This process of alternate charging and discharging is continued until the plates are fully formed. Care should be taken to always couple the leads together in the same way after the initial charge. The negative terminal of the line wire should be joined to the

negative plates of the battery, the positive terminal of the line wire to the positive plates of the battery.

When the plates are fully formed, as they should be after fifteen or twenty complete circles of charging and discharging, the positive plates will be a reddish-brown or chocolate color, while the negative plates will be a slate color when the cell is charged. If the electrolyte is tested with a hydrometer when the cell is fully charged, it will indicate 1,225 degrees, whereas it will show but 1,200 when discharged. It is best to charge a storage cell slowly and to discharge it slowly because too rapid charging or discharging will injure the plates. The small cell described should never be charged faster than 1 ampere charging rate. Its capacity will be about 8 ampere hours, that is, it will deliver a current of 1 ampere for 8 hours, or a current of 2 amperes for 4 hours. The positive plate assembly should be marked by painting the tops of the lugs red, and all positive plates should be joined together by a lead strip or wire, and the negative plates should be connected together in the same manner. The method of joining the plate lugs is clearly shown in top view of battery at Fig. 73.

Galvanometer or Current Indicator.

A simple indicating instrument that will indicate

the presence of electric currents in a battery or from a small dynamo may be easily made with a block of wood, a strip of cardboard, a few feet of magnet wire and a small pocket compass as shown at Fig. 74. The side view at A shows the manner in which the wood block is bored out to receive the compass and the way the cardboard strip is used to form a basis around which the wire may be wound. The cardboard strip is secured to the block in the form of a flattened ring and several layers of the magnet wire, which may be No. 16 to 20 gauge, are wound around it. Two leads are left projecting from the coil and when a current of electricity is passed through the coil the magnetic needle will be deflected. The amount and rapidity of the deflection will give some indication of the strength of the current. If used for small currents fine wire should be employed while coarser wire will permit indication of larger currents.

A Cheap Polarity Indicator.

It is often desirable to test the polarity of the electric current, especially if the leads are some distance from the battery or generator, and it is important to know the polarity as in the case of charging a storage battery, where a careless connection may injure the plates. Where a lot of this is to be done, as in electrical experimenting,

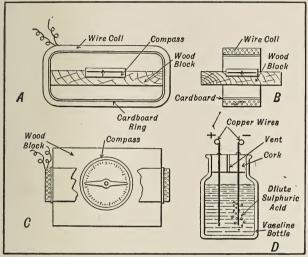


Fig. 74. Depicting Easily Made Galvanometer and Useful Polarity Detector.

or in wiring, a polarity indicator will save considerable time. A cheap indicator for this purpose may be made as shown at Fig. 74 D. It consists of a small wide mouth vial or bottle, such as vaseline comes in, for instance, which has three holes drilled through the cork. Two pieces of copper wire are thrust through two of the holes, while the third serves as a vent for escape of gases. The bottle is filled with a saturated solution of salammoniac or dilute sulphuric acid. When the

terminals are connected to the end of a battery or small dynamo line, the wire in the solution to which the negative wire is connected will give off bubbles.

A Useful Electric Candle.

Anyone who wishes to make three of the simple dry cells previously described and illustrated at Fig. 71, can make a very useful electric candle with but little extra trouble. A cardboard mailing tube, just a little larger in diameter than the battery width and ½ inch longer than three of the cells placed together with small wood spacer discs between them, forms the battery container as well as the body of the candle. It may be covered with fine white paper or painted with an enamel paint to make it look more like a candle if desired. or it may be covered with black cambric or leatherette to finish it nicely. The wood base block is bored out with a hole about 1/2 inch deep so the end of the tube may be glued in place. Before the tube is fastened permanently to the base, the cells should be assembled in and wired together as indicated. The zinc terminal of the bottom cell. or No. 3 in the drawing Fig. 75, is attached to a copper rivet passing through the side of the case. and which also serves to connect the switch spring of copper or brass to the zinc terminal. carbon member is joined to the zinc terminal of

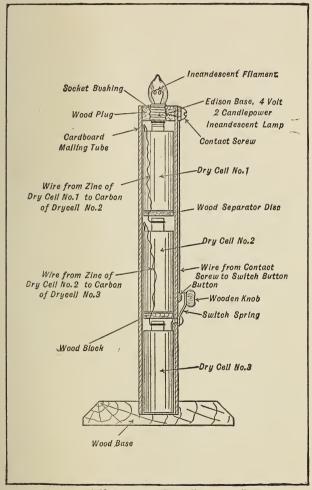


FIG. 75. A USEFUL AND SAFE ELECTRIC CANDLE.

cell No. 2, and the carbon terminal of that cell is in turn connected with the zinc of the uppermost cell or No. 1. The connections are easily made with well insulated pieces of bell wire. Each cell is separated from the others by suitable wooden or fiber discs, which have a notch cut in them to permit the connecting wires to pass through.

The wooden or fiber block at the top of the mailing tube is provided with a central hole having a female threaded bushing from a miniature socket held firmly in place with a wood screw which makes contact with it. A wire connects the wood screw head with a contact button, such as a brass head upholsterer's tack or copper rivet pushed in place in the mailing tube wall immediately under the end of the switch spring to which the wood knob is attached. The lamp, which is a 4 volt, 2 candlepower Edison miniature base member, can have a pear-shape bulb to represent a candle flame. It is screwed in the bushing, which should be shorter than the base, until the insulated contact button at the bottom of the lamp makes firm contact with the carbon element of cell No. 1. When the switch spring is brought in contact with the button, the circuit will be completed through the lamp and the filament will glow. This candle is intended only for intermittent or "flash" use, because if allowed to burn continuously the batteries will

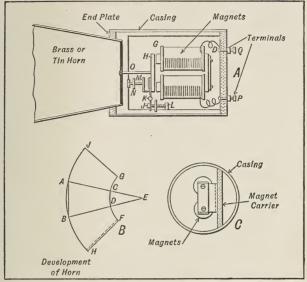


Fig. 76. Outlining Construction of Simple Vibrating Diaphragm Type of Electric Horn.

soon become exhausted. If used properly, the batteries will suffice for several hundred flashes.

Electric Warning Signal.

Electric warning signals are widely used on automobiles and motor boats at the present time, and while the motor driven forms are expensive and would be somewhat difficult for the amateur to make, a simple electrically actuated diaphragm

horn may be easily made by reference to Fig. 76. The alarm shown has a diaphragm about 2 inches in diameter, while the horn is about 4 inches long and $3\frac{1}{2}$ inches or 4 inches in diameter at the large end. The instrument will be about 7 inches long and will be a good alarm for a bicycle or pushmobile.

The first step is to make the horn, which can be made of sheet brass. To lay out the metal blank to the proper size, the first step is to lay out a crosssection of the horn on a piece of heavy paper, as at ABCD, and then to finish the lines AC and CD until they meet at the point E. Use this point as a center from which to strike two arcs, an inner one FG, and an outer one JH. Use the distance EC as the radius for the inner one and the distance between EA as the radius for the outer one. Measure off FG and HJ evenly on both sides of the triangle ABE so the total length of the lines FGand JH will be $3\frac{1}{4}$ times AB and DC respectively. Then cut out the portion of the pattern enclosed by the letters FGJH. This is then laid on the sheet brass which can be cut to correspond. Roll and lap the sheet brass at the edges and solder the joint neatly. If the amateur is not fussy about the appearance of the horn, it may be cut from a tin funnel of the proper size.

The diaphragm is made of very thin ferrotype

plate .015 inch or .020 inch thick, and is soldered to the small end of the horn. Cut out a fiber or hard wood ring and bevel it on the inside edge to fit the horn; this forms one end of the mechanism-carrying case. Another disc of the same size without any hole is also cut to make the other end of the case. These rings form ends to which a brass cylinder made in two halves is secured by small wood screws. One-half of the casing is put in place to separate the ends properly and is firmly secured by small screws, while the other half of the case is only put on when the mechanism is in place and after adjustments are completed.

The support for the magnet assembly is cut from hard wood of fiber and is fastened in as shown at C. A pair of magnets wound for about 30 ohms resistance are mounted on this support. The parts from an old electric bell or buzzer may be used to actuate the diaphragm. These are the soft iron armature H, having a strap of spring brass or copper J attached to it by soldering or pinning, this strap being pivoted at K and provided with an adjusting screw L to set the tension. The relation of these various parts are clearly shown in the assembly view A. Another U-shaped brass member, M, is soldered to the soft iron armature and in connection with the adjusting screw, N, forms the contact breaker. The point of the screw N and

the portion of the member M against which it bears, should be tipped with platinum. This may be either in the form of foil soldered on or may be wire riveted in place. The armature and the diaphragm are connected together by a piece of brass wire that may be soldered in place, though it will be held much more securely if riveted at both ends. The wires from the magnet are brought back to terminals Q and P attached to the end disc of the case, and it is to these leads that the battery is attached to work the hors. Three or four standard 6-inch by 2½-inch dry cells will be needed. wired in series, and they should be connected to the horn terminals with a bell push button in circuit so the alarm may be operated only when desired. The tone of the horn will depend upon the rapidity with which the diaphragm vibrates, and this in turn is regulated by the strength of the battery and the adjustment of the screws L and M. faster the diaphragm vibrates the louder the tone but the more current the horn will draw.

Electric Door Locking Device.

Several types of electrically operated door locking bolts may be made by the amateur that are simple to construct and very satisfactory in operation. The simplest form of lock is similar to that shown at A, Fig. 77. It consists of a pair of electro-

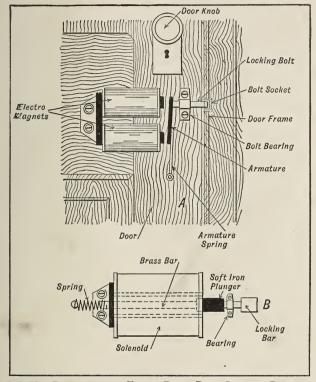


FIG. 77. PRACTICAL AND EASILY BUILT DOOR LOCKING DEVICES.

magnets mounted on the door just below the knob
and three or four inches from the edge, which
actuate a soft iron armature which in turn draws

actuate a soft iron armature which in turn draws the bolt. The magnets may be taken from an old

electric bell, and the armature and its spring may also be used and is mounted in front of the magnets in just the same way as in a bell. A brass bar, 1/4 inch by 3/8 inch by 2 inches is secured to the free end of the armature by a hinge joint, and it should be a free fit in the bearing by which it is secured to the door. The brass bar is held into engagement with a suitable depression or socket member in the door and away from the magnets by the spring attached to the armature. As the bar projects about \% inch from the edge of the door, the back edge of the projecting end should be champhered or beveled off so that when the door is closed the bar will be forced back even with the edge of the door until it can enter the socket made to receive it on the door. The wires from the ends of the magnet coils may be run to any point, and if a push button and two or three cells of dry battery or ordinary Leclanche type cells are included in the circuit, every time the push button is depressed the bolt will be drawn back out of the socket. Obviously, the end of the bolt should be a free fit in the socket and the bolt must slide freely through its guide to be operated by the magnetic pull.

The solenoid operated bolt shown at Fig. 77, B, is a modification of the magnet type. In this a hollow electro magnet or solenoid coil is used to

draw the bolt, and this is stronger and will exert more pull than the small magnets. The soft iron plunger is 2 inches long and is about 15 inch less in diameter than the interior of the solenoid. A 1/4 inch brass rod passes through the center of the plunger and it projects a small distance at the door end and about 1½ inches at the other. This brass rod slides in suitable bearings; the inside one may be the supporting member by which the coil is attached to the door. These bearings should be so placed that the plunger may slide in and out of the coil without touching. The short projecting end of the brass rod carries the locking bar, and this is kept normally in position in the door socket by the spiral spring attached to the long end of the rod and which bears against a screw in the door. When a current of electricity of sufficient strength passes through the solenoid coil, the iron plunger will be drawn into the interior of the coil and the locking bolt will be pulled out of the door socket. releasing that member. It is connected up in the same way as an electric bell.

CHAPTER X.

MISCELLANEOUS RECEIPTS AND FORMULÆ.

Kookogey's Battery Solution.—Potassium bichromate, 227 parts; water, boiling, 1,134 parts; while boiling, add concentrated sulphuric acid, very carefully and slowly 1,588 parts; allow it to cool and to precipitate, decant for use. All parts are by weight.

Electropoion Fluid.—Mix one gallon sulphuric acid, concentrated, and three gallons of water. In a separate vessel dissolve six pounds of potassium bichromate in two gallons of boiling water. Mix the two solutions. Use only when perfectly cold.

Solution for Amalgamating Zinc.—Dissolve one part of mercury in a mixture of two parts nitric and four parts hydrochloric acid. After solution, add six parts more of hydrochloric acid. A few seconds immersion will amalgamate ordinary zincs, which may then be washed in clean water, and well rubbed. Amalgamation by rubbing with metallic mercury and dilute acid is generally simpler.

High Potential Battery.—Positive Element: Sodium amalgam in caustic soda solution.

Negative Element: A carbon plate in chloride of iodine.

192

The electromotive force of this battery is said to be about 4 volts. (See "Electric World," Vol. 6, No. 16).

Chloride of Iron Battery.—This battery corresponds in construction with the Bunsen battery, except that ferric chloride is used as the depolarizer in place of chromic acid. After it becomes polarized, by reduction of the ferric to ferrous chloride, it will recuperate on standing, as the air oxidizes the iron salt. As this action is slow, bromine was added to the depolarizing mixture. This gave a disagreeable odor. Another improvement was to add potassium chlorate with a little hydrochloric acid, which had very little odor and was found to work very well. The last combination is described by Thomas Moore, in the London Chemical News.

Potassium Permanganate Cell.—By using a solution of potassium permanganate and ammonium chloride in water as exciting fluid, with carbon and amalgamated zincs as the elements, a good open circuit battery is obtained. A warm and concentrated solution of potassium permanganate may be poured into exhausted and drained porous cells of Leclanchè batteries to regenerate them.

Dry Battery.—A good mixture for dry batteries is made up of: Plaster of Paris, 4 parts; zinc oxide, 1 part; saturated solution of zinc chloride, enough to make a thick paste. The Carl Gassner, Jr., patent

specifies: Sal ammoniac, 1 part; plaster of Paris, 3 parts; zinc chloride, one part; water, two parts. All parts are by weight. A zinc can may be used as at once the cup and positive element; a rod of carbon is the negative element.

Smee's Battery.—This battery consists of amalgagamated zinc positive and platinized silver negative plates, in a single vessel with a ten per cent. solution of sulphuric acid. To platinize the negative plate, dissolve a little platinum bichloride in water with a little hydrochloric acid, and decompose the solution by a battery, using a platinum plate as anode and the silver plate as cathode. This produces a deposit of platinum on the silver which facilitates the escape of hydrogen gas.

Platinized Carbon for Smee Batteries (Walker).— The carbon plates are first purified by soaking them for some days in sulphuric acid diluted with three to four times its volume of water; a tinned copper conductor is then fastened to one by tinned copper rivets. The carbon is then platinized by electrolysis, the carbon plate being used as the cathode, the anode being either a platinum or carbon plate. The solution used is thus prepared: sulphuric acid, diluted with ten times its volume of water, is taken, and crystals of platinum chloride are added until the solution becomes of a beautiful straw yellow color. After the current has passed for about twenty minutes the plate

is finished; it may be tested by using it as a cathode in the electrolysis of water; it ought to allow the hydrogen to escape freely, without sticking to it in the form of bubbles.

Porous Pots.—Minimum leakage with distilled water at 14°C., 15 per cent. in twenty-four hours.

Ebonite.—To keep ebonite in good order it should be occasionally washed with a solution of ammonia in water.

Non-Corrosive Soldering Fluid.—Mix water, 8 parts; glycerine, 1 part; lactic acid, 1 part. All by weight.

Low Temperature Solder.—For use when the parts to be soldered will not stand a high temperature. Finely divided copper (obtained by precipitating a solution of copper sulphate with zinc) is mixed with concentrated sulphuric acid in a porcelain mortar. 30 to 36 parts of copper are taken, according to the degree of hardness desired, and 70 parts of mercury are stirred in. When the amalgam has completely formed, it is washed with hot water till all traces of acid are removed. It is then allowed to cool.

When this composition is to be used, it is heated until it is of the consistency of wax, so that the surfaces to be joined may be readily smeared with it. When cold, they adhere very strongly.

To purify Mercury which has been used for amalgamating Zincs.—If one of the new low pressure

distilling apparatus be not at hand, put the mercury in a deep vessel, put plenty of dilute sulphuric acid over it, and place a piece of carbon (a bit of an electric light carbon answers very well) into the mercury; weight it or tie it down so that there is good contact with the mercury; this arrangement sets up local action, and dissolves out all metallic impurities; do not carry the action too far, as you may dissolve some of the mercury in the form of mercury sulphates.

Gilt Plumbago (TABAURET).—For giving a conducting surface to electrotype moulds, .10 gr. of chloride of gold is dissolved in one litre of sulphuric ether, 500 to 600 gr. of plumbago (in fine powder) is thrown in, the whole is poured out into a large dish, and exposed to air and light. As the ether evaporates, the plumbago is stirred and turned over with a glass spatula. The drying is finished by a moderate heat, and the plumbago put by for use.

Soldering Wires (Culley).—To solder iron wires together, dissolve chloride of zinc (or kill spirit of salt with zinc), add a little hydrochloric acid (spirit of salt) to clean the wire.—The rain soon washes off the excess of chloride of zinc. To solder iron and copper wires together the excess of chloride must be washed off, and the joint covered with paint or resin, or solder with resin.

For unannealed wires, solder at as low a temperature as possible.

The zinc solution, or spirit of salt, should never be used except for overhead out-door lines. All joints in covered wire, whether run underground or above ground, and all joints within doors, either in covered or uncovered wire, should be made with resin. No spirit of salt, either pure or killed with zinc, should ever be allowed in an instrument maker's shop or dynamo factory. Workmen will use it, if not watched. Its presence may often be detected by holding an open bottle of strong solution of ammonia (liquor ammoniæ) under a newly made joint; if it becomes surrounded with a slight white cloud or mist, spirit of salt in some form has been used.

Red Varnish.—For wood, interior of electro-magnet coils, galvanometers, etc., dissolve sealing-wax in alcohol at 90°; apply it with a pencil when cold in four or five coats, until the desired thickness is attained. It is better to use many coats than to make the varnish thick.

Covering of the External Wires of Large Electro-Magnets.—Large electro-magnets are generally wound with copper wire, covered with a double layer of cotton. The outside layer is hardened by painting it with cold, thick gum-lac varnish. It is gently roasted before a charcoal brazier. The layer thus formed is extremely hard. It is filed smooth, polished with flax and fine pumice powder, and finally varnished.

Cement for Induction Coils.—The proportions vary

very much but generally approximate to the following formula:

Resin,			2 parts.
Wax,	,		1 "

For hot countries slightly increase the proportion of resin.

Insulation of Wires for Telegraphy and Telephony (C. WIEDEMANN)—Prepare a bath of potassium plumbate by dissolving 10 gr. of litharge in a litre of water, to which 200 gr. of caustic potash have been added, and boil for about half an hour; it is allowed to settle and decanted. The bath is now ready for use. The wire to be insulated is attached to the positive pole of a battery or electroplating dynamo, and a small plate of platinum attached to the negative pole is dipped into the bath. The peroxide of lead is formed on the wire, and passes successively through all the colors of the spectrum. The insulation becomes perfect only when the wire assumes its last color, which is a brownish-black.

This perfect insulation may be utilized for galvanometers or other apparatus.

Chatterton's Compound.—For cementing together the layers of gutta-percha in cable cores, an excellent insulator of fairly low inductive capacity.

Stockholm Tar,				1]	p <mark>art.</mark>
Resin, .				1	"
Gutta-percha, .				3	"

Is also used for filling up the interstices of shoreend cables. Its density is about the same as that of gutta-percha, but its inductive capacity is less.

Joints of Gutta-percha Covered Wire (Culley) .--Exact perfect cleanliness. Remove the gutta-percha for about four centimètres, clean the wire with emery paper, twist the wires together for about two centimètres, cut the ends off close, so as to leave no point sticking out. Solder with resin and good solder containing plenty of tin. The gutta-perchais then split, and turned back for about 5 centimètres, the soldered joint is covered with Chatterton's compound, and the gutta-percha on each side of it is warmed and manipulated until the two sides join. The joint is finished with a hot soldering iron, taking care to smooth it off well, without burning it; it is then covered with another layer of Chatterton's compound. A sheet of gutta-percha is then taken, warmed at a spirit lamp, and drawn out carefully so as slightly to diminish its thickness. Whilst both gutta-percha and Chatterton's compound are warm, the sheet is laid on the joint, and moulded around it with the thumb and forefinger. The joint is then trimmed with scissors; the edges kneaded in and smoothed down with a hot iron. When the joint is cold, another coating of Chatterton's compound is applied, and covered with a longer and broader piece of sheet gutta-percha. The whole is then covered with a final coating of Chatterton's compound, spread with the iron, and polished by hand when cold, taking care to keep the hand well moistened. It is indispensable to obtain intimate and perfect union between the new guttapercha and that which covers the wire. A much neater and cleaner joint can be made by introducing the two wires into a little sleeve of tinned iron, fixing it to the wires by compressing it as a metal tag is fixed to a lace, and afterwards soldering; no points are then left sticking out at the ends of the joint.

Cement used by Gaston Planté for his Secondary Batteries is run hot on the corks and connecting strips of the secondary cells to prevent the acid from reeping.

Turner's Cement,			1,000	parts.
Tallow, or Beeswax,			100	"
Powdered Alabaster,			250	66
Lampblack (to color it	black),		2.	5 "

Waterproofing Wooden Battery Cells (Sprague).—When the boxes are quite dry and warm, they are smeared over inside with a hot cement, composed of four parts of resin and one part of gutta-percha, with a little boiled oil.

It may be noted that the addition of boiled oil improves all substances used for this purpose which contain pitch, marine glue, or other viscous solid, tending to prevent them from flowing.

Watertight Decomposition Cells for Electrotyping (E. Berthoud).—A well made vat of oak may last

for twelve or fifteen years, if it be smeared inside with the following composition:

> Burgundy Pitch, . 1.500 parts. Old Gutta-percha in small shreds, 250 ". Finely Powdered Pumice-stone, 750 "

Melt the gutta-percha, and mix it well with the pumice-stone. Then add the Burgundy pitch. When the mixture is hot, smear the inside of the vat with it. Lay it on in several coats. Roughness and cracks are smoothed off with a hot soldering iron. The heat of the iron makes the cement penetrate into the pores of the wood, and increases its adhesion. The vat will stand sulphate of copper baths, but not baths containing cyanide.

Cap Cement.—For joining glass tubes to brass caps and fittings, and for similar purposes, cap cement is thus made: Five parts, by weight, of resin are melted with one part of yellow wax; one part of finely powdered venetian red is stirred into the melted mass. To apply, both surfaces are warmed enough to melt the cement, but not too hot.

Electrical Cement.—For similar purposes to those to which "Cap Cement" is applied, the following (Singer's formula) cement may be used: Rosin, five parts; beeswax and red ochre, of each 1 part; plaster of Paris, \(\frac{1}{4}\) part. A cheaper formula gives rosin, 14 parts; red ochre, 2 parts; plaster of Paris, 1 part.

Composition for Cushions of Ano-Kato, and of Frictional Electric Machines.—Canton advises the use of an amalgam of zinc and tin. Kienmayer gives the following formula: equal parts of zinc and tin; melt, and add twice the weight of alloy of mercury. When the rubbed plate or cylinder is of vulcanite, the amalgam must be softer than when it is of glass. In France they generally use *mosaic gold* (bisulphide of tin). The amalgam must be reduced to fine powder, and applied by the aid of a little hard grease.

Solution for Paper for Chemical Telegraphs.— One part saturated solution of ferrocyanide of potassium, one part saturated solution of nitrate of ammonium, two parts water.

To Make a Hole in Glass.—Make a circle of clay or cement rather larger than the intended hole; pour some kerosene into the cell thus made, ignite it, place the plate upon a moderately hard support, and with a stick rather smaller than the hole required, and a hammer, strike a rather smart blow. This will leave a rough-edged hole, which may be smoothed with a file.

To Cut Glass With Scissors.—Glass may be cut under water with great ease, to almost any shape, with a pair of shears or strong scissors. Two things are necessary for success. First, the glass must be kept quite level in the water while the scissors are applied; and secondly, to avoid risk, it is better to perform the cutting by taking off small pieces at the

corners and along the edges, and to reduce the shape gradually to that required. The softer the glass, the better it cuts. The scissors need not be very sharp.

Direction for Making Lacquer.—Mix the ingredients and let the vessel containing them stand in the sun, or in a place slightly warmed, three or four days, shaking it frequently till the gum is dissolved, after which let it settle from twenty-four to forty-eight hours, when the clear liquid may be poured off for use. Pulverized glass is sometimes used in making lacquer, to carry down the impurities.

Lacquers for Brass.—1. Seed lac, dragon's blood, annatto, and gamboge, each 4 ounces; saffron, 1 ounce; alcohol, 10 parts.

- 2. Turmeric, 1 pound; annatto, 2 ounces; shellac and gum juniper, each 12 ounces; alcohol, 12 ounces.
- 3. Seed lac, 6 ounces; dragon's blood, 40 grains; amber and copal triturated in a mortar, 2 ounces; extract of red sanders, ½ drachm; Oriental saffron, 36 grains; coarsely powdered glass, 4 ounces; absolute alcohol, 40 ounces.
- 4. Seed lac, 3 ounces; amber and gamboge, each 2 ounces; extract of red sanders, ½ drachm; dragon's blood, 1 drachm; saffron, ½ drachm; alcohol, 2 pints, 4 ounces.
 - 5. Turmeric, 6 drachms; saffron, 15 grains; hot

alcohol, 1 pint, draw the tincture and add: Gamboge, 6 drachms; gum sandarac and gum elemi, each 2 ounces; dragon's blood and seed lac, each 1 ounce.

To Clean Old Brass-Work for Lacquering.—Make a strong lye of wood ashes, which may be strengthened by soap lees; put in the brass-work, and the lacquer will soon come off; then have ready a mixture of aqua fortis and water, sufficiently strong to take off the dirt; wash it afterward in clean water, and lacquer it with such compositions as may be most suitable to the work.

To Polish Brass.—Rub the metal with rottenstone and sweet oil, then rub off with a piece of cotton flannel, and polish with soft leather. A solution of oxalic acid rubbed over tarnished brass soon removes the tarnish, rendering the metal bright. The acid must be washed off with water, and the brass rubbed with whiting and soft leather. A mixture of muriatic acid and alum dissolved in water imparts a golden color to brass articles that are steeped in it for a few seconds.

To Make Bronzing for Wood.—Grind separately to a fine powder, Prussian blue, chrome yellow, raw umber, lampblack, and clay, and mix in such proportions as will produce a desired dark-green hue; then mix with moderately strong glue size.

To Bronze Wood.—First coat the clean wood with a mixture of size and lampblack; then apply two coats of the green-colored sizing as in last receipt, and lastly with the bronze powder, such as powdered Dutch foil, mosaic gold, etc., laid on with a brush. Finish with a thin solution of castile soap; and, when dry, rub with a soft woolen cloth.

To Protect Steel From Rusting.—It has been found by experiment that an electro-deposited coating of nickel protects the surface of polished steel completely from rust. Swords, knives, and other articles of steel liable to exposure may be coated with nickel without materially altering the color of the metal.

To Clean Brass.—If there is any oily substance on the brass, boil it in a solution of potash or strong lye. Mix equal quantities of nitric and sulphuric acids in a stone or earthen vessel, let it stand a few hours, stirring it occasionally with a stick, then dip the brass in the solution, but take it out immediately and rinse it in soft water, and wipe it in sawdust till it is dry.

To Make a Leclanché Battery.—Place in a porous cell a rod or plate of carbon, and fill the cell with coarsely powdered black oxide of manganese and clean coke or retort carbon. Seal the top, leaving two holes for the air to escape when the cell is set

up. This cement, for the top, may be made of black pitch. Place the porous cell in any old jar of the same height containing a saturated solution of salammoniac and a rod of zinc.

To Polish Brass Ornaments Inlaid in Wood.— The brass-work must first be filed very even with a smooth file; then, having mixed some very finely powdered tripoli with linseed oil, polish the work with a rubber made from a piece of old hat or felt, as you would polish varnish, until the desired effect is produced. If the work be ebony or black rosewood, take some elder-coal, powdered very fine, and apply it dry after you have done with the tripoli. It will add to the beauty of the polish.

INDEX

ALARM OF Sale protector 69-12	Bronzing for wood 20
Amalgamation of zincs in	Burglar alarm69-7:
batteries 15	
Amalgamating zinc, solu-	Cap cement 20
	Condle weeful aleaters 100
	Candle, useful electric 183
Ano-Kato116-118	Carbons, applying paraffine
Ano-Kato in show case. 118, 119	to 10
Armature, Page's rotating.56-59	Carbons, electric light in
Armature, Page's rotating,	batteries15-2
	Colla materials for
	Cells, materials for 21, 22
Armatures, rolling28, 29	Cement, electrical 20
Artillery, electric107-111	Cement for induction coils 197
• ,	Cement used by Gaston
Balloons, experiment with	Planté
nubbon 110 190	Chattantan's company 100
rubber119,120	Chatterton's compound 198
Bars, steel, to magnetize23–28	Cheap polarity indicator 180
Batteries9-22	Chloride of iron battery 193
Batteries, bichromate11, 12	Circle, the magic42, 43
Batteries, copper sulphate9, 10	Circuit breaker, pendulum83-88
	Circuit breakers for induc-
Batteries, dip	
Batteries, miniature, from	tion coils
electric light carbons 13	Cleaning brass 20
Batteries, primary in gen-	Coil, pendulum motor46-49
eral 9	Coil to magnetize with 27
Batteries, sal ammoniac 13	Coils, induction, and
Batteries with electric light	spark
carbons	Coils, induction, con-
Battery efficient plunge 171	densers of
Battery from a tomato can,	Coils, magnetizing, to
20, 21	make
Battery, gravity 10	make
Dotters high potential 166	tion Spark and made
Battery, high potential 166	tion
Battery, Lalande - Chaper-	Condensers of induction
on 21	coils99–101
Battery, Leclanché10, 11	Copal gum for coils 42
Battery, silver chloride13-15	Copper oxide in battery20, 21
Battery, solution, Kooko-	Core of coils, how made89, 90
	Covering of the external
Battery solution, Trouvé's. 12	wires of large electro-
Battery, storage 175	magnets
Battery troughs of wood 22	Current indicator or galva-
Bell, the tolling65-67	nometer 179
Bell, the vibrating67-69	
	DANCER, the electric73-76
Bells, electric65-72	
Boat, magnetic 36	Dancer, the electric, bat-
Brass, lacquers for 203	tery required for 76
Brass, to clean 205	Directions for making lac-
Brass, to polish 204	quer 203

Door locking device 188	Glass, to make a hole in 202
Drum, the magic76-79	Glass, to cut
Dry battery 193	Gluing coils
Dry cells, how to make 166	Gymnastics, electric111-116
Dynamo, hand power 121-127	•
	Hammer, the electric79-82
Easily constructed motor. 128	Hemispheres, magnetic43-45
Efficient plunge battery 171	High potential battery 192
Electrical cement 201	Hopkins' electric insects82–87
Electric artillery107-111	Hopkins' magic drum76-79
Electric bell, key for 67	How to make simple dry
Electric bells	
Electric candle 182	cells 166
Electric dancer73–76	Incandescent lamp87,88
Electric dancer, battery re-	Indicator choop polarity 100
anired for 76	Indicator, cheap polarity 180
quired for	Induction coil, Record-
	on's
Electric gymnastics111–116	Induction coils91, 104
Electric hammer79–82	Induction coils, condensers
Electric insects82–87	of99–101
Electric insects, circuit	Insects, electric82–87
breaker for	Insects, electric, circuit
Electric insects, mercury	breaker83–85
switch for	Insects, electric, mercury
Electric light carbons in	switch for
batteries	Iron scraps in battery 20
Electric locomotive59-64	Insulation of wires 198
Electric locomotive motor 151	
Electric mortar107-111	JACK-STRAWS, magnetic30, 31
Electric motors46-64-134	Joints of gutta-percha cov-
Electric pistol108–110	ered wire 199
Electric warning signal 185	Joule's electro magnet38, 39
Electro-magnet f r o m gas-	
pipe	Keepers of magnets27, 28
Electro-magnet, Joule's38, 39	Key for electric bell 67
Electro-magnets37-45	Kookogey's battery solu-
Electro-magnet, solenoid39, 40	tion 192
Electro-magnets, their con-	
struction37-40	Lacquers for brass 203
Electro-motor, small 137	Lalande-Chaperon battery. 21
Electropoion fluid 192	Lamp, incandescent87, 88
	Lamp, platinum, self-regu-
Fire cracker explosions and	lating
fuses110, 111	Leclanché battery, to make. 205
Fishes, magnetic 36	Locomotive, the electric. 59-64
Force, lines of, followed by	Low temperature solder 195
polarized needle29, 30	
Formulas and receipts, mis-	Magic circle
cellaneous192-206	Magic drum
Foucault's experiment32-34	Magnetic fishes, swan, boat,
Fuses, fire cracker110, 111	etc 36
,	Magnetic hemispheres43-45
Galvanometer or current	Magnetic jack-straws30, 31
indicator 179	Magnetic pendulum32-34
Generator, the magneto.104-107	Magnetic swan 36
Gilt plumbago 196	Magnetic top

Magnetizing by a dynamo. 25	Pendulum, the magnetic32-34
Magnetizing by an electro-	Pistol, electric or voltaic108-110
magnet	Platinized carbon for Smee
Magnetizing by a perma-	batteries 194
nent magnet24.25 Magnetizing coils, to(Plunge battery 171
Magnetizing coils, to	Porous pots 195
make	Potassium permanganate
Magnetizing, Elias' method 27	cell
Magnetizing, Jacobi's	Purifying mercury 195
method26, 27	
Magnetizing steel bars23, 28	RECEIPTS and formulas,
Magnetizing with a coil 27	miscellaneous192-206
Magneto-generator104-107	Recordon's induction
Magnets, compound 26	coil
Magnets, ill effects of jar-	Recordon magnet motor 49-51
ring and filing 28	Red varnish 197
Magnets, permanent23-36	Rolling armatures28, 29
Magnets, to preserve27, 28	Rolling armatures, repul-
Mahomet's coffin29, 30	sion of 29
Mahomet's coffin with sole-	Rotating armature.
noid	Page's
Mayer's floating needles34, 35	Rotating armature, Page's,
Mercury, to purify 195	its commutator 58
Microphone	Rubber balloon experi-
Miscellaneous receipts and	Rubber balloon experi- ment119-120
formulæ192–206	Rubber thread experiment. 120
Miscellaneous toys73-88	11 dobber thread experiment. 120
Mortar, electric107, 108	Safe protector69-72
Motor, easily constructed. 128	Show case, Ano-Kato 118, 119
Motor, multipolar51-56	Signal, electric warning 185
Motor, multipolar, its com-	Simple dry cells 166
mutator53-55	Simple electric locomotive
Motor, pendulum coil46-49	motor
Motor, Recordon magnet 49-51	Simple electric motor 134
Motor, simple electric loco-	Small electro-motor 137
motive	Small storage battery 175
Multipolar motor51–56	Sinee's battery 194
Multipolar motor, its com-	Soda, caustic, in battery 20
mutator53-55	Soldering fluid, non-corro-
matator	sive
Needles, Mayer's float-	Soldering wires 196
ing 34 35	Solenoid electro-magnet39, 40
ing34, 35 Non-corrosive s o l d e r i n g	Solenoid of electric ham-
fluid	mer81, 82
11414	Solution for amalgamating
Oxide of copper in bat-	zinc
tery20, 21	Solution for paper for chem-
001 3	ical telegraphs 202
Page's rotating armature. 56-59	Sounder
Page's rotating armature,	Spark coils
its commutator 58	Static electricity, simple ex-
Page's solenoid magnets 39	periments in
Paraffine applying to car-	Steel bars, to magnetize23-28
bons	
bons	Steel, from rusting 205 Storage battery 175
Pendulum coil motor46-49	
endulum con motor40-49	Swan, magnetic 36

Switch, mercury, for electric insects	Varnish, red
Telegraph key	Warning electric signal 185 Waterproofing wooden bat-
To cut glass	tery cells
To polish brass	cells for electrotyping 200 Wires, insulation of 198
Toys, miscellaneous73-88 Trouvé battery solution 12	Wooden battery cells, waterproofing 200
Useful electric candle 182	Zinc, amalgamation of, in



PRACTICAL SCIENTIFIC TECHNICAL

EACH BOOK IN THIS CATALOGUE IS WRITTEN BY
AN EXPERT AND IS WRITTEN SO YOU
CAN UNDERSTAND IT

THE NORMAN W. HENLEY PUBLISHING COMPANY

Publishers of Scientific and Practical Books

132 Nassau Street

New York, U.S. A.

Any book in this Catalogue sent prepaid on receipt of price.

SUBJECT INDEX

PAGE	PAGE
Accidents	Manual Training
Air Brakes	Marine Engines
Arithmetics	Marine Steam Turbines 29
Automobiles 3	Mechanical Movements 20, 21
Balloons 3	Metal Turning 16
Bevel Gears 14	Milling Machines 21
Boilers 22	Mining22, 23
Brazing 3	Oil Engines
Cams 15	Patents
Car Charts 4	Pattern Making 23
Change Gear 14	Perfumery 23
Charts	Pipes
Chemistry	Plumbing
Coal Mining	Producer Gas
Coke4	Punches
Compressed Air	Railroad Accidents
Concrete	Receipt Book
Cyclopedia4, 20	Refrigeration
Dictionaries 7	Rope Work
Dies	
Drawing	
-	Saws
	Sheet Metal Working 7
Dynamo	Shop Tools
Electricity	Shop Construction 20
Engines and Boilers	Shop Management 20
Factory Management	Sketching Paper 8
Flying Machines	Smoke Prevention
Fuel	Soldering 3
Gas Manufacturing 14	Splices
Gas Engines	Steam Engineering
Gears 14	Steam Heating
Heating, Electric 9	Steam Pipes
Hot Water Heating 27	Steel
Horse-Power Chart 4	Superheated Steam
Hydraulics 15	Switchboards9, 11
Ice Making	Tapers 16
India Rubber	Telephone
Interchangeable Manufacturing 20	Threads
Inventions	Tools 20, 22
Knots 15	Turbines
Lathe Work	Ventilation
Lighting (Electric) 9	Valve Gear
Link Motion	Valve Setting
Liquid Air	Walschaert Valve Gear
Locomotive Boilers	Watchmaking
Locomotive Engineering 17, 18, 19	Wiring
Machinist's Books	Wireless Telephones and Telegraphy 12
11 acminist 5 DUORS	whereas relephones and relegraphy 12

ANY OF THESE BOOKS PROMPTLY SENT PREPAID TO ANY ADDRESS IN THE WORLD ON RECEIPT OF PRICE.

How to Remit.—By Postal Money Order, Express Money Order, Bank Draft or Registered Letter.

AUTOMOBILE

THE MODERN GASOLINE AUTOMOBILE—ITS DESIGN, CONSTRUCTION, MAINTENANCE AND REPAIR. By Victor W. Page, M. E.

The latest and most complete treatise on the Gasoline Automobile ever issued. Written in simple language by a recognized authority, familiar with every branch of the automobile industry. Free from technical terms. Everything is explained so simply that anyone of average intelligence may gain a comprehensive knowledge of the gasoline automobile. The information is up-to-date and includes, in addition to an exposition of principles of construction and description of all types of automobiles and their components, valuable money-saving hints on the care and operation of motor cars propelled by internal combustion engines. Among some of the subjects treated might be mentioned: Torpedo and other symmetrical body forms designed to reduce air resistance; sleeve valve, rotary valve and other types of silent motors; increasing tendency to favor worm-gear power-transmission; universal application of magneto ignition; development of automobile electric-lighting systems; block motors; underslung chassis; application of practical self-starters; long stroke and offset cylinder motors; latest automatic lubrication systems; silent chains for valve operation and change-speed gearing; the use of front wheel brakes and many other detail refinements.

By a careful study of the pages of this book one can gain practical knowledge of automobile construction that will save time, money and worry. The book tells you just what to do, how and when to do it. Nothing has been omitted, no detail has been slighted. Every part of the automobile, its equipment, accessories, tools, supplies, spare parts necessary, etc., have been discussed comprehensively. If you are or intend to become a motorist, or are in any way interested in the modern Gasoline Automobile, this is a book you cannot afford to be without. Nearly 600 6x9 pages—and more than 500 new and specially made detail illustrations, as well as many full page and double page plates, showing all parts of the automobile. Including nine large folding plates. Price.....\$2.50

BALLOONS AND FLYING MACHINES

MODEL BALLOONS AND FLYING MACHINES. WITH A SHORT ACCOUNT OF THE PROGRESS OF AVIATION. By J. H. ALEXANDER.

This book has been written with a view to assist those who desire to construct a model airship or flying machine. It contains five folding plates of working drawings, each sheet containing a different sized machine. Much instruction and amusement can be obtained from the making

and flying of these models.

A short account of the progress of aviation is included, which will render the book of greater interest. Several illustrations of full sized airship and flying machines of the latest types are scattered throughout the text. This practical work gives data, working drawings, and details which will assist materially those interested in the problems of flight. 127 pages, 45 illustrations, 5 folding plates. Price \$1.50.

BRAZING AND SOLDERING

BRAZING AND SOLDERING. By JAMES F. HOBART.

CHARTS

MODERN SUBMARINE CHART-WITH 200 PARTS NUMBERED AND NAMED.

CATALOGUE OF GOOD, PRACTICAL BOOKS

BOX CAR CHART.

GONDOLA CAR CHART.

PASSENGER CAR CHART.

WESTINGHOUSE AIR-BRAKE CHARTS.

Chart I.—Shows (in colors) the most modern Westinghouse High Speed and Signal Equipment used on Passenger Engines, Passenger Engine Tenders, and Passenger Cars. Chart II.—Shows (in colors) the Standard Westinghouse Equipment for Freight and Switch Engines, Freight and Switch Engine Tenders, and Freight Cars. Price for the set . 50 cents

TRACTIVE POWER CHART.

HORSE POWER CHART.

BOILER ROOM CHART. By GEO. L. FOWLER.

CIVIL ENGINEERING

HENLEY'S ENCYCLOPEDIA OF PRACTICAL ENGINEERING AND ALLIED TRADES. Edited by Joseph G. Horner, A. M. I. E. M.

This set of five volumes contains about 2,500 pages with thousands of illustrations, including diagrammatic and sectional drawings with full explanatory details. This work covers the entire practice of Civil and Mechanical Engineering. The best known experts in all branches of engineering have contributed to these volumes. The Cyclopedia is admirably well adapted to the needs of the beginner and the self-taught practical man, as well as the mechanical engineer, designer, draftsman, shop superintendent, foreman, and machinist. The work will be found a means of advancement to any progressive man. It is encyclopedic in scope, thorough and practical in its treatment of technical subjects, simple and clear in its descriptive matter, and without unnecessary technicalities or formulae. The articles are as brief as may be and yet give a reasonably clear and explicit statement of the subject, and are written by men who have had ample practical experience in the matters of which they write. It tells you all you want to know about engineering and tells it so simply, so clearly, so concisely, that one cannot help but understand. As a work of reference it is without a peer. \$6.00 per single volume. For complete set of five volumes, price

COKE

COKE—MODERN COKING PRACTICE; INCLUDING THE ANALYSIS OF MATERIALS AND PRODUCTS. By T. H. Byrom and J. E. Christopher.

A handbook for those engaged in Coke manufacture and the recovery of By-products. Fully illustrated with folding plates. It has been the aim of the authors, in preparing this book, to produce one which shall be of use and benefit to those who are associated with, or interested in, the modern developments of the industry. Contents: I. Introductory. II. Gen

eral Classification of Fuels. III. Coal Washing. IV. The Sampling and Valuation of Coal, Coke, etc. V. The Calorific Power of Coal and Coke. VI. Coke Ovens. VII. Coke Ovens,

COMPRESSED AIR

COMPRESSED AIR IN ALL ITS APPLICATIONS. By Gardner D. Hiscox.

This is the most complete book on the subject of Air that has ever been issued, and its thirty-This is the most complete book on the subject of Air that has ever been issued, and its thirty-five chapters include about every phase of the subject one can think of. It may be called an encyclopedia of compressed air. It is written by an expert, who, in its 665 pages, has dealt with the subject in a comprehensive manner, no phase of it being omitted. Includes the physical properties of air from a vacuum to its highest pressure, its thermodynamics, compression, transmission and uses as a motive power; in the Operation of Stationary and Portable Machinery, in Mining. Air Tools, Air Lifts, Pumping of Water, Acids, and Oils; the Air Blast for Cleaning and Painting, the Sand Blast and its Work, and the Numerous Appliances in which Compressed Air is a Most Convenient and Economical Transmitter of Power for Machanical Work. for Mechanical Work, Railway Propulsion, Refrigeration, and the Various Uses to which

CONCRETE

ORNAMENTAL CONCRETE WITHOUT MOLDS. By A. A. Houghton.

The process for making ornamental concrete without molds has long been held as a secret, and now, for the first time, this process is given to the public. The book reveals the secret and is the only book published which explains a simple, practical method whereby the concrete worker is enabled, by employing wood and metal templates of different designs, to mold or model in concrete any Cornice, Archivolt, Column, Pedestal, Base Cap, Urn or Pier in a monolithic form—right upon the job. These may be molded in units or blocks, and then built up to suit the specifications demanded. This work is fully illustrated, with detailed engravings. Price \$2.00

CONCRETE FROM SAND MOLDS. By A. A. HOUGHTON.

A Practical Work treating on a process which has heretofore been held as a trade secret by the few who possessed it, and which will successfully mold every and any class of ornamental concrete work. The process of molding concrete with sand molds is of the utmost practical value, possessing the manifold advantages of a low cost of molds, the ease and rapidity of operation, perfect details to all ornamental designs, density, and increased strength of the concrete, perfect curing of the work without attention and the easy removal of the molds regardless of any undercutting the design may have. 192 pages. Fully illustrated. Price \$2.00

CONCRETE WALL FORMS. By A. A. Houghton.

A new automatic wall clamp is illustrated with working drawings. Other types of wall forms, clamps, separators, etc., are also illustrated and explained. 50 cents

CONCRETE FLOORS AND SIDEWALKS. By A. A. Houghton.

The molds for molding squares, hexagonal and many other styles of mosaic floor and sidewalk blocks are fully illustrated and explained. 50 cents

PRACTICAL CONCRETE SILO CONSTRUCTION. By A. A. HOUGHTON. Complete working drawings and specifications are given for several styles of concrete silos, with illustrations of molds for monolithic and block silos. The tables, data and information presented in this book are of the utmost value in planning and constructing all forms of concrete . 50 cents

MOLDING CONCRETE CHIMNEYS, SLATE AND ROOF TILES.

The manufacture of all types of concrete slate and roof tile is fully treated. Valuable data on all forms of reinforced concrete roofs are contained within its pages. The construction of concrete chimneys by block and monolithic systems is fully illustrated and described. A number of ornamental designs of chimney construction with molds are shown in this valuable treatise.

MOLDING AND CURING ORNAMENTAL CONCRETE. By A. A. Houghton.

The proper proportions of cement and aggregates for various finishes, also the methods of thoroughly mixing and placing in the molds, are fully treated. An exhaustive treatise on this subject that every concrete worker will find of daily use and value. 50 cents

CONCRETE MONUMENTS, MAUSOLEUMS AND BURIAL VAULTS. By A. A. HOUGHTON.

The molding of concrete monuments to imitate the most expensive cut stone is explained in this treatise, with working drawings of easily built molds. Cutting inscriptions and designs also fully treated.

50 cents

MOLDING CONCRETE BATH TUBS, AQUARIUMS AND NATATORIUMS. By A. A. Houghton.

Simple molds and instruction are given for molding many styles of concrete bath tubs, swimming pools, etc. These molds are easily built and permit rapid and successful work.

CONCRETE BRIDGES, CULVERTS AND SEWERS. By A. A. Houghton.

CONSTRUCTING CONCRETE PORCHES. By A. A. Houghton.

MOLDING CONCRETE FLOWER POTS, BOXES, JARDINIERES, ETC. By A. A. HOUGHTON.

The molds for producing many original designs of flower pots, urns, flower boxes, jardinières, etc., are fully illustrated and explained, so the worker can easily construct and operate same.

MOLDING CONCRETE FOUNTAINS AND LAWN ORNAMENTS. By A. A. HOUGHTON.

CONCRETE FOR THE FARM AND SHOP. By A. A. Houghton.

POPULAR HANDBOOK FOR CEMENT AND CONCRETE USERS. By Myron H. Lewis,

This is a concise treatise of the principles and methods employed in the manufacture and use of cement in all classes of modern works. The author has brought together in this work all the salient matter of interest to the user of concrete and its many diversified products. The matter is presented in logical and systematic order, clearly written, fully illustrated and free from involved mathematics. Everything of value to the concrete user is given including kinds of cement employed in construction, concrete architecture, inspection and testing, waterproofing, coloring and painting, rules, tables, working, and cost data. The book comprises thirty-three chapters, as follows:

Introductory. Kinds of Cements and How They are Made. Properties, Testing and Requirements of Hydraulic Cement. Concrete and its Properties. Sand, Broken Stone and Gravel for Concrete. How to Proportion the Materials. How to Mix and Place Concrete. Forms for Concrete Construction. The Architectural and Artistic Possibilities of Concrete. Concrete Residences. Mortars, Plasters and Stucco and How to Use Them. The Artistic Treatment of Concrete Surfaces. Concrete Building Blocks. The Making of Ornamental Concrete. Concrete Pipes, Fences, Posts, Etc. Essential Features and Advantages of Reenforced Concrete. How to Design Reenforced Concrete Beams, Slabs and Columns. Explanations of the Methods and Principles in Designing Reenforced Concrete Beams and Slabs, Systems of Reenforcement Employed.

WATERPROOFING CONCRETE. By Myron H. Lewis.

Modern Methods of Waterproofing Concrete and Other Structures. A condensed statement of the Principles, Rules, and Precautions to be Observed in Waterproofing and Dampproofing Structures and Structural Materials. Paper binding. Illustrated. Price..50 cents

DICTIONARIES

STANDARD ELECTRICAL DICTIONARY. By T. O'CONOR SLOANE.

An indispensable work to all interested in electrical science. Suitable alike for the student and professional. A practical hand-book of reference containing definitions of about 5,000 distinct words, terms and phrases. The definitions are terse and concise and include every term used in electrical science. Recently issued. An entirely new edition. Should be in the possession of all who desire to keep abreast with the progress of this branch of science. Complete, concise and convenient. 682 pages. 393 illustrations. Price \$3.00

DIES-METAL WORK

DIES: THEIR CONSTRUCTION AND USE FOR THE MODERN WORKING OF SHEET METALS. By J. V. WOODWORTH.

A most useful book, and one which should be in the hands of all engaged in the press working of metals; treating on the Designing, Constructing, and Use of Tools, Fixtures and Devices, together with the manner in which they should be used in the Power Press, for the cheap and rapid production of the great variety of sheet metal articles now in use. It is designed as a guide to the production of sheet metal parts at the minimum of cost with the maximum of output. The hardening and tempering of Press tools and the classes of work which may be produced to the best advantage by the use of dies in the power press are fully treated. Its 505 illustrations show dies, press fixtures and sheet metal working devices, the descriptions of which are so clear and practical that all metal-working mechanics will be able to understand how to design, construct and use them. Many of the dies and press fixtures treated were either constructed by the author or under his supervision. Others were built by skilful raechanics and are in use in large sheet metal establishments and machine shops. Price \$3.00

PUNCHES, DIES AND TOOLS FOR MANUFACTURING IN PRESSES. By J. V. WOODWORTH.

DROP FORGING, DIE SINKING AND MACHINE FORMING OF STEEL. By J. V. WOODWORTH.

This is a practical treatise on Modern Shop Practice, Processes, Methods, Machines, Tools, and Details, treating on the Hot and Cold Machine-Forming of Steel and Iron into Finished shapes; Together with Tools, Dies, and Machinery involved in the manufacture of Duplicate

Forgings and Interchangeable Hot and Cold Pressed Parts from Bar and Sheet Metal. This book fills a demand of long standing for information regarding drop forging, die-sinking and machine forming of steel and the shop practice involved, as it actually exists in the modern drop forging shop. The processes of die-sinking and force-making, which are thoroughly described and illustrated in this admirable work, are rarely to be found explained in such a clear and concise manner as is here set forth. The process of die-sinking relates to the engraving or sinking of the female or lower dies, such as are used for drop forgings, hot and cold machine forging, swedging and the press working of metals. The process of force-making relates to the engraving or raising of the male or upper dies used in producing the lower dies for the press-forming and machine-forging of duplicate parts of metal.

DRAWING-SKETCHING PAPER

LINEAR PERSPECTIVE SELF-TAUGHT. By HERMAN T. C. KRAUS.

This work gives the theory and practice of linear perspective, as used in architectural, engineering, and mechanical drawings. Persons taking up the study of the subject by themselves will be able by the use of the instruction given to readily grasp the subject, and by reasonable practice become good perspective draftsmen. The arrangement of the book is good; the plate is on the left-hand, while the descriptive text follows on the opposite page, so as to be readily referred to. The drawings are on sufficiently large scale to show the work clearly and are plainly figured. The whole work makes a very complete course on perspective drawing, and will be found of great value to architects, civil and mechanical engineers, patent attorneys, art designers, engravers, and draftsmen.

PRACTICAL PERSPECTIVE. By RICHARDS and COLVIN.

SELF-TAUGHT MECHANICAL DRAWING AND ELEMENTARY MACHINE DESIGN. By F. L. Sylvester, M.E., Draftsman, with additions by Erik Oberg, associate editor of "Machinery."

This is a practical treatise on Mechanical Drawing and Machine Design, comprising the first principles of geometric and mechanical drawing, workshop mathematics, mechanics, strength of materials and the calculations and design of machine details. The author's aim has been to adapt this treatise to the requirements of the practical mechanic and young draftsman and to present the matter in as clear and concise a manner as possible. To meet the demands of this class of students, practically all the important elements of machine design have been dealt with, and in addition algebraic formulas have been explained, and the elements of trigonometry treated in the manner best suited to the needs of the practical man. The book is divided into 20 chapters, and in arranging the material, mechanical drawing, pure and simple, has been taken up first, as a thorough understanding of the principles of representing objects facilitates the further study of mechanical subjects. This is followed by the mathematics necessary for the solution of the problems in machine design which are presented later, and a practical introduction to theoretical mechanics and the strength of materials. The various elements entering into machine design, such as cams, gears, sprocket wheels, cone pulleys, bolts, screws, couplings, clutches, shafting and flywheels have been treated in such a way as to make possible the use of the work as a textbook for a continuous course of study. It is easily comprehended and assimilated even by students of limited previous training, 330 pages, 215 engravings. Price. . . . \$2.00

A NEW SKETCHING PAPER.

ELECTRICITY

ARITHMETIC OF ELECTRICITY. By Prof. T. O'CONOR SLOANE.

A practical treatise on electrical calculations of all kinds reduced to a series of rules, all of the simplest forms, and involving only ordinary arithmetic; each rule illustrated by one or more practical problems, with detailed solution of each one. This book is classed among the most useful works published on the science of electricity covering as it does the mathematics of electricity in a manner that will attract the attention of those who are not familiar with algebraical formulas. 20th Edition. 160 pages. Price . \$1.00

COMMUTATOR CONSTRUCTION. By WM. BAXTER, JR.

The business end of any dynamo or motor of the direct current type is the commutator. This book goes into the designing, building, and maintenance of commutators, shows how to locate troubles and how to remedy them; everyone who fusese with dynamos needs this. 25 cents

DYNAMO BUILDING FOR AMATEURS, OR HOW TO CONSTRUCT A FIFTY-WATT DYNAMO. By Arthur J. Weed, Member of N. Y. Electrical Society.

ELECTRIC FURNACES AND THEIR INDUSTRIAL APPLICATIONS. By J. Wright

This is a book which will prove of interest to many classes of people; the manufacturer who desires to know what product can be manufactured successfully in the electric furnace, the chemist who wishes to post himself on the electro-chemistry, and the student of science who merely looks into the subject from curiosity. The book is not so scientific as to be of use only to the technologist, nor so unscientific as to suit only the tyro in electro-chemistry; it is a practical treatise of what has been done, and of what is being done, both experimentally and commercially with the electric furnace.

ELECTRIC LIGHTING AND HEATING POCKET BOOK. By Sydney F. Walker.

This book puts in convenient form useful information regarding the apparatus which is likely to be attached to the mains of an electrical company. Tables of units and equivalents are included and useful electrical laws and formulas are stated.

One section is devoted to dynamos, motors, transformers and accessory apparatus; another to accumulators, another to switchboards and related equipment, a fourth to a description of various systems of distribution, a fifth section to a discussion of instruments, both for portable use and switchboards; another section deals with electric lamps of various types and accessory appliances, and the concluding section is given up to electric heating apparatus. In each section a large number of commercial types are described, frequent tables of dimensions being included. A great deal of detail information of each line of apparatus is given and the illustrations shown give a good idea of the general appearance of the apparatus under discussion. The book also contains much valuable information for the central station engineer. 438 pages. 300 engravings. Bound in leather pocket book form. Price . \$3.00

ELECTRIC WIRING, DIAGRAMS AND SWITCHBOARDS. By NEWTON HARRISON.

A thoroughly practical treatise covering the subject of Electric Wiring in all its branches, including explanations and diagrams which are thoroughly explicit and greatly simplify the subject. Practical every-day problems in wiring are presented and the method of obtaining intelligent results clearly shown. Only arithmetic is used. Ohm's law is given

a simple explanation with reference to wiring for direct and alternating currents. The fundamental principle of drop of potential in circuits is shown with its various applications. The simple circuit is developed with the position of mains, feeders and branches; their treatment as a part of a wiring plan and their employment in house-wiring clearly illustrated. Some simple facts about testing are included in connection with the wiring. Molding and conduit work are given careful consideration; and switchboards are systematically treated, built up and illustrated, showing the purpose they serve, for connection with the circuits, and to shunt and compound wound machines. The simple principles of switchboard construction, the development of the switchboard, the connections of the various instruments including the lightning arrester, are also plainly set forth.

Alternating current wiring is treated, with explanations of the power factor, conditions calling for various sizes of wire and a simple way of obtaining the sizes for single-phase, two-phase and three-phase circuits. This is the cally complete work issued showing and telling you what you should know about direct and alternating current wiring. It is a ready reference. The work is free from advanced technicalities and mathematics, arithmetic being used throughout. It is in every respect a handy, well-written, instructive, comprehensive volume on wiring for the wireman, foreman, contractor, or electrician. 272 pages; 105 illustrations. Price

ELECTRIC TOY MAKING, DYNAMO BUILDING, AND ELECTRIC MOTOR CONSTRUCTION. By Prof. T. O'CONOR SLOANE.

This work treats of the making at home of electrical toys, electrical apparatus, motors, dynamos and instruments in general, and is designed to bring within the reach of young and old the manufacture of genuine and useful electrical appliances. The work is especially designed for amateurs and young folks.

ELECTRICIAN'S HANDY BOOK. By Prof. T. O'CONOR SLOANE.

This work of 768 pages is intended for the practical electrician who has to make things go. The entire field of electricity is covered within its pages. Among some of the subjects treated are: The Theory of the Electric Current and Circuit, Electro-Chemistry, Primary Batteries, Storage Batteries, Generation and Utilization of Electric Powers, Alternating Current, Armature Winding, Dynamos and Motors, Motor Generators, Operation of the Central Station Switchboards, Safety Appliances, Distribution of Electric Light and Power, Street Mains, Transformers, Arc and Incandescent Lighting, Electric Measurements, Photometry, Electric Railways, Telephony, Bell-Wiring, Electro-Plating, Electric Heating, Wireless Telegraphy, etc. It contains no useless theory; everything is to the point. It teaches you just what you want to know about electricity. It is the standard work published on the subject. Forty-one chapters, 610 engravings, handsomely bound in red leather with title and edges in gold. Price: \$3.50

ELECTRICITY IN FACTORIES AND WORKSHOPS, ITS COST AND CONVENIENCE. By ARTHUR P. HASLAM.

A practical book for power producers and power users showing what a convenience the electric motor, in its various forms, has become to the modern manufacturer. It also deals with the conditions which determine the cost of electric driving, and compares this with other methods of producing and utilizing power.

ELECTRICITY SIMPLIFIED. By Prof. T. O'CONOR SLOANE.

The object of "Electricity Simplified" is to make the subject as plain as possible and to show what the modern conception of electricity is; to show how two plates of different metals immersed in acid can send a message around the globe; to explain how a bundle of copper wire cotated by a steam engine can be the agent in lighting our streets, to tell what the volt, ohm and ampere are, and what high and low tension mean; and to answer the questions that perpetually arise in the mind in this age of electricity. 172 pages. Illustratsa. Price \$1.00

HOUSE WIRING. By THOMAS W. POPPE.

This work describes and illustrates the actual installation of Electric Light Wiring, the manner in which the work should be done, and the method of doing it. The book can be conveniently carried in the pocket. It is intended for the Electrician, Helper and Apprentice. It solves all Wiring Problems, and contains nothing that conflicts with the rulings of the National Board of Fire Underwriters. It gives just the information essential to the Successful Wiring of a Building. Among the subjects treated are: Locating the Meter. Panel Boards. Switches. Plug Receptacles. Brackets. Ceiling Fixtures. The Meter Connections. The Feed Wircs. The Steel Armored Cable System. The Flexible Steel Conduit System. The Ridig Conduit System. A digest of the National Board of Fire Underwriters' rules relating to metallic wiring systems. Various switching arrangements explained and diagrammed. The easiest method of testing the Three and Four-way circuits explained. The grounding of all metallic wiring systems and the reason for doing so shown and explained. The insulation of the metal parts of lamp fixtures and the reason for the same described and illustrated. 125 pages. Fully illustrated. Flexible cloth. Price. 50 cents

HOW TO BECOME A SUCCESSFUL ELECTRICIAN. By Prof. T. O'CONOR SLOANE.

Every young man who wishes to become a successful electrician should read this book. It tells in simple language the surest and easiest way to become a successful electrician. The studies to be followed, methods of work, field of operation and the requirements of the successful electrician are pointed out and fully explained. Every young engineer will find this an excellent stepping-stone to more advanced works on electricity which he must master before success can be attained. Many young men become discouraged at the very outstart by attempting to read and study books that are far beyond their comprehension. This book serves as the connecting link between the rudiments taught in the public schools and the real study of electricity. It is interesting from cover to cover. Fifteenth edition. 202 pages. Illustrated. Price

MANAGEMENT OF DYNAMOS. By LUMMIS-PATERSON.

STANDARD ELECTRICAL DICTIONARY. By T. O'CONOR SLOANE.

An indispensable work to all interested in electrical science. Suitable alike for the student and professional. A practical hand-book of reference containing definitions of about 5,000 distinct words, terms and phrases. The definitions are terse and concise and include every term used in electrical science. Recently issued. An entirely new edition. Should be in the possession of all who desire to keep abreast with the progesss of this branch of science. In its arrangement and typography the book is very convenient. The word or term defined is printed in black-faced type which readily catches the eye, while the body of the page is in smaller but distinct type. The definitions are well worded, and so as to be understood by the non-technical reader. The general plan seems to be to give an exact, concise definition, and then amplify and explain in a more popular way. Synonyms are also given, and references to other words and phrases are made. A very complete and accurate index of fifty pages is at the end of the volume; and as this index contains all synonyms, and as all phrases are indexed in every reasonable combination of words, reference to the proper place in the body of the book is readily made. It is difficult to decide how far a book of this character is to keep the dictionary form, and to what extent it may assume the encyclopedia form. For some purposes, more extended descriptions are required. This book seeks to satisfy both demands, and does it with considerable success. Complete, concise, and convenient. 682 pages. 393 illustrations. Twelfth edition. Price

SWITCHBOARDS. By WILLIAM BAXTER, JR.

This book appeals to every engineer and electrician who wants to know the practical side of things. It takes up all sorts and conditions of dynamos, connections and circuits and shows by diagram and illustration just how the switchboard should be connected. Includes direct and alternating current boards, also those for arc lighting, incandescent, and power circuits. Special treatment on high voltage boards for power transmission. 2d Edition. 190 pages. Illustrated. Price

TELEPHONE CONSTRUCTION, INSTALLATION, WIRING, OPERATION AND MAINTENANCE. By W. H. RADCLIFFE and H. C. Cushing.

This book gives the principles of construction gnd operation of both the Bell and Independent instruments; approved methods of installing and wiring them; the means of protecting them from lightning and abnormal currents; their connection together for operation as series or bridging stations; and rules for their inspection and maintenance. Line wiring and the wiring and operation of special telephone systems are also treated.

WIRELESS TELEGRAPHY AND TELEPHONY SIMPLY EXPLAINED.

BY ALFRED P. MORGAN.

This is undoubtedly one of the most complete and comprehensible treatises on the subject ever published, and a close study of its pages will enable one to master all the details of the wireless transmission of messages. The author has filled a long felt want and has succeeded in furnishing a lucid, comprehensible explanation in simple language of the theory and practice of wireless telegraphy and telephony.

Among the contents are: Introductory; Wireless Transmission and Reception—The Aerial System, Earth Connections—The Transmitting Apparatus, Spark Coils and Transformers, Condensers, Helixes, Spark Gaps, Anchor Gaps, Aerial Switches—The Receiving Apparatus, Detectors, etc.—Tuning and Coupling, Tuning Coils, Loose Couplers, Variable Condensers, Directive Wave Systems—Miscellaneous Apparatus, Telephone Receivers, Range of Stations, Static, Interference—Wireless Telephones, Isound and Sound Waves, The Vocal Cords and Ear—Wireless Telephones, How Sounds are changed into Electric Waves—Wireless Telephones, The Apparatus—Summary. 200 pages. 150 engravings. Price \$1.00

WIRELESS TELEPHONES AND HOW THEY WORK. By JAMES ERSKINE-MURRAY.

This work is free from elaborate details and aims at giving a clear survey of the way in which Wireless Telephones work. It is intended for amateur workers and for those whose knowledge of electricity is slight. Chapters contained: How We Hear; Historical; The Conversion of Sound into Electric Waves; Wireless Transmission; The Production of Alternating Currents of High Frequency; How the Electric Waves are Radiated and Received; The Receiving Instruments; Detectors; Achievements and Expectations; Glossary of Technical Words, Cloth. Price

WIRING A HOUSE. By HERBERT PRATT.

FACTORY MANAGEMENT, ETC.

MODERN MACHINE SHOP CONSTRUCTION, EQUIPMENT AND MANAGEMENT. By O. E. Perrigo, M.E.

FUEL

COMBUSTION OF COAL AND THE PREVENTION OF SMOKE. By WM. M. BARR.

This book has been prepared with special reference to the generation of heat by the combustion of the common fuels found in the United States, and deals particularly with the conditions necessary to the economic and smokeless combustion of bituminous coals in Stationary and Locomotive Steam Boilers.

SMOKE PREVENTION AND FUEL ECONOMY. By BOOTH and KERSHAW.

GAS ENGINES AND GAS

GASOLINE ENGINES: THEIR OPERATION, USE AND CARE. By A. HYATT VERRILL.

GAS, GASOLINE, AND OIL ENGINES. By GARDNER D. HISCOX.

Just issued, 20th revised and enlarged edition. Every user of a gas engine needs this book. Simple, instructive, and right up-to-date. The only complete work on the subject. Tells all about the running and management of gas, gasoline and oil engines, as designed and manufactured in the United States. Explosive motors for stationary, marine and vehicle power are fully treated, together with illustrations of their parts and tabulated sizes, also their care and running are included. Electric ignition by induction coil and jump spark are fully explained and illustrated, including valuable information on the testing for economy and power and the erection of power plants.

The rules and regulations of the Board of Fire Underwriters in regard to the installation and management of gasoline motors is given in full, suggesting the safe installation of explosive motor power. A list of United States Patents issued on gas, gasoline, and oil engines and their adjuncts from 1875 to date is included. 484 pages. 410 engravings Price . . . \$2.50

MODERN GAS ENGINES AND PRODUCER GAS PLANTS. By R. E. MATHOT, M.E.

A guide for the gas engine designer, user, and engineer in the construction, selection, purchase installation, operation, and maintenance of gas engines. More than one book on gas engines has been written, but not one has thus far even encroached on the field covered by this book. Above all Mr. Mathot's work is a practical guide. Recognizing the need of a volume that

would assist the gas engine user in understanding thoroughly the motor upon which he depends for power, the author has discussed his subject without the help of any mathematics and without elaborate theoretical explanations. Every part of the gas engine is described in detail, tersely, clearly, with a thorough understanding of the requirements of the mechanic. Helpful suggestions as to the purchase of an engine, its installation, care, and operation form a most valuable feature of the work. 320 pages. 175 detailed illustrations. Price ... \$2.50

GAS ENGINE CONSTRUCTION, OR HOW TO BUILD A HALF-HORSE-POWER GAS ENGINE. By Parsell and Weed.

A practical treatise of 300 pages describing the theory and principles of the action of Gas Engines of various types and the design and construction of a half-horse power Gas Engine, with illustrations of the work in actual progress, together with the dimensioned working drawings giving clearly the sizes of the various details; for the student, the scientific investigator and the amateur mechanic.

This book treats of the subject more from the standpoint of practice than that of theory. The principles of operation of Gas Engines are clearly and simply described and then the actual construction of a half-horse power engine is taken up, step by step, showing in detail the making of the Gas Engine. 3d Edition. 300 pages. Price \$2.50

THE GASOLINE ENGINE ON THE FARM: ITS OPERATION, REPAIR AND USES. By Xeno W. Putnam.

This is a practical treatise on the Gasoline and Kerosene engine intended for the man who wants to know just how to manage his engine and how to apply it to all kinds of farm work to the best advantage.

CHEMISTRY OF GAS MANUFACTURE. By H. M. ROYLES.

This book covers points likely to arise in the ordinary course of the duties of the engineer or manager of a gas works not large enough to necessitate the employment of a separate chemical staff. It treats of the testing of the raw materials employed in the manufacture of illuminating coal gas, and of the gas produced. The preparation of standard solutions is given as well as the chemical and physical examination of gas coal including among its contents—Preparations of Standard Solutions, Coal, Furnaces, Testing and Regulation. Products of Carbonization. Analysis of Crude Coal Gas. Analysis of Lime. Ammonia. Analysis of Oxide of Iron. Naphthalene. Analysis of Fire-Bricks and Fire-Clay. Weldom and Spent Oxide. Photometry and Gas Testing. Carburetted Water Gas. Metropolis Gas. Miscellaneous Extracts. Useful Tables.

GEARING AND CAMS

BEVEL GEAR TABLES. By D. Ag. ENGSTROM.

A book that will at once commend itself to mechanics and draftsmen. Does away with all the trigonometry and fancy figuring on bevel gears and makes it easy for anyone to lay them out or make them just right. There are 36 full-page tables that show every necessary dimension for all sizes or combinations you're apt to need. No puzzling figuring or guessing Gives placing distance, all the angles (including cutting angles), and the correct cutter to use. A copy of this prepares you for anything in the bevel gear line. 66 pages. . \$1.00

CHANGE GEAR DEVICES. By Oscar E. Perrigo.

A practical book for every designer, draftsman, and mechanic interested in the invention and development of the devices for feed changes on the different machines requiring such mechanism. All the necessary information on this subject is taken up, analyzed, classified, sifted, and concentrated for the use of busy men who have not the time to go through the masses of irrelevant matter with which such a subject is usually encumbered and select such information as will be useful to them.

It shows just what has been done, how it has been done, when it was done, and who did it. It sayes time in hunting up patent records and re-inventing old ideas. 88 pages. \$1.00

DRAFTING OF CAMS. By Louis Rouillion.

The laying out of cams is a serious problem unless you know how to go at it right. This puts you on the right road for practically any kind of cam you are likely to run up against. 25 cents

HYDRAULICS

HYDRAULIC ENGINEERING. By GARDNER D. HISCOX.

A treatise on the properties, power, and resources of water for all purposes. Including the measurement of streams, the flow of water in pipes or conduits; the horse-power of falling water; turbine and impact water-wheels, wave motors, centrifugal, reciprocating, and air-lift pumps. With 300 figures and diagrams and 36 practical tables.

lift pumps. With 300 figures and diagrams and 36 practical tables. All who are interested in water-works development will find this book a useful one, because it is an entirely practical treatise upon a subject of present importance, and cannot fall in having a far-reaching influence, and for this reason should have a place in the working library of every engineer. Among the subjects treated are: Historical—Hydraulics, Properties of Water; Measurement of the flow of Streams; Flow from Subsurface orifices and nozzles; Flow of water in Pipes; Siphons of various kinds; Dams and Great Storage Reservoirs; City and Town Water Supply; Wells and their reenforcement, Air lift methods of raising water; artesian wells; Irrigation of Arid districts; Water Power, Water Wheels; Pumps and Pumping Machinery; Reciprocating Pumps; Hydraulic Power Transmission; Hydraulic Mining; Canals; Ditches; Conduits and Pipe Lines; Marine Hydraulics; Tidal and Sea Wave power, etc. 320 pages. Price

ICE AND REFRIGERATION

POCKET BOOK OF REFRIGERATION AND ICE MAKING. By A. J. Wallis-Taylor.

INVENTIONS—PATENTS

INVENTOR'S MANUAL, HOW TO MAKE A PATENT PAY.

This is a book designed as a guide to inventors in perfecting their inventions, taking out their patents and disposing of them. It is not in any sense a Patent Solicitor's Circular, nor a Patent Broker's Advertisement. No advertisements of any description appear in the work. It is a book containing a quarter of a century's experience of a successful inventor, together with notes based upon the experience of many other inventors.

Among the subjects treated in this work are: How to Invent. How to Secure a Good Patent. Value of Good Invention. How to exhibit an Invention. How to Interest Capital. How to Estimate the Value of a Patent. Value of Design Patents. Value of Foreign Patents. Value of Small Inventions. Advice on Selling Patents, Advice on the Formation of Stock Companies. Advice on the Formation of Limited Liability Companies. Advice on Disposing of Old Patents. Advice as to Patent Attorneys. Advice as to Selling Agents. Forms of Assignments. License and Contracts. State Laws Concerning Patent Rights. 1900 Census of the United States by counties of over 10,000 population. Revised edition. 120 pages. Price.

KNOTS

KNOTS, SPLICES AND ROPE WORK. By A. HYATT VERRILL.

This is a practical book giving complete and simple directions for making all the most useful and ornamental knots in common use. with chapters on Splicing, Pointing, Seizing,

Serving, etc. This book is fully illustrated with one hundred and fifty original engravings which show how each knot, tie or splice is formed and its appearance when finished. The book will be found of the greatest value to Campers, Yachtsmen, Travelers, Boy Scouts in fact to anyone having occasion to use or handle rope or knots for any purpose. The book is thoroughly reliable and practical and is not only a guide but a teacher. It is the standard work on the subject. Among the contents are: 1. Cordage, Kinds of Rope. Construction of Rope, Parts of Rope Cable and Bolt Rope. Strength of Rope, Weight of Rope. 2. Simple knots and Bends. Terms used in Handling Rope. Seizing Rope. 3. Ties and Hitches. 4. Noose, Loops and Mooring Knots. 5. Shortenings, Grommets and Selvages. 6. Lashings. Seizings and Splices. 7. Fancy Knots and Rope Work. 128 pages. 150 original engravings. Price

LATHE WORK

MODERN AMERICAN LATHE PRACTICE. By OSCAR E. PERRIGO.

This is a new book from cover to cover, and the only complete American work on the subject written by a man who knows not only how work ought to be done, but who also knows how to do it, and how to convey this knowledge to others. It is strictly up-to-date in its descriptions and illustrations, which represent the very latest practice in lathe and boring mill operations as well as the construction of and latest developments in the manufacture of these important classes of machine tools.

PRACTICAL METAL TURNING. By JOSEPH G. HORNER.

This important and practical subject is treated in a full and exhaustive manner and nothing of importance is omitted. The principles and practice and all the different branches of Turning are considered and well illustrated. All the different kinds of Chucks of usual forms, as well as some unusual kinds, are shown. A feature of the book is the important section devoted to modern Turret practice; Boring is another subject which is treated fully; and the chapter on Tool Holders illustrates a large number of representative types. Thread Cutting is treated at reasonable length; and the last chapter contains a good deal of information relating to the High-Speed Steels and their work. The numerous tools used by machinists are illustrated, and also the adjuncts of the lathe. In fact, the entire subject is treated in such a thorough manner as to make this book the standard one on the subject. It is indispensable to the manager, engineer, and machinist as well as to the student, amateur, and experimental man who desires to keep up-to-date. 400 pages, fully illustrated. Price \$3.50

TURNING AND BORING TAPERS. By FRED H. COLVIN.

LIQUID AIR

LIQUID AIR AND THE LIQUEFACTION OF GASES. By T. O'CONOR SLOAME.

This book gives the history of the theory, discovery, and manufacture of Liquid Air, and contains an illustrated description of all the experiments that have excited the wonder of audiences all over the country. It shows how liquid air, like water, is carried hundreds of miles and is handled in open buckets. It tells what may be expected from it in the near future.

A book that renders simple one of the most perplexing chemical problems of the century. Startling developments illustrated by actual experiments.

LOCOMOTIVE ENGINEERING

AIR-BRAKE CATECHISM. By ROBERT H. BLACKALL.

AMERICAN COMPOUND LOCOMOTIVES. By Fred. H. Colvin.

The only book on compounds for the engineman or shopman that shows in a plain, practical way the various features of compound locomotives in use. Shows how they are made, what to do when they break down or balk. Contains sections as follows:—A Bit of History. Theory of Compound. Steam Cylinders. Baldwin Two-Cylinder Compound. Rogers Compound. Schenectady Two-Cylinder Compound. Rogers Compound. Schenectady Two-Cylinder Compound. Vauclain Compound. Tandem Compounds. Baldwin Tandem. The Colvin-Wightman Tandem. Schenectady Tandem. Balanced Locomotives. Baldwin Balanced Compound. Plans for Balancing. Locating Blows. Breakdowns. Reducing Valves. Drifting. Valve Motion. Disconnecting. Power of Compound Locomotives. Practical Notes.

APPLICATION OF HIGHLY SUPERHEATED STEAM TO LOCOMOTIVES. By ROBERT GARBE.

COMBUSTION OF COAL AND THE PREVENTION OF SMOKE. By Wm. M. Barr.

This book has been prepared with special reference to the generation of heat by the combustion of the common fuels found in the United States, and deals particularly with the conditions necessary to the economic and smokeless combustion of bituminous coal in Stationary

DIARY OF A ROUND HOUSE FOREMAN. By T. S. Reilly

LINK MOTIONS, VALVES AND VALVE SETTING. By Fred H. Colvin, Associate Editor of "American Machinist."

A handy book for the engineer or machinist that clears up the mysteries of valve setting. Shows the different valve gears in use, how they work, and why. Piston and slide valves of different types are illustrated and explained. A book that every railroad man in the motive power department ought to have. Contains chapters on Locomotive Link Motion, Valve Movements, Setting Slide Valves, Analysis by Diagrams, Modern Practice, Slip of Block, Slide Valves, Piston Valves, Setting Piston Valves, Joy-Allen Valve Gear, Walschaert Valve Gear, Gooch Valve Gear, Alfree-Hubbell Valve Gear, etc., etc. Fully illustrated.

LOCOMOTIVE BOILER CONSTRUCTION. By Frank A. Kleinhans.

The construction of boilers in general is treated, and following this, the locomotive boiler is taken up in the order in which its various parts go through the shop. Shows all types of boilers used; gives details of construction; practical facts, such as life of riveting, punches and dies; work done per day, allowance for bending and flanging sheets, and other data. Locomotive boilers present more difficulty in laying out and building than any other type, and for this reason the author uses them as examples. Anyone who can handle them can tackle anything.

LOCOMOTIVE BREAKDOWNS AND THEIR REMEDIES. By Geo. L. Fowler. Revised by Wm. W. Wood, Air-Brake Instructor. Just issued. Revised pocket edition.

It is out of the question to try and tell you about every subject that is covered in this pocket edition of Locomotive Breakdowns. Just imagine all the common troubles that an engineer may expect to happen some time, and then add all of the unexpected ones, troubles that could occur, but that you had never thought about, and you will find that they are all treated with the very best methods of repair. Walschaert Locomotive Valve Gear Troubles, Electric Headlight Troubles, as well as Questions and Answers on the Air Brake are all included. 294 pages. 7th Revised Edition. Fully illustrated.

LOCOMOTIVE CATECHISM. By Robert Grimshaw.

The revised edition of "Locomotive Catechism," by Robert Grimshaw, is a New Book from Cover to Cover. It contains twice as many pages and double the number of illustrations of previous editions. Includes the greatest amount of practical information ever published on the construction and management of modern locomotives. Specially Prepared Chapters on the Walschaert Locomotive Valve Gear, the Air Brake Equipment and the Electric Head Light are given.

It commends itself at once to every Engineer and Fireman, and to all who are going in for examination or promotion. In plain language, with full complete answers, not only all the questions asked by the examining engineer are given, but those which the young and less experienced would ask the veteran, and which old hands ask as "stickers." It is a veritable Encyclopedia of the Locomotive, is entirely free from mathematics, easily understood and thoroughly up-to-date. Contains over 4,000 Examination Questions with their Answers. 825 pages, 437 illustrations and three folding plates. 28th Revised Edition. . . . \$2.50

PRACTICAL INSTRUCTOR AND REFERENCE BOOK FOR LOCOMOTIVE FIREMEN AND ENGINEERS. By Chas. F. Lockhart.

An entirely new book on the Locomotive. It appeals to every railroad man, as it tells him how things are done and the right way to do them. Written by a man who has had years of practical experience in locomotive shops and on the road firing and running. The information given in this book cannot be found in any other similar treatise. Eight hundred and fifty-one questions with their answers are included, which will prove specially helpful to those preparing for examination. Practical information on: The Construction and Operation of Locomotives. Breakdowns and their Remedies; Air Brakes and Valve Gears. Rules and Signals are handled in a thorough manner. As a book of reference it cannot be excelled. The book is divided into six parts, as follows: 1. The Fireman's Duties. 2. General description of the Locomotive. 3. Breakdowns and their Remedies. 4. Air Brakes. 5. Extracts from Standard Rules. 6. Questions for examination. The 851 questions have been carefully selected and arranged. These cover the examinations required by the different railroads. 368 pages. 88 illustrations. Price

PREVENTION OF RAILROAD ACCIDENTS, OR SAFETY IN RAILROADING.

By George Bradshaw.

This book is a heart-to-heart talk with Railroad Employees, dealing with facts, not theories, and showing the men in the ranks, from every-day experience, how accidents occur and how they may be avoided. The book is illustrated with seventy original photographs and drawings showing the safe and unsafe methods of work. No visionary schemes, no ideal pictures. Just plain facts and Practical Suggestions are given. Every railroad employee who reads the

TRAIN RULE EXAMINATIONS MADE EASY. By G. E. COLLINGWOOD.

This is the only practical work on train-rules in print. Every detail is covered, and puzzling points are explained in simple, comprehensive language, making it a practical treatise for the Train Dispatcher, Engineman, Trainman, and all others who have to do with the movements of trains. Contains complete and reliable information of the Standard Code of Train Rules for single track. Shows Signals in Colors, as used on the different roads. Explains fully the practical application of train orders, giving a clear and definite understanding of all orders which may be used. The meaning and necessity for certain rules are explained in such a manner that the student may know beyond a doubt the rights conferred under any orders he may receive or the action required by certain rules.

TRAIN RULES AND DESPATCHING. By H. A. DALBY.

THE WALSCHAERT AND OTHER MODERN RADIAL VALVE GEARS FOR LOCOMOTIVES. By W_M , W, W_{OOD} .

If you would thoroughly understand the Walschaert Valve Gear you should possess a copy of this book, as the author takes the plainest form of a steam engine—a stationary engine in the rough, that will only turn its crank in one direction—and from it builds up—with the reader's help—a modern locomotive equipped with the Walschaert Valve Gear, complete. The points discussed are clearly illustrated; two large folding plates that show the positions of the valves of both inside or outside admission type, as well as the links and other parts of the gear when the crank is at nine different points in its revolution, are especially valuable in making the movement clear. These employ sliding cardboard models which are contained in a pocket in the cover.

The book is divided into five general divisions, as follows: I. Analysis of the gear. II. Designing and erecting the gear. III. Advantages of the gear. IV. Questions and answers relating to the Walschaert Valve Gear. V. Setting valves with the Walschaert Valve Gear; the three primary types of locomotive valve motion; modern radial valve gears other than the Walschaert; the Hobart All-free valve and valve gear, with questions and answers on breakdowns; the Baker-Pilliod valve gear; the Improved Baker-Pilliod Valve Gear, with questions and answers on breakdowns.

WESTINGHOUSE E—T AIR-BRAKE INSTRUCTION POCKET BOOK. By WM. W. Wood, Air-Brake Instructor.

Here is a book for the railroad man, and the man who aims to be one. It is without doubt the only complete work published on the Westinghouse E-T Locomotive Brake Equipment. Written by an Air Brake Instructor who knows just what is needed. It covers the subject thoroughly. Everything about the New Westinghouse Engine and Tender Brake Equipment, including the Standard No. 5 and the Perfected No. 6 Style of brake, is treated in detail. Written in plain English and profusely illustrated with Colored Plates, which enable one to trace the flow of pressures throughout the entire equipment. The best book ever published on the Air Brake. Equally good for the beginner and the advanced engineer. Will pass any one through any examination. It informs and enlightens you on every point. Indispensable to every engineman and trainman.

MACHINE SHOP PRACTICE

AMERICAN TOOL MAKING AND INTERCHANGEABLE MANUFACTURING, By J. V. WOODWORTH.

HENLEY'S ENCYCLOPEDIA OF PRACTICAL ENGINEERING AND ALLIED TRADES. Edited by Joseph G. Horner, A.M.I., M.E.

MACHINE SHOP ARITHMETIC. By Colvin-Cheney.

MODERN MACHINE SHOP CONSTRUCTION, EQUIPMENT AND MANAGEMENT. By Oscar E. Perrigo.

The only work published that describes the Modern Machine Shop or Manufacturing Plant from the time the grass is growing on the site intended for it until the finished product is shipped. Just the book needed by those contemplating the erection of modern shop buildings, the rebuilding and reorganization of old ones, or the introduction of Modern Shop Methods, time and cost systems. It is a book written and illustrated by a practical shop man for practical shop men who are too busy to read theories and want facts. It is the most complete all-around book of its kind ever published. 400 large quarto pages. 225 original and specially-made illustrations. Price

MECHANICAL APPLIANCES, MECHANICAL MOVEMENTS AND NOVELTIES OF CONSTRUCTION. By GARDNER D. HISCOX.

This is a supplementary volume to the one upon mechanical movements. Unlike the first volume, which is more elementary in character, this volume contains illustrations and descriptions of many combinations of motions and of mechanical devices and appliances found in different lines of machinery. Each device being shown by a line drawing with a description

showing its working parts and the method of operation. From the multitude of devices described, and illustrated, might be mentioned, in passing, such items as conveyors and elevators, Prony brakes, thermometers, juarious types of boilers, solar engines, oil-fuel burners, condensers, evaporators, Corliss and other valve gears, governors, gas engines, water motors of various descriptions, air ships, motors and dynamos, automobile and motor bicycles, railway block signals, car couplers, link and gear motions, ball bearings, breech block mechanism for heavy guns, and a large accumulation of others of equal importance. 1,000 specially made engavings. 396 octavo pages. Price

MECHANICAL MOVEMENTS, POWERS, AND DEVICES. By Gardner D. Hiscox.

This is a collection of 1,890 engravings of different mechanical motions and appliances, accompanied by appropriate text, making it a book of great value to the inventor, the draftsman, and to all readers with mechanical tastes. The book is divided into eighteen sections or chapters in which the subject matter is classified under the following heads: Mechanical Powers; Transmission of Power; Measurement of Power, Steam Power; Air Power Appliances; Electric Power and Construction, Navigation and Roads; Gearing; Motion and Devices; Controlling Motion; Horological: Mining; Mill and Factory Appliances; Construction and Devices; Drafting Devices: Miscellaneous Devices, etc. 12th edition. 400 octavo pages. Price \$2.50

MACHINE SHOP TOOLS AND SHOP PRACTICE. By W. H. VANDERVOORT.

THE MODERN MACHINIST. By John T. Usher.

This is a book showing, by plain description and by profuse engravings, made expressly for the work, all that is best, most advanced, and of the highest efficiency in modern machine shop practice, tools, and implements, showing the way by which and through which, as Mr. Maxim says, "American machinists have become and are the finest mechanics in the world." Indicating as it does, in every line, the familiarity of the author with every detail of daily experience in the shop, it cannot fail to be of service to any man practically connected with the shaping or finishing of metals.

experience in the shop, it cannot rail to be of service to any man practically connected with the shaping or finishing of metals. There is nothing experimental or visionary about the book, all devices being in actual use and giving good results. It might be called a compendium of shop methods, showing a variety of special tools and appliances which will give new ideas to many mechanics, from the superintendent down to the man at the bench. It will be found a valuable addition to any machinist's library, and should be consulted whenever a new or difficult job is to be done, whether it is boring, milling, turning, or planing, as they are all treated in a practical manner. Fifth Edition. 320 pages. 250 illustrations. Price

MODERN MILLING MACHINES: THEIR DESIGN, CONSTRUCTION AND OPERATION. By JOSEPH G. HORNER.

This book describes and illustrates the Milling Machine and its work in such a plain, clear, and forceful manner, and illustrates the subject so clearly and completely, that the up-to-date machinist, student, or mechanical engineer cannot afford to do without the valuable information which it contains. It describes not only the early machines of this class, but notes their gradual development into the splendid machines of the present day, giving the design and construction of the various types, forms, and special features produced by prominent manufacturers, American and foreign.

Milling cutters in all their development and modernized forms are illustrated and described,

Milling cutters in all their development and modernized forms are illustrated and described, and the operations they are capable of producing upon different classes of work are carefully described in detail, and the speeds and feeds necessary are discussed, and valuable and useful data given for determining these usually perplexing problems. The book is the most comprehensive work published on the subject. 304 pages. 300 illustrations. Price . . \$4.00

"SHOP KINKS." By ROBERT GRIMSHAW.

A book of 400 pages and 222 illustrations, being entirely different from any other book on machine shop practice. Departing from conventional style, the author avoids universal or common shop usage and limits his work to showing special ways of doing things better, more cheaply and more rapidly than usual. As a result the advanced methods of representative establishments of the world are placed at the disposal of the reader. This book shows the proprietor where large savings are possible, and how products may be improved. To the employee it holds out suggestions that, properly applied, will hasten his advancement. No shop can afford to be without it. It bristles with valuable wrinkles and helpful suggestions. It will benefit all, from apprentice to proprietor. Every machinist, at any age, should study its pages. Fifth Edition. Price

THREADS AND THREAD CUTTING. By Colvin and Stabel.

TOOLS FOR MACHINISTS AND WOOD WORKERS, INCLUDING INSTRUMENTS OF MEASUREMENT. By JOSEPH G. HORNER.

The principles upon which cutting tools for wood, metal, and other substances are made are identical, whether used by the machinist, the carpenter, or by any other skilled mechanic in their daily work, and the object of this book is to give a correct and practical description of these tools as they are commonly designed, constructed, and used. 340 pages, fully illustrated. Price

MANUAL TRAINING

ECONOMICS OF MANUAL TRAINING. By Louis Rouillion.

The only book published that gives just the information needed by all interested in Manual Training, regarding Buildings, Equipment, and Supplies. Shows exactly what is needed for all grades of the work from the Kindergarten to the High and Normal School. Gives itemized lists of everything used in Manual Training Work and tells just what it ought to cost. Also shows where to buy supplies, etc. Contains 174 pages, and is fully illustrated. 2nd Edition. Price

MARINE ENGINEERING

MARINE ENGINES AND BOILERS, THEIR DESIGN AND CONSTRUCTION. By Dr. G. Bauer, Leslie S. Robertson, and S. Bryan Donkin.

In the words of Dr. Bauer, the present work owes its origin to an oft felt want of a Condensed Treatise, embodying the Theoretical and Practical Rules used in Designing Marine Engines and Boilers. The need for such a work has been felt by most engineers engaged in the construction and working of Marine Engines, not only by the younger men, but also by those of greater experience. The fact that the original German work was written by the chief engineer of the famous Vulcan Works, Stettin, is in itself a guarantee that this book is in all respects thoroughly up-to-date, and that it embodies all the information which is necessary for the design and construction of the highest types of marine engines and boilers. It may be said, that the motive power which Dr. Bauer has placed in the fast German liners that have been turned out of late years from the Stettin Works, represent the very best practice in marine engineering of the present day.

This work is clearly written, thoroughly systematic, theoretically sound; while the character of its plans, drawings, tables, and statistics is without reproach. The illustrations are careful reproductions from actual working drawings, with some well-executed photographic views of completed engines and boilers. 744 pages. 550 illustrations and numerous tables.

\$9.00 net

MODERN SUBMARINE CHART.

A cross-section view, showing clearly and distinctly all the interior of a Submarine of the latest type. You get more information from this chart, about the construction and operation of a Submarine, than in any other way. No Details omitted—everything is accurate and to scale. It is absolutely correct in every detail, having been approved by Naval Engineers. All the machinery and devices fitted in a modern Submarine Boat are shown and to make the engraving more readily understood all the features are shown in operative form with Officers and Men in the act of performing the duties assigned to them in service conditions. This CHART IS REALLY AN ENCYCLOPEDIA OF A SUBMARINE. It is educational and worth many times its cost. Mailed in a Tube for 25 cents

MINING

ORE DEPOSITS, WITH A CHAPTER ON HINTS TO PROSPECTORS. By J. P. JOHNSON

This book gives a condensed account of the ore-deposits at present known in South Africa. It is also intended as a guide to the prospector. Only an elementary knowledge of geology and some mining experience are necessary in order to understand this work. With these qualifications, it will materially assist one in his search for metalliferous mineral occurrences

and, so far as simple ores are concerned, should enable one to form some idea of the possibilities of any he may find.

per—Cobalt—Tin—Molybdenum—Tungsten—Lead—Mercury—Antimony—Iron—Hints Prospectors. Among the chapters given are: Titaniferous and Chromiferous Iron Oxides-Nickel-Cop-

PHYSICS AND CHEMISTRY OF MINING. By T. H. Byrom.

A practical work for the use of all preparing for examinations in mining or qualifying for colliery managers' certificates. The aim of the author in this excellent book is to place clearly colliery managers' certificates. The aim of the author in this excellent book is to place clearly before the reader useful and authoritative data which will render him valuable assistance in his studies. The only work of its kind published. The information incorporated in it will prove of the greatest practical utility to students, mining engineers, colliery managers, and all others who are specially interested in the present-day treatment of mining problems. Among its contents are chapters on: The Atmosphere; Laws Relating to the Behavior of Gases; The Diffusion of Gases; Composition of the Atmosphere; Sundry Constituents of the Atmosphere; Water; Carbon; Fire-Damp; Combustion; Coal Dust and Its Action; Explosives; Composition of Various Coals and Fuels; Methods of Analysis of Coal; Strata Adjoining the Coal Measures; Magnetism and Electricity; Appendix; Useful Tables, etc.; Miscellaneous Questions. 160 pages. Illustrated. \$2.00

PRACTICAL COAL MINING. By T. H. COCKIN.

An important work, containing 428 pages and 213 illustrations, complete with practical de-

PATTERN MAKING

PRACTICAL PATTERN MAKING. By F. W. BARROWS.

This is a very complete and entirely practical treatise on the subject of pattern making, illustrating pattern work in wood and metal. From its pages you are taught just what you should know about pattern making. It contains a detailed description of the materials used by pattern makers, also the tools, both those for hand use, and the more interesting machine tools; having complete chapters on the band saw, The Buzz Saw, and the Lathe. Individual patterns of many different kinds are fully illustrated and described, and the mounting of metal patterns on plates for molding machines is included.

Rules, Formulas and Tables are included, containing simple and original methods for finding the weight of castings, both from the pattern itself and from the drawings. This section contains some new and practical formulas, which will be found very useful in estimating weights, with the accuracy required for quotations to prospective customers. All of these rules are simple, and can be put to practical use by the ordinary, every-day man, and they

have been proved by years of actual use.

Plain rules for keeping down the cost of patterns, with a complete system for checking the cost of and marking the patterns, and a card record showing what the pattern is, material used, where located in safe, with its cost and date of production, is included. The book closes

PERFUMERY

HENLEY'S TWENTIETH CENTURY BOOK OF RECEIPTS, FORMULAS AND PRO-CESSES. Edited by G. D. Hiscox.

The most valuable Techno-chemical Receipt Book published. Contains over 10,000 practical receipts, many of which will prove of special value to the perfumer, a mine of information, up-to-date in every respect. Price, Cloth, \$3.00; half morocco

PERFUMES AND THEIR PREPARATION. By G. W. Askinson, Perfumer. A comprehensive treatise, in which there has been nothing omitted that could be of value to the Perfumer. Complete directions for making handkerchief perfumes, smelling-salts, sachets, fumigating pastilles: preparations for the care of the skin, the mouth, the hair, cosmetics, hair dyes and other toilet articles are given, also a detailed description of aromatic substances: their nature, tests of purity, and wholesale manufacture. A book of general, as well as professional interest, meeting the wants not only of the druggist and perfume manufacturer, but also of the general public. Third edition. 312 pages. Illustrated. \$3.00

PLUMBING

MECHANICAL DRAWING FOR PLUMBERS. By R. M. STARBUCK.

MODERN PLUMBING ILLUSTRATED. By R. M. STARBUCK.

This book represents the highest standard of plumbing work. It has been adopted and used as a reference book by the United States Government, in its sanitary work in Cuba, Porto Rico, and the Philippines, and by the principal Boards of Health of the United States and Canada.

It gives connections, sizes and working data for all fixtures and groups of fixtures. It is helpful to the master plumber in demonstrating to his customers and in figuring work. It gives the mechanic and student quick and easy access to the best modern plumbing practice. Suggestions for estimating plumbing construction are contained in its pages. This book represents, in a word, the latest and best up-to-date practice, and should be in the hands of every architect, sanitary engineer and plumber who wishes to keep himself up to the minute on this important feature of construction. Contains following chapters, each illustrated with a full-page plate: Kitchen sink, laundry tubs, vegetable wash sink; lavatories, pantry sinks, contents of marble slabs; bath tub, foot and sitz bath, shower bath; water closets, venting of water closets; low-down water 'closets, water closets operated by flush valves, water closet range; slop sink, urinals, the bidet; hotel and restaurant sink, grease trap; refrigerators, safe wastes, laundry waste; lines of refrigerators, bar sinks, soda fountain sinks; horse stall, frost-proof water closets; connections for Straps, venting; connections for drum traps; soil pipe connections; supporting of soil pipe; main trap and fresh air inlet; floor drains and cellar drains, subsoil drainage; water closets and floor connections; local venting; connections for bath rooms; connections for bath rooms, continued; connections for bath rooms, continued; connections for bath rooms, continued; examples of poor practice; roughing-work ready for test; testing of plumbing system; method of continuous venting; continuous venting for two-floor two lines of fixtures on three or more floors; continuous venting of plumbing system; method of continuous ventruction for cellar piping; plumbing for residence, use of special fittings; plumbing for two-flat house; plumbing for spartment building; plumbing for flushing valves; urinals for public toilet rooms; plumbing for schools, factories, etc.; use of flushing valves;

STANDARD PRACTICAL PLUMBING. By R. M. STARBUCK.

A complete practical treatise of 450 pages covering the subject of Modern Plumbing in all its branches, a large amount of space being devoted to a very complete and practical treatment of the subject of Hot Water Supply and Circulation and Range Boiler Work. Its thirty chapters include about every phase of the subject one can think of, making it

RECEIPT BOOK

HENLEY'S TWENTIETH CENTURY BOOK OF RECEIPTS, FORMULAS AND PROCESSES. Edited by Gardner D. Hiscox.

The most valuable Techno-chemical Receipt Book published, including over 10,000 selected scientific, chemical, technological, and practical receipts and processes.

This is the most complete Book of Receipts ever published, giving thousands of receipts for the manufacturer of valuable articles for everyday use. Hints, Helps, Practical Ideas, and Secret Processes are revealed within its pages. It covers every branch of the useful arts and tells thousands of ways of making money and is just the book everyone should have at his command.

Modern in its treatment of every subject that properly falls within its scope, the book may truthfully be said to present the very latest formulas to be found in the arts and industries and to retain those processes which long experience has proven worthy of a permanent record. To present here even a limited number of the subjects which find a place in this valuable work would be difficult. Suffice to say that in its pages will be found matter of intense interest and immeasurable practical value to the scientific amateur and to him who wishes to obtain a knowledge of the many processes used in the arts, trades and manufactures, a knowledge which will render his pursuits more instructive and remunerative. Serving as a reference book to the small and large manufacturer and suppplying intelligent seekers with the information necessary to conduct a process, the work will be found of inestimable worth to the Metallurgist, the Photographer, the Perfumer, the Painter, the Manufacturer of Glues, Pastes, Coments, and Mucilages, the Compounder of Alloys, the Cook, the Physician, the Druggist, the Electrician, the Brewer, the Engineer, the Foundryman, the Machinist, the Potter, the Tanner, the Confectioner, the Chiropodist, the Manufacturer of Chemical Novelties and Tollet Preparations, the Dyer, the Electroplater, the Enameler, the Engraver, the Provisioner, the Glass Worker, the Goldbeater, the Watchmaker, the Jeweler, the Hat Maker, the Ink Manufacturer, the Optician, the Farmer, the Dairyman, the Paper Maker, the Wood and Metal Worker, the Chandler and Soap Maker, the Veterinary Surgeon, and the Technologist in general.

A mine of information, and up-to-date in every respect. A book which will prove of value to EVERYONE, as it covers every branch of the Useful Arts. 800 pages. Price \$3.00

WHAT IS SAID OF THIS BOOK:

"Your Twentieth Century Book of Receipts, Formulas and Processes duly received. I am glad to have a copy of it, and if I could not replace it money couldn't buy it. It is the best thing of the sort I ever saw." (Signed) M. E. TRUX,
SDARTA, Wis.

"There are few persons who would not be able to find in the book some single formula that would repay several times the cost of the book."—Merchant's Record and Show Window.

RUBBER

RUBBER HAND STAMPS AND THE MANIPULATION OF INDIA RUBBER. By T. O'CONOR SLOANE.

This book gives full details on all points, treating in a concise and simple manner the elements of nearly everything it is necessary to understand for a commencement in any branch of the India Rubber Manufacture. The making of all kinds of Rubber Hand Stamps, Small Articles of India Rubber, U. S. Government Composition, Dating Hand Stamps, the Manipulation of Sheet Rubber, Toy Balloons. India Rubber Solutions, Cements, Blackings, Renovating

Varnish, and Treatment for India Rubber Shoes, etc.; the Hektograph Stamp Inks, and Miscellaneous Notes, with a Short Account of the Discovery, Collection, and Manufacture of India Rubber are set forth in a manner designed to be readily understood, the explanations being plain and simple. Including a chapter on Rubber Tire Making and Vulcanizing; also a chapter on the uses of rubber in Surgery and Dentistry. Third revised and enlarged edition 175 pages, Illustrated.

SAWS

SAW FILINGS AND MANAGEMENT OF SAWS. By ROBERT GRIMSHAW.

STEAM ENGINEERING

AMERICAN STATIONARY ENGINEERING. By W. E. CRANE.

This book begins at the boiler room and takes in the whole power plant. A plain talk on every-day work about engines, boilers, and their accessories. It is not intended to be scientific or mathematical. All formulas are in simple form so that any one understanding plain arithmetic can readily understand any of them. The author has made this the most practical book in print; has given the results of his years of experience, and has included about all that has to do with an engine room or a power plant. You are not left to guess at a single point. You are shown clearly what to expect under the various conditions; how to secure the best results; ways of preventing "shut downs" and repairs; in short, all that goes to make up the requirements of a good engineer, capable of taking charge of a plant. It's plain enough for practical men and yet of value to those high in the profession.

A partial list of contents is: The boiler room, cleaning boilers, firing, feeding; pumps; hspection and repair; chimneys, sizes and cost; piping; mason work; foundations; testing cement; pile driving; engines, slow and high speed; valves; valves cordise engines, setting valves, single and double eccentric; air pumps and condensers; different types of condensers; water needed; lining up; pounds; pins not square in crosshead or crank; engineers' tools; pistons and piston rings; bearing metal; hardened copper; drip pipes from cylinder jackets; belts, how made, care of; oils; greases; testing lubricants; rules and tables, including steam tables; areas of segments; squares and square root; cubes and cube root; areas and circumferences of circles. Notes on: Brick work; explosions; pumps; pump valves; heaters, economizers; safety valves; lap. lead, and clearance. Has a complete examination for a license, etc., etc. Second edition. 285 pages. Illustrated. Price . \$2.00

EMINENT ENGINEERS. By DWIGHT GODDARD.

Everyone who appreciates the effect of such great inventions as the Steam Engine, Steamboat, Loconotive, Sewing Machine, Steel Working, and other fundamental discoveries, is interested in knowing a little about the men who made them and their achievements.

ENGINE RUNNER'S CATECHISM. By ROBERT GRIMSHAW.

A practical treatise for the stationary engineer, telling how to erect, adjust and run the principal steam engines in use in the United States. Describing the principal features of various special and well-known makes of engines: Temper Cut-off, Shipping and Receiving Foundations, Erecting and Starting, Valve Setting, Care and Use, Emergencies, Erecting and Adjusting Special Engines.

The questions asked throughout the catechism are plain and to the point, and the answers are given in such simple language as to be readily understood by anyone. All the instructions given are complete and up-to-date; and they are written in a popular style, without any technicalities or mathematical formulæ. The work is of a handy size for the pocket, clearly and well printed, nicely bound, and profusely illustrated. To young engineers this catechism

will be of great value, especially to those who may be preparing to go forward to be examined for certificates of competency; and to engineers generally it will be of no little service, as they will find in this volume more really practical and useful information than is to be found anywhere else within a like compass. 387 pages. Seventh edition. Price \$2.00

ENGINE TESTS AND BOILER EFFICIENCIES. By J. BUCHETTI.

HORSEPOWER CHART.

Shows the horsepower of any stationary engine without calculation. No matter what the cylinder diameter of stroke; the steam pressure or cut off; the revolutions, or whether condensing or non-condensing, it's all there. Easy to use, accurate, and saves time and calculations. Especially useful to engineers and designers. 50 cents

MODERN STEAM ENGINEERING IN THEORY AND PRACTICE. By GARDNER D. HISCOX.

This is a complete and practical work issued for Stationary Engineers and firemen dealing with the care and management of boilers, engines, pumps, superheated steam, refrigerating machinery, dynamos, motors, elevators, air compressors, and all other branches with which the modern engineer must be familiar. Nearly 200 questions with their answers on steam and electrical engineering, likely to be asked by the Examining Board, are included.

STEAM ENGINE CATECHISM. By ROBERT GRIMSHAW.

This unique volume of 413 pages is not only a catechism on the question and answer principle; but it contains formulas and worked-out answers for all the Steam problems that appertain to the operation and management of the Steam Engine. Illustrations of various valves and valve gear with their principles of operation are given. Thirty-four Tables that are indispensable to every engineer and fireman that wishes to be progressive and is ambitious to become master of his calling are within its pages. It is a most valuable instructor in the service of Steam Engineering. Leading engineers have recommended it as a valuable educator for the beginner as well as a reference book for the engineer. It is thoroughly indexed for every detail. Every essential question on the Steam Engine with its answer is contained in this valuable work. Sisteenthe edition. Price

STEAM ENGINEER'S ARITHMETIC. By Colvin-Cheney.

A practical pocket book for the steam engineer. Shows how to work the problems of the engine room and shows "why." Tells how to figure horse-power of engines and boilers; area of boilers; has tables of areas and circumferences; steam tables; has a dictionary of engineering terms. Puts you on to all all of the little kinks in figuring whatever there is to figure around a power plant. Tells you about the heat unit; absolute zero; adiabatic expansion; duty of engines; factor of safety; and 1,001 other things; and everything is plain and simple—not the hardest way to figure, but the easiest. 2nd Edition. 50 cents

STEAM HEATING AND VENTILATION

PRACTICAL STEAM, HOT-WATER HEATING AND VENTILATION. By A. G. King.

This book is the standard and latest work published on the subject and has been prepared for the use of all engaged in the business of steam, hot water heating, and ventilation. It is an original and exhaustive work. Tells how to get heating contracts, how to install heating and ventilating apparatus, the best business methods to be used, with "Tricks of the Trade" for

STEAM PIPES

STEAM PIPES: THEIR DESIGN AND CONSTRUCTION. By Wm. H. Booth.

The work is well illustrated in regard to pipe joints, expansion offsets, flexible joints, and self-contained sliding joints for taking up the expansion of long pipes. In fact, the chapters on the flow of steam and expansion of pipes are most valuable to all steam fitters and users. The pressure strength of pipes and method of hanging them are well treated and illustrated. Valves and by-passes are fully illustrated and described, as are also flange joints and their proper proportions, exhaust heads and separators. One of the most valuable chapters is that on superheated steam and the saving of steam by insulation with the various kinds of felting and other materials with comparison tables of the loss of heat in thermal units from naked and felted steam pipes. Contains 187 pages. Price

STEEL

AMERICAN STEEL WORKER. By E. R. MARKHAM.

This book tells how to select, and how to work, temper, harden, and anneal steel for everything on earth. It doesn't tell how to temper one class of tools and then leave the treatment of another kind of tool to your imagination and judgment, but it gives careful instructions for every detail of every tool, whether it be a tap, a reamer or just a screw-driver. It tells about the tempering of small watch springs, the hardening of cutlery, and the annealing of dies. In fact there isn't a thing that a steel worker would want to know that isn't included. It is the standard book on selecting, hardening, and tempering all grades of steel. Among the chapter headings might be mentioned the following subjects: Introduction; the workman; steel; methods of heating; heating tool steel; forging; annealing; hardening baths; baths for hardening; hardening steel; drawing the temper after hardening; ease hardening; spring tempering; making tools of machine steel; special steels; steel for various tools; causes of trouble; high speed steels, etc. 366 pages. Very fully illustrated. 3rd Edition. Price

HARDENING, TEMPERING, ANNEALING, AND FORGING OF STEEL. By J. V. WOODWORTH.

A new work treating in a clear, concise manner all modern processes for the heating, annealing forging, welding, hardening, and tempering of steel, making it a book of great practical value to the metal-working mechanic in general, with special directions for the successful hardening and tempering of all steel tools used in the arts, including milling cutters, taps, thread dies, reamers, both solid and shell, hollow mills, punches and dies, and all kinds of sheet metal working tools, shear blades, saws, fine cutlery, and metal cutting tools of all description, as well as for all implements of steel both large and small. In this work the simplest and most satisfactory hardening and tempering processes are given.

The uses to which the leading brands of steel may be adapted are concisely presented, and their treatment for working under different conditions explained, also the special methods for the hardening and tempering of special brands.

TURBINES

MARINE STEAM TURBINES. By Dr. G. Bauer and O. Lasche. Assisted by E. Ludwig and H. Vogel. Translated from the German and edited by M. G. S. Swallow.

This work forms a supplementary volume to the book entitled "Marine Engines and Boilers." The authors of this book, Dr. G. Bauer and O. Lasche, may be regarded as the leading authorities on turbine construction.

The book is essentially practical and discusses turbines in which the full expansion of steam passes through a number of separate turbines arranged for driving two or more shafts, as in the Parsons system, and turbines in which the complete expansion of steam from inlet to exhaust pressure occurs in a turbine on one shaft, as in the case of the Curtis machines. It will enable a designer to carry out all the ordinary calculations necessary for the construction of steam turbines, hence it fills a want which is hardly met by larger and more theoretical works.

WATCH MAKING

WATCHMAKER'S HANDBOOK. By CLAUDIUS SAUNIER.

QUESTIONS AND ANSWERS

RELATING TO MODERN

AUTOMOBILE DESIGN, CONSTRUCTION AND REPAIR

By VICTOR W. PAGE, M. E.,

Author of "The Modern Gasoline Automobile", "The Modern Gas Tractor", Etc., Etc.

600 (6x9) Pages.

350 Illustrations.

PRICE \$1.50.



THIS practical treatise consists of a series of thirty-six lessons, covering with nearly 2000 questions and their answers—the automobile, its construction, operation and repair. The subject matter is absolutely correct and explained in simple language. If you can't answer all of the following questions, you need this work. The answers to these and nearly 2000 more are to be found in its pages.

Give the name of all important parts of an automobile and describe their functions. Describe action of latest types of kerosene carburetors. What is the difference between a "Double" ignition system and a "dual" ignition system? Name parts of an induction coil? How are valves timed? What is an electric motor starter and how does it work? What are advantages of worm drive gearing?

work? What are advantages of worm drive gearing? Name all important types of ball and roller bearings? What is a "Three-quarter" floating axle? What is a two-speed axle? What is the Vulcan electric gear shift? Name the causes of lost power in automobiles. Describe all noises due to deranged mechanism and give causes? How can you adjust a carburetor by the color of the exhaust gases? What causes "popping" in the carburetor? What tools and supplies are needed to equip a car? How do you drive various makes of cars? What is a differential lock and where is it used? Name different systems of wire wheel construction, etc., etc.

A popular work at a popular price. Answers every question you may ask relating to the modern automobile.

Copies of this book sent prepaid to any address on receipt of price.

THE NORMAN W. HENLEY PUBLISHING CO.,

132 NASSAU STREET, - NEW YORK.

THE MODERN GASOLINE AUTOMOBILE



Its Construction, Operation, Maintenance and Repair.

By VICTOR W. PAGÉ, M.E.

500 Illustrations - Over 700 (6x9) Pages - Ten Large Folding Plates

PRICE \$2.50

A COMPLETE AUTOMOBILE BOOK, SHOWING EVERY RECENT IMPROVEMENT.

By a careful study of the pages of this book one can gain practical knowledge of the automobile that will save time, money and worry. The book tells you just what to do, how and when to do it. Nothing has been omitted, no detail has been slighted. Every part of the automobile, its equipment, accessories, tools, supplies, spare parts necessary, etc., have been discussed comprehensively. If you are or intend to become a motorist, or are in any way interested in the modern Gasoline Automobile, this is a book you cannot afford to be without.

COVERS EVERY PHASE OF 1913 AUTOMOBILE PRACTICE AND IS SUPERIOR TO ANY TREATISE HERETOFORE PUBLISHED.

Written in simple language by a recognized authority, familiar with every branch of the automobile industry. Free from technical terms. Everything is explained so simply that anyone of average intelligence may gain a comprehensive knowledge of the gasoline automobile. The information is up to date and includes, in addition to an exposition of principles of construction and description of all types of automobiles and their parts, valuable money-saving hints on the care and operation of motor cars propelled by internal combustion engines.

Motorists, students, salesmen, demonstrators, repairmen, chauffeurs, garage owners, and even designers or engineers need this work because it is complete, authoritative and thoroughly up-to-date. Other works dealing with automobile construction published in the past, make no reference to modern improvements because of their recent development. All are fully discussed and illustrated in this volume.

CONTAINS SPECIAL CHAPTERS ON

I. Types of Modern Automobiles. II. How Power is Generated. III. Principal Parts of Gasoline Engines, Their Design,
Construction, and Application. IV. Constructional Details of Pistons. V. Liquid Fuels Used and Methods
of Vaporizing to Obtain Explosive Gas. VI. Automobile Power-Plant Ignition Systems Outlined.
VII. Reasons for Lubrication of Mechanism. VIII. Utility of Clutches and Gearsets.
IX. The Chassis and Its Parts. X. Wheels, Rims and Tires. XI. Motor Car Equipment and Accessories. XII. Operating Advice and Explanation of Automobile
Control Methods. XIII. Hints to Assist in Locating Power-Plant
Troubles. XIV. Keeping Up the Motor-Car Chassis.

Copies of this book sent prepaid to any address on receipt of price.

THE NORMAN W. HENLEY PUBLISHING CO.,

132 NASSAU STREET. . NEW YORK.

GASOLINE ENGINE TROUBLE CHART

JUST ISSUED

25 x 38 inches A Chart


Troubles

Omitted

Simplifies

four-cylinder of the fourall parts of gasoline cycle type a typical Engine shows

25°C. Price

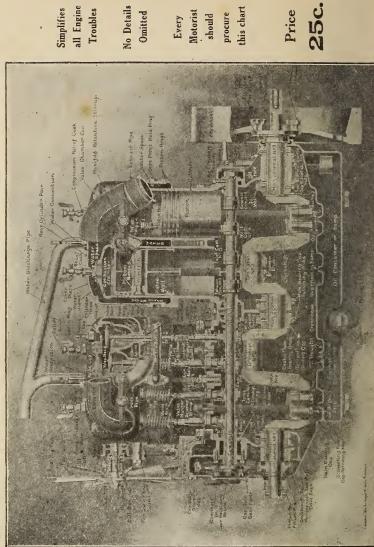

this chart

procure

Motorist

Every

Price

This is reduced from the large size chart, 25 x 38 inches.—Price 25 cents



THE MODERN GAS TRACTOR

By VICTOR W PAGE, M. E.

Author of "The Modern Gasoline Automobile," Etc.

A COMPLETE TREATISE DESCRIBING ALL TYPES AND SIZES OF GASOLINE, KEROSENE AND OIL TRACTORS. CONSIDERS DESIGN AND CONSTRUCTION EXHAUSTIVELY, GIVES COMPLETE INSTRUCTIONS FOR CARE, OPERATION AND REPAIR, OUTLINES ALL PRACTICAL APPLICATIONS ON THE ROAD AND IN THE FIELD. THE BEST AND LATEST WORK ON FARM TRACTORS AND TRACTOR POWER PLANTS.

480 PAGES — THREE FOLDING PLATES — 204 ILLUSTRATIONS

PRICE - - \$2.00

A modern exposition in the language of the field showing and describing every recent improvement in tractors and auxiliary appliances. All money making farms use power. Learn how to apply it now.

This work is written by a recognized authority on self-propelled vehicles and internal combustion motors. Everything is explained so simply that anyone of average intelligence may obtain a comprehensive knowledge of gas tractor operation, maintenance and repair. Tells how they are constructed and explains fully the reasons for varying designs. Contains special chapters on driving the tractor on field and road, what to expect from tractors in various kinds of work, cost of operation and moneymaking hints on repairs. It describes all ignition systems, all types of gasoline and kerosene vaporizers and carburetors, latest forms of power plants and installation, clutches, speed changing and reversing gears and all frame parts and their functions. Tells how to tell brake horsepower from draw bar or horse equivalent power, how to make adjustments to power plants, change speed gearing and other parts. Describes tools for tractor repair and gives plans for tractor sheds so they can be used in winter for stationary power or workshops where all repairs may be made. Outlines control systems of leading types and shows simple hitches for working various implements in combination. Describes fully tractors for small farms and orchards as well as types of the largest capacity. All illustrations are plainly marked with all important parts indicated so they may be easily identified. Drawings are simple but in correct proportion. Every illustration has been specially made for this book.


ALL FARMERS, STUDENTS, BLACKSMITHS, MECHANICS, SALESMEN, IM-PLEMENT DEALERS, DESIGNERS AND ENGINEERS NEED THIS WORK


Written in language understood by all. No technical terms.


COVERS EVERY PHASE OF 1914 TRACTOR ENGINEERING PRACTICE AND IS SUPERIOR TO ANY TREATISE HERETOFORE PUBLISHED


Copies of this book sent prepaid to any address on receipt of price.

THE NORMAN W. HENLEY PUBLISHING CO.,
132 NASSAU STREET. - NEW YORK.

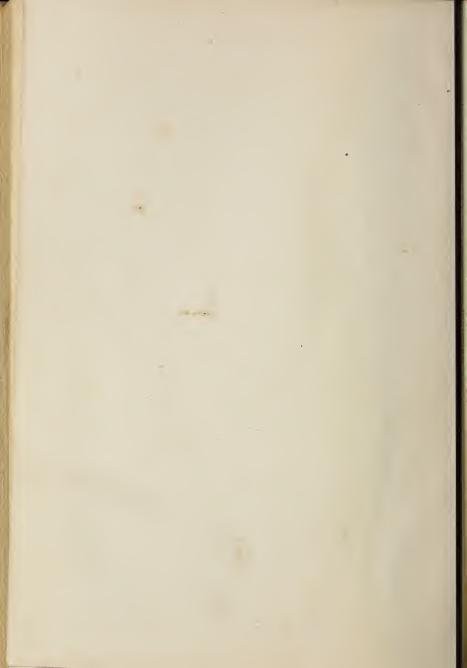

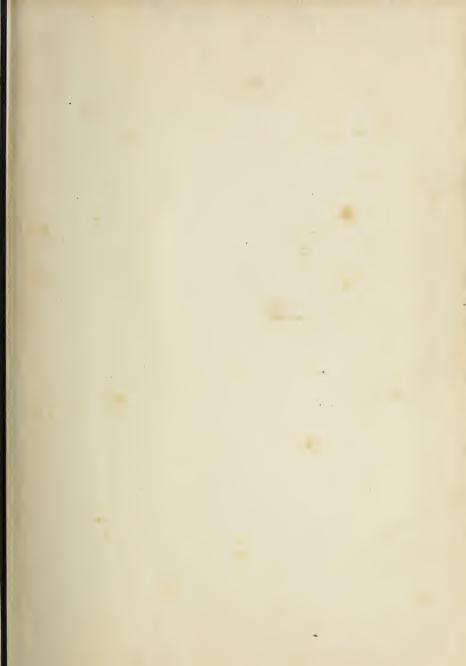

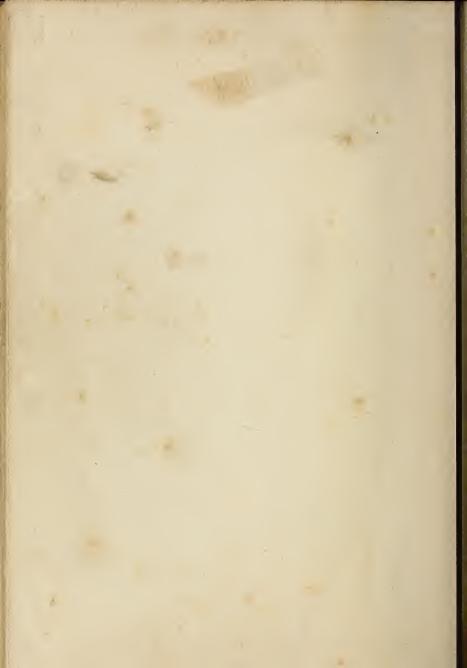

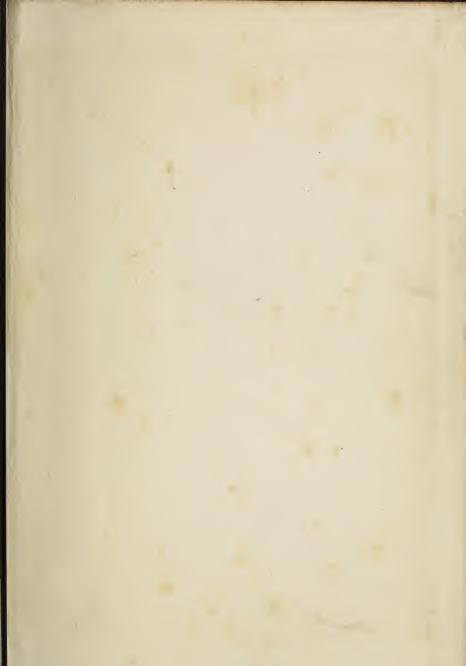

SMITHSONIAN INSTITUTION LIBRARIES

3 7088 00317577 7

nmah TK9971.S6 1914X
Electric toy making for amateurs.