
Wire Spinner 156 DVD







Assembly instructions

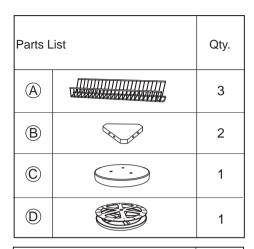



Hardware:		Qty.
(1)		12
(2)		3
(3)		1
(4)	Cautata	1

Tools needed / Not included:
Phillips screwdriver
Hammer or Mallet

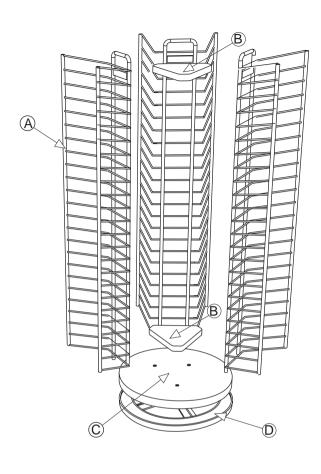

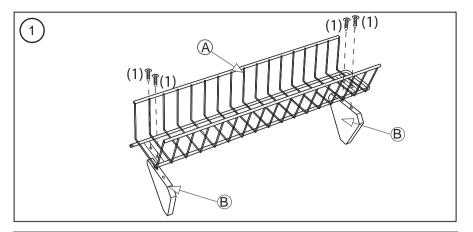


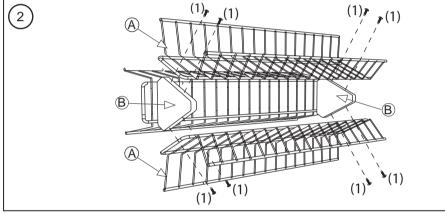

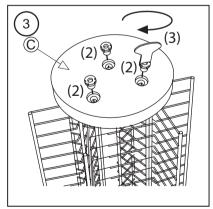

(3) Use hammer or mallet and gently hammer in plastic screw about 1/8" down onto threaded end of wire.

Carefully screw the Plastic Screws to secure the bottom section to the base with the provided tool. (Apply Pressure)

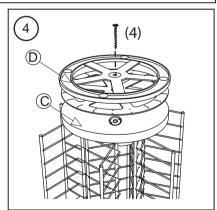

(4) Do not tighten screw too tightly. If base does not rotate easily, loosen screw.

ATLANTIC

© 2006 Atlantic Inc. Santa Fe Springs, CA. U.S.A. U.S. AND OTHER FOREIGN PATENTS PENDING ALL RIGHTS RESERVED MADE IN CHINA www.atlantic-inc.com

R1.0 061227

#63735423