

INSTALL INSTRUCTIONS C-VS-1800-ECO 2004-2008 FORD ECONOLINE VAN

TOOLS REQUIRED:

3/8" Standard Socket Set
3/8" Metric Socket Set
3/8" Ratcheting Wrench

Powered drill w/ drill bit set
Open-end wrench set
Screw driver set

HARDWARE & COMPONENTS:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART #</u>
6	1/4-20 Nylock nut	GSM30016
4	1/4" Flat washer	GSM31005
2	1/4-20 x 3/4" Carriage bolt	GSM32000
4	1/4-20 x 1 1/4" Hex head bolt	GSM33003
4	#10 x 1" Phillips sheet metal screw	GSM33196
1	Torx Screw Hardware Kit	C-HK-1

Always!

- Read all instructions before installing any Havis-Shields Equipment Corp products.
- Check for obstructions (Wire, brake lines, fuel tank, etc.) before drilling any holes!
- Use hardware provided with install kit

INSTALL C-VS-1800-ECO:

1. Remove O.E.M. engine cover accessory package (cup holder/storage pocket).
2. Place new console housing with mount brackets against engine cover and floor. Mark engine cover and drill four (4) - 5/16" diameter holes. Mark outline of floor bracket.




3. Remove mount brackets from console housing and attach to engine cover with $\frac{1}{4}$ " x $1 \frac{1}{4}$ " hex head bolts, stop nuts and fender washers.




4. Mark and drill four $\frac{5}{32}$ " diameter holes and attach floor mount plate with # 10 x 1" sheet metal screws. Also add two $\frac{1}{4}$ " x $\frac{3}{4}$ " carriage bolts facing up.



5. Mount and wire desired equipment into console.

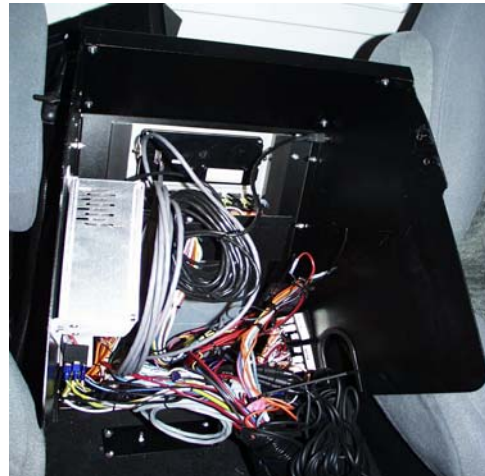

6. Attach Console to Mount Brackets.

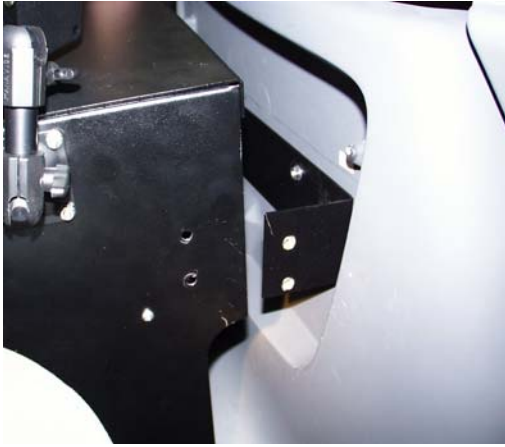

7. Finished Product

