

INSTALL INSTRUCTIONS C-TM-CV 1995-2007 FORD CROWN VICTORIA TRAK-MOUNT KIT

TOOLS REQUIRED:

Ratcheting Wrench Metric Socket Set

HARDWARE:

<u>QTY</u> <u>**DESCRIPTION**</u>

- 10 $\frac{1}{4}$ x $\frac{3}{4}$ Hex head bolt
- 6 ¹/₄" Serrated nut
- 4 $\frac{1}{4}$ " Flat washer
- 4 $\frac{1}{4}$ " Split lock washer


SUB ASSEMBLY:

1. MOUNT TRAK TO HUMP BRACKETS.

- Determine location that Trak will land on transmission hump for the specific application.
- With Trak in necessary location, measure Front and Rear Hump Bracket in relation to Trak.
- Bolt trak to the front hump bracket, top plate using measurements taken in previous step. Use (4) ¹/₄-20 x ³/₄" Hex head bolts and serrated nuts.

Note: There are 2 different sides to the Trak Plate. It is recommended to mount Hump brackets to side of Trak Plate that has $\frac{1}{4}$ " hardware slots closer together, to better accept equipment, (consoles, control heads, etc)

TRAK-MOUNT ASSEMBLY

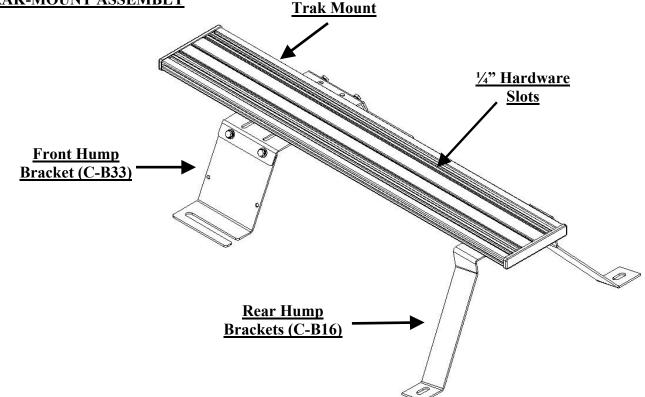

Standard Socket Set Tape Measure

PART#

GSM33001

GSM30023

GSM31005

GSM31026

• Attach trak to rear hump bracket using (2) ¹/₄-20 x ³/₄" Hex head bolts and serrated nuts.

Note: There is a driver and passenger side bracket to the Rear Hump Bracket. Top of brackets will be parallel to the transmission hump.


INSTALLATION:

1. REMOVE SEATS:

- Remove rear seat base nuts (18mm).
- Slide seat to rear most position.
- Remove front seat base bolts (13mm).
- Seats do not have to come out of vehicle, they will just need to be tilted out of way to place Trak-Mount assembly. Be careful of wire plugs if vehicle has power seats.

2. MOUNT ASSEMBLED TRAK-MOUNT:

- Attach the driver and passenger side front hump brackets to the inner front seat bolts.
- Place Trak-Mount assembly so rear hump bracket are between floor of vehicle and seat base.
- Re-mount seats assembly and tighten all hardware.
- Mount equipment (consoles, control heads, etc).

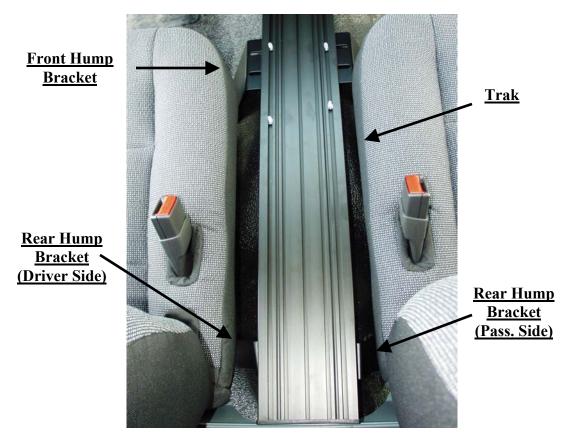

Consolidator[®] • Kwik-Raze[®] • Collins Dynamics[®] • Kwik-Kit[™] PrisonerTransports • K-9Transports 75 Jacksonville Rd • P.O. Box 2099 • Warminster, PA 18974 • 800.524.9900 / 215.957.0720(P) • 215.957.0729 (F) www.Havis.com