


ParaBody
911101
SPOTTER STAND ATTACHMENT
ASSEMBLY INSTRUCTIONS

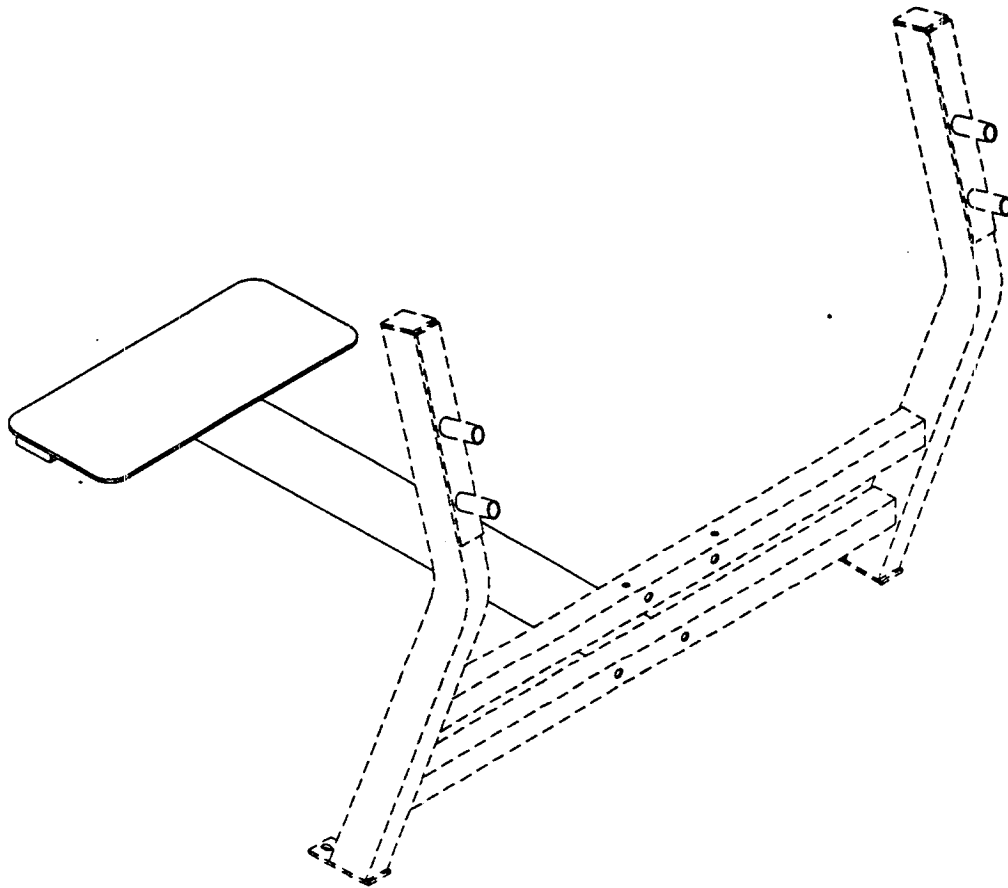

ParaBody, Incorporated
14150 Sunfish Lake Boulevard
Ramsey, MN 55303
1-800-328-9714

911101 SPOTTER STAND ATTACHMENT ASSEMBLY PARTS LIST

SORT AND COUNT ALL PARTS BEFORE BEGINNING ASSEMBLY


HARDWARE:

ITEM	NAME/DESCRIPTION	QTY
1.	1/2 X 3-1/4 IN BOLT	2
2.	3 X 2 IN END CAP	2


WELDMENTS/PARTS:

ITEM	NAME/DESCRIPTION	QTY
1.	SPOTTER STAND ATTACHMENT(6639002)	1

NOTE: BOLT LENGTH IS MEASURED FROM THE UNDERSIDE OF THE HEAD OF THE BOLT.

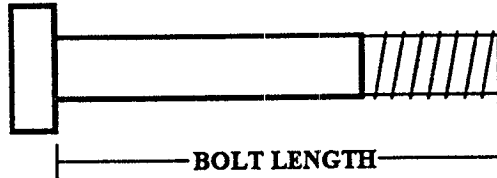

BOLT LENGTH RULER:



911101 SPOTTER STAND ATTACHMENT ASSEMBLY INSTRUCTIONS

THANK YOU

FOR PURCHASING THE 911101 SPOTTER STAND ATTACHMENT. PLEASE SAVE THESE ASSEMBLY INSTRUCTIONS FOR YOUR PERSONAL REFERENCE, AND ADDITIONAL SERVICE INFORMATION.

IMPORTANT

- IF YOU EXPERIENCE ANY PROBLEM WITH THE ASSEMBLY OF THIS PRODUCT, PLEASE CONTACT YOUR DEALER OR YOUR PARABODY CUSTOMER SERVICE REPRESENTATIVE AT: 1-800-328-9714
- TOOLS REQUIRED: RATCHET, 3/4 SOCKET and WRENCH, and RUBBER Mallet or HAMMER.

1. Loosen and remove hardware that attaches the **BENCH FRAME WELDMENT** to the **LOWER CROSS SUPPORT** of the **UPRIGHT FRAME WELDMENT**.
2. Insert two (2) 3 X 2 IN END CAPS into the ends of the **SPOTTER STAND ATTACHMENT** as shown on drawing.
3. **SECURELY** assemble the **SPOTTER STAND ATTACHMENT** to the **LOWER CROSS SUPPORT** of the **UPRIGHT FRAME WELDMENT** using the two 1/2 X 3-1/4 IN REPLACEMENT BOLTS, and the two (2) existing 1/2 IN LOCK NUTS as shown on drawing. (THE 1/2 IN WASHERS ARE NOT NEEDED FOR THIS ASSEMBLY)

