

Installation

LGA 1366 Standard Cooler

Installation Process

- ❶ Position heat sink over the processor. Align fasteners with motherboard hole pattern (see Figure 1).
- ❷ Thumb pressure to the top of each of the 4 fastener caps (see Figure 2). You will hear an audible "click" upon full engagement.
- ❸ Make sure all the fasteners are fully engaged. Installation is now complete (see Figure 3).

Remove Process

- ❶ Turn the cap conter-clockwise to the finish position. (See the Figure 4.)
- ❷ Pull up the Cap, thus releasing the fastener from the motherboard. Repeat this step for each fastener. (See the Figure 4.)

Figure 1

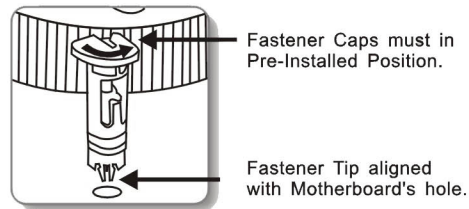


Figure 2

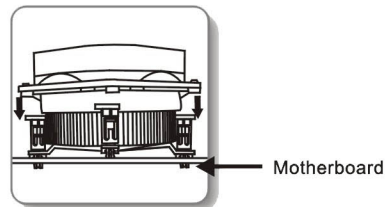


Figure 3


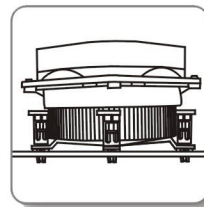


Figure 4

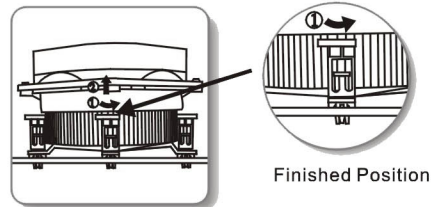

Finished Position