

C-AS-MMP ANGLED SERIES CONSOLES

INSTALLATION INSTRUCTIONS

FOR MODELS C-AS-1025, 1325, 1525 & 1725

TOOLS REQUIRED:

Standard and Metric Socket Set with 6" Extension
 Standard and Metric Wrench Set
 Torx driver #T15 and #T20

HARDWARE:

QTY: DESCRIPTION:


12 #8 X 3/8 Black Torx Screw
 4 1/4-20 X 1/2" Pem Stud
 4 1/4" Lock Washer
 4 1/4-20 Hex Nut

PART #:


CM86508
 GSM32220
 GSM31026
 GSM30005

PARTS SUPPLIED


1 CM93569 – Monitor Platform Frame
 1 CM93628 – Support Plate
 1 Pair of Wire Panels

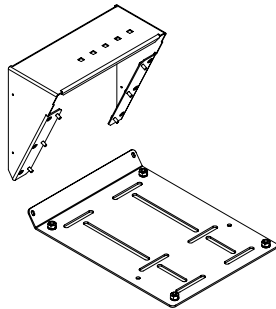

C-AS-MMP
Monitor Mounting Platform

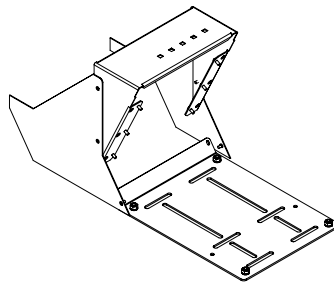

C-AS-MMP-CV
**Monitor Mounting Platform
 & Wire Panels Crown Vic**

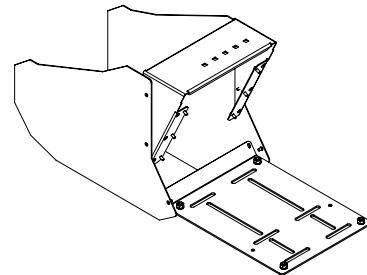

C-AS-MMP-IMP
**Monitor Mounting Platform
 & Wire Panels Impala**

INSTALLATION: (Refer to pictures on page 2)

1. Turn console over and remove (2) #8 X 3/8" Black torx screws on bottom of console.
2. Place support plate on bottom of console as shown and replace (2) #8 X 3/8" Black torx screws.
3. Turn console back over and place (4) 1/4-20 X 1/2" pem studs on bottom of support plate and insert (4) 1/4" lock washers and (4) 1/4" Hex nuts over studs on inside of console housing, then tighten.
4. Place monitor platform on front side of console and secure with (6) #8 X 3/8" Black torx screws.
5. Place wire panels on front sides of console and secure with (6) #8 X 3/8" Black torx screws.
6. Console is ready for mounting in car.

FORD CROWN VICTORIA APPLICATION SHOWN

