
SM020 SM020-2 Universal Mobile Phone Cradle




SM020-2 SM020

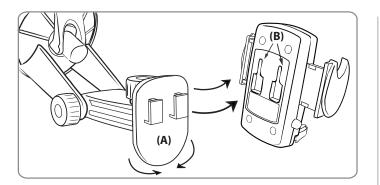

Pedestal and Dual-T Head Instructions (Pedestal Sold Separately)

Step 1. Attach the device cradle to the dual-T tab head (A) by inserting the T-tabs into the T-slots (B).

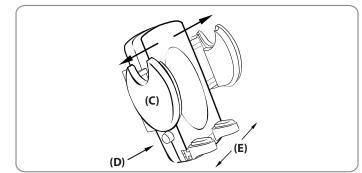

Universal Cradle Instructions

- Step 1. If necessary, adjust the support legs (E) by sliding them laterally. These provide support for your device.
- Step 2. Place device on the support legs (E) and squeeze the side grip arms (C) until they fit securely to the device.
- Step 3. Push the release button (D) in order to release the device from the cradle.



Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon Resources, Inc. is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of the pedestal mount.



The Mobile Mounting Specialists

Consumer Hotline: (USA) (800) 841-0884 (INT'L) (626) 254-9005

www.arkon.com Arcadia, CA 91006 USA Made in Taiwan Mon-Fri. 9am-5pm, PST © Copyright 2007 Arkon Resources, Inc.