

SM515 | Slim-Grip™ Universal Holder with Mini Windshield Suction and Dashboard Mount

GN015-HPB-2
Mini Windshield
Suction Pedestal



82 mm
expandable to
118.5 mm

AP013
Circular Adhesive
Dashboard Disk



SM050-HPB-2
Universal Phone
Holder

Package Contents:


- (1) SM050-HPB-2 Universal phone and portable device holder
- (1) GN015-HPB-2 - Mini Windshield Suction and Dashboard Mount
- (1) AP013 - Circular Adhesive Dashboard Disc

- Compatible with most smartphones, mobile phones, and cell phones having heights between 80mm and 115mm tall
- Apple iPhone - All models
- RIM BlackBerry - All non-flip models
- HTC Phones - All non-flip models
- Motorola Phones - All non-flip models
- Nokia Mobile Phones - All non-flip models
- Palm - All non-flip models
- LG Mobile Phones - All non-flip models
- Samsung - All non-flip models
- Sony Ericsson - All non-flip models
- Sanyo - All non-flip models
- Pantech - All non-flip models
- Google - All non-flip models

*All brand names and product names are trademarks or registered trademarks of their respective owners.


Windshield Mounting

- Step 1. Find a safe location on the interior of the vehicle's windshield to mount the pedestal. Firmly push the suction base (A) against the windshield and flip the base lever down (B) to the locked position. See diagram below.

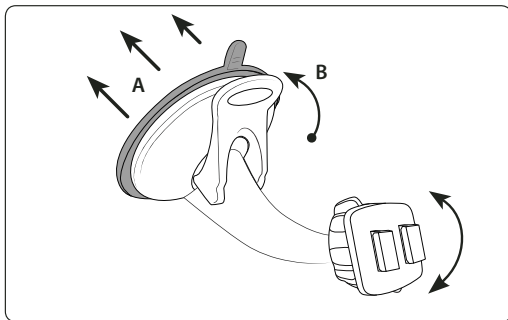


Install the Support Legs to the Holder

- Step 1. Insert the holder support legs (A) by sliding them into the support leg grooves (B) on the top and bottom of the holder.

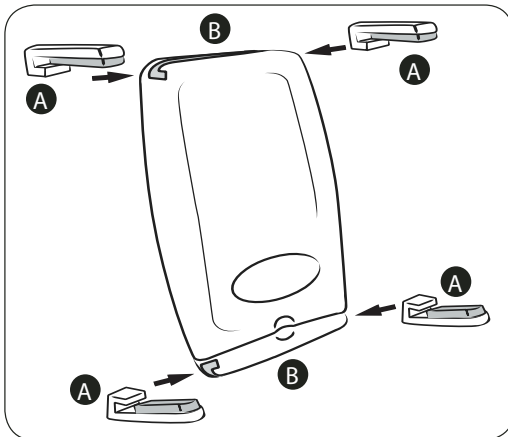


Connecting the Slim-Grip™ Holder to Dual T-Tab Pedestal

- Step 1. Connect the dual T-slots (A) on holder to the dual T-tabs (B) on the pedestal head.

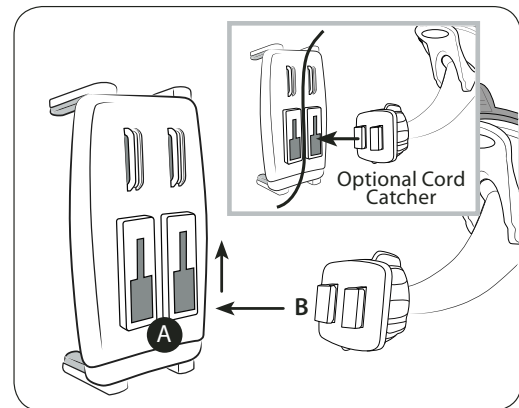

Insert Phone into Holder

- Step 1. Secure holder with your hand for support, as spring-loaded mechanism requires significant force to operate. Hold your phone and insert into universal holder by pushing down on the bottom spring-loaded support legs with moderate amount of pressure (C). Slide the top of the device under the top support legs (D) until it fits snugly in the holder.

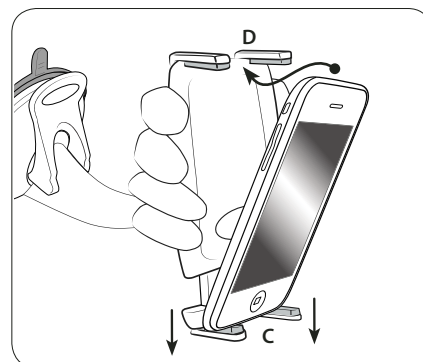

Continued on other side...



Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

Consumer Hotline:
USA (800) 841-0884
INT'L (626) 254-9005
Monday - Friday 9 am - 5 pm, PST

www.arkon.com
Arcadia, CA 91006 USA


(주) 케이앤씨텍

Representative in KOREA
www.knctek.com
TEL : (02) 839-5701
FAX : (02) 830-5703

Designed in USA | Made in China And Taiwan
© Copyright 2010 Arkon Resources, Inc.

SM515 | Slim-Grip™ Universal Holder with Mini Windshield Suction and Dashboard Mount

Adjusting Holder to Fit Phone

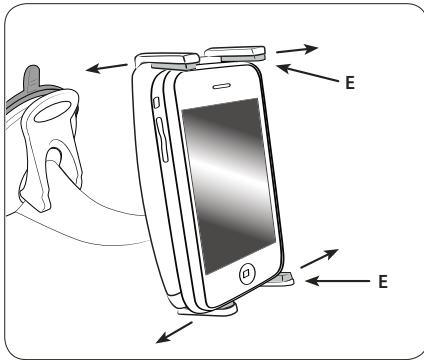


Step 1. If necessary, adjust the support legs (E) on top and bottom by sliding them laterally to avoid any buttons or ports that may be on your phone.

Dashboard or Console Mounting Instructions


Step 1. Choose a suitable location for disc (and pedestal) installation. **Do not place mount in or near an air bag deployment zone or where it will obstruct view of the road or hinder vehicle operation.**

Step 2. Clean the dashboard or console surface area thoroughly with the included alcohol pad. Allow the area dry before applying the mounting disc.

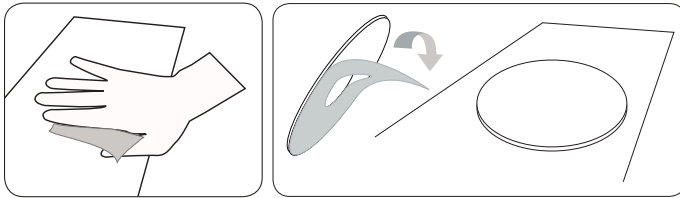

Step 3. Remove the paper backing of the disc and place on the cleaned surface. Press the top of the disc down firmly to allow the adhesive to stick to the surface. Allow 24 hours for the adhesive to cure to the surface before applying any pressure.

Step 4. Place the suction cup of the pedestal firmly down on the center of the mounting disc and lower the securing lever.

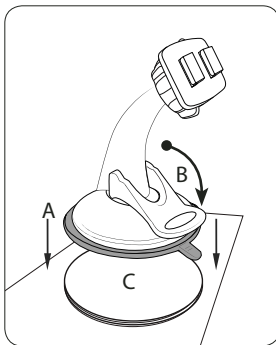

*Continued in
next column...*

Step 5. Push the pedestal suction cup (A) down onto the disk (C). Flip the lever (B) down to secure the suction cup. Adjust the angle of the pedestal head as needed.



Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and / or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

Consumer Hotline:

USA (800) 841-0884

INT'L (626) 254-9005

Monday - Friday 9 am - 5 pm, PST

www.arkon.com

Arcadia, CA 91006 USA

(주) 케이앤씨텍

Representative in KOREA

www.knctek.com

TEL : (02) 839-5701

FAX : (02) 830-5703

Designed in USA | Made in China And Taiwan

© Copyright 2010 Arkon Resources, Inc.