



QUASAR™ Light Pole Base

3200 and 3500 Series

Installation Instructions

Attwood marine hardware, navigational lighting, bilge pumps, and other marine accessories are specified more than any other brand by America's best-known boat manufacturers as original equipment. Look to Attwood for quality replacement parts and marine accessories.

SAVE THESE INSTRUCTIONS

Form Number 69303 Rev. C

03-11

REQUIRED FOR INSTALLATION

- Drill with 1/8" (3mm) and 1-1/16" (27mm) bits
- Screwdriver
- Three #8 stainless steel fasteners (not countersunk)
- Deck Gasket for 3200 Base (Attwood #910411) or non-silicone sealant


LOCATION

If base is used for a red/green bow light, locate in an unobstructed area as far forward as possible. Center of the base must be aligned with the centerline of the boat.

INSTALLATION

1. On boat centerline, mark and drill 1-1/16" (27mm) diameter hole.
2. Insert base into hole with hinge toward bow. Align center screw hole with boat centerline. Mark location of all 3 screw holes. Remove base.
3. Drill 1/8" (3mm) pilot holes.

Figure 1

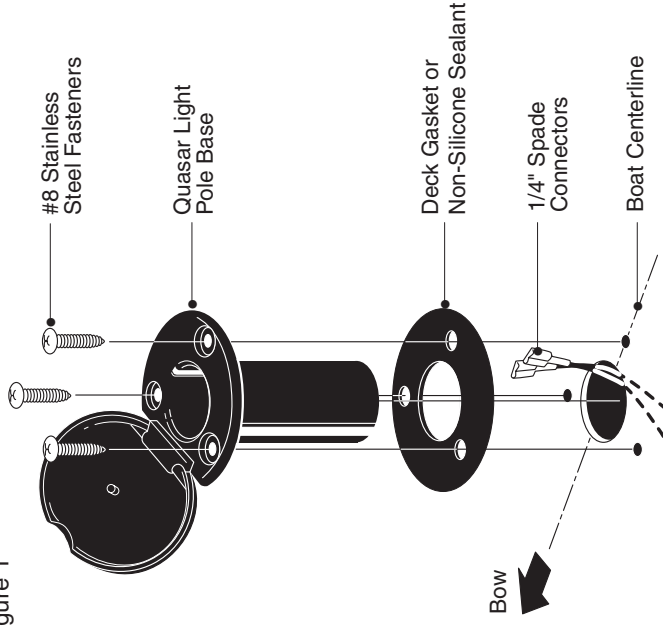

4. Bring 12VDC (+) and (-) wires up through deck hole. Connect wires to base using 1/4" spade connectors.
5. Apply deck gasket or non-silicone sealant to underside of base.
6. Align and fasten base with #8 stainless screws. Do not over tighten.

© 2003 Attwood Corporation
1016 N. Monroe Street, Lowell, MI 49331-0260 www.attwoodmarine.com