



**Russell DOT Racer Front Brake Hose Kit
for 2006 Suzuki GSX-R600
& 2005-2006 Suzuki GSX-R1000
Catalog #R09201
INSTALLATION INSTRUCTIONS**

Please study these instructions carefully before installing your new Brake Hose Kit. If you have any questions, please call our **Technical Hotline at: 1-800-416-8628**, 7:00 am - 5:00 pm, Pacific Standard Time, Monday through Friday or e-mail us at edelbrock@edelbrock.com. Please fill out and mail your warranty card.


IMPORTANT NOTE:

Proper installation is the responsibility of the installer. Improper installation will void warranty and may result in poor performance and engine or vehicle damage.

INSTALLATION INSTRUCTIONS

IMPORTANT NOTE: Do not allow the master cylinder to completely drain of brake fluid at any time during this process. Doing so may require removing the master cylinder from the vehicle for bench bleeding. Also, use care when handling brake fluid, as it can quickly damage finished surfaces (paint, plating, etc.).

1. Remove factory brake hoses, noting routing.
2. Route Russell hoses behind front fairing similar to factory.
3. Install master cylinder banjo ends onto factory double banjo bolt from right caliper so that left hose end is on top and routed to outside of right hose end. Install banjo bolt into master cylinder with banjo ends toward rear and right hose next to fork (**See Fig. 1**). Tighten banjo bolt.
4. Install supplied cushion clamp around hoses and use factory bolt and mounting location to secure hoses to fork tree.
5. Install hose ends onto calipers (use factory master cylinder banjo bolt for right caliper). Locate left hose with factory mount on rear center of fender and right hose with factory mount on side of fender.
6. Check hose clearance throughout entire steering and suspension travel range.
7. Bleed system and check for leaks while applying pressure.

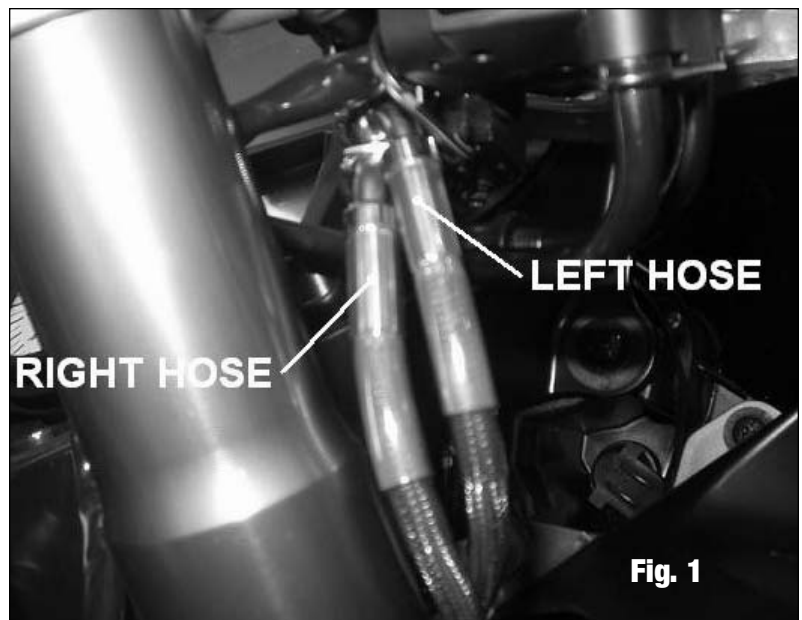

**Edelbrock Corporation, 2700 California Street, Torrance, CA 90503
Toll-Free Tech Line: 1-800-416-8628
Tech E-Mail: edelbrock@edelbrock.com**