

Part Numbers

- Classic Black 99300497
- Nickel 95800615
- Artisan 99300498
- Artisan Antique Copper 95800619
- Artisan Antique Nickel 95800620

- French Country 99300499
- French Country Black 95800616

Compatibility:


Packing List:

- 864TRV Fireplace
- 864 HH Fireplace
- Face
- (2) Face Mounting Brackets (w screws)
- Glass Frame Cover


- (4) 8-32 Nuts
- (2) 10-24 1-1/2" Screws




The FPX Face Upgrade Kit (98500686) must be installed prior to installing the facing material and face.



Installation Details

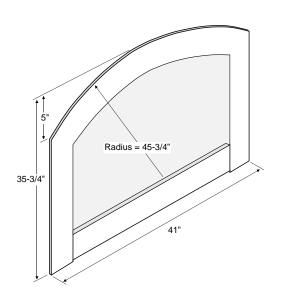

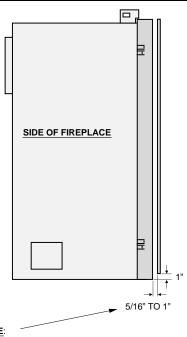


NOTE:

This face has an adjustable bracket that allows for different facing depths to be tucked under the face.

NOTE FOR THICK FACING (BRICK, ROCK, ETC.): The Fireplace Xtrodinair 864 Set-Up Face is recommended for


masonry installation (98500688). The set-up face helps locate and support the masonry during installation.

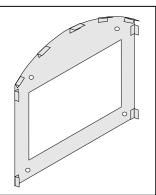

Installation

1 Remove the glass frame (see the owner's manual for details). Install the glass frame cover following the directions below. Replace the glass frame.


Place the cover over the top of the door frame.

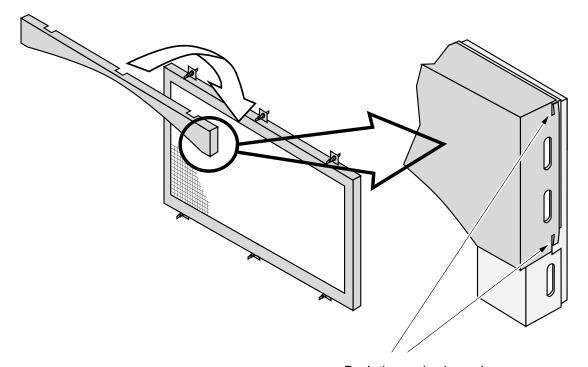

Push these pins inwards to lock the cover in place.




2 The facing and hearth (if applicable) must be installed prior to attaching the face. See the installation manual for complete details.

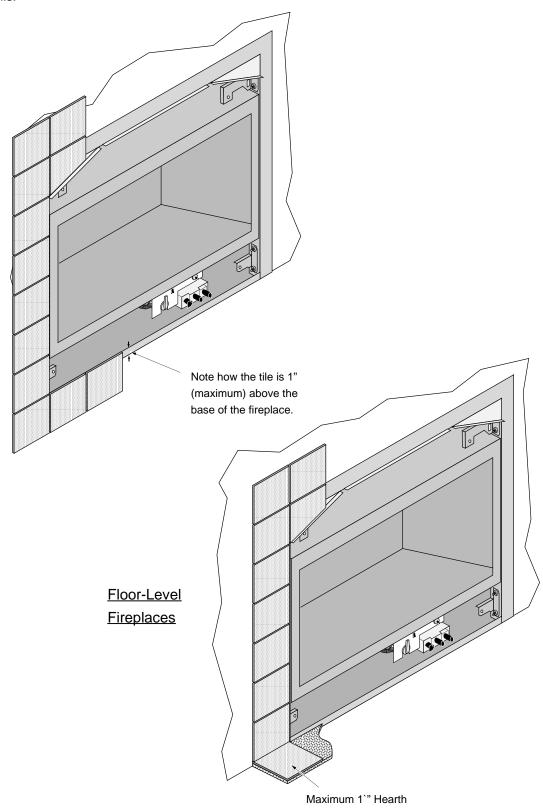

Page 3 of 4

Raised Fireplaces

3 Install the face following the directions below.

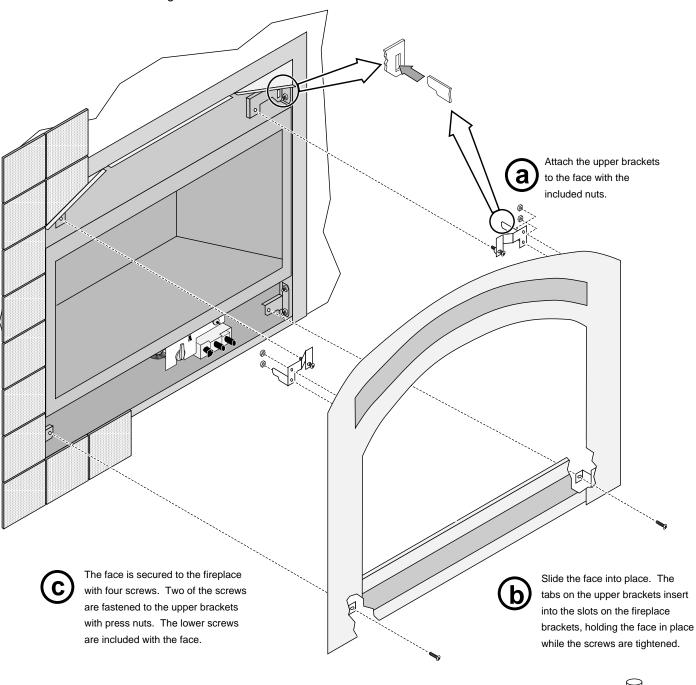

Plated Surfaces

Use denatured alcohol and a soft cloth to clean plated surfaces. Marks left on the surface may damage the face.

