

## INSTALL INSTRUCTIONS C-TSM-CHGR-X TRUNK SIDE MOUNT FOR 2006-2008 DODGE CHARGER X = "D" DRIVERS SIDE OR "P" PASSENGER SIDE

**TOOLS REQUIRED:**

Ratcheting wrench  
Utility knife or Jig Saw

Screwdriver set  
Powered drill w/ 1/8" & 3/16" drill bits

**HARDWARE:**

**QTY DESCRIPTION**

3 10-32 Keps nuts  
3 10-32 x 1/2" Phillips machine screws  
3 #10 x 3/4" Sheet metal screws

**PART #**

GSM30028  
GSM33118  
GSM33195

**Always!**

- Read all instructions before installing any Havis-Shields Equipment Corp products.
- Check for obstructions (Wire, brake lines, fuel tank, etc.) before drilling any holes!
- Use hardware provided with install kit




Empty view of passenger side mounting location



Position trunk side mount and determine where to notch vehicle trim in order to function properly



Notch trim as necessary  
*Note: Vehicles w/ carpeted fiberglass trim requires more cutting due to thickness of material, see next page.*

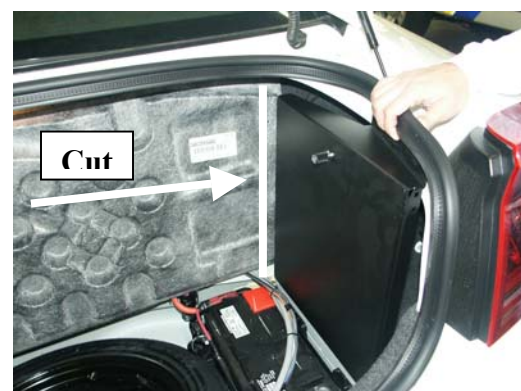

Cut carpeted fiberglass trim along this line for proper fit.




Pre-drill lower mounting holes using 1/8" drill bit and attach with #10 x 3/4" Sheet metal screws



Position Trunk Side Mount and mark (3) holes on top mounting bracket




Drill (3) marked holes using 3/16" drill bit

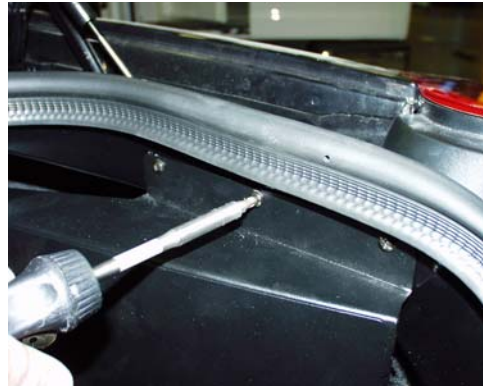

Attach using 10-32 x 1/2" machine screws and keps nuts



Finished look of Passenger-Side Mount in police package

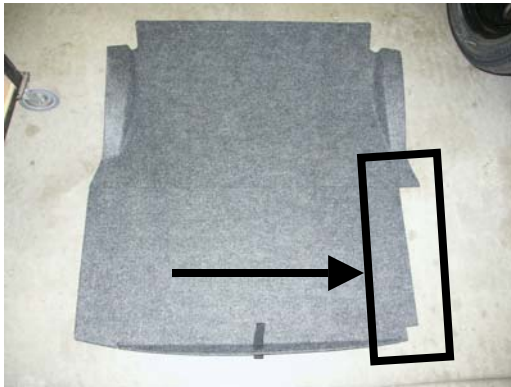

Finish look of trunk floor after cut is made. (Passenger Side Mount)



Finished look of Passenger-Side Mount in standard package version



*Note: When installing a C-TSM-CHGR-P or D with a full size radio trunk tray, you must relocate the trays' spring lock on the tray and reposition to the center set of holes. This will allow the Trunk Side Mount to open properly.*