STEREO SYSTEM RACK

SRC-603 © / 663 ©

©PRINTED IN U.S.A. B61-0577-00(TOCABI)

KENWOOD CORPORATION


ASSEMBLY INSTRUCTIONS

IMPORTANT:

- . Before operating your new KENWOOD product, read through this assembly manual carefully to get the most out of it.
- · Save this assembly instructions.

Before Assembling

- · Be sure to check that all parts are accounted for before disposing of the packing case.
- · A Phillips screwdriver and a mallet are required for assembling.
- . Be carefull not to damage the floor and rack.



Notes on Assembling

- . During assembling, be sure to verify the numbers stamped on the boards.
- · Mount the rear panel after assembling the side panel on the bottom shelf at a right angle.
- · When mounting the top shelf and kick plate on the side panel, use glue for adhesive. Be sure to remove any excess glue before it dries.
- · If the amplifier wobbles when its key switches are pressed, insert a wooden dowel into the hole on the side panel and fix the rear of the amplifier.


Handling Precautions

- · Tempered glass is used for the glass doors for providing sufficient strength. However, pay attention not to apply excessive force or to scratch the doors. Cracking or breaking of the glass may occur.
- · When moving the cabinet, remove all the components from the rack before carrying the cabinet. Also do not grasp the top shelf when carrying.
- . To allow head radiation from the components, leave a space of 4 inches between the cabinet and wall.
- · Do not place the cabinet in a location subject to direct sunlight or near a heater, an air-conditioner, or a place with high humidity.

IMPORTANT SAFEGUARDS

Caution: Read this page carefully to keep your safety.

4. Impact - Avoid placing the unit on an unstable surface stall it on a horizontal surface not subject to excessive dirt or vibration



1. Suffocation — After taking the unit out of the polyethylene bag, be sure to dispose of the polyethylene bag out of the reach of children. Otherwise, they may play with the bag, which could cause hazard of suffocation.



2. Water and moisture — Do not place a liquid container, such as a vase and water basin, on the unit. Also avoid installing the unit in a place subject



3. Heat — Do not install the unit near a source of heat, such as a heater, or under direct sunlight.



5. $\operatorname{\textbf{Modification}}$ — Do not attempt to open or modify the unit, for this could



 ${f 6.}$ Cleaning - Do not use thinner, benzine or alcohol. When cleaning the unit, wipe with a soft, dry cloth.



7. Abnormal smell — In the event the unit generates smoke or abnormal smell, immediately switch the power OFF and unplug the power cord. After this, please contact your dealer or nearest service station as soon as possible.









	LIST MODEL SRC-603	663	© .	
Item	Description	Q.T.Y.		
J		4	SRC-603@ SRC-663@	
(K)		12	S0035 S0034	
(1	M0018	
M	9	2	P0054	
N		1	P0011	
0		4	P0053	
P		4	G0067	
Q		9	W0092	
B		2	W0398	
S		1	G0012	
①	0	4	M0019	
0	0	1	M0026	
V		1	M0027	
w		1	M0011	
(X)	\bigcirc	1	G0047	
Y	Glass Door	1	G0078	


ASSEMBLY INSTRUCTIONS

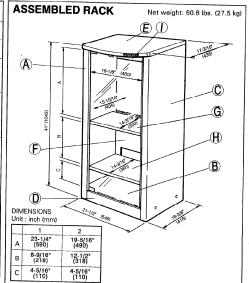


STEP 1

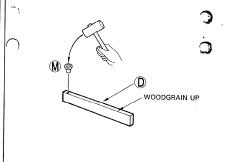


STEP 2

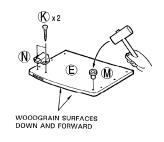

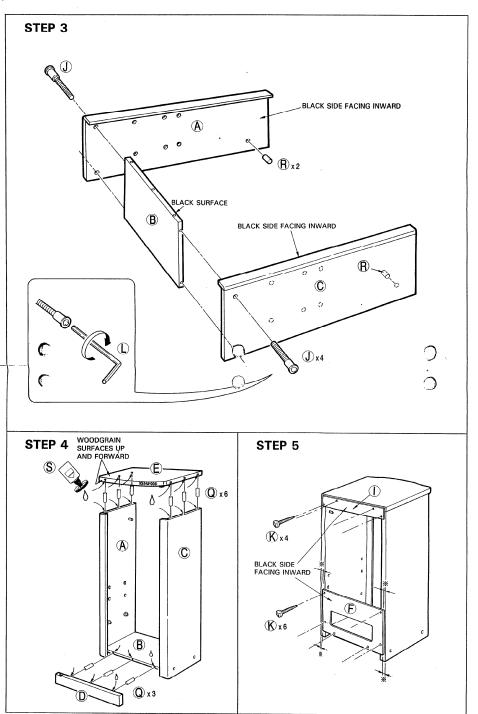


CONTINUED NEXT PAGE

ASSEMBLY INSTRUCTIONS

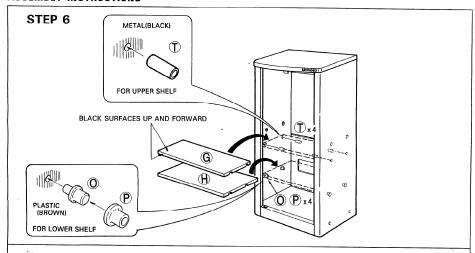

STEP 7

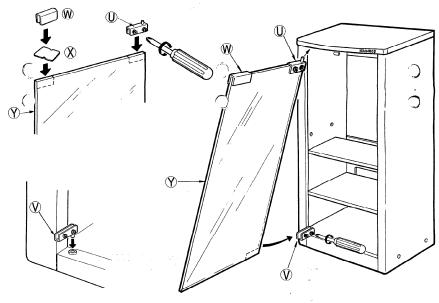

MODEL:	SRC-603@/663@			PARTS	LIST				
ITEM	DESCRIPTION	QTY	PAR PAR	T NO. DIK.	ITEM	DESCRIPTION	QTY	PART NO.	1
			SRC-603 ©	SRC-663 ©					If any parts are MISS-
A	LEFT SIDE PANEL	1	*XW0689	XW0676	N	MAGNET CATCH	1	P0011	ING or DAMAGED In
В	BOTTOM BOARD	1	XW0692	XW0692	0	SHELF PIN	4	P0053	this package, circle the
С	RIGHT SIDE PANEL	1	XW0688	XW0675.	P	RUBBER SPACER	4	G0067	item(s) needed on the
D	KICK PLATE	1	XW0497	XW0511	Q	WOOD DOWEL	9	W0092	parts list. Print your name, address, and
E	TOP BOARD	1	_XW0687	XW0674	R	WOOD DOWEL	2	W0398	phone number in the
F	BACK BOARD A	1	XW0693	XW0693	s	GLUE	1	G0012	area to the left and mail
G	SHELF A	1	XW0690	XW0690	T	SHELF PIN	4	M0019	to:
Н	SHFLFR	1	XW069.1	XW0691	U	UPPER HINGE	1	M0026	TOCABI AMERICA.
1	BACK BOARD B	1	XW0694	XW0694	V	LOWER HINGE	1	M0027	9375 Custom House
. J	CONFIRMAT SCREW	4	S0033	S0035	w	CATCH PLATE	1	M0011	Plaza Road, Suite I
ĸ	SCREW	12	S0034	S0034	· x	CATCH PLATE PAD	1	G0047	San Ysidro, CA 92173.
L	ALLEN WRENCH	1	M0018	M0018	Y	GLASS DOOR	1	G0078	or call (619)-661-6136.
М	HINGE INSERT	2	P0054	P0054					` '