

INSTALL INSTRUCTIONS C-VS-1200-EXPL 2002-2005 FORD EXPLORER

TOOLS REQUIRED:

Metric Socket Set Ratchet Wrench Phillips Screw Driver Panel Pulling Tool

7mm Screw


INSTALLATION:

1. Remove O.E.M. Console

- Remove the one 7mm Hex head screw located in the accessory pocket of the O.E.M. Console:
- Un-plugged the factory 12volt outlet in order to completely remove "FACE" of O.E.M. console.
- Remove top "FACE" of O.E.M console. After Hex head screw is removed, simply pull straight up on "FACE" in the rear and then pull back to release the front of the console.
- Remove (2) 7mm hex head screws that attach the lower portion of the OEM console housing located under the HVAC controls.
- Remove (6) more 7mm screws located under the "Face" of the OEM console.
- Save all removed hardware, this will be used later to install the VS console.
- If equipped with the Traction control switch option, unplug and remove from OEM console.

2. Install Explorer VS-Console:

- Place VS-Console where the "FACE" of the O.E.M console was originally located.
- Mount VS-Console using the (6) 7mm screws (removed earlier).
- If necessary, install traction control switch into the supplied plate.

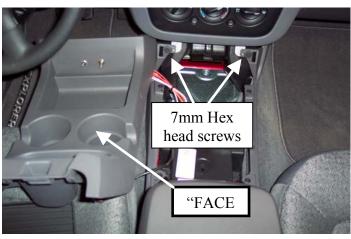



Consolidator® • Kwik-Raze® • Collins Dynamics® • Kwik-Kit™ PrisonerTransports • K-9Transports