

DOOR PANELS FOR REFRIGERATOR MODELS RM1350 RME1350

USA SERVICE OFFICE Dometic, LLC 2320 Industrial Parkway Elkhart, IN 46516 574-294-2511 CANADA

Dometic, LLC 46 Zatonski, Unit 3 Brantford, ON N3T 5L8 CANADA 519-720-9578

For Service Center Assistance Call: 800-544-4881



INSTALLATION INSTRUCTIONS

DOOR PANELS 3106863.180(X)

Form No. 3312203.163 2009-01 (Replaces 3312203.072) ©2009 Dometic, LLC LaGrange, IN 46761

MOUNTING THE DOOR PANELS


Read the instructions thoroughly and check that the panel dimensions are in compliance with those given in the table below.

PANEL DIMENSIONS max. thickness 5/32" (4 mm)					
		Height		Width	
		max min		max min	
UPPER					
RM1350	inches [mm]	19-7/32 [488]	19-9/64 [486]	15-43/64 [398]	15-19/32 [396]
LOWER					
RM1350	inches [mm]	40-1/32 [1017]	39-31/32 [1015]	15-43/64 [398]	15-19/32 [396]


TO MOUNT THE DOOR PANEL, FOLLOW THESE STEPS:

1. Open the door 90 degrees.

2. Remove the decoration strip.




3. Insert the door panel's edges into the grooves of the door frame. Push the panel sideways until the edge of the panel is fitted into the opposite side groove.

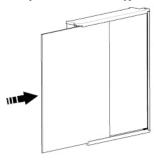

4. Put back the decoration strip. Slide or snap into place.



5. Slide the handle into place. Make sure to fit the parts together, slot into the slot, as shown in the illustration below.

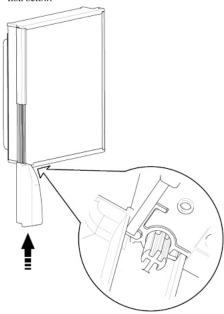

6. Attach the handle with a screw.

