


INSTALLATION INSTRUCTIONS

C-3190 SLIDE-OUT RADIO TRAY

1996-2008 FORD CROWN VICTORIA

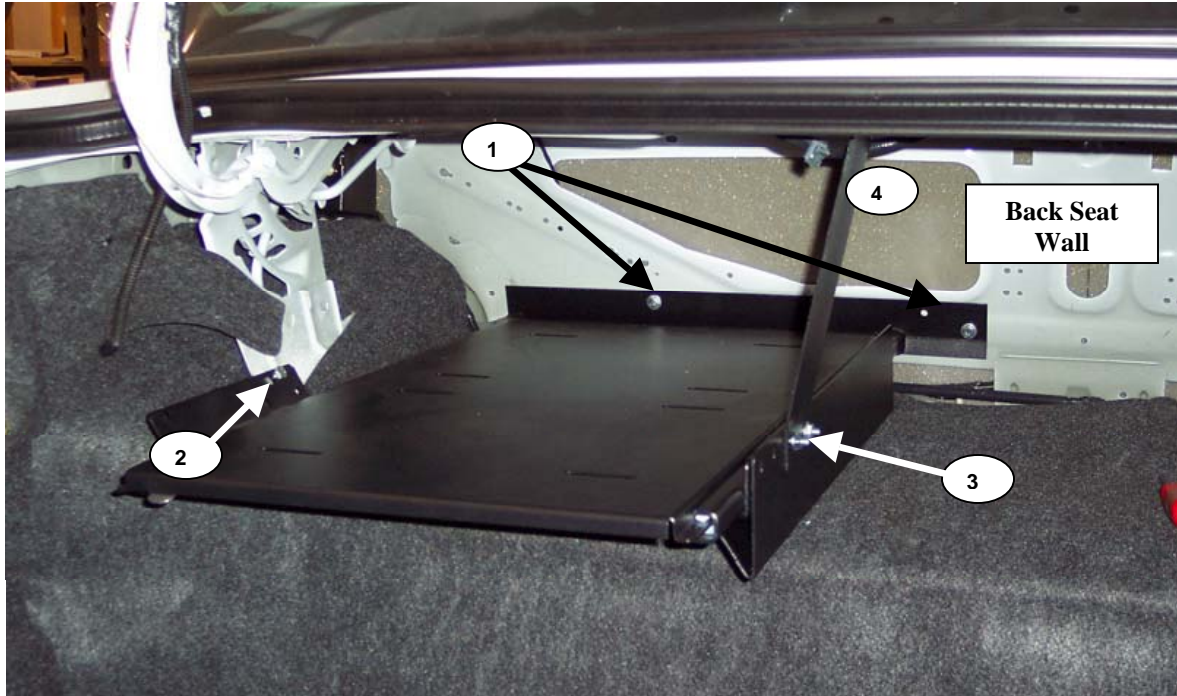

Step 1. Align forward radio shelf bracket with existing holes in front of trunk wall. Use 2 (two) 1/4" x 1" hex head cap screws, 2 (two) 1/4" flat washers and 2 (two) 1/4" flange nuts. Don't fully tighten bracket yet.

Step 2. Use a block of wood or a shim to level radio shelf. Drill 1/4" hole into trunk hinge, support base on driver's side. Fasten down shelf using 1 (one) 1/4" x 1" hex head cap screw, 1 (one) 1/4" flat washer, and 1 (one) 1/4" flange nut.

Step 3. Insert 2 (two) 1/4" x 1" hex head cap screws in shelf holes. Place bottom support bracket over hex head cap screws, then place hanger support bracket on top of bottom bracket. Place 2 (two) 1/4" flat washers and 2 (two) 1/4" flange nuts. 1998 Crown Vic: use pair of holes toward *front* of vehicle. For 1997 Crown Vic: use holes toward rear of vehicle.

Step 4. Using the support as a template, mark and drill two holes in upper deck. Bolt support bracket on with 1/4" x 1" hex head cap screws,

2 (two) 1/4" flat washers, and 1/4" flange nuts. Make sure shelf is level and tighten all hardware.

Tools needed: 7/16" wrench and socket, drill and 1/4" bit, level.

Hardware Included: 8 (eight) 1/4" x 1" screws, 8 (eight) 1/4" flange nuts, 8 (eight) 1/4" flat washers.

Note: Do not substitute hardware. Do not use self-tapping screws as they will vibrate loose.