
# American Standard

# ENFIELD ON/OFF VALVE TRIM

## Installation Instructions T37370X

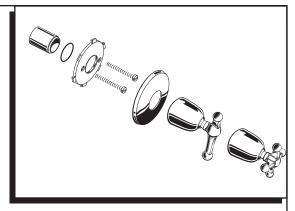

Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly-please read these instructions carefully before you begin.


Certified to comply with ANSI A112.18.1M ASSE 1016

M968663

#### **ROUGHING-IN DIMENSIONS** Model 7001.000 Model 7011.000 1/2" NPT 3/4" NPT 35mm-59mm 60mm±13mm (1-3/8 - 2-3/8) $(2-3/8 \pm 1/2)$ 3/4" NPT 70mm 70mm MALE (2-5/8)(2-5/8)52mm THREADED 52mm 1/2" NPT (2-1/8)**FEMALE** OUTLET (2-1/8)DIA. HOLÉ DIA. HOLE OUTLET 64mm (2-1/2)51mm (2)3/4" NPT **FEMALE** UNION INLET. THREADED 1/2" - 14 NPT OR INI FT 5/8" O.D. COPPER **FINISHED FINISHED** WALL WALL SWFAT

#### **Recommended Tools**







Phillips Screwdriver

#### **CARE INSTRUCTIONS:**

- To keep your new faucet looking new, please follow these simple care instructions:
  - Simply rinse the faucet clean with clear water.
     Dry the faucet with a soft cotton cloth.

#### DO NOT:


- Do not use any abrasive cleaners, cloths, or paper towels.
- Do not use any cleaning agents containing acids, polish abrasives, or harsh cleaners or soaps.
- Regular and routine cleaning will reduce the need for heavy cleaning and polishing. If heavy cleaning is required, the following procedures are recommended:

- Remove as much surface dirt and film using clear water and soft cotton cloth (as described above).
  - Use any of the following to remove tough surface film and build-up:
  - Mild liquid detergents
  - Clear ammonia free liquid glass cleaners
  - Non-acidic, non-abrasive gentle liquid or fully dissolved powder cleansers mixed according to manufacturers directions.
  - Non-abrasive liquid polishers
- Once clean, rinse faucet again with clear water to thoroughly remove cleaner or polish and blot dry with a soft cotton cloth.

Failure to follow these care instructions may damage the Faucet's finish.


### TRIM INSTALLATION

- Push VALVE COVER (1) over VALVE CARTRIDGE (2) until it is seated against the stop.
- Place ESCUTCHEON HOLDER (3) over VALVE COVER (1). Line up holes in ESCUTCHEON HOLDER (3) with THREADED TABS (4) on VALVE.
- Install MOUNTING SCREWS (5) through ESCUTCHEON HOLDER (3) and into THREADED TABS (4). Tighten SCREWS securely.
- Place ESCUTCHEON (6) over ESCUTCHEON HOLDER (3) and push evenly for a snap fit.

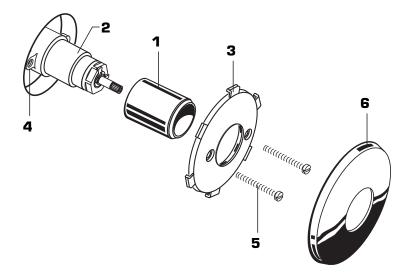


### 2 HANDLE INSTALLATION

- Install KNOB MOUNT (1) onto VALVE STEM (2). Thread HANDLE SCREW (3) into VALVE STEM (2) and tighten.
- Align HANDLE (4, 4a) and push onto KNOB MOUNT (1).
- Tighten SET SCREW in handle with HEX WRENCH (5) SUPPLIED.

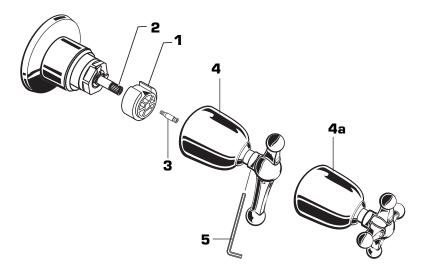

### 3 OPERATING THE VALVE

- Turn HANDLE into OFF position.
- Turn on water supplies, and check all connections for leaks.
- Operate HANDLE to flush water lines thoroughly.
- Turn handle OFF.

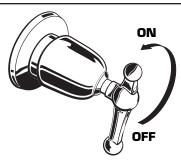


## American Standard

# **ENFIELD**ON/OFF VALVE TRIM

**MODEL NUMBER** 

T37370X

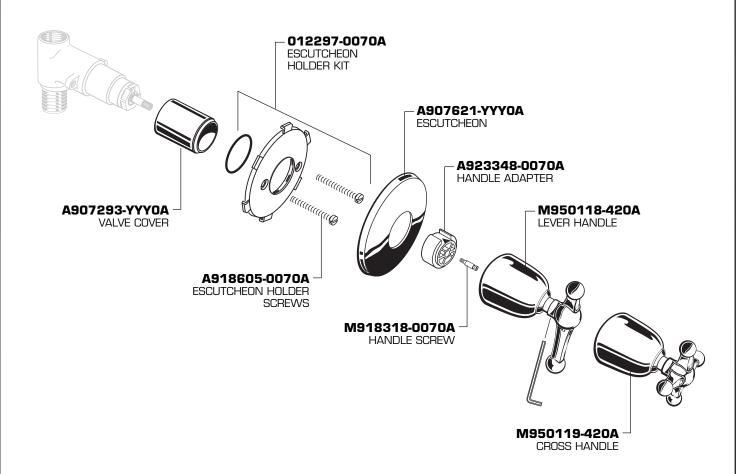

Replace the "YYY" with appropriate finish code

CHROME	002
POLISHED NICKEL	008
BLACKENED BRONZE	068
SATIN NICKEL	295



HOT LINE FOR HELP
For toll-free information and answers to your questions, call:
1 (800) 442-1902
Weekdays 8:00 a.m. to 6:00 p.m. EST
IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093)
Weekdays 8:00 a.m. to 7:00 p.m. EST
IN MEXICO 01-800-839-12-00

Product names listed herein are trademarks of American Standard Inc.  $\circledcirc$  AS America, Inc. 2007

M968663