


furniture company


Item #: V35CMP Assembly Instructions

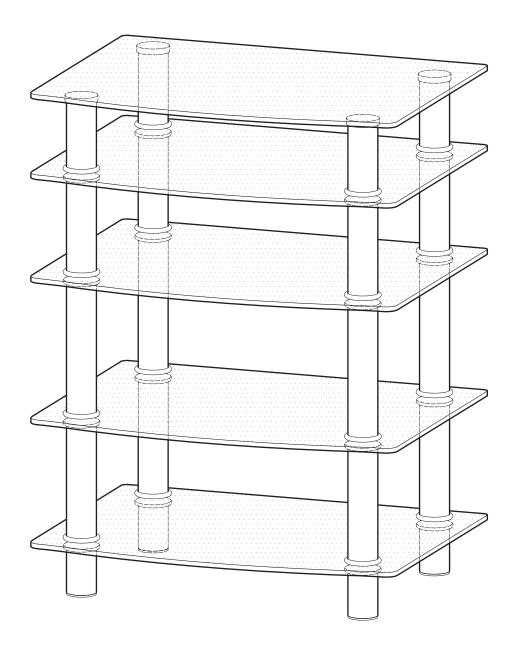

For our most current instructions, to request missing, lost or broken parts, or for any other Customer Service issues, please visit our website at **www.walkeredison.com** or call us at 877-207-5906.


Parts List

Hardware List

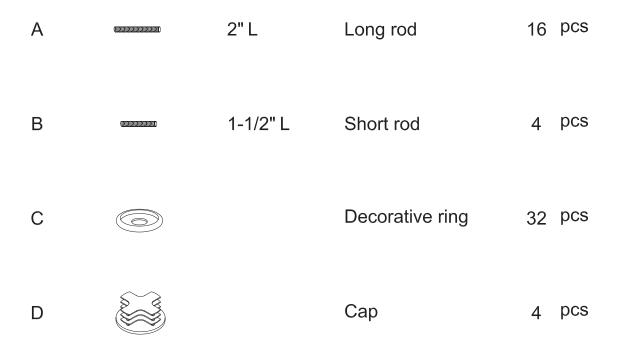


The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

Step 1

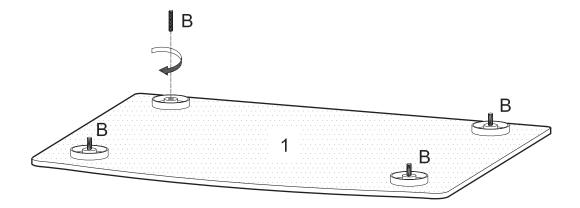


Carefully lay glass top (1) upside down on a soft surface. Screw short rods (B) into the metal plates of glass top (1).

Step 2

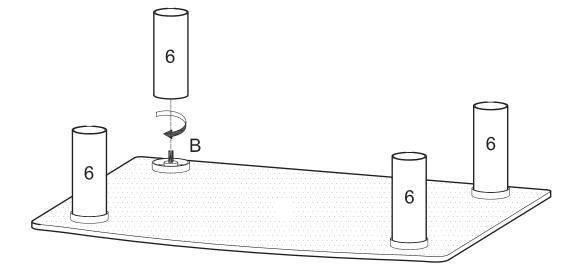


Screw cylinders (6) onto short rods (B).

Step 3

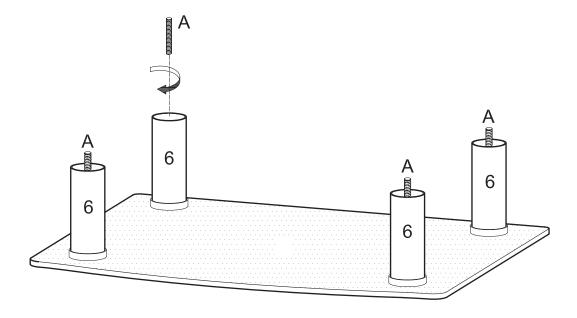



Screw long rods (A) into cylinders (6).



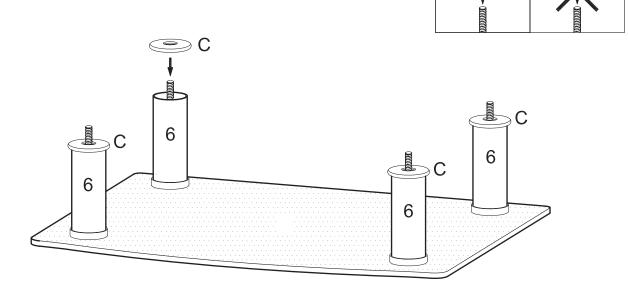



Snap decorative rings (C) onto cylinders (6).

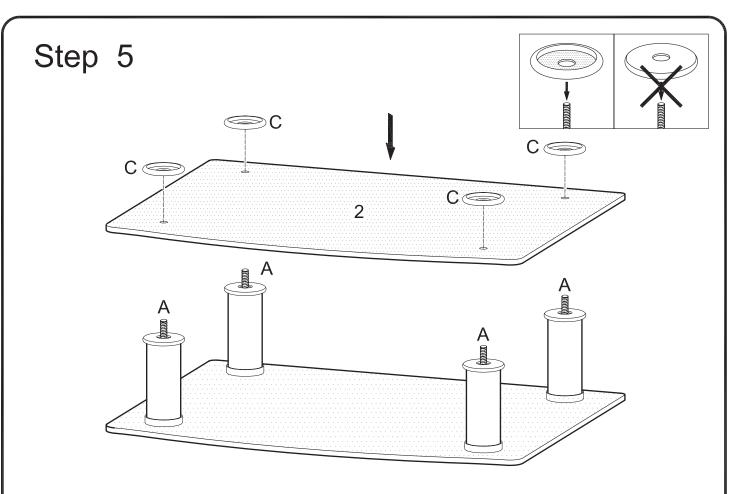


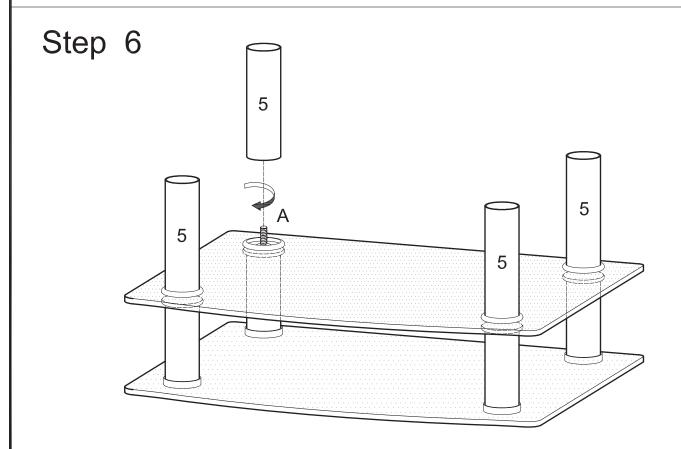


Screw cylinders (5) onto long rods (A). Note that cylinders (5) will fit snuggly inside the decorative rings placed in the previous step.

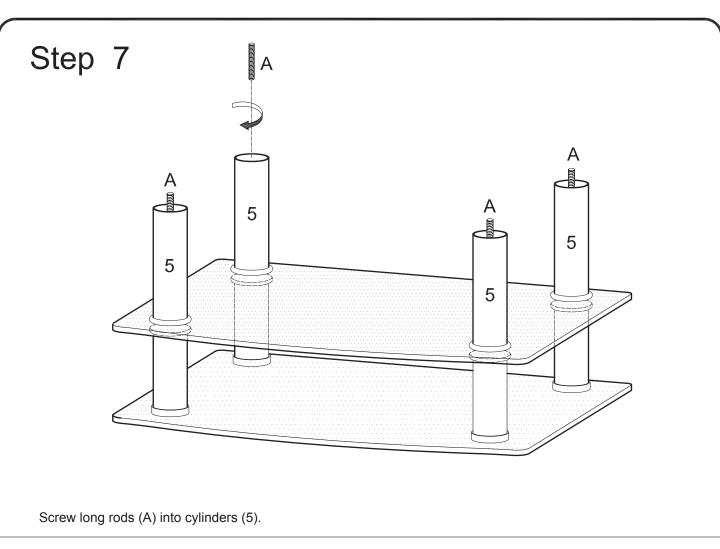

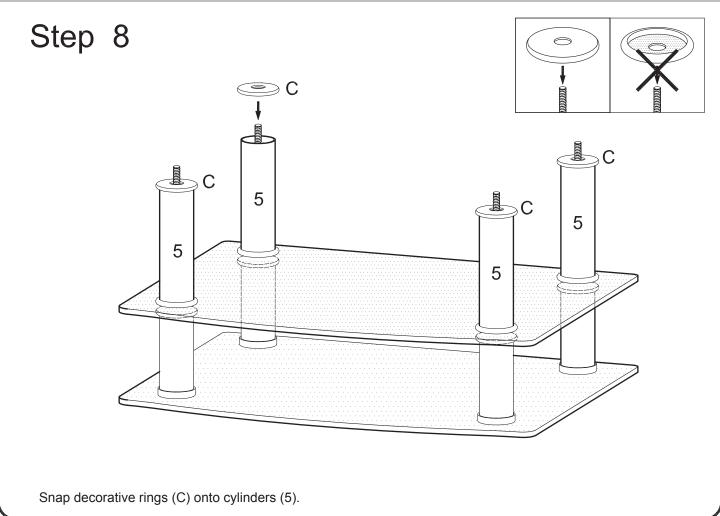


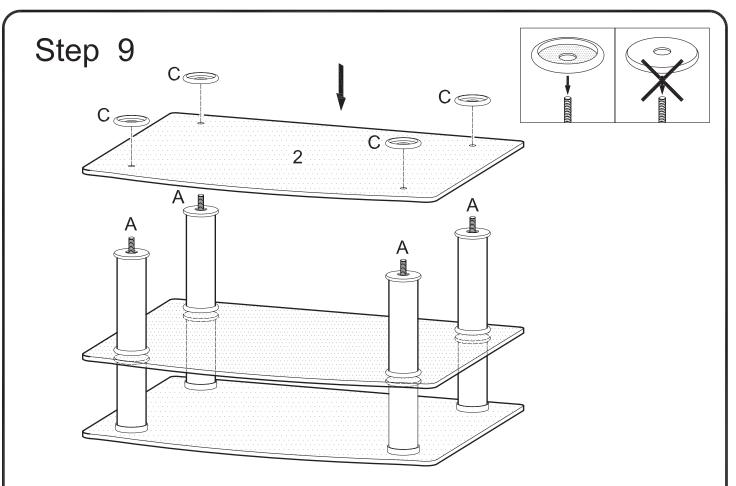

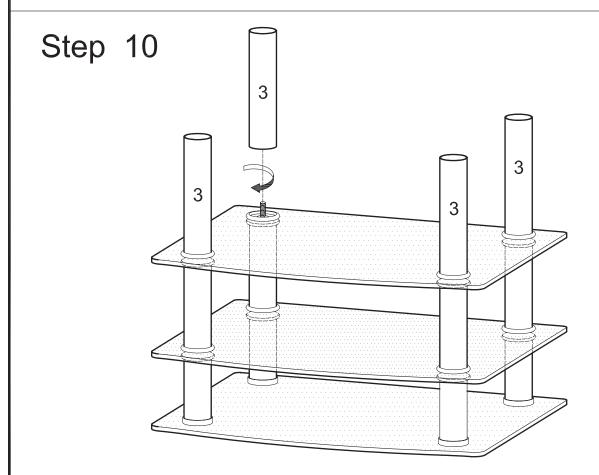



Screw cylinders (3) onto long rods (A). Note that cylinders (3) will fit snuggly inside the decorative rings placed in the previous step.



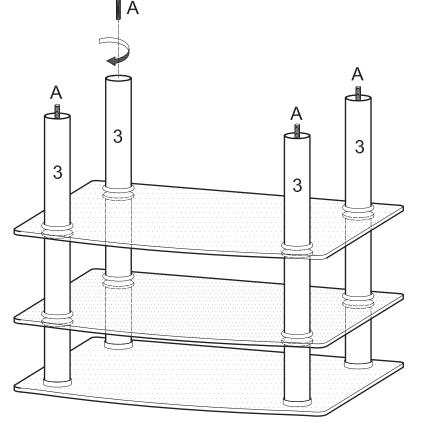


Screw long rods (A) into cylinders (3).

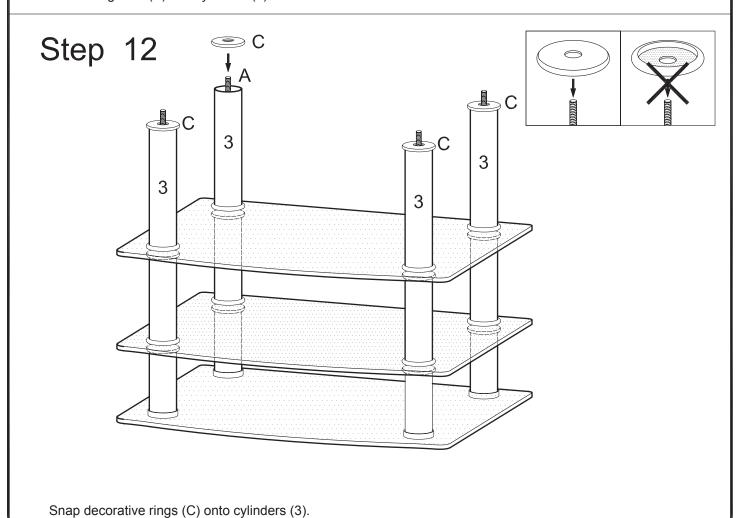

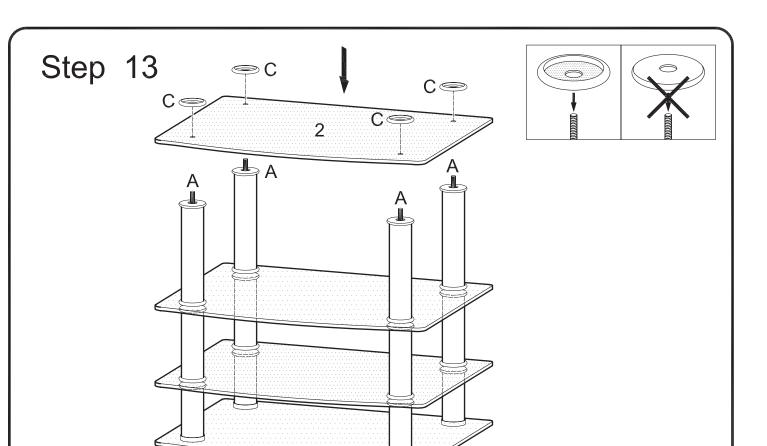


Step 14

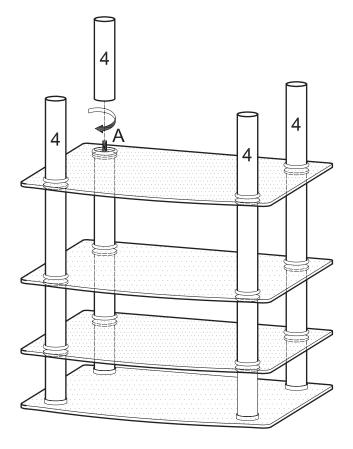


Screw cylinders (4) onto long rods (A). Note that cylinders (4) will fit snuggly inside the decorative rings placed in the previous step.




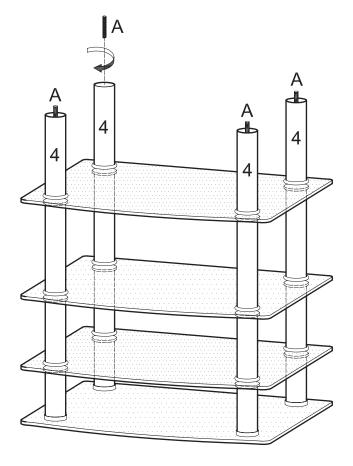

Screw long rods (A) into cylinders (4).


Step 16

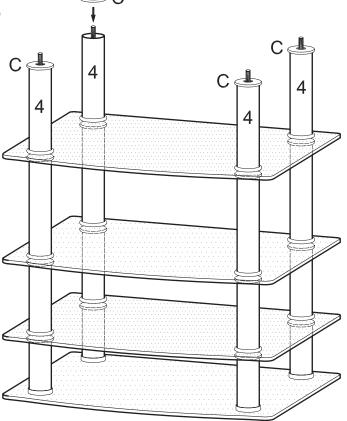





Snap decorative rings (C) onto cylinders (4).

Step 17

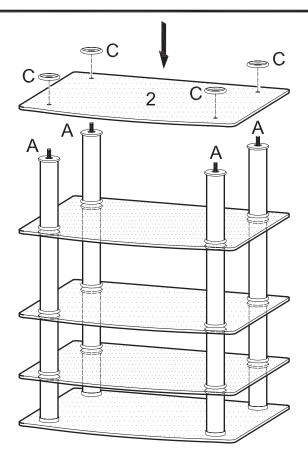




Step 18

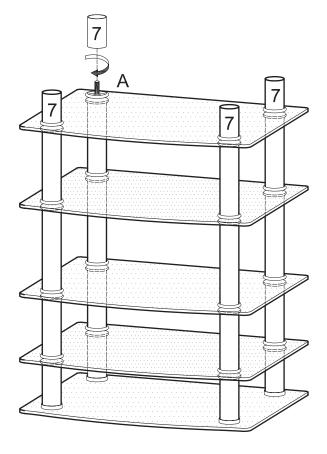

Screw cylinders (7) onto long rods (A). Note that cylinders (7) will fit snuggly inside the decorative rings placed in the previous step.

Step 19

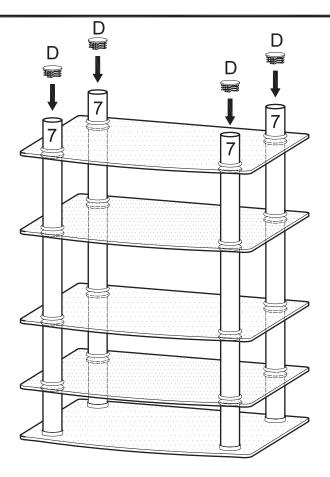

Insert caps (D) into cylinders (7). Note that caps (D) may come pre-inserted into cylinders (7).

Step 20



Final Assembly