Pellicano

Professional Collection

a modern take on the traditional rangehood

- under cabinet rangehood
- updated styling
- 600 cfm PRO motor
- 2 halogen lights
- 3 speed push button controls
- dishwasher safe grease filters
- convertible to recirculating*
- top or direct rear venting
- easy mounting system
- sone range: 3.5 6.5
- 6" round duct
- * it is highly recommended that professional style cooking always be vented to the outside.



Size/Color/Model

30 Stainless 630003950 36 Stainless 630003951




GFABER

The Pellicano is an excellent replacement hood for your updated pro cooking. Installs easily to the bottom of your cabinet.




Charcoal Filters 6093034

For recirculating installations, high quality, heavy duty filters ensure the removal of smoke and odors from the kitchen. Some ductwork is required to exhaust the unit out of the cabinet.

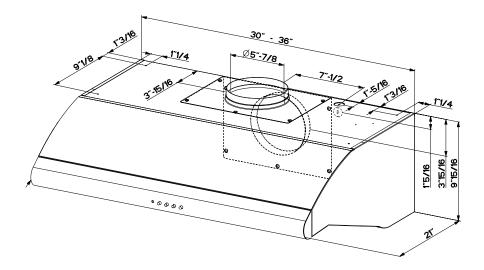

Pre-Planning Your Installation - Important: Consult the installation instructions before you begin installing this rangehood.

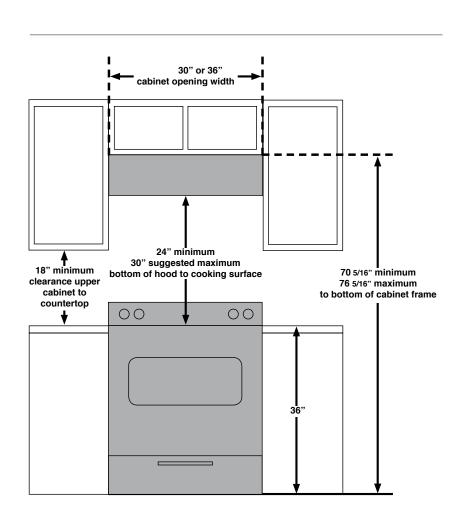

Pre-Planning Your Ductwork -

Important: Consult the installation instructions before you begin installing this rangehood.

Make your ductrun as straight and short as possible. The ductrun should not exceed 35 equivalent feet if ducted with the required minimum of 6" round ductwork. Count 45° angles as 3 feet, 90° elbows as 5 feet, and 90° flat elbows as 12 feet.

For best results, use no more than three 90° elbows. Make sure that there is a minimum of 24" of straight duct between elbows if more than one is used. Do not install two elbows together. If you must elbow right away, do it as far away from the hood's exhaust opening as possible.

Recirculating Installations

IT IS HIGHLY RECOMMENDED THAT PROFESSIONAL STYLE COOKING BE VENTED TO THE OUTSIDE. For installations where ductwork to the outside of your home is impossible or highly impractical Charcoal Filters, which attach to the blower assembly, absorb smoke and odors.

Some ductwork must be installed to exhaust the rangehood back into the kitchen, either at the top of the cabinet or at the face of the soffit. This duct work must not terminate into a dead air space.