

# Stealthbox®

## INSTALLATION GUIDE

for the

### SB-D-DRNGO/10WØ

(Fits 1997-2001 Dodge Durango, models with three seating rows only)



This Stealthbox is a product which requires professional installation skills and tools.

Please read this installation guide thoroughly before beginning the project. It will guide you step by step through the installation. Several of the steps in this process may require two people to accomplish.

It is absolutely vital that the enclosure be properly mounted to the vehicle according to these instructions. Failure to mount the enclosure properly presents two problems: 1) The sub-bass performance will suffer due to the movement of the enclosure caused by the force exerted by the woofer(s) and 2) A loose enclosure presents a serious safety hazard in the event of a collision or sudden deceleration.

*Please enjoy your JL Audio Stealthbox responsibly.*

**JL AUDIO®**

*Ahead of the Curve™*

[www.jlaudio.com](http://www.jlaudio.com)

**START  
HERE**



**STEP 1:** Unbolt the second row of seating from the vehicle and remove as single unit.



**STEP 2:** Remove the black plastic covers from each side of the armrest, of the center seat.




**STEP 3:** Remove the four Torx bolts that attaches the armrest to the center seat.



**STEP 4:** Lift off the armrest.



**STEP 5:** Remove the upholstery from the lower center seat by releasing the four plastic clips holding it in place.

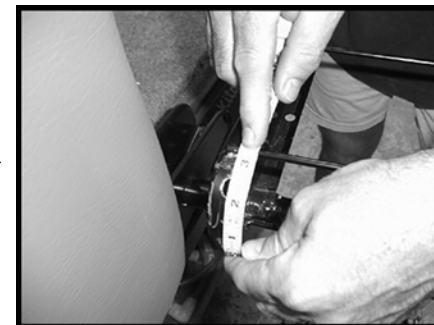


**STEP 7:** Measure 2 1/4" from the front lip of the center seat structure side bars. Make a mark at the 2 1/4" measurement.


**STEP 6:** Remove the upholstery and foam from the seat frame to expose the metal grid structure.

**STEP 8:** Drill a 5/16" hole centered left to right in each side bar at the 2 1/4" mark.

**Continued on Next Page →**

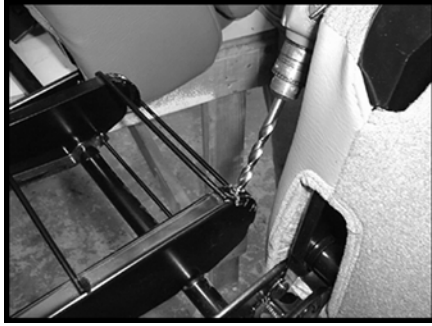

**STEP 9:** Bolt the supplied brackets to the the Stealthbox using two of the bolts removed from the armrest in Step 3. Do not tighten these bolts yet.

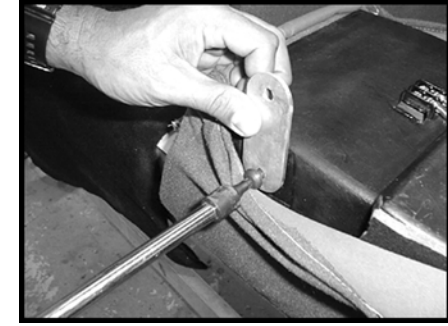

**STEP 10:** Place the Stealthbox on the seat frame where seat cushion was removed from. Be sure the two studs in the front edge of the Stealthbox fit into the two holes drilled in Step 8.



**STEP 11:** Thread the supplied nuts on the two studs and tighten securely.




**STEP 12:** Using the two remaining factory bolts from the armrest bolt the brackets on the Stealthbox to the seat structure. Tighten all bolts securely, including those installed in Step 9.

Cont. From Previous Page



**STEP 13:** Attach the plastic clips on the Stealthbox upholstery to the bars under the seat structure.

**Do not overstretch the upholstery**

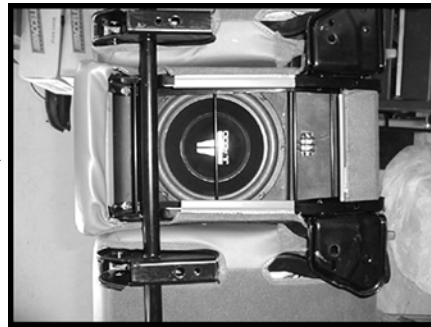

**STEP 14:** Run speaker wire from the amplifier to the Stealthbox mounting location. Be sure the wires are routed in such a way that they will not be pinched when the seat is reinstalled.



**STEP 15:** Place the seat back in the vehicle and connect the speaker wires to the Stealthbox.

**STEP 16:** Bolt the seat in place in the reverse order that it was removed.



**CONGRATULATIONS!  
INSTALL COMPLETE.**

- Included Hardware:**
- (4) 1/4" x 2" Bolts
  - (4) 1/4" Washers
  - (4) #8 Flat Head Screws
  - (4) 1/4" Lock Washers
  - (1) Console Insert


**Difficulty Of Installation:**



**Specifications:**

- Enclosure Type:** Acoustical Suspension (sealed)
- Driver Type:** 10WØ
- Nominal Impedance:** 4Ω
- Cont. Power Handling:** 125Watts

JL Audio recommends using a high quality amplifier such as the JL Audio e2150. The diagram below shows the recommended crossover, infrasonic filter and equalizer settings for the e2150 when being used to power your Stealthbox®.

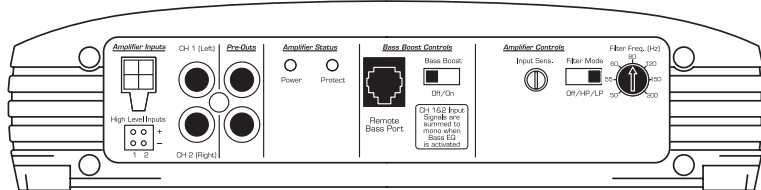

The JL Audio e2150 is a very versatile audio component. Please consult the owner's manual for detailed information about installing and tuning this amplifier.

**Mid/High Frequency Driver Information:**

**Front Location Driver Size:**  
6.5"

**Applicable JL Audio Products:**  
TR,VR,XR,ZR 650-CSI

**Rear Location Driver Size :**  
5.25"

**Applicable JL Audio Products:**  
TR,VR,XR 650-CXI

