

Notes:

Nails are marked on the plan as dashed lines or white circles.



Be sure to set nails and screws equal distance in from edges and equal spacing apart.

Router out porch with angled bit. Three cuts at 3/4" on center.

Pre drill holes where screws are used to fasten the floor. Do not let wood split on this project.

The top is not nailed in, but hanging on hinges to the back panel.

Pieces to Cut

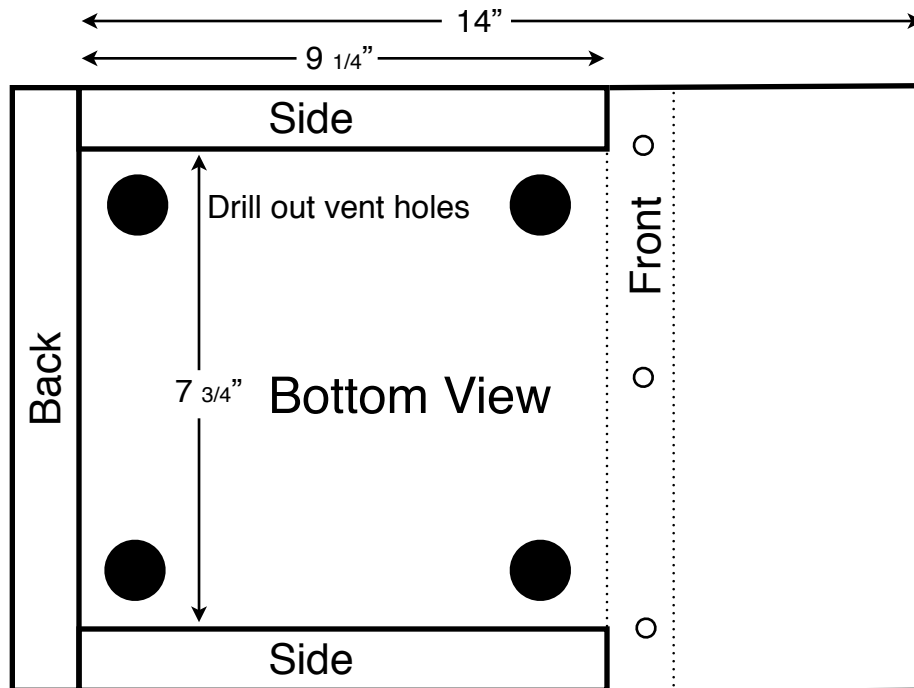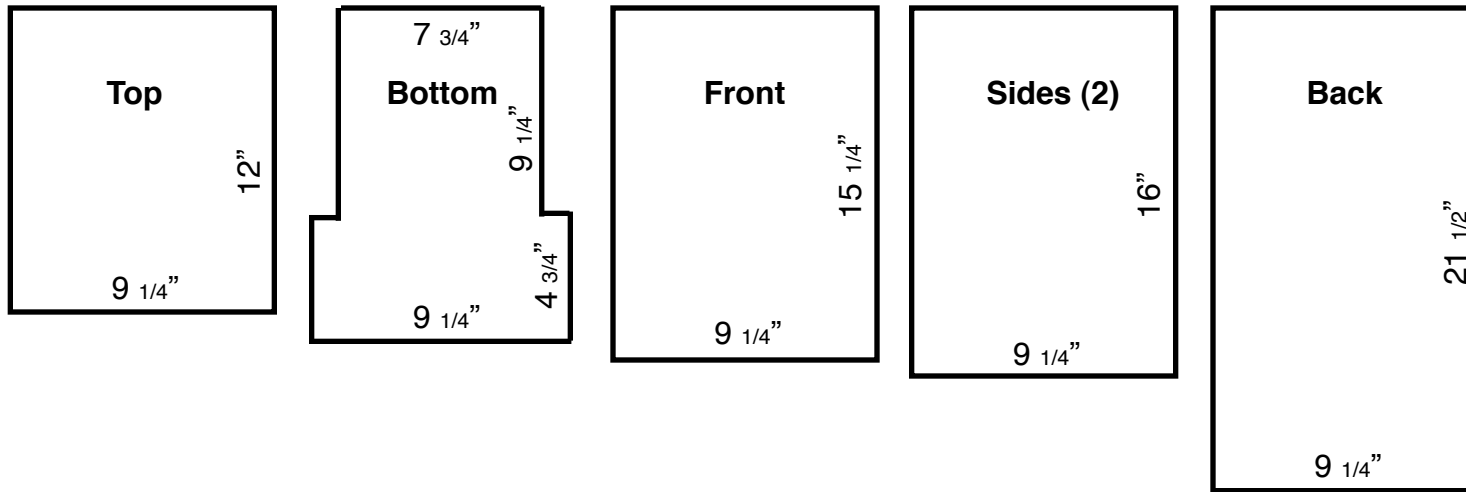

Notes:

It is important to mark each piece after it is cut by its dimension and its purpose (ie. Front, Top, etc.) The bottom piece measures $9 \frac{1}{4}"$ by $14"$. It is then cut into the shape drawn above by ripping two $\frac{3}{4}"$ strips $9 \frac{1}{4}"$ long from each long edge. Do this with a circular saw, jig saw, or band saw, then finish with the disc sander. Nails are marked on the plan as white circles. Nail the front panel to the bottom panel from the bottom of the box. It would be a good idea to draw a guide line so you know exactly where the center of the front panel rests before nailing it in.