



Creating Strip Footers in Revit Structure


- 1) Open Revit Structure
- 2) Given an exterior wall in Revit, insert a foundation wall,
 - a. In plan, view draw foundation wall by creating a new foundation level

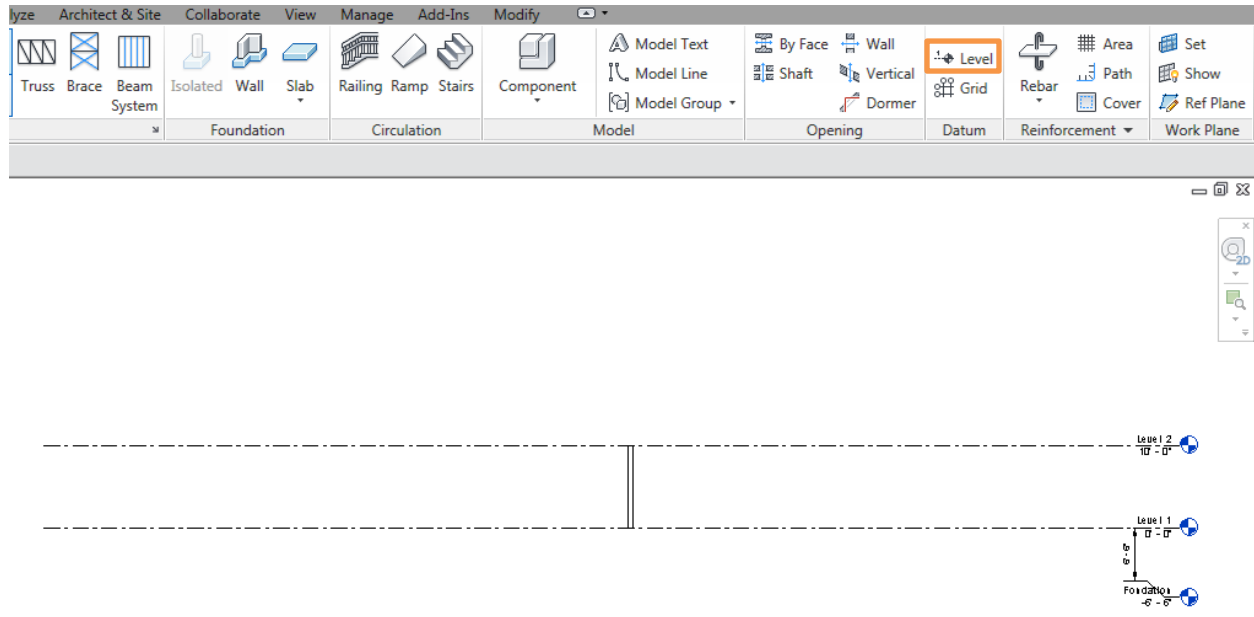


- b. Next, draw foundation wall in plan and the foundation wall should appear below your exterior wall

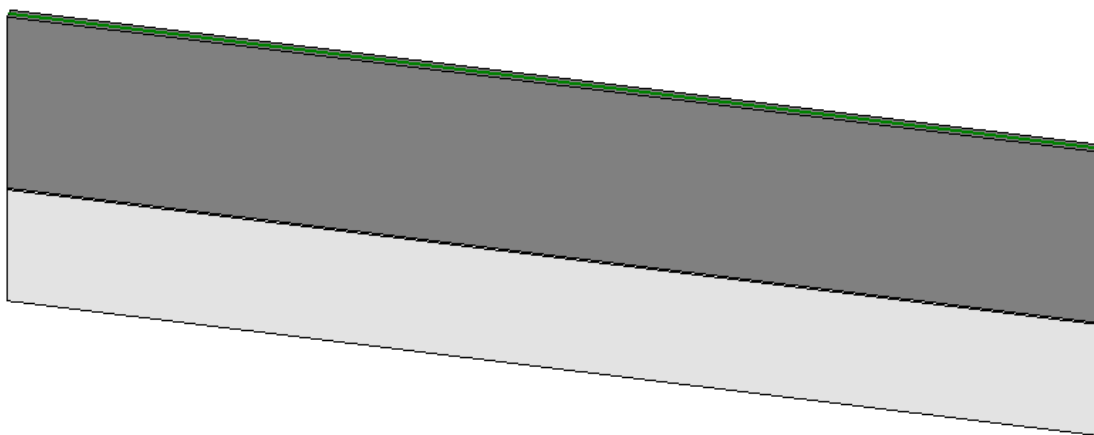

- 3) Now, insert strip footer
 - a. In the home menu, click symbol for wall footer

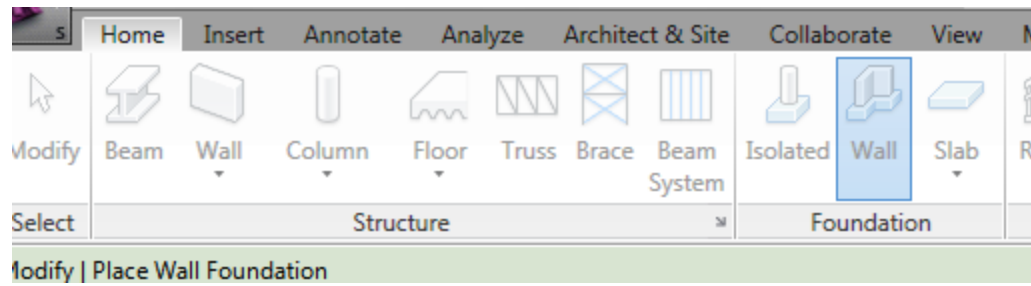

- b. Adjust wall footer properties as designed
- c. Next, click the foundation wall and the footer should appear below the wall

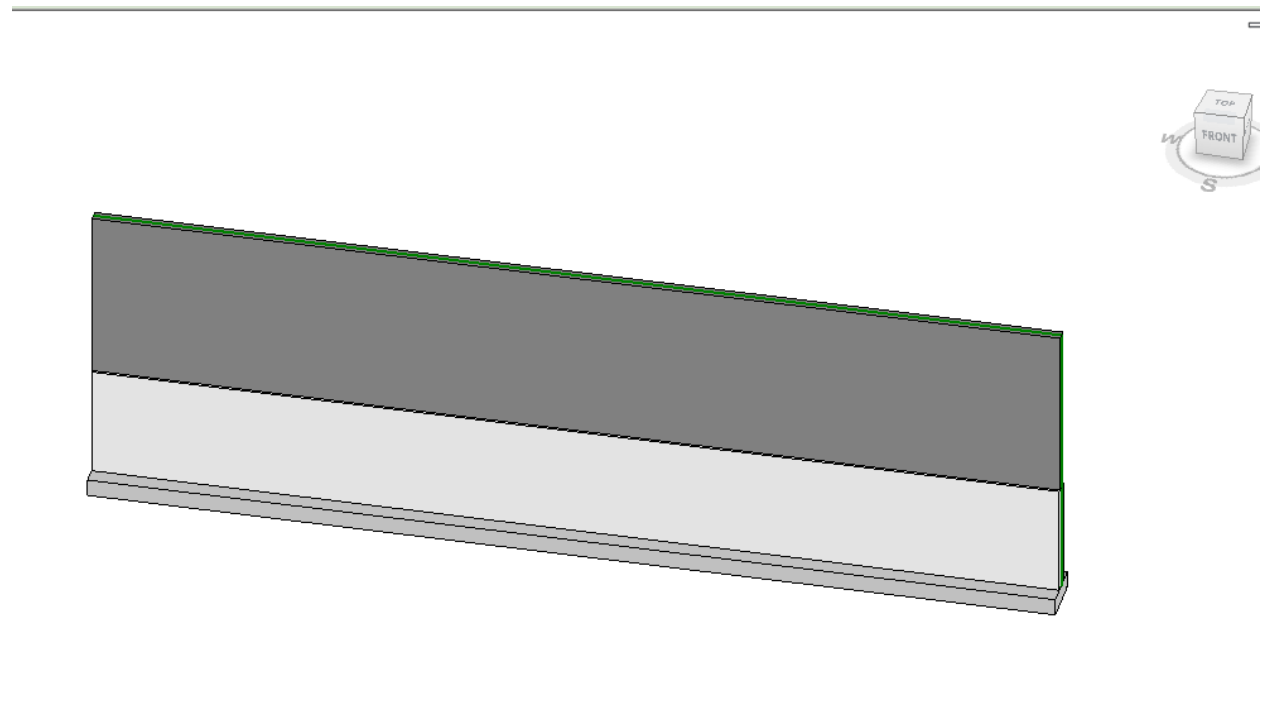

Now, you can add strip footers to the rest of your structure.